

PHILIPS

USER MANUAL / MODE D'EMPLOI

Multi channel cordless phone / Téléphone sans fils multi-canal

TD 9220

Aleor



PHILIPS

Save These Instructions Caution:

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the battery(ies) instructed.
2. Do not dispose of the battery(ies) in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns.
5. Charge the battery(ies) provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

Installation:

1. Never install telephone wiring during a lightning storm.
2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
3. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
4. Use caution when installing or modifying telephone lines.

Warning:

TO PREVENT FIRE OR SHOCK HAZARD,
DO NOT EXPOSE THIS PRODUCT TO RAIN OR
ANY TYPE OF MOISTURE

(ii)

Installation

1. Chose a spot near an electric outlet and a telephone jack outlet.

2. Install the handset antenna
Slide the metal tip of the handset antenna straight down into the opening in the top of the handset. Turn the antenna clockwise to make sure the tip is set in place, and continue until it is snug against the top of the handset. Do not over tighten.

3. **Install the handset battery**
 - Remove the battery compartment cover on the handset by pressing on the indentation and sliding the cover downward
 - Plug the battery pack cord into the handset, and tuck the cords in next to the battery
 - Replace the cover by sliding it on its track

4. **Set Tone or Pulse dialing**
 - Press Memory button
 - Press Recall button
 - Press Ⓢ for Tone, or Ⓟ for Pulse
 - **French version do not have this function**

5. **Connect the telephone line cord**
 - Plug one end of the telephone line cord into the jack on the top of the base
 - Plug the other end into a modular telephone jack

6. **Mount the base on the wall (wall installation only)**
 - Mark and drill two holes in a wall stud, 3 5/16" apart
 - Use two wall screws, leaving about 1/4" free of the wall
 - Plug one end of the telephone line cord into the jack on the top side of the base
 - Plug the other end into a modular telephone jack
 - Mount the base unit on the wall by aligning the two holes on the back with screws
 - Slide the base unit down in place

7. **Plug the power cord**
 - Plug the one end of the power cord into the jack on the top side of the base
 - Plug the AC adapter on the power cord into an electric outlet

8. **Charge the handset battery pack for at least 12 hours**
Place the handset in the base, the CHARGE light on the base goes on to show the handset is in the right position to charge the battery pack.

9. **Check for dial tone**
After the battery pack is charged, pick up the handset and extend the base antenna. Check for dial tone by pressing the Ⓢ , the IN USE light on the base should go on, and you should hear a dial tone.

10. **Set TBR time**
The flash time is pre-set for end users, users do not switch it under normal usage. The TBR times switch is located on the top side of the base. Three flash time, A-100ms, B-270ms and C-620ms are available for different telephone network system. Select suitable flash time if necessary.

! CAUTION:
Use only the AC power adapter supplied with this telephone.
Power supply 92201 I60DV
Input : 230V AC 50Hz 45mA
Output : 9V---220mA 1.98VA
11V---60mA 0.66VA

(1)

Operating Range

The handset and base can communicate over only a certain distance - which can vary with the locations of the base and handset, the weather, and the construction of your home or office. For best performance, make sure the base antenna is fully upright.
If the handset is moved to a point where the base and handset can longer communicate, you are "out of range". When you try to make a call, the handset will beep to indicate that you are out of range.
If you receive a call while you are out of range, the handset might not ring - or if it does ring, the call might not connect when you press Ⓢ . Move closer to the base, then press Ⓢ to answer the call.
If you move out of range during a phone conversation, you may be disconnected.

Changing Channels
This cordless telephone has multi channels available for maximum performance.

- If you notice noise or interference while using the handset:
1. Press Ⓢ .
 2. If the interference doesn't clear, continue to press Ⓢ until you find a clear channel. - OR - Move closer to the base and press Ⓢ .

NOTE: You must be in range to change channels.
Memory
This cordless phone can store 10 telephone numbers that you can dial by pressing Ⓢ and one of the number buttons. Additionally, you can store a memory number in the Ⓢ memory location.

- Storing Memory Numbers**
1. Make sure the handset is off.
 2. Press Ⓢ .
 3. Enter the phone number (up to 20 digits).
 4. Press Ⓢ .
 5. Press any number button from 0 to 9 for the memory location where the number is to be stored.
- OR - Press Ⓢ to store the number in memory location M1.

For example, to store 555-1234 in memory location 3, Ⓢ ③ ⑤ ⑤ ① ② ③ ④ Ⓢ ③ .
NOTE: You may choose to store emergency numbers in memory locations. This feature is provided only as a convenience and the manufacturer assumes no responsibility for reliance upon the memory feature.

- Storing a Pause in a Memory Number**
1. When storing a number in memory (see above), press Ⓢ where you want the dialing pause to occur.
 2. Press Ⓢ once inserts a two-second pause.

- For example, to store 9.Pause.555-1235 in memory location 3, press Ⓢ ⑨ Ⓢ ⑤ ⑤ ① ② ③ ④ Ⓢ ③ .
Dialing Memory Numbers
1. Press Ⓢ .
 2. Press Ⓢ and the number button of the memory location. - OR - Press Ⓢ .

Batteries

- ! CAUTION:** To reduce the risk of fire or injury to persons or damage to the telephone, read and follow these instructions carefully.
- Use only provided Replacement Battery.
 - Do not dispose of the battery in a fire. The cell might explode. Check with local codes for special disposal instructions.
 - Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
 - Exercise care in handling batteries in order not to short the battery pack with conducting materials such as rings, bracelets, and keys. The battery pack or conductor may overheat and cause harm.
 - Change the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
 - Observe proper polarity orientation between the battery and battery charger.

Charging the Handset Battery Pack
The batteries need charging when:

- The IN USE light on the base flashes.
- The handset beeps while you are on a call.

Place the handset in the base so the CHARGING light goes on. The batteries will be fully charged in about 12 hours. You should charge the handset battery pack at least once every 90 days.

- Replacing the Handset Battery Pack**
1. Remove the battery compartment cover on the handset by pressing on the indentation and sliding the cover downward.
 2. Plug the battery pack cord into the handset, and tuck the cords in next to the battery.
 3. Replace the cover by sliding it on its track.

ENG

(3)

ENG

Important Safety Instructions

THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

! CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

! CAUTION: THE EXCLAMATION POINT WITHIN THE TRIANGLE IS WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.

! SEE WARNING ON BOTTOM/BACK OF PRODUCT

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE


When using the unit, basic safety precautions as below should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from wall outlets before cleaning. Do not use liquid or aerosol cleaners. Use of damp cloth for cleaning.
4. Do not use this unit near water, for example, near a bath tub, wash bowl, kitchen sink, or the like.
5. Install this unit securely on a stable surface. Serious damage may result if the unit falls.
6. Do not cover slots and openings of the unit, for they are provided for ventilation and protection against overheating. Never place the unit near radiators, in/or a place where proper ventilation is not provided.
7. Use only the power source as marked on unit. If you are not sure of the type of the power supply to your home, consult your dealer or local power company.
8. Do not place objects on the power cord. Install the unit where no one can step on the cord.
9. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
10. Never push any objects into this unit through slots as they may result in risk of fire or electric shock. Never spill any liquid on the unit.
11. To reduce the risk of electric shock, do not disassemble this unit, but take it to a qualified serviceman when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
12. Unplug this unit from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the unit.
 - C. If the unit has been exposed to rain or water.
 - D. If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instruction may require extensive work by a qualified technician.
 - E. If the unit has been dropped or damaged.
 - F. If the unit exhibits a distinct change in performance.
13. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of electric shock from lightning.
14. Do not use this unit to report a gas leak in the vicinity of it.

(i)

Introduction

- | | |
|-------------------------|------------------------------|
| 1. Handset antenna | 11. Mute button |
| 2. Earpiece | 12. Volume button |
| 3. Talk button | 13. Microphone |
| 4. Scan button | 14. Handset charge contacts |
| 5. Recall button | 15. Charge/In use indicator |
| 6. Ringer on/off switch | 16. Page button |
| 7. Memory button | 17. Power line cord jack |
| 8. Redial button | 18. TBR time switch |
| 9. Speed dial button | 19. Telephone line cord jack |
| 10. Pause button | |

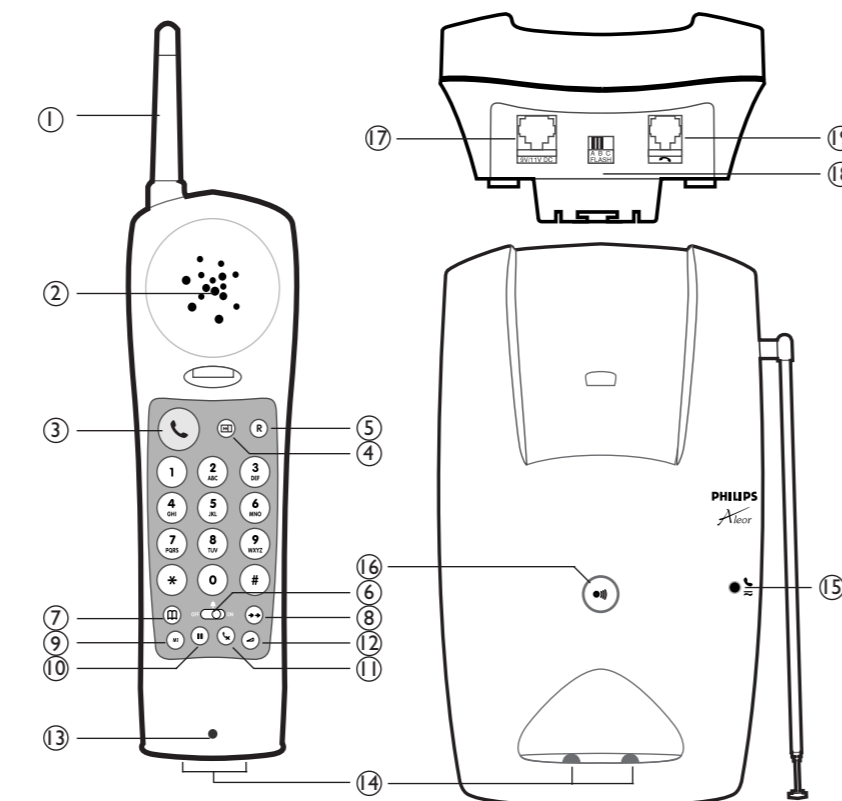

(iii)

Operation

- Making a Call**
1. Press Ⓢ on the handset.
 2. When you hear a dial tone, dial the number.

Answering a Call
If the handset is in the base, lift the handset. The IN USE light on the base goes on. If the handset is away from the base, press Ⓢ . The IN USE light on the base goes on.

Ending a Call
To end a call, place the handset in the base or press Ⓢ .

Redial
The last number dialed (up to 32 digits) on this phone is stored in redial memory until you dial another number.

1. Press Ⓢ .
2. When you hear a dial tone, press Ⓢ .

Mute
Mute allows you to hear you caller, but prevents the caller from hearing you.

1. Press Ⓢ while on a call.
2. To return to your conversation, press Ⓢ again.

Handset Volume Control
Each time you press Ⓢ the handset listening volume changes.

Ringer On/Off - Battery Save Feature
Set the handset RINGER switch to OFF to prevent the handset from ringing. You can still use the handset to make a call or to answer a call if you hear an extension phone ringing. When the handset RINGER switch is set to ON, the handset stays ready to use for up to 7 days.

Page
The page feature allows you to signal someone at the handset from the base. You can also use this feature to help you locate the handset. This feature is disabled when the handset RINGER switch is set to OFF. Press Ⓢ on the base. The handset signals for about 30 seconds, or until you turn it off by pressing Ⓢ on the base or Ⓢ on handset.

Recall
Press Ⓢ to activate custom-calling services such as Call Waiting or 3-Way Calling. You may have to press other buttons before or after Ⓢ as explained in custom-calling instructions provided by your local telephone company.

Temporary Tone
NOTE: If you have touch tone service, you don't need to use the Temporary Tone feature. If you have dial pulse (rotary) service, this feature allows you to enter codes or tones needed to operate answering machines, or use electronic banking services, calling cards, and other special services. This feature will operate most special services; however, some services may actually require a touch tone line. To be sure, ask the company that provides the special service.

1. Dial the call, then press Ⓢ . Any buttons pressed after this send tone signals.
2. When you hang up to or press Ⓢ , the phone automatically returns to dial pulse (rotary) dialing.

(2)

ENG

(4)

ENG

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>