

# DVD Video Player



*Let's make things better.*



# PHILIPS

# General Information

---

## LASER SAFETY

This unit employs a laser. Due to possible eye injury, only a qualified service person should remove the cover or attempt to service this device.

## USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

### LASER

|                 |                                 |
|-----------------|---------------------------------|
| Type            | Semiconductor laser GaAlAs      |
| Wave length     | 650 nm (DVD)<br>780 nm (VCD/CD) |
| Output Power    | 7 mW (DVD)<br>10 mW (VCD/CD)    |
| Beam divergence | 60 degree                       |

*Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. ©1992-1997 Dolby Laboratories, Inc. All rights reserved.*

*This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.*

For Customer Use:

Read carefully the information located at the bottom of your DVD-VIDEO player and enter below the Serial No. Retain this information for future reference.

Model No. DVD-VIDEO 703

Serial No. \_\_\_\_\_

TruSurround and the SRS symbol are trademarks of SRS Labs., Inc. TruSurround technology is manufactured under license from SRS Labs., Inc.

**TruSurround™**  
by **SRS (●)®**

*Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942 and other world-wide patents issued and pending. "DTS" and "DTS DIGITAL SURROUND" are trademarks of Digital Theater Systems, Inc. © 1996 Digital Theater Systems, Inc. All rights reserved.*

|                 |    |
|-----------------|----|
| English .....   | 5  |
| Français .....  | 21 |
| Español .....   | 37 |
| Português ..... | 53 |

The region code for this set is 4.



Since it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and discs can have an optional region code. If you load a disc of a different region code to your player, you will see the region code notice on the screen. The disc will not play and should be unloaded.

**NOTE:**  
**PICTURES SHOWN MAYBE DIFFERENT BETWEEN COUNTRIES.**

**NEVER MAKE OR CHANGE CONNECTIONS WITH THE POWER SWITCHED ON.**

**CAUTION**  
**VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AVOID EXPOSURE TO BEAM (WARNING LOCATION: INSIDE ON LASER COVERSIELD OR THE BACKPLATE OF SET)**

---

## Introduction

|   |   |
|---|---|
| Philips DVD-Video Introduction .....      | 5 |
| Unpacking .....                           | 5 |
| Remote Control battery installation ..... | 5 |
| Safety Information .....                  | 5 |
| Cleaning Discs .....                      | 5 |

---

## Functional Overview

|                             |   |
|-----------------------------|---|
| Front and Rear Panels ..... | 6 |
| Remote Control .....        | 7 |

---

## Preparation

|  |       |
|--|-------|
| General Notes .....                    | 8     |
| Connecting to a TV .....               | 8     |
| Connecting to Optional Equipment ..... | 8-9   |
| NTSC/PAL Settings .....                | 9     |
| General Explanation .....              | 9     |
| Menu Bar/Status Window .....           | 10    |
| Temporary Feedback Field Icons .....   | 10    |
| Personal Preferences .....             | 10-11 |

---

## Operation

|  |       |
|--|-------|
| Loading Discs .....                          | 12    |
| Playing a DVD-Video and Video CD .....       | 12    |
| General Features .....                       | 12-14 |
| Special DVD features .....                   | 14    |
| Special Video CD & SVCD features .....       | 15    |
| Playing an Audio CD .....                    | 15-16 |
| Favorite Track Selection (FTS) Program ..... | 16    |

---

## Access Control

|  |       |
|--|-------|
| Access Control: Child Lock .....       | 17    |
| Access Control: Parental Control ..... | 17-18 |

---

## Before Requesting Service

|                                 |    |
|---------------------------------|----|
| Before Requesting Service ..... | 19 |
|---------------------------------|----|

---

## Specifications


|                      |    |
|----------------------|----|
| Specifications ..... | 20 |
|----------------------|----|

## Philips DVD-Video Introduction

Your Philips DVD-Video player will play digital video discs conforming to the universal DVD-Video standard. With it, you will be able to enjoy full-length movies with true cinema picture quality, as well as stereo or multi-channel sound (depending on the disc and your playback setup). The unique features on DVD-Video, such as selection of sound track, subtitle languages and different camera angles (again depending on the disc), are all supported. In addition to DVD-Video discs, you will be able to play all Video CDs and Audio CDs (including finalized CD Recordable and CD Rewritable).

### DVD-Video

You will recognize DVD-Video discs by the logo shown. Depending on the material on the disc (a movie, video clips, a drama series, etc.) the disc may have one or more Titles.

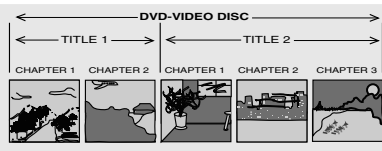

### Video CD

You will recognize Video CDs by the logo shown.



### SuperVCD (SVCD)

SVCD discs based on the SuperVCD IO Standard referring to Standard of Electronics Industry of the People's Republic of China.

### Audio CD

Audio CDs contain music tracks only. You will recognize Audio CDs by the logo shown.



## Unpacking

First check and identify the contents of your DVD-Video player package.

You should have the following items.

- DVD-Video player
- Remote Control with batteries
- Audio cable
- Video cable
- Instructions for use


If any item is damaged or missing, contact your retailer or Philips.

Keep the packaging material for future transportation.

## Remote Control Battery Installation

- Insert batteries as indicated inside the battery compartment.

**Caution: Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).**

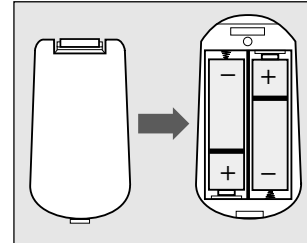


## Safety Information

- Do not expose the system to excessive moisture, rain, sand, or heat sources.
- Place the player on a firm, flat surface.
- Keep the player away from domestic heating equipment and direct sunlight.
- In a cabinet, allow about 2.5 cm (1 inch) of free space all around the player for adequate ventilation.
- If the DVD-Video player cannot read CDs/DVDs correctly, use a commonly available cleaning CD/DVD to clean the lens before taking the DVD-Video player to be repaired. Other cleaning methods may destroy the lens. Always keep the tray closed to avoid dust on the lens.
- The lens may cloud over when the DVD-Video player is suddenly moved from cold to warm surroundings. Playing a CD/DVD is not possible then. Leave the power on for about one hour with no disc in the unit until normal playback is possible.


## Cleaning Discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out, in a straight line.
- Do not use solvents such as benzine, thinner, commercially available cleaners, or anti-static spray intended for analog discs.

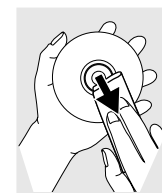


# Functional Overview

## Front and Rear Panels

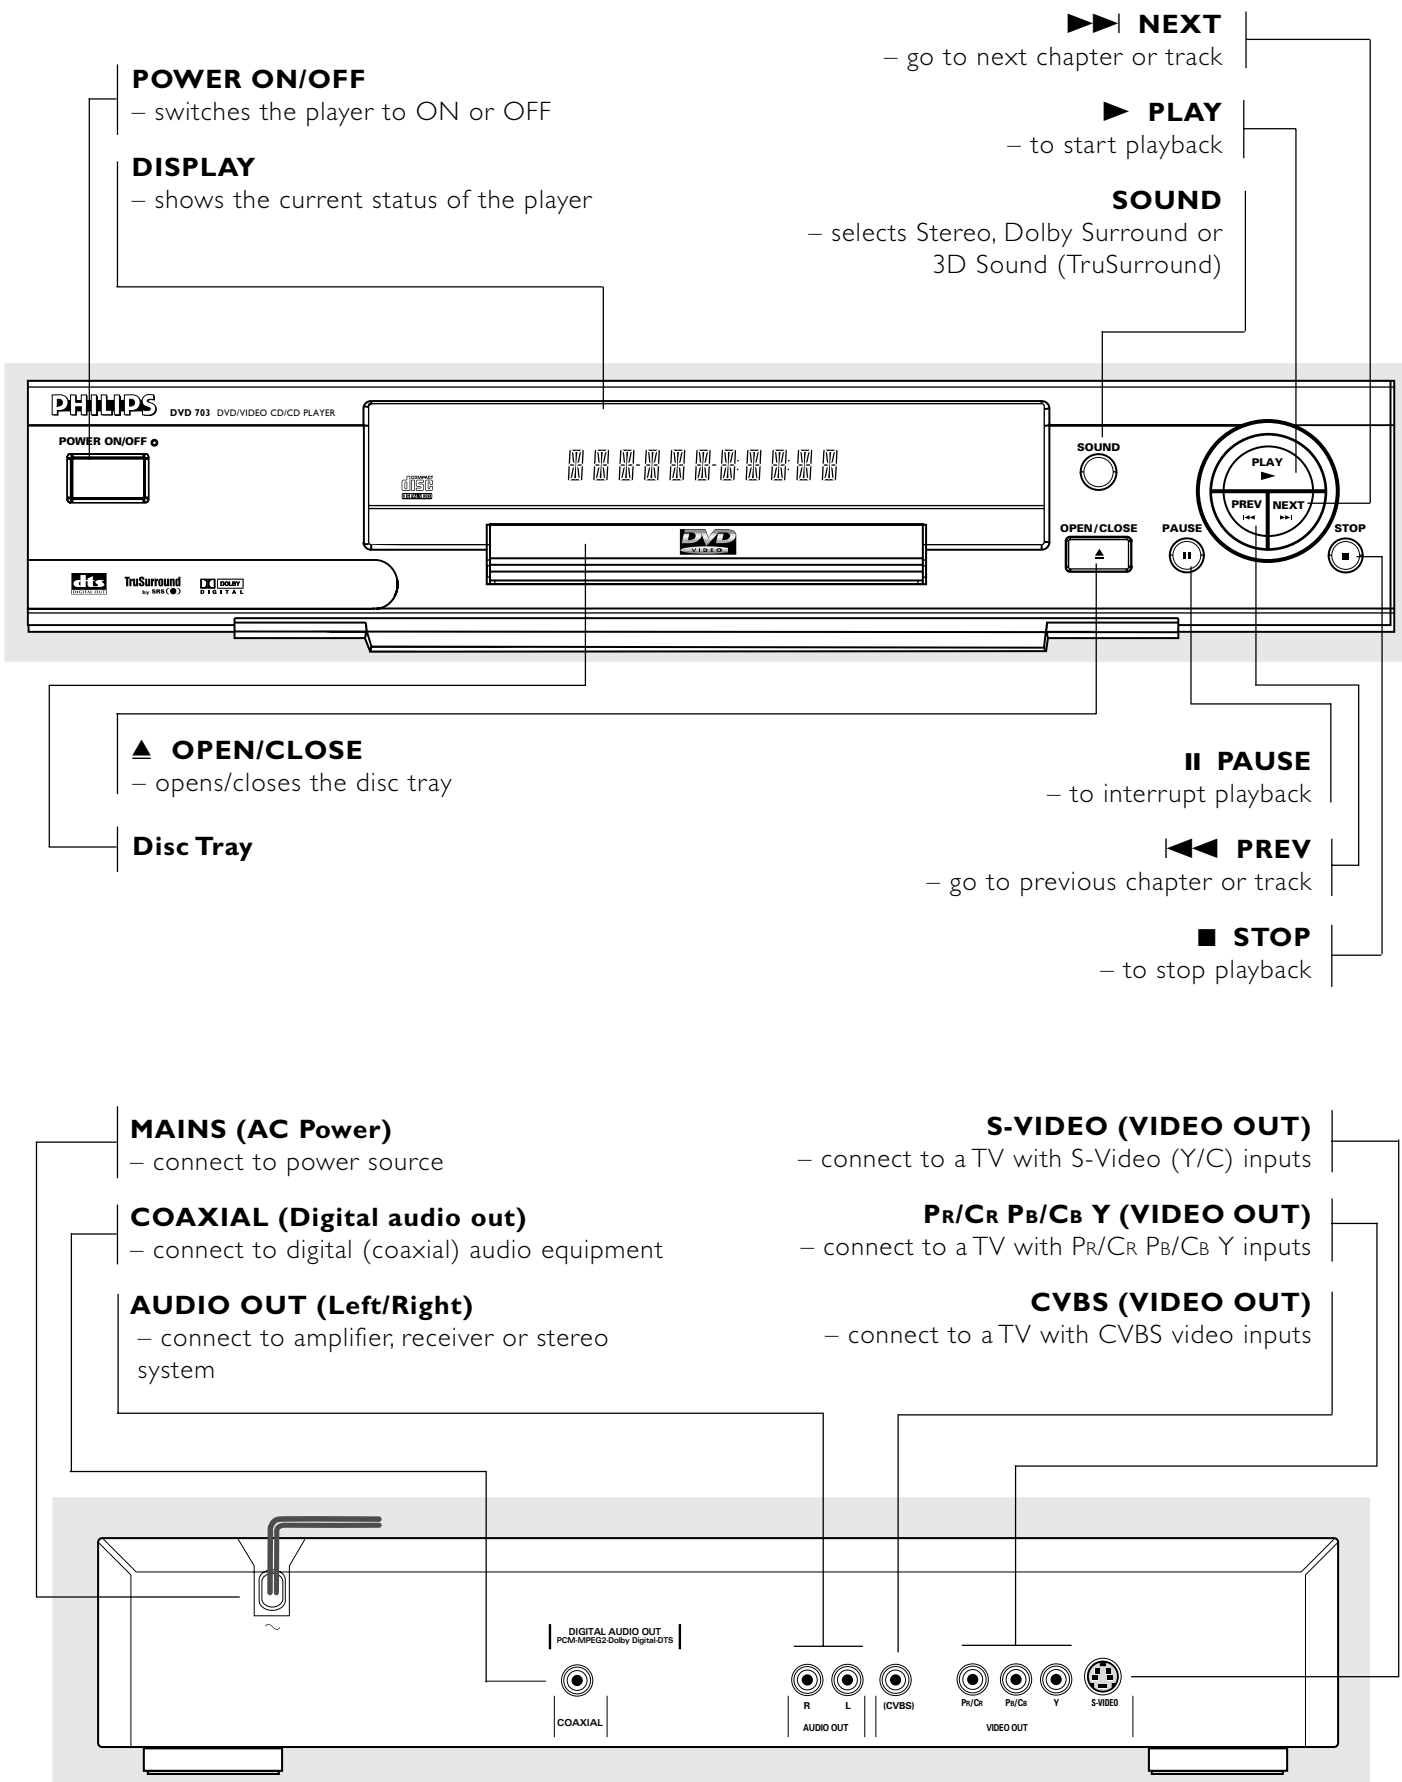

**Caution: Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.**

## Remote Control

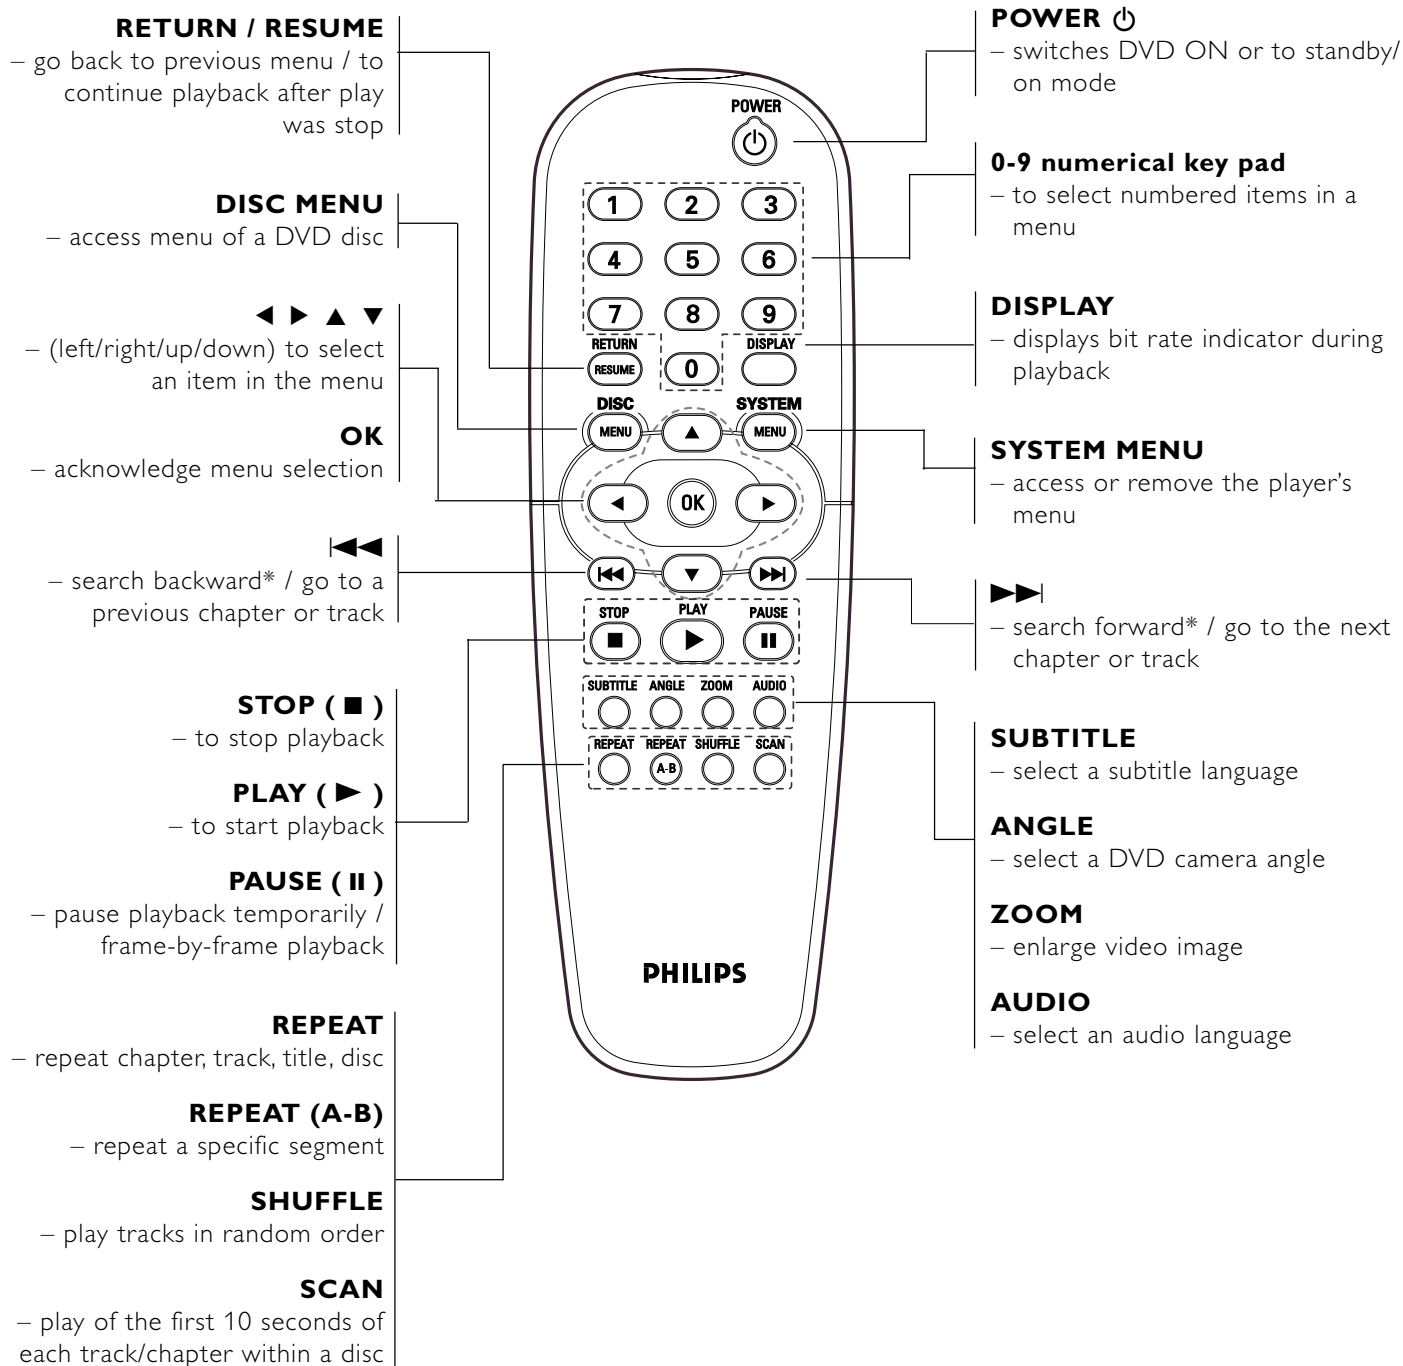

\* Press and hold key for about two seconds

# Preparation

## General Notes

- Depending on your TV and other equipment you wish to connect, there are various ways you could connect the player. Use only one of the connections described below.
- Please refer to the manuals of your TV, VCR, Stereo System or other devices as necessary to make the best connections.
- For better sound reproduction, connect the player's audio out jacks to the audio in jacks of your amplifier; receiver, stereo or audio/video equipment. See 'Connecting to optional equipment'.

### Caution:

- Make sure the DVD player is connected directly to the TV. Set the TV to the correct video input channel.
- Do not connect the player's audio out jack to the phono in jack of your audio system.
- Do not connect your DVD player to the TV via your VCR. The DVD image could be distorted by the copy protection system.

## Connecting to a TV

- Make one of the following connections, depending on the capabilities of your existing equipment.

### Component Video (Pr/CR Pb/Cb Y) connection


- 1 Connect the Pr/CR, Pb/Cb, Y video out jacks on the DVD player to the corresponding in jacks on the TV using an optional Pr/CR, Pb/Cb, Y cable (Z).
- 2 Connect the Left and Right audio out jacks of the DVD player to the audio left/right in jacks on the TV (A).

### S-Video (Y/C) connection

- 1 Connect the S-Video video out jack on the DVD player to the S-Video in jack on the TV using an optional S-Video cable (Y).
- 2 Connect the Left and Right audio out jacks of the DVD player to the audio left/right in jacks on the TV (A).

### CVBS connection

- 1 Connect the CVBS video out jack on the DVD player to the video in jack on the TV using the video cable supplied (X).
- 2 Connect the Left and Right audio out jacks to the audio left/right in jacks on the TV (A).

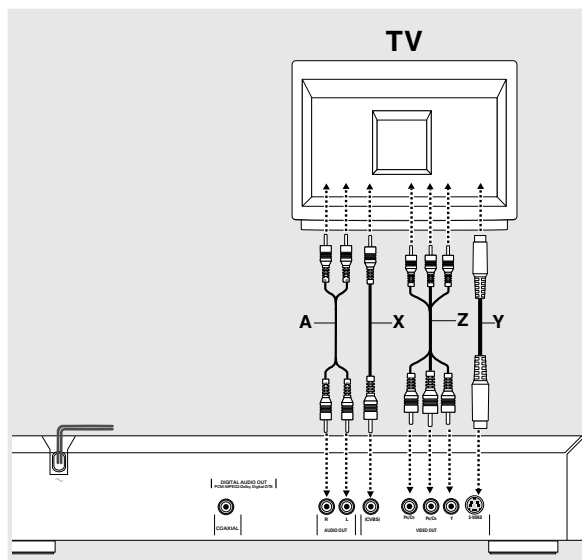

## Connecting to Optional Equipment

### Connecting to an amplifier equipped with two channel analog stereo or Dolby Surround

- 1 Connect the Left and Right audio out jacks of the DVD player to the audio left and right in jacks on your amplifier, receiver or stereo system, using the supplied audio cable (A).


### Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/Video receiver equipped with a multi-channel decoder (Dolby Digital™, MPEG 2 or DTS)

- 1 Connect the player's coaxial digital audio out jack to the corresponding coaxial digital audio in on your amplifier. Use an optional digital audio cable (F).
- 2 You will need to activate the player's digital output (see 'Personal Preferences').

### Digital Multi-channel sound

The digital multi-channel connection provides the best sound quality. For this you need a multi-channel Audio/Video receiver that supports one or more of the audio formats supported by your DVD player (MPEG 2, Dolby Digital™ or DTS). Check the receiver manual and the logos on the front of the receiver.

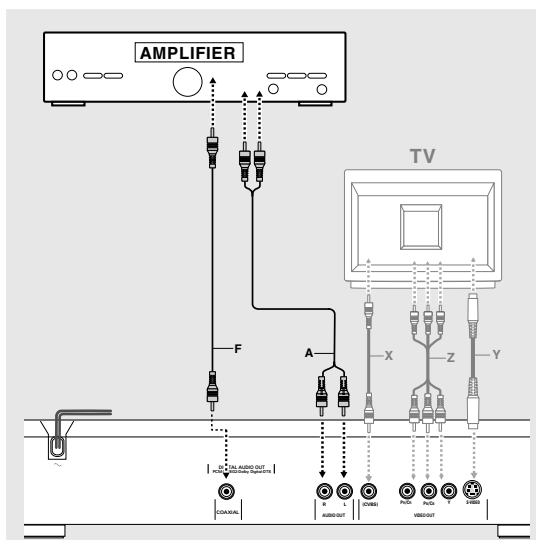

**Note:**

- If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.
- Six Channel Digital Surround Sound via digital connection can only be obtained if your receiver has a Digital Multi-channel decoder.
- To see the selected audio format of the current DVD in the Status Window, press SYSTEM MENU or Audio.

## NTSC/PAL Settings

You can switch the NTSC/PAL setting of the DVD player to match the video signal of your TV. This setting only affects the television's on-screen display that shows the stop and setup modes. You may select either NTSC or PAL. To change the DVD player setting to PAL or NTSC, follow the steps below.

- 1** Press the POWER ON/OFF button on the front panel of the DVD player to turn OFF the DVD player.
- 2** Press and hold ■ and ►►► on the front of the DVD player. While holding ■ and ►►► press POWER ON/OFF.
- 3** After PAL or NTSC appears on the display panel of the DVD player, release ■ and ►►► at the same time. The PAL or NTSC indicator that appears on the display panel indicates the current setting.
- 4** To change the setting, press ►►► within three seconds. The new setting (PAL or NTSC) will appear on the display panel.

## General explanation

### About this manual

This manual gives the basic instructions for operating the DVD player. Some DVDs require specific operation or allow only limited operation during playback. When this occurs, the symbol ✕ appears on the TV screen, indicating that the operation is not permitted by the player or the disc.

### Remote control operation

- Unless stated, all operations can be performed by the remote control. Always point the remote control directly at the player, making sure there are no obstructions between the remote and the player. Corresponding keys on the front panel of the player can also be used.

### Menu bar operation

- A number of operations can be done with the menu bar on the screen. The menu bar can be accessed by pressing the cursor keys on the remote control.
- Pressing SYSTEM MENU while the menu bar is displayed will clear the menu bar from the screen.
- The selected item will be highlighted, and the appropriate cursor keys to operate it will be displayed below the icon.
- The symbols < or > indicates that more items are available at the left/right of the menu bar. Press ◀ or ▶ to select these items.

## Menu Bar/Status Window

As there are multiple menu bars, the items on the menu bar are arranged according to usage and availability of direct access keys. Pressing the SYSTEM MENU keys repeatedly will toggle through menu bar 1, menu bar 2, menu bar 3 and OFF.

### Menu bar 1

|  |                      |
|--|----------------------|
|  | Personal Preferences |
|  | Subtitle Language    |
|  | Audio Language       |
|  | Color                |
|  | Sound                |

### Menu bar 2

|  |                       |
|--|-----------------------|
|  | Step by step playback |
|  | Slow motion           |
|  | Fast motion           |
|  | Angle                 |
|  | Zoom                  |

### Menu bar 3

|  |                                |
|--|--------------------------------|
|  | Title                          |
|  | Chapter                        |
|  | Time Search                    |
|  | Favorite Track Selection (FTS) |

## Temporary Feedback Field Icons

|  |                   |
|--|-------------------|
|  | Scan              |
|  | Repeat All        |
|  | Repeat Title      |
|  | Repeat Track      |
|  | Repeat Chapter    |
|  | Shuffle           |
|  | Shuffle Repeat    |
|  | Repeat A to end   |
|  | Repeat A-B        |
|  | Angle             |
|  | Child Lock On     |
|  | Child Safe        |
|  | Resume            |
|  | Action prohibited |

## Personal Preferences

You can set your own personal preferences on the player.

### General operation:

- Press SYSTEM MENU on the remote control.
- Select in the menu bar.  
→ The Personal Preferences menu appears.
- Use the keys to toggle through the menus, submenus and submenu options.  
→ When a menu item is selected, the cursor keys (on the remote control) to operate the item are displayed next to the item.
- Press OK to confirm and return to the main menu.  
The following items can be adapted:

### Picture

#### – TV Shape

If you have a wide screen (16:9) TV, select 16:9.


If you have a regular (4:3) TV, select 4:3.

If you have a 4:3 TV, you can also select between:

Letterbox for a 'wide-screen' picture with black bars at the top and bottom of the screen, or Pan Scan, for a full-height picture with the sides trimmed. If a disc supports the format, the picture will be shown accordingly.


#### – Black level shift (NTSC users only)

Select ON for adapting the color dynamics to obtain richer contrasts.

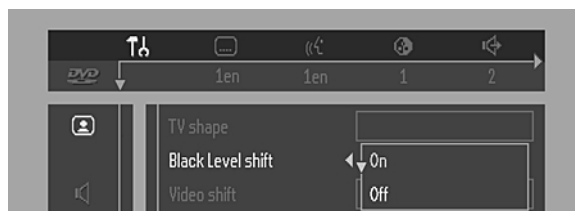

#### – Video shift

The factory centers the video on your TV screen. Use this setting to personalize the position of the picture on your TV by moving it to the left or right.

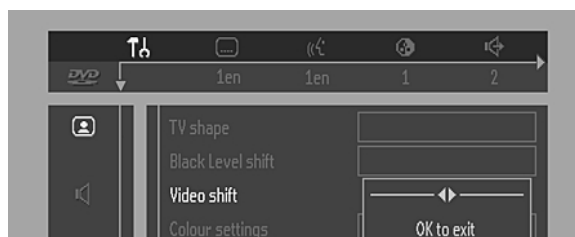


## Sound

### – Digital output


Factory setting: ALL. This means coaxial output is on. If you are not connecting equipment with a digital input, change the setting to OFF.

If your equipment doesn't include a digital multi-channel decoder, set the digital output to PCM only (Pulse Code Modulation).

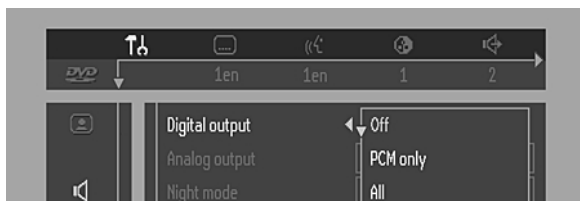

### – Analog output

Select Stereo, Dolby Surround or 3D Sound (TruSurround) to match your system's playback capability.

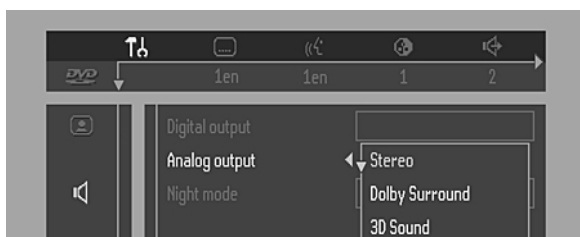

### – Night Mode

Optimizes the dynamics of the sound for low volume playback.

### – Karaoke vocal

Put this setting to ON only when a multi-channel karaoke DVD is being played. The karaoke channels on the disc will then be mixed into a normal stereo sound.

## Language

Select the required Menu, Audio and Subtitle language. Audio language and Subtitle language can also be adapted using the Menu bar.

## Features

### – Access Control

Access Control contains the following features:

Child Lock - When Child Lock is set to ON, a 4-digit code must be entered in order to play discs.

Parental control - Allows the conditional viewing of DVDs containing Parental Control information (see 'Access Control').

### – Status Window


Displays the current status of the player and is displayed with the menu bar. When disc playback is stopped, it is displayed with the 'Temporary Feedback Field' in the default screen. See 'On-Screen Display' information.

The factory setting is ON. Select OFF to suppress display of the Status Window.



### – Bit Rate Indicator

When activated, the bit rate for video and audio as well as the total bit rate is displayed. This is only applicable during playback of DVD and SVCD discs.

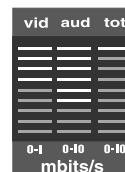

### – Help text

When set to ON, help text describes the icons selected. Select OFF if you no longer require the help text.

## Loading Discs

- 1 Press OPEN/CLOSE on the front of the player to open the disc tray.
- 2 Load your chosen disc in the tray, label side up.
- 3 Press OPEN/CLOSE again to close the tray.  
→ **READY** appears in the status window and on the player display, and playback starts automatically.

**Note:**

– If 'Child Lock' is set to ON and the disc inserted is not authorized, the 4-digit code must be entered and/or the disc must be authorized (see 'Access Control').

## Playing a DVD-Video and Video CD

### Playing a disc

- After inserting the disc and closing the tray, playback starts automatically. The status window of the player display shows the type of disc loaded, as well as the disc's information and playing time.
- The disc may invite you to select an item from a menu. If the selections are numbered, press the appropriate numerical key; if not, use the **▼▲◀▶** keys to highlight your selection, then press **OK**.
- The number of the current title and chapter are displayed.
- Playback may stop at the end of the Title and you may return to the DVD disc menu. To go to the next title, press **▶**.
- To stop playback, press **■**.  
→ The default screen will appear, giving information about the current status.
- You can resume playback from the point at which you stopped playback. Press **▶**; when you see the Resume icon **▶** on the screen, press **▶** again.  
→ The RESUME feature applies not only to the disc in the player, but also to the last four discs you have played. Simply reload the disc and press **RESUME** on the remote control or; press **▶** when you see the Resume icon **▶** on the screen, then press **▶** again.



**Note:**


– DVDs may have a region code. Your player will not play discs that have a region code different from the region code of your player.

## General Features

**Note:**

– Unless stated, all operations described are based on remote control use. Some operations can be carried out using the menu bar on the screen.

### Moving to another title/ chapter

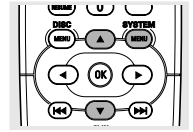

When a disc has more than one title or chapter, you can move to another title/chapter as follows:


- Press **SYSTEM MENU**, then select **T** or **C** in the menu bar.
- Press **▲** or **▼** to select a title/chapter.

### Slow Motion

- Select **▶** (SLOW MOTION) in the menu bar.
- Use the **▼** keys to enter the SLOW MOTION menu.  
→ The player will now go into PAUSE mode.
- Use the cursor keys **◀▶** to select the required speed: -1, -1/2, -1/4 or -1/8 (backward), or +1/8, +1/4, +1/2 or +1 (forward).
- Select 1 to play the disc at normal speed again.
- If **||** is pressed, the speed will be set to zero (PAUSE).
- To exit slow motion mode, press **▶** or **▲**.

### Still Picture and Frame-by-frame playback


- Select **▶** (**STEP**) in the menu bar.
- Use the **▼** key to enter the picture by picture menu.  
→ The player will now go into PAUSE mode.
- Use the cursor keys **◀▶** to select the previous or next picture frame.
- To exit **STEP** mode, press **▶** or **▲**.

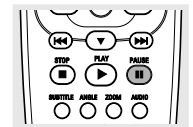

You can also step forward by pressing **||** repeatedly on the remote control.


### Scan

- Scanning plays the first 10 seconds of each chapter/index on the disc.
- Press **SCAN**.
- To continue playback at your chosen track, press **SCAN** again or press **▶**.

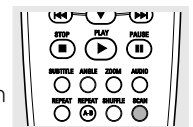

## Search

- Select **SEARCH** (FAST MOTION) in the menu bar.
- Use the **DOWN** keys to enter the FAST MOTION menu.
- Use the **LEFT/RIGHT** keys to select the required speed: -32, -8 or -4 (backward), or +4, +8, +32 (forward).
- Select 1 to play the disc at normal speed again.
- To exit FAST MOTION mode, press **RIGHT** or **UP**.

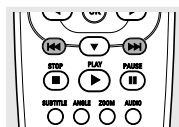


To search forward or backward through different speeds, you can also hold down **LEFT/LEFT** or **RIGHT/RIGHT**.

## Repeat

### DVD-Video Discs - Repeat chapter/ title/disc

- To repeat the currently playing chapter, press REPEAT.
  - **REPEAT CHPT** appears on the player display.
- To repeat the title currently playing, press REPEAT a second time
  - **REPEAT TITL** appears on the display.
- To repeat the entire disc, press REPEAT a third time
  - **REPEAT** appears on the display.
- To exit Repeat mode, press REPEAT a fourth time.

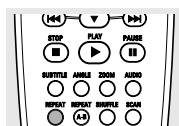


### Video CDs - Repeat track/disc

- To repeat the track currently playing, press REPEAT.
  - **REPEAT TRK** appears on the player display.
- To repeat the entire disc, press REPEAT a second time.
  - **REPEAT** appears on the display and the screen.
- To exit Repeat mode, press REPEAT a third time.

## Repeat A-B

To repeat a sequence in a title:

- Press REPEAT A-B at your chosen starting point.
  - **A-** appears briefly on the screen.
- Press REPEAT A-B again at your chosen end point.
  - **REPEAT A-B** appears briefly on the display, and the repeat sequence begins. (**REPEAT A-B** is displayed on the front panel of the player)
- To exit the sequence, press REPEAT A-B.

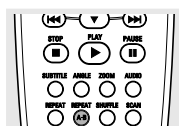


## Shuffle

### DVD-Video discs

This shuffles the playing order of chapters within a title, if the title has more than one chapter:

- Press SHUFFLE during playback.
  - **SHUFFLE** appears on the screen for about two seconds.
- To return to normal playback, press SHUFFLE again.

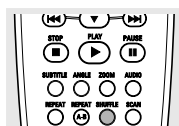


### Video CDs

- Press SHUFFLE during playback.
  - **SHUFFLE** appears on the screen for about two seconds.
- To return to normal playback, press SHUFFLE again.

## Time search

The Time Search function allows you to start playing at any chosen time on the disc.

- Select **TIME SEARCH** in the menu bar.
- Press **DOWN**.
  - The player will now go into PAUSE mode.
  - A time edit box appears on the screen, showing the elapsed playing time of the current disc.
- Use the digit keys to enter the required start time. Enter hours, minutes and seconds from left to right in the box.
  - Each time an item has been entered, the next item will be highlighted.
- Press OK to confirm the start time.
  - The time edit box will disappear and playback starts from the selected time on the disc.

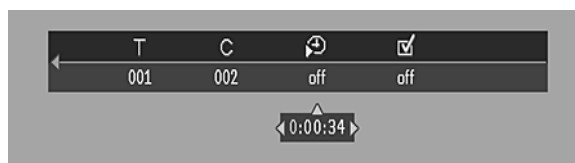

## Zoom

The Zoom function allows you to enlarge the video image and to pan through the enlarged image.

- Select **ZOOM**.
- Press **UP/DOWN** to activate the **ZOOM** function and select the required zoom factor: 1.33 or 2 or 4.
  - The player will go into Pause mode.
  - The selected zoom factor appears below the Zoom icon in the menu bar, and 'Press OK to pan' appears below the menu bar.
  - The picture will change accordingly.
- Press OK to confirm the selection.
  - The panning icons appear on the screen.
- Use the **LEFT/RIGHT/UP/DOWN** keys to pan across the screen.
- When OK is pressed only the zoomed picture will be shown on the screen.
- To exit **ZOOM** mode:
  - Press **RIGHT** to resume playback.



## FTS-Video


- The FTS-Video function allows you to store your favorite titles and chapters (DVD) and favorite tracks and indexes (VCD) for a particular disc in the player memory.
- FTS program can contain 20 items (titles, chapters).
- An programmed FTS will be placed on top of the list when playback is activated. When the list is full, a new program will replace the last program on the list.
- The program can be selected and played at any time.

### Storing an FTS-Video Program

- While playback is stopped, select **VIDEO FTS**  in the menu bar.
- Press **▼** to open the menu.  
→ The **VIDEO FTS** menu appears.
- Press **▶** or **◀** or FTS to select ON or OFF.

### Storing titles/tracks

- Press **▼** to select **TITLES**.
- Use **▶** and **◀** to select the required title.
- Press OK if you wish to store the entire title.  
→ The title number will be added to the list of selections.

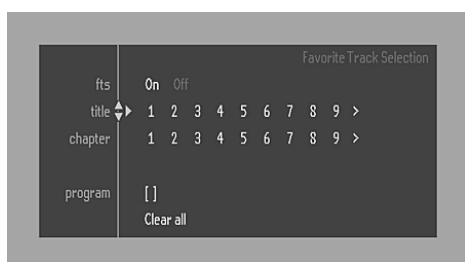

### Storing chapters/indexes

- Press **▼** on the selected title number.  
→ The title number will be marked and the highlight moves to the first available chapter number for this title.
- Use **▶** and **◀** to select the required chapter number.
- Press OK to confirm the selection.  
→ The title/chapter selection will be added to the list of selections.
- Press SYSTEM MENU to exit the **VIDEO FTS**  menu.

### Erasing an FTS-Video Program

- While playback is stopped, select **VIDEO FTS**  in the menu bar.
- Use **▼** to select **PROGRAM**.
- Use **▶** and **◀** to select the required number.
- Press OK to erase the selection.
- Press SYSTEM MENU to exit.

### Erasing all selections

- While playback is stopped, select **VIDEO FTS**  in the menu bar.
- Use **▼** to select **CLEAR ALL**.
- Press OK.  
→ All selections will be erased.
- Press SYSTEM MENU to exit.

## Special DVD Features

### Checking the contents of DVD-Video discs: Menus

DVDs may contain menus to navigate the disc and access special features. To use the menu, press the appropriate numerical key or use the **▼**, **▲**, **▶**, **◀** keys to highlight your selection, then press OK.

### Title/Disc menu

- Press **DISC MENU**.  
→ If the current title has a menu, the menu will appear on the screen. Otherwise, the disc menu will be displayed.
- The menu can list camera angles, spoken language and subtitle options, and chapters for the title.
- To remove the title menu, press **DISC MENU** again.

### Camera Angle

- If the disc contains sequences recorded from different camera angles, the angle icon appears, showing the number of available angles and the angle being shown currently. You can then change the camera angle if you wish.
- Use the **▲**/**▼** keys to select the required angle icon.  
→ After a while, playback changes to the selected angle. The angle icon remains displayed until multiple angles are no longer available.



### Changing the audio language

- Select **⏮** (**AUDIO**) in the menu bar.
- Press **⏮** or **▲**/**▼** repeatedly to see the different languages.



### Subtitles

- Select **⏮** (**SUBTITLE**) in the menu bar.
- Press **⏮** or **▲**/**▼** repeatedly to see the different subtitles.




## Special Video CD & SVCD Features

### Playback Control (PBC)

- Load a Video CD with PBC and press ►.
- Go through the menu with the keys indicated on the TV screen until your chosen passage starts to play. If a **PBC** menu consists of a list of titles, you can select a title directly.
- Enter your choice with the numerical keys (0-9).
- Press RETURN to go back to the previous menu.
- You may also set to **PBC OFF** under Personal Preferences.


### Playing an Audio CD

- After loading the disc, playback starts automatically.
- If the TV is on, the Audio CD screen appears.
- The number of tracks and the total playing time of the disc will be shown on the screen.
- During playback, the current track number and its elapsed playing time will be shown on the screen and on the player display.
- Playback will stop at the end of the disc.
- To stop playback at any other time, press ■.

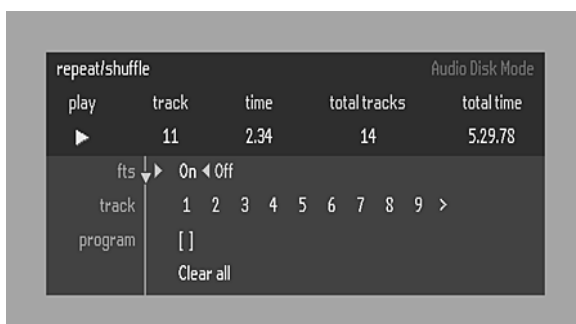


### Pause

- Press **II** during playback.
- To return to playback, press ►.

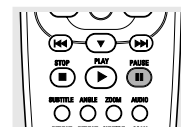

### Search

- To search forward or backward through the disc at four times normal speed, hold down **◀◀◀** or **▶▶▶** for about one second during playback.
  - Search begins, and sound is partially muted.
- To step up to eight times the normal speed, press **◀◀◀** or **▶▶▶** again.
  - Search goes to eight times the speed, and the sound is muted.
- To return to four times the normal speed, press **◀◀◀** or **▶▶▶** again.
- If the TV is on, search speed and direction are indicated on the screen each time **◀◀◀** or **▶▶▶** is pressed.
- To end the search, press ► to resume playback or press ■ to stop playback.

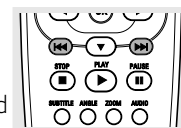


### Moving to another track

- Press **◀◀◀** or **▶▶▶** briefly during playback to go to the next track or to return to the beginning of the current track.
- Press **◀◀◀** twice briefly to step back to the previous track.
- To go directly to any track, enter the track number using the numerical keys (0-9).


### Shuffle

- Press **SHUFFLE** during playback.
  - The order of the tracks is changed.
- To return to normal playback, press **SHUFFLE** again.

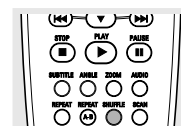

## Repeat track/disc


- To repeat the track currently playing, press REPEAT.
- **REPEAT TRK** appears on the display.
- To repeat the entire disc, press REPEAT a second time.
- **REPEAT** appears on the display.
- To exit Repeat mode, press REPEAT a third time.

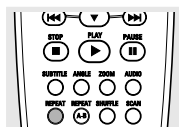

## Repeat A-B

To repeat a sequence:


- Press REPEAT A-B at your chosen starting point.
- **A-** appears on the player display.
- Press REPEAT A-B again at your chosen end point.
- **A-B** appears on the display, and the sequence begins to play repeatedly.
- To exit the sequence, press REPEAT A-B again.

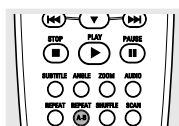

## Scan


Scanning plays the first 10 seconds of each track on the disc.

- Press SCAN.
- To continue playback at your chosen track, press SCAN again or press ►.

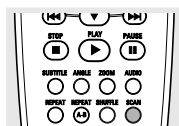

## Favorite Track Selection (FTS) Program

- The FTS Program allows you to store your favorite tracks for a particular disc in the player memory.
- Each FTS Program can contain 20 tracks.

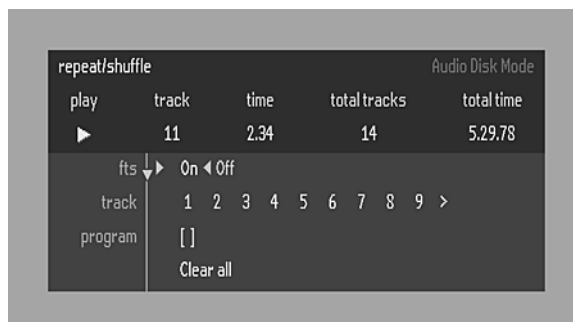

### Storing an FTS Program

- 1 Load a disc and stop playback.
- 2 Use ▼ to go to the list of available tracks.
- 3 Use ► or ◀ to select tracks from the list. To go directly to any track, enter the track number using the numerical keys (0-9).
- 4 Store each track by pressing OK.
  - The track numbers will be added to the list.
  - The number of tracks and the playing time of the program will be shown on the screen and the player display.

When your FTS Program is complete, press ► to start playback or press ▲ to go back to Stop mode. In either case, the FTS Program will be automatically memorized.

### Switching FTS ON/OFF

- 1 Use ▲ ▼ to move to select desired tracks.
- 2 Use ► or ◀ to select either ON or OFF.

### Erasing a track from an FTS Program

- 1 Use ▼ to go to the list of selected tracks.
- 2 Use ► and ◀ to select the track number you wish to erase.
- 3 Press OK.
  - The track number will be erased from the list of selected tracks.

### Erasing the complete program

- 1 Use ▼ to select **CLEAR ALL**, then press OK.
  - The complete FTS Program for the disc will be erased.




## Access Control: Child Lock (DVD-Video and Video CD)

### Activating/deactivating the Child Lock

- 1 When disc playback is stopped, select **ACCESS CONTROL** in the features menu using the ▲/▼ keys.
- 2 Enter a 4-digit code of your own choice.
- 3 Enter the code a second time.
- 4 Move to **"CHILD LOCK"** using the ▲/▼ keys.
- 5 Move to **LOCK/UNLOCK** using the ► key.
- 6 Select **LOCK** using the ▲/▼ keys.
- 7 Press OK or ◀ to confirm, then press ◀ again to exit the menu.  
→ Now unauthorized discs will not be played unless the 4-digit code is entered.
- 8 Select **UNLOCK** to deactivate the **CHILD LOCK**.

*Note: Confirmation of the 4-digit code is necessary when:*

- The code is entered for the very first time (see above),
- The code is changed (see 'Changing the 4-digit code'),
- The code is cancelled (see 'Changing the 4-digit code').

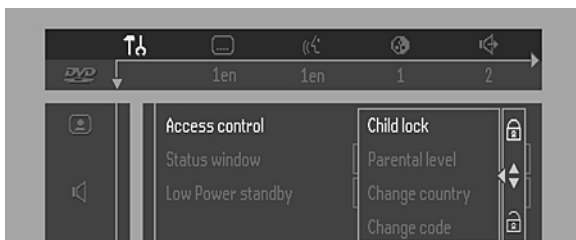

### Authorizing discs

- Insert the disc. See 'Loading disc'.  
→ The 'child protect' dialog will appear. You will be asked to enter your secret code for 'Playback Once' or 'Playback Always.' If you select 'Playback Once', the disc can be played as long as it is in the player and the player is ON. If you select 'Playback Always', the disc will become child safe (authorized) and can always be played, even if the Child Lock is set to ON.

*Notes:*

- The player memory maintains a list of 120 authorized ('Child safe') disc titles. A disc will be placed in the list when 'Playback Always' is selected in the 'child protect' dialog.
- Each time a 'child safe' disc is played, it will be placed on top of the list. When the list is full and a new disc is added, the last disc in the list will be removed from the list.
- Double-sided DVDs may have a different ID for each side. In order to make the disc 'child safe', each side has to be authorized.
- Multi-volume VCDs may have a different ID for each volume. In order to make the complete set 'child safe', each volume has to be authorized.




### Deauthorizing discs

- Insert the disc. See 'Loading disc'.  
→ Playback starts automatically.
- Press ■ while ☺ is visible.  
→ The ☹ will appear and the disc is now deauthorized.

## Access Control: Parental Control (DVD-Video only)

Movies on DVDs may contain scenes not suitable for children. Therefore, discs may contain 'Parental Control' information which applies to the complete disc or to certain scenes on the disc. These scenes are rated from 1 to 8, and alternative, more suitable scenes are available on the disc. Ratings are country dependent. The 'Parental Control' feature allows you to prevent discs from being played by your children or to have certain discs played with alternative scenes.

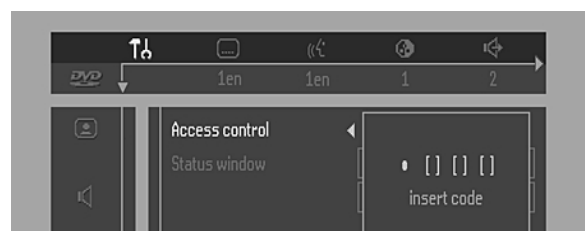

## Activating/Deactivating Parental Control

- 1 When disc playback is stopped, select **ACCESS CONTROL** in the features menu using the ▲/▼ keys.
- 2 Enter your 4-digit code. If necessary, enter the code a second time.
- 3 Move to **Parental Control** using the ▲/▼ keys.
- 4 Move to **VALUE ADJUSTMENT** (1-8) using the ► key.
- 5 Then use the ▲/▼ keys or the numerical keys on the remote control to select a rating from 1 to 8 for the disc inserted.


### Rating 0 (displayed as '—'):

Parental Control is not activated. The Disc will be played in full.

### Ratings 1 to 8:

The disc contains scenes not suitable for children. If you set a rating for the player, all scenes with the same rating or lower will be played. Higher rated scenes will not be played unless an alternative is available on the disc. The alternative must have the same rating or a lower one. If no suitable alternative is found, playback will stop and the 4-digit code has to be entered.

- 6 Press OK or ◀ to confirm, then press ◀ again to exit the menu.

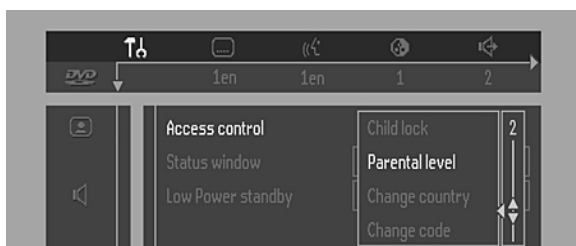

## Country

- 1 When disc playback is stopped, select **ACCESS CONTROL** in the features menu using the ▲/▼ keys.
- 2 Enter the 4-digit code.
- 3 Move to **CHANGE COUNTRY** using the ▼ key.
- 4 Press the ► key.
- 5 Select a country using ▲/▼.
- 6 Press OK or ◀ to confirm, then press ◀ again to exit the menu.

## Changing the 4-digit code

- 1 When disc playback is stopped, select **ACCESS CONTROL** in the features menu using the ▲/▼ keys.
- 2 Enter the old code.
- 3 Move to **CHANGE CODE** using the ▼ key.
- 4 Press the ► key.
- 5 Enter the new 4-digit code.
- 6 Enter the code a second time and reconfirm by pressing OK.
- 7 Press ◀ to exit the menu.

## If you forget your 4 digit code

- 1 Press ■ to exit the 'Child Protect' screen.
- 2 Select **ACCESS CONTROL** in the features menu using the ▲/▼ keys.
- 3 The 4-digit code can be cancelled by pressing ■ four times in the 'Access Control' dialog.
- 4 You can then enter a new code (twice!) as described above (Changing the 4 digit code).

## Parental Control Disclaimer

This DVD player features the **PARENTAL CONTROL** system which is intended to activate when playing DVD discs furnished with certain software coding. This is according to technical standards adopted by the set maker and disc content industries.

Please note that the **PARENTAL CONTROL** system will not operate a DVD disc which is not furnished with the appropriate software coding. Also note that at the time of release of this DVD player, certain aspects of the technical standards had not been settled between set makers and the disc industries.

On this basis, Philips cannot guarantee the functioning of the **PARENTAL CONTROL** system and denies any liability associated with unintended watching of disc content.

If in doubt, please make sure the disc plays according to your **PARENTAL CONTROL** settings before you allow children access to the player.

# Before Requesting Service

If it appears that the DVD-Video player is faulty, first consult this checklist. Something may have been overlooked. Under no circumstances should you attempt to repair the system yourself; this will invalidate the warranty.

Look for the specific symptom(s). Then perform only the actions listed to remedy the specific symptom(s).

| Symptom   | Remedy   |
|---|--|
| <b>No power</b>   | <ul style="list-style-type: none"><li>– Make sure the mains cord (AC Power) is properly connected.</li><li>– Check if there is power at the AC outlet by plugging in another appliance.</li></ul>  |
| <b>No picture</b>   | <ul style="list-style-type: none"><li>– Check if the TV is switched on.</li><li>– Check the video connection.</li></ul>  |
| <b>Distorted picture</b>  | <ul style="list-style-type: none"><li>– Check the disc for fingerprints and clean the disc with a soft cloth, wiping from the center to the edge in a straight line.</li><li>– Sometimes a small amount of picture distortion may appear. This is not a malfunction.</li></ul>   |
| <b>Completely distorted picture or no color with player menu</b>          | <ul style="list-style-type: none"><li>– If the picture is distorted completely or if the picture rolls vertically, make sure the NTSC/PAL setting at the DVD player matches the video signal of your television.</li><li>– If your TV video signal is NTSC, select the NTSC setting at the DVD player.</li><li>– If your video signal is PAL, select the PAL setting. - See NTSC/PAL SETTINGS.</li></ul> |
| <b>Distorted or black/white picture with DVD or Video CD</b>              | <ul style="list-style-type: none"><li>– The disc format does not match your TV's video signal (PAL/NTSC).</li></ul>  |
| <b>No sound</b>   | <ul style="list-style-type: none"><li>– Check audio connections.</li><li>– If you are using a HiFi amplifier, try another sound source.</li></ul>  |
| <b>Distorted sound from HiFi amplifier</b>                                | <ul style="list-style-type: none"><li>– Check to make sure that no audio connections are made to the amplifier's phono input.</li></ul>  |
| <b>No audio at digital output</b>   | <ul style="list-style-type: none"><li>– Check the digital connections.</li><li>– Check the settings menu to make sure the digital output is set to ALL or PCM.</li><li>– Check if the audio format of the selected audio language matches your receiver capabilities.</li></ul>  |
| <b>Disc can't be played</b>   | <ul style="list-style-type: none"><li>– Ensure the disc label is facing up.</li><li>– Clean the disc.</li><li>– Check if the disc is defective by trying another disc.</li><li>– Check to see if the disc is defective, badly scratched or warped (not flat).</li></ul>  |
| <b>No return to start-up screen when disc is removed</b>                  | <ul style="list-style-type: none"><li>– Reset by switching the player off, then on again.</li><li>– Check to see if the program requires another disc to be loaded.</li></ul>  |
| <b>The player does not respond to the remote control</b>                  | <ul style="list-style-type: none"><li>– Aim the remote control directly at the sensor on the front of the player.</li><li>– Remove any obstacles between the player and the remote control.</li><li>– Inspect or replace the batteries in the remote control.</li></ul>  |
| <b>Buttons do not work</b>  | <ul style="list-style-type: none"><li>– In order to completely reset the player, unplug the AC cord from the AC outlet. (Please ensure that the set is not in Initial Setup mode)</li></ul>  |
| <b>Player does not respond to some operating commands during playback</b> | <ul style="list-style-type: none"><li>– Operations may not be permitted by the disc. Refer to the instructions of the disc.</li></ul>  |
| <b>DVD-Video player cannot read CDs/DVDs</b>                              | <ul style="list-style-type: none"><li>– Use a commonly available cleaning CD/DVD to clean the lens before sending the DVD-Video player for repair.</li></ul>   |

# Specifications

## PLAYBACK SYSTEM

DVD-Video  
Video CD & SVCD  
CD (CD-Recordable and CD-Rewritable)  
DVD+RW

## OPTICAL READOUT SYSTEM

|                    |                                 |  |
|--------------------|---------------------------------|--|
| Lasertype          | Semiconductor AlGaAs            |  |
| Numerical Aperture | 0.60 (DVD)<br>0.45 (VCD/CD)     |  |
| Wavelength         | 650 nm (DVD)<br>780 nm (VCD/CD) |  |

## DVD DISC FORMAT

|                        |              |         |
|------------------------|--------------|---------|
| Medium                 | Optical Disc |         |
| Diameter               | 12cm (8cm)   |         |
| Playing time<br>(12cm) | One layer    | 2.15 h* |
|                        | Dual layer   | 4 h*    |
|                        | Two side     | 4.30 h* |
|                        | Single layer |         |
|                        | Two side     | 8 h*    |
| Dual layer             |              |         |

## VIDEO FORMAT

|                     |                                 |
|---------------------|---------------------------------|
| DA Converter        | 10 bits                         |
| Signal handling     | Components                      |
| Digital Compression | MPEG2 for DVD,<br>MPEG1 for VCD |

## TV STANDARD

|                 | (PAL/50Hz)    | (NTSC/60Hz) |
|-----------------|---------------|-------------|
| Number of lines | 625           | 525         |
| Playback        | Multistandard | (PAL/NTSC)  |

## DVD

|                       |            |            |
|-----------------------|------------|------------|
| Horizontal Resolution | 720 pixels | 720 pixels |
| Vertical Resolution   | 576 lines  | 480 lines  |

## VCD

|                       |            |            |
|-----------------------|------------|------------|
| Horizontal Resolution | 352 pixels | 352 pixels |
| Vertical Resolution   | 288 lines  | 240 lines  |

## VIDEO PERFORMANCE

|                      |                                  |
|----------------------|----------------------------------|
| Video output         | 1 Vpp into 75 ohm                |
| S-Video output       | Y: 1 Vpp into 75 ohm             |
|                      | C: 0.3 Vpp into 75 ohm           |
|                      | Y: 1 Vpp into 75 ohm             |
| Y Pb/Cb Pr/Cr output | Pb/Cb Pr/Cr: 0.7 Vpp into 75 ohm |
| Black Level Shift    | On/Off                           |
| Video Shift          | Left/Right                       |

## AUDIO FORMAT

|         |                   |   |
|---------|-------------------|---|
| Digital | MPEG              | Compressed Digital                      |
|         | DTS/Dolby Digital |   |
|         | PCM               | 16, 20, 24 bits<br>fs, 44.1, 48, 96 kHz |

Analog Sound Stereo  
Dolby Pro Logic downmix from Dolby Digital multi-channel sound  
3D Sound (TruSurround) for virtual 5.1 channel sound on 2 speakers

## AUDIO PERFORMANCE

|                             |             |               |
|-----------------------------|-------------|---------------|
| DA Converter                | 24 bits     |               |
| DVD                         | fs 96 kHz   | 4 Hz - 44 kHz |
|                             | fs 48 kHz   | 4 Hz - 22 kHz |
| Video CD                    | fs 44.1 kHz | 4 Hz - 20 kHz |
|                             | fs 44.1 kHz | 4 Hz - 20 kHz |
| Signal-Noise (1kHz)         | 100 dB      |               |
| Dynamic Range (1kHz)        | 97 dB       |               |
| Crosstalk (1kHz)            | 110 dB      |               |
| Distortion and Noise (1kHz) | 88 dB       |               |

## CONNECTIONS

|                  |   |
|------------------|---|
| Y Output         | Cinch (green)   |
| Pb/Cb Output     | Cinch (blue)  |
| Pr/Cr Output     | Cinch (red)   |
| S-Video Output   | Mini DIN, 4 pins  |
| Video Output     | Cinch (yellow)  |
| Audio L+R output | Cinch (white/red)   |
| Digital Output   | 1 coaxial<br>IEC958 for CDDA / LPCM<br>IEC1937 for MPEG1/2, Dolby Digital and DTS |

## CABINET

|                        |                    |
|------------------------|--------------------|
| Dimensions (w x h x d) | 435 x 92 x 320 mm  |
| Weight                 | Approximately 4 Kg |

## GENERAL FUNCTIONALITY

Stop / Play / Pause  
Fast Forward / Backward  
Time Search  
Step Forward / Backward  
Slow Motion  
Title / Chapter / Track Select  
Skip Next / Previous  
Repeat (Chapter / Title / All) or (Track / All)  
A-B Repeat  
Shuffle  
Scan  
New enhanced user graphical interface  
Perfect Still with digital multi-tap filter  
Zoom (x1.33, x2, x4) with picture enhancement  
Screen Saver (Dim 75% after 15 minutes)  
3D Sound (TruSurround)  
Virtual Jog Shuttle  
Audio and video bit rate indicator

## DVD FUNCTIONALITY

Multi-angle Selection  
Audio Selection (one out of maximum eight languages)  
Subtitles Selection (one out of maximum 32 languages)  
Aspect Ratio conversion (16:9, 4:3 Letterbox, 4:3 Pan Scan)  
Parental Control and Disk Lock  
Disc Menu support (Title Menu and Access Control)  
Resume (5 discs) after stop / standby  
Programming Titles/chapters with Favorite Track Selection

## VIDEO CD FUNCTIONALITY

Playback Control for VCD 2.0 discs  
Disc Lock  
Resume (5 discs) after stop / standby  
Programming Tracks with Favorite Track Selection

## AUDIO CD FUNCTIONALITY

Time Display (Total / Track / Remaining Track Time)  
Full audio functionality with remote control  
Programming with Favorite Track Selection

\* typical playing time for movie with 2 spoken languages and 3 subtitle languages

**Specifications subject to change without prior notice**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>