


*OWNER'S MANUAL*

**MAGNAVOX**  
SMART. VERY SMART.


**MDV458/17**  
**DVD PLAYER**

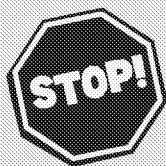

*THANK YOU FOR CHOOSING MAGNAVOX.*

**NEED HELP FAST?**

*READ YOUR QUICK-USE GUIDE AND/OR OWNER'S MANUAL FIRST FOR QUICK TIPS THAT MAKE USING YOUR MAGNAVOX PRODUCT MORE ENJOYABLE. IF YOU HAVE READ YOUR INSTRUCTIONS AND STILL NEED ASSISTANCE, YOU MAY ACCESS OUR ONLINE HELP AT [WWW.MAGNAVOX.COM](http://WWW.MAGNAVOX.COM) OR CALL 1-800-705-2000 WHILE WITH YOUR PRODUCT.*

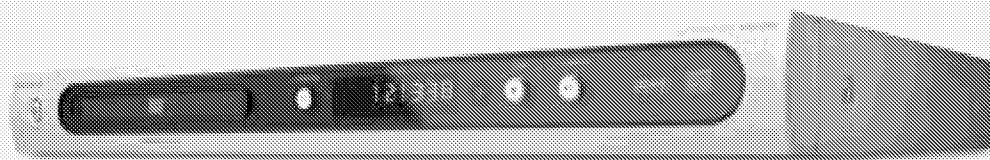

## Return your Product Registration Card today to get the very most from your purchase.

Registering your model with MAGNAVOX makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once to ensure:

### \*Proof of Purchase

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

### \*Product Safety Notification

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

### \*Additional Benefits of Product Ownership

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

## MAGNAVOX

*Congratulations on your purchase,  
and welcome to the "family!"*

### Dear MAGNAVOX product owner:

Thank you for your confidence in MAGNAVOX. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come.


As a member of the MAGNAVOX "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

Most importantly, you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome - and thanks for investing in a MAGNAVOX product.

**P.S. To get the most from your MAGNAVOX purchase, be sure to complete and return your Product Registration Card at once.**

Know these  
**safety symbols**

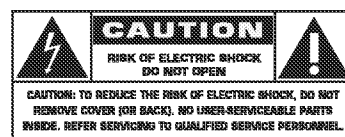

This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture, and objects filled with liquids, such as vases, should not be placed on this apparatus.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**ATTENTION:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

### For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

**MAGNAVOX**

Visit our World Wide Web Site at <http://www.magnavox.com>

# Contents 3

## Getting Started

Contents .....	3
Safety Information .....	4-5
Introduction .....	6
Playable Discs .....	7
General Information .....	8
Hookups .....	9-15

## Quick Disc Playback

Quick Disc Playback .....	16
---------------------------	----

## DVD Player Controls

Remote Control Buttons .....	17
Front Panel .....	18
Rear Panel .....	19

## Disc Playback and Features

Title/Disc/PBC Menus, Chapter/Track Selection .....	20
Slow Motion, Fast Forward and Fast Reverse .....	21
Still Picture/Frame-by-Frame Playback, Time Search .....	22
Zoom/Reduce, Camera Angle .....	23
Repeat, Repeat A-B .....	24
DVD Audio Language .....	25
DVD Subtitle Language .....	26
DVD Disc Menu Language .....	27
Parental Password .....	28
Parental Levels .....	29
Program .....	30
Preview .....	31
JPEG and MP3 Features .....	32

## DVD Player Setup Options

TV Display .....	33
Smart Picture .....	34
Picture Setting .....	35
TV Type .....	36
Progressive .....	37
Downmix, Dual Mono .....	38
Digital Output .....	39
LPCM Output, Dynamic .....	40
Sound Mode (Equalizer), Reverb Mode .....	41
OSD Language, Closed Captions .....	42
Screen Saver, Angle Mark .....	43
D.R.C, Defaults .....	44

## Information You May Need

Helpful Hints .....	45-46
Glossary .....	47
Specifications, Language Codes .....	48
Limited Warranty .....	49
Information Index .....	51

Manufactured under license from Dolby Laboratories. "Dolby," "Pro Logic," and the double-D symbol are trademarks of Dolby Laboratories.  
 Smart Picture is a trademark of Philips Consumer Electronics.  
 Copyright 2004 Magnavox. All rights reserved.

## 4 Safety Information

---

### Safety Precautions

**Warning:** To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

**Federal Communications Commission (FCC) Warning:** Any unauthorized changes or modifications to this equipment void the user's authority to operate it.

### Laser Safety

This unit employs a laser. Only a qualified service person should remove the cover or attempt to service this device, due to possible eye injury.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION: VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. DO NOT STARE INTO BEAM. THE BEAM IS LOCATED INSIDE, NEAR THE DECK MECHANISM.

### Special Information for Canadian Users

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### Radio/TV Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and the receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

### Copyright Protection

Unauthorized copying, broadcasting, public performance and lending of Discs are prohibited.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

### Declaration of Conformity


Model Number: MDV458/17  
Trade Name: Magnavox  
Responsible Party: Philips Consumer Electronics  
PO. Box 14810  
Knoxville, TN 37914-1810  
(865) 521-4316

 
## Safety Information (cont'd) 5

### IMPORTANT SAFETY INSTRUCTIONS

1. Read instructions. Read all the safety and operating instructions before operating the product.
2. Retain instructions. Keep the safety and operating instructions for future reference.
3. Heed warnings. Adhere to all warnings on the product and in the operating instructions.
4. Follow instructions. Follow all operating and use instructions.
5. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture – Do not use this product near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, near a swimming pool, etc.
8. Accessories – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
9. Move a product and cart combination with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
 
10. Ventilation – Slots and openings in the cabinet provide ventilation, ensure reliable operation of the product, and protect it from overheating. Do not block or cover these openings. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. Do not place this product in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11. Power Sources – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
12. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. Power-Cord Protection – Route power supply cords so they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
14. Outdoor Antenna Grounding – If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANS/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure at right.
15. Lightning – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
16. Power Lines – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, take extreme care to keep it from touching such power lines or circuits; contact with them might be fatal.
17. Overloading – Do not overload wall outlets, extension cords, or integral convenience receptacles. This can result in a risk of fire or electric shock.
18. Object and Liquid Entry – Never push objects of any kind into this product through openings; they may touch dangerous voltage points or short out parts, resulting in a fire or electric shock. Never spill liquid of any kind on the product.
19. Servicing – Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
20. Damage Requiring Service – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a) When the power supply cord or plug is damaged,
  - b) If liquid has spilled or objects have fallen into the product,
  - c) If the product has been exposed to rain or water,
  - d) If the product does not operate normally by following the operating instructions. Adjust only those controls covered by the operating instructions. An improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
  - e) If the product has been dropped or damaged in any way,
  - f) When the product exhibits a distinct change in performance. This indicates a need for service.
21. Replacement Parts – When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or having the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
22. Safety Check – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
23. Wall or Ceiling Mounting – Mount the product to a wall or ceiling only as recommended by the manufacturer.
24. Heat – Situate this product away from heat sources, such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
25. Battery usage CAUTION - To prevent battery leakage that may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, with + and - aligned as marked on the unit.
  - Do not mix batteries (old/new, carbon/alkaline, etc.).
  - Remove batteries when the unit is not used for a long time.
26. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org)

#### Example of Antenna Grounding per National Electrical Code

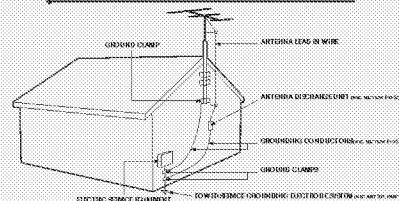



## 6 Introduction

### Welcome!

This Digital Video Disc Player will allow you to enjoy better picture quality, clearer sound, and endless playback features on Digital Video Discs (DVDs). Expanding technology allows you to add options to your viewing - watch a director's cut of a movie, listen to the producer's comments, or play your favorite scene repeatedly. Hear a movie in different languages, or listen only to the soundtrack. The possibilities are limited only by your choices and the materials available on the DVD.

We hope you enjoy this DVD Player and learn to use its features. To get the most from the DVD Player, read this manual carefully. It will describe how you can access these features.

### Features

- ◆ Closed Captions
- ◆ Progressive scan Y Pb Pr jacks
- ◆ Language options for Audio, Subtitles, and Disc Menus
- ◆ Parental controls
- ◆ Paused/Fast/Slow/Frame-by-Frame/Zoomed/Reduced playback
- ◆ Preview
- ◆ Programmed playback
- ◆ Repeat and Repeat A-B Playback
- ◆ Screen Saver

### Package Contents

- ◆ DVD Player
- ◆ Remote control with two AAA (R03) batteries
- ◆ One set of audio cables (red and white)
- ◆ One video cable (yellow)
- ◆ This owner's manual and registration materials
- ◆ Quick-Use Guide

### Environmental Information

Your system has materials that can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries, and old equipment.

### Safety Information

- ◆ Do not expose the system to excessive moisture, rain, sand, heat, or humidity.
- ◆ Place the DVD Player on a firm, flat surface.
- ◆ Keep the DVD Player away from domestic heating equipment and direct sunlight.
- ◆ When placing the DVD Player in a cabinet, allow about one inch of space all around the DVD Player for ventilation. Leave enough room in front of the DVD Player for the disc tray to open completely.
- ◆ If the DVD Player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the DVD Player. If this occurs, the DVD Player will not operate normally. Leave the power on for about one hour with no disc in the DVD Player until normal playback is possible.
- ◆ The mechanical parts of the Player contain self-lubricating bearings and must not be oiled or lubricated.
- ◆ When the DVD Player is turned off, it is still consuming some power. To disconnect the system from the power supply completely, remove the AC power plug from the power outlet.
- ◆ Always keep the disc tray closed to avoid dust on the lens.

### Cleaning Discs

- ◆ When a Disc becomes dirty, clean it with a cleaning cloth. Wipe the Disc from the center to the edge in a straight line. Do not wipe the Disc in a circular pattern.



- ◆ Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for analog discs.

 
## Playable Discs 7

### Playable Discs

This DVD Player will play various types of Discs. Look for these logos on your Discs to determine whether the Disc will play on this DVD Player.



DVD (Digital Video Disc)



MP3 Files



Super Audio CD (SACD) (Play the CD layer only)



Audio CD (Compact Disc Digital Audio)



Video CD and Super Video CD




CD-R (CD-Recordable) and CD-RW (CD-Rewritable)  
Finalize CD-Rs when you record them. Otherwise, you cannot play them on this Player.



DVD+R (DVD + Recordable) and DVD+RW (DVD + Rewritable)  
Finalize these Discs when you record them. Otherwise, you cannot play them on this DVD Player.

### Region Codes and Color Systems

 DVDs must meet the requirements for Region Codes and Color Systems before you can use them with the DVD Player. DVDs must be labeled for **ALL regions** or for **Region 1** in order to play on this DVD Player. You cannot play Discs that are labeled for other regions. These symbols must appear on your DVDs, or you cannot play the DVD in this DVD Player.



The number inside the globe refers to a region of the world. Region 1 represents the United States, Canada, upper regions of North America, Bermuda, the U.S. Virgin Islands, and small regions near Australia.

Furthermore, recordings are made according to different color systems throughout the world. The most common color systems are NTSC (which is used primarily in the United States and North America), PAL, and SECAM.

This DVD Player is compatible with **NTSC and PAL**. Make sure the Discs you play were recorded in NTSC or PAL and your TV is NTSC or PAL compatible. You must set the DVD Player's TV Type to be compatible with your TV and the Disc. *Details are on page 36.* The color system of the DVD may appear on the DVD or on the Disc case.


### DVD Player Upgrades

If a DVD does not play properly, please contact Magnavox at 1-800-705-2000 for assistance. Due to the inconsistency of Disc formats provided by various Disc manufacturers, your DVD Player may require a playability enhancement. As DVD technology has advanced, these enhancements have become both common and easy to complete.

## 8 General Information

### Battery Installation

- 1 Remove the battery compartment lid on the rear of the remote control by pressing in the tab, then lifting off the lid.
- 2 Place two AAA (R03) batteries inside the battery compartment with their + and - ends aligned as indicated. Do not mix old and new batteries or different types of batteries (standard, alkaline, etc.).
- 3 Replace the battery compartment lid.

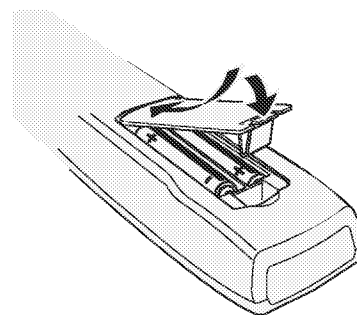

### Using the Remote Control

Unless stated otherwise, the remote control can operate all the features of the DVD Player. Always point the remote control directly at the Remote Sensor on the front of the DVD Player, not the TV. Make sure there are no barriers between the remote control and the DVD Player.

### When referring to this manual, remember...

- |          |  |
|----------|--|
| DVD      | The feature is available on some Digital Video Discs.                          |
| AUDIO CD | The feature is available on some Audio Compact Discs.                          |
| VIDEO CD | The feature is available on some Video Compact Discs (VCD) or Super Video CDs. |

### DVD Disc Menus..

Some explanations in this manual describe the DVD Disc Menus, which vary among DVDs. Movie producers set these menus, and not all DVDs have menus. If the DVD has a menu, access the Disc Menu by pressing the DISC MENU button on the remote control. *Details are on page 20.*

### DVD Player Menus..

Some instructions explain how to use the DVD Player's Setup menu to set up features of the DVD Player or the Disc. You get to the Setup Menu by pressing SYSTEM MENU on the remote control. Even if a feature is set up in the DVD Player's menu, it will not be available if the current Disc does not include that feature.

### Available Disc Features..

Features in this manual may not be available on every Disc. If the feature is not available, you cannot use the DVD Player to make the feature available. The ∅ will appear in the top left corner of the TV screen if you try to access a feature that is not available on the current Disc or is not available under the current situation. Some features are only accessible during play or if play is stopped. Play or stop the Disc, then try the feature again.



## Hookups 9

### Determining the best possible connection...

The capabilities of your existing equipment, especially your TV, will determine your connection possibilities. However, the following guidelines describe which options provide the best picture and sound quality.

- ★★★★ Component Video provides the best picture quality. *Details are on page 13.*
- ★★★ S-Video provides excellent picture quality. *Details are on page 12.*
- ★★ Composite Video (a yellow Video jack) provides good picture quality. *Details are on page 11.*
- ★★ Your TV may have only an RF-style jack, usually labeled Antenna In or 75 ohm or RF In. You will need an RF modulator in order to view the DVD Player at your TV. *Details are on page 10.*
  
- ★★★★ Digital audio connections provide the clearest sound, but you must have a digital stereo. Connect the DVD Player's COAXIAL DIGITAL OUT jack to your Stereo for the best sound quality. *Details are on page 15.*
- ★★★ If digital connections are not possible, connect the DVD Player's red and white AUDIO OUT jacks to the Audio In jacks of your Stereo, TV, or RF modulator. *Details are on pages 10-14.*

### Before you begin...

- ◆ Refer to the manuals of your TV, Stereo, or other equipment as necessary. Note the style of jacks and connectors on the other equipment. Determine how to choose different Audio and Video In channels on your other equipment so you can see and hear the DVD Player on the TV, Stereo, etc.
- ◆ Disconnect all equipment from the power outlets. Connect the equipment to the power outlets only after you have finished hooking up everything. Never make or change connections with equipment connected to the power outlet.


### Remember...

- ◆ Connect the DVD Player directly to the TV. For example, do not connect the DVD Player to a VCR, then connect the VCR to a TV. This type of connection may distort the picture and sound. Also, your VCR might have the copy protection system, which could distort the DVD image or prevent playback of some Discs.
- ◆ Set the TV to the correct Video In channel. Such channels may be called AUX or AUXILIARY IN, AUDIO/VIDEO or A/V IN, EXT1 or EXT2 or External In, etc. These channels are often near channel zero (0). Or, some TV remote controls have a button or switch that selects different Video In channels. See your TV manual for details. Or, go to your lowest TV channel (01 or 02) and change TV channels downward until you see the Player's blue DVD screen on the TV. If you are using an RF modulator, set the TV to channel 3 or 4.
- ◆ Set the Stereo to the correct channel or "source" mode.
- ◆ Do not connect the DVD Player's AUDIO OUT L/R (left/right) jacks to the PHONO IN jack of your Stereo.
- ◆ You only need one audio connection and one video connection between the DVD Player and your TV and/or Stereo. So, you might not use all the jacks on the DVD Player.


**Once you determine the best option, find your choice on pages 10-15. Follow the steps for the hookup you choose.**

## 10 Hookups (cont'd)

### Connecting to a TV Only TV has only a single Antenna In or RF-In jack

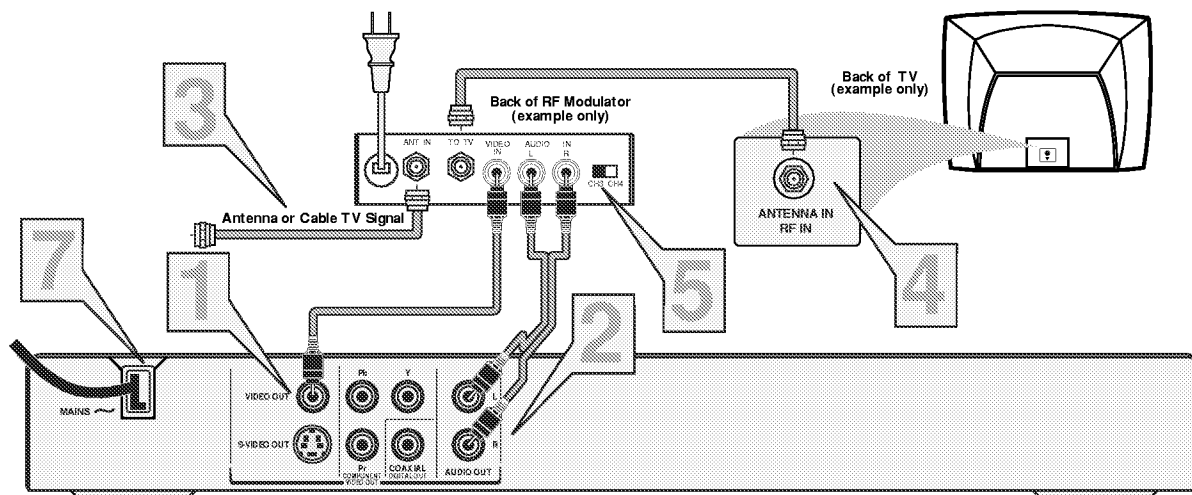


**Before you begin, make sure you have an RF modulator and extra RF coaxial cables. These are not supplied with the Player, but are available from Magnavox or most consumer electronics retailers.**

 - 1 Connect the supplied video cable (which has yellow markings) to the Player's yellow VIDEO OUT jack. Connect the other end of the cable to the VIDEO IN jack on the RF modulator. The VIDEO IN jack on the RF modulator is usually yellow and might be labelled VIDEO, CVBS, COMPOSITE, or BASEBAND.
- 2 Connect the supplied audio cable (which has white and red markings) to the Player's AUDIO OUT L/R (left and right) jacks. Connect the other ends of the audio cable to the AUDIO IN jacks on the RF modulator. Audio jacks on the RF modulator usually are red (right) and white (left). Match the cable colors to the jack colors.
- 3 You probably already have an Antenna or Cable TV signal connected to the ANTENNA IN jack on your TV. Disconnect it now from the TV. Reconnect the Antenna or Cable TV signal to the ANTENNA IN jack on your RF modulator.
- 4 Connect an RF coaxial cable (not supplied) to the RF OUT, ANTENNA OUT, or TO TV jack on the RF modulator. The RF OUT jack may be labelled differently among different brands. Refer to the instructions provided with your RF modulator. Connect the other end of the same RF coaxial cable to the ANTENNA IN or RF IN jack on your Television.
- 5 Your RF Modulator should have a Channel 3/4 switch. The setting of this switch determines the TV channel on which you will watch materials playing on the DVD Player. Set the RF Modulator's Channel 3/4 switch to either 3 or 4, whichever TV channel is least used in your area. If your RF modulator has a Modulator/Antenna switch, set it accordingly. Refer to the instructions that came with the RF Modulator.
- 6 Turn on your TV and choose channel 3 or 4. Choose the same channel to which you set the RF Modulator's Channel 3/4 switch.
- 7 Connect the Player's power cord to a power outlet and turn on the DVD Player by pressing STANDBY-ON  on the front of the Player. If no Disc is in the Player, you should see the Player's blue DVD screen on the TV.

## Hookups (cont'd) 11

### Connecting to a TV Only TV has a yellow Video In jack

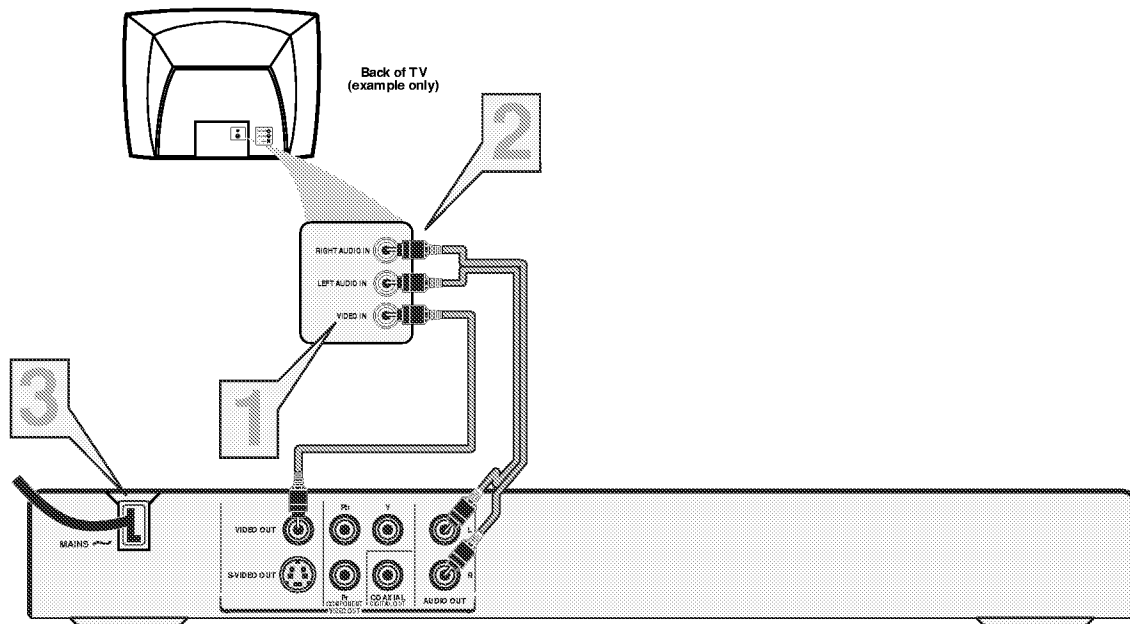


- 1 Connect the yellow VIDEO OUT jack of the DVD Player to the corresponding VIDEO IN jack on your TV. Use the supplied video cable, which has yellow markings.
- 2 Connect the supplied audio cable to the white and red AUDIO OUT L/R (left and right) jacks on the DVD Player and to the left/right AUDIO IN jacks on the TV. Match the cable colors to the jack colors.
- 3 Plug the power cords of the DVD Player and the TV into an active power outlet. Press STANDBY-ON  $\odot$  on the front of the DVD Player to turn it on.
- 4 Turn on the TV. Set it to the correct Video In channel. See your TV owner's manual for details. Or, go to your lowest TV channel (01 or 02) and change channels downward until you see the Player's blue DVD screen on the TV.

#### Helpful Hints

- On the TV, the Video In jack is usually yellow and might be labeled video, CVBS composite, or baseband.
- If your TV has a single Audio In jack instead of separate left/right Audio In jacks, you will need a different audio cable. You need a "splitter" audio cable to go from the AUDIO OUT L/R (left/right) jacks of the DVD Player to the single Audio In jack on your TV. See your electronics retailer for details.

## 12 Hookups (cont'd)

### Connecting to a TV Only TV has an S-Video In Jack

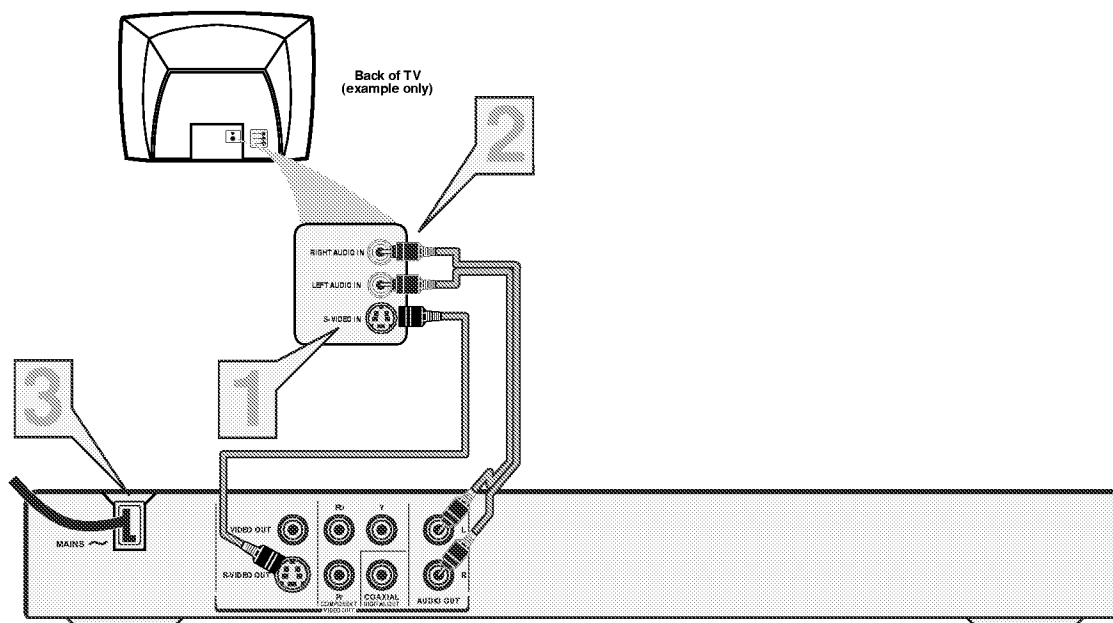


- 1 Connect an SVideo cable (not supplied) to the SVIDEO OUT jack of the DVD Player and to the TV's S-VIDEO In jack.
- 2 Connect the supplied audio cable to the white and red AUDIO OUT L/R (left and right) jacks on the DVD Player and to the left/right AUDIO IN jacks on the TV. Match the cable colors to the jack colors.
- 3 Plug the power cords of the DVD Player and the TV into an active power outlet. Press STANDBY-ON  $\odot$  on the front of the DVD Player to turn it on.
- 4 Turn on the TV. Set it to the correct S-Video In channel. See your TV owner's manual for details. Or, go to your lowest TV channel (01 or 02) and change channels downward until you see the Player's blue DVD screen on the TV.

#### Helpful Hints

- On the TV, the S-Video In jack may be labeled Y/C, S-Video, or SVHS (super video).
- If your TV has a single Audio In jack instead of separate left/right Audio In jacks, you will need a different audio cable. You need a "splitter" audio cable to go from the AUDIO OUT L/R (left/right) jacks of the DVD Player to the single Audio In jack on your TV. See your electronics retailer for details.

### Connecting to a TV Only TV has Component Video In Jacks (red, green, and blue)

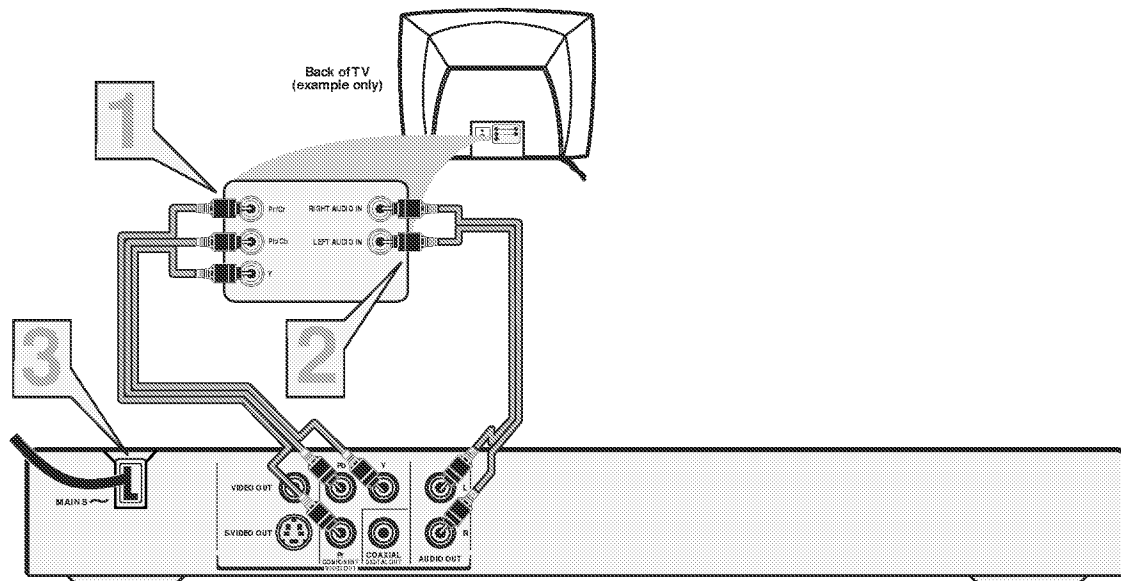


- 1 Connect the DVD Player's Y Pb Pr (COMPONENT VIDEO OUT) jacks to the corresponding Component Video In jacks on your TV. On your TV, you may have Component Video In jacks that are labeled Progressive Scan. If you use these jacks instead, set Progressive to On. *Details are on page 37.* Otherwise, Progressive must be Off or you will not get a DVD picture at the TV. Use component video cables (not supplied).
- 2 Connect the DVD Player's white and red AUDIO OUT L/R (left and right) jacks to the left/right AUDIO IN jacks on the TV. Use the supplied audio cables. Match the cable colors to the jack colors.
- 3 Plug the power cords of the DVD Player and the TV into an active power outlet. Press STANDBY-ON  $\odot$  on the front of the DVD Player to turn it on.
- 4 Turn on the TV. Set it to the correct Component Video In channel. See your TV owner's manual for details. Or, go to your lowest TV channel (01 or 02) and change channels downward until you see Player's blue DVD screen on the TV.

#### Helpful Hints

- On the TV, the component video in jacks may be labeled YUV or Y R/G Pb/Cb and may be green, blue, and red.
- If your TV has a single Audio In jack instead of separate left/right Audio In jacks, you will need a different audio cable. You need a "splitter" audio cable to go from the AUDIO OUT L/R jacks of the DVD Player to the single Audio In jack on your TV. See your electronics retailer for details.

## 14 Hookups (cont'd)

### Connecting to a TV and Stereo

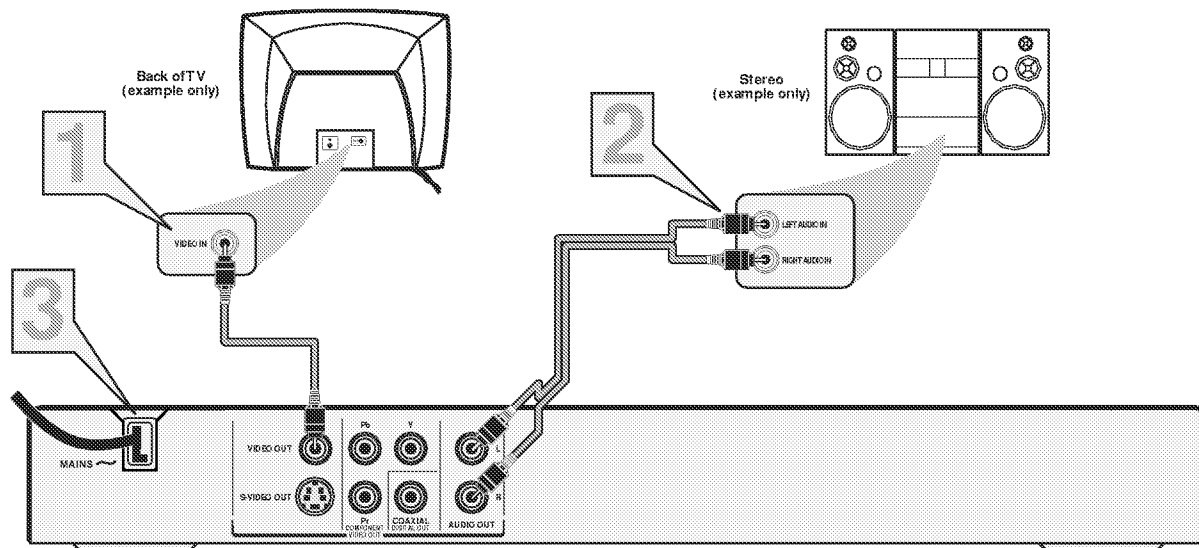


- 1 Connect the supplied video cable to the yellow VIDEO OUT jack of the DVD Player and to the TV's Video In jack. The supplied video cable has yellow markings.
- 2 Connect the supplied audio cable to the white and red AUDIO OUT L/R (left and right) jacks on the DVD Player and to the left/right Audio In jacks on the Stereo. Match the cable colors to the jack colors.
- 3 Plug the power cords of the DVD Player, Stereo, and TV into an active power outlet. Press STANDBY-ON  $\odot$  on the front of the DVD Player to turn it on.
- 4 Turn on the Stereo and set it to the correct Audio In channel or sound source. Refer to the Stereo owner's manual for details.
- 5 Turn on the TV. Set it to the correct Video In channel. See your TV owner's manual for details. Or, go to your lowest TV channel (01 or 02) and change channels downward until you see the Player's blue DVD screen on the TV.

#### Helpful Hints

- If you prefer or need to use the S-VIDEO or Y/Pb/Pr jacks instead, see pages 12-13. You only need one video connection between the TV and the DVD Player.
- Adjust Downmix and Dual Mono accordingly. Details are on page 38.

### Connecting to a TV and a Stereo (Stereo has Dolby Digital™ or MPEG2)

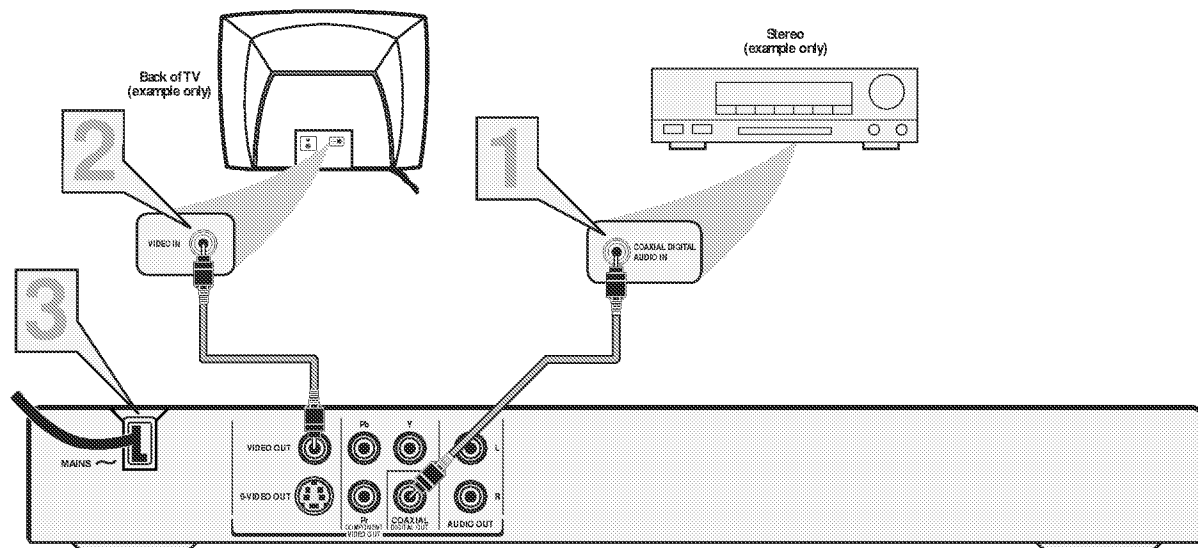

- 1 Connect the COAXIAL DIGITAL OUT jack of the DVD Player to the Coaxial Digital Audio In jack on your Stereo. Use an appropriate digital audio cable (not supplied). See your electronics retailer for details and availability.
- 2 Connect the supplied video cable to the yellow VIDEO OUT jack of the DVD Player and to the TV's Video In jack. The supplied video cable has yellow markings.
- 3 Plug the power cords of the DVD Player, Stereo, and TV into an active power outlet. Press STANDBY-ON  $\odot$  on the front of the DVD Player to turn it on.
- 4 Turn on the Stereo and set it to the correct Audio In channel or sound source. Refer to the Stereo owner's manual for details.
- 5 Turn on the TV. Set it to the correct Video In channel. See your TV owner's manual for details. Or, go to your lowest TV channel (01 or 02) and change channels downward until you see the Player's blue DVD screen on the TV.

#### Helpful Hints


- Set Digital Output accordingly. Details are on page 39.
- Your Stereo must support MPEG2 or Dolby Digital. Check the Stereo's manual.
- If you prefer or need to use the S-VIDEO or Y Pb Pr jacks instead, see pages 12-13.

## 16 Quick Disc Playback




DVD


AUDIO CD

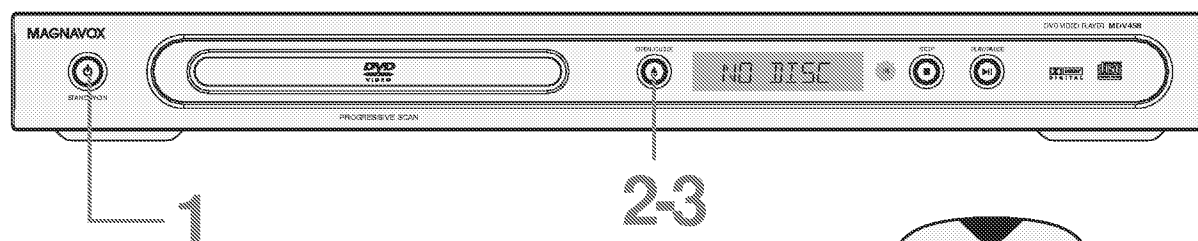





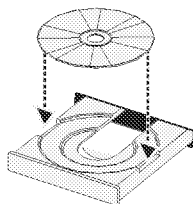

VIDEO CD








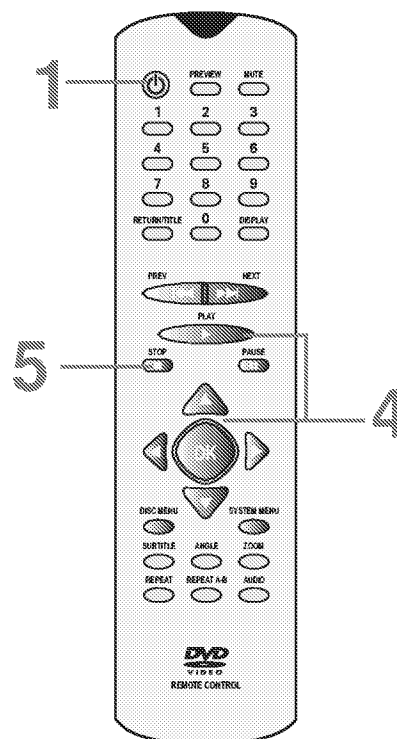
There are many playback features and options available on Discs. After familiarizing yourself with the DVD Player as described on pages 17-19, see pages 20 and following to try additional playback features.

- 1 Press **STANDBY-ON**  or **Power**  on the remote control to turn on the DVD Player. Turn on your TV. Set it to the correct Video In channel. You should see the Player's blue DVD screen on the TV (if no Disc is in the Player).
- 2 Press **OPEN/CLOSE**  on the front of the DVD Player to open the disc tray. Load your Disc in the tray, with the label facing up. If the Disc (DVD) is two-sided, make sure the label of the side you want to play is facing up.





- 3 Press **OPEN/CLOSE**  again to close the tray.
- 4 Playback may start automatically. If not:
  - If you are playing a DVD, a Disc menu may appear. If the Title or Chapter selections are numbered, press a Number button to select an item. Or, press  to select an item, then press OK. Playback will begin. Or, follow the on-screen instructions as detailed in the DVD Disc menu.
  - If you are playing an Audio CD, press **PLAY**  to start playback.
  - If a Video CD has Playback Control (PBC), press **DISC MENU** to turn PBC on or off. Or press **RETURN/TITLE** to see the menu during playback. Press the **PREV** , **NEXT** , or Number buttons to select an item, then press OK. Follow the instructions provided by the Video CD. Not all Video CDs have Playback Control. See the Disc case or menus for details.

- 5 To stop playback at any time, press **STOP** . If you press **STOP**  only once, playback will resume at the same point if you press **PLAY**  later to restart playback. This is known as the Resume feature. If you press **STOP**  more than once to stop playback, play will start at the beginning of the Disc again when you press **PLAY**  later to restart playback.




### Helpful Hints

 
- If the Disc is locked by Parental Controls, you must enter your password or unlock the Disc. Details are on pages 28-29.
- DVDs have a region code. This Player will play only DVDs of Region 1 or ALL. Details are on page 7.
- If there is no activity at the Player or its remote for 15 minutes, the Player will turn itself off. Press **STANDBY-ON**  on the Player or **Power**  on the remote to turn on the Player.
- PBC represents Playback Control.




## Remote Control Buttons 17

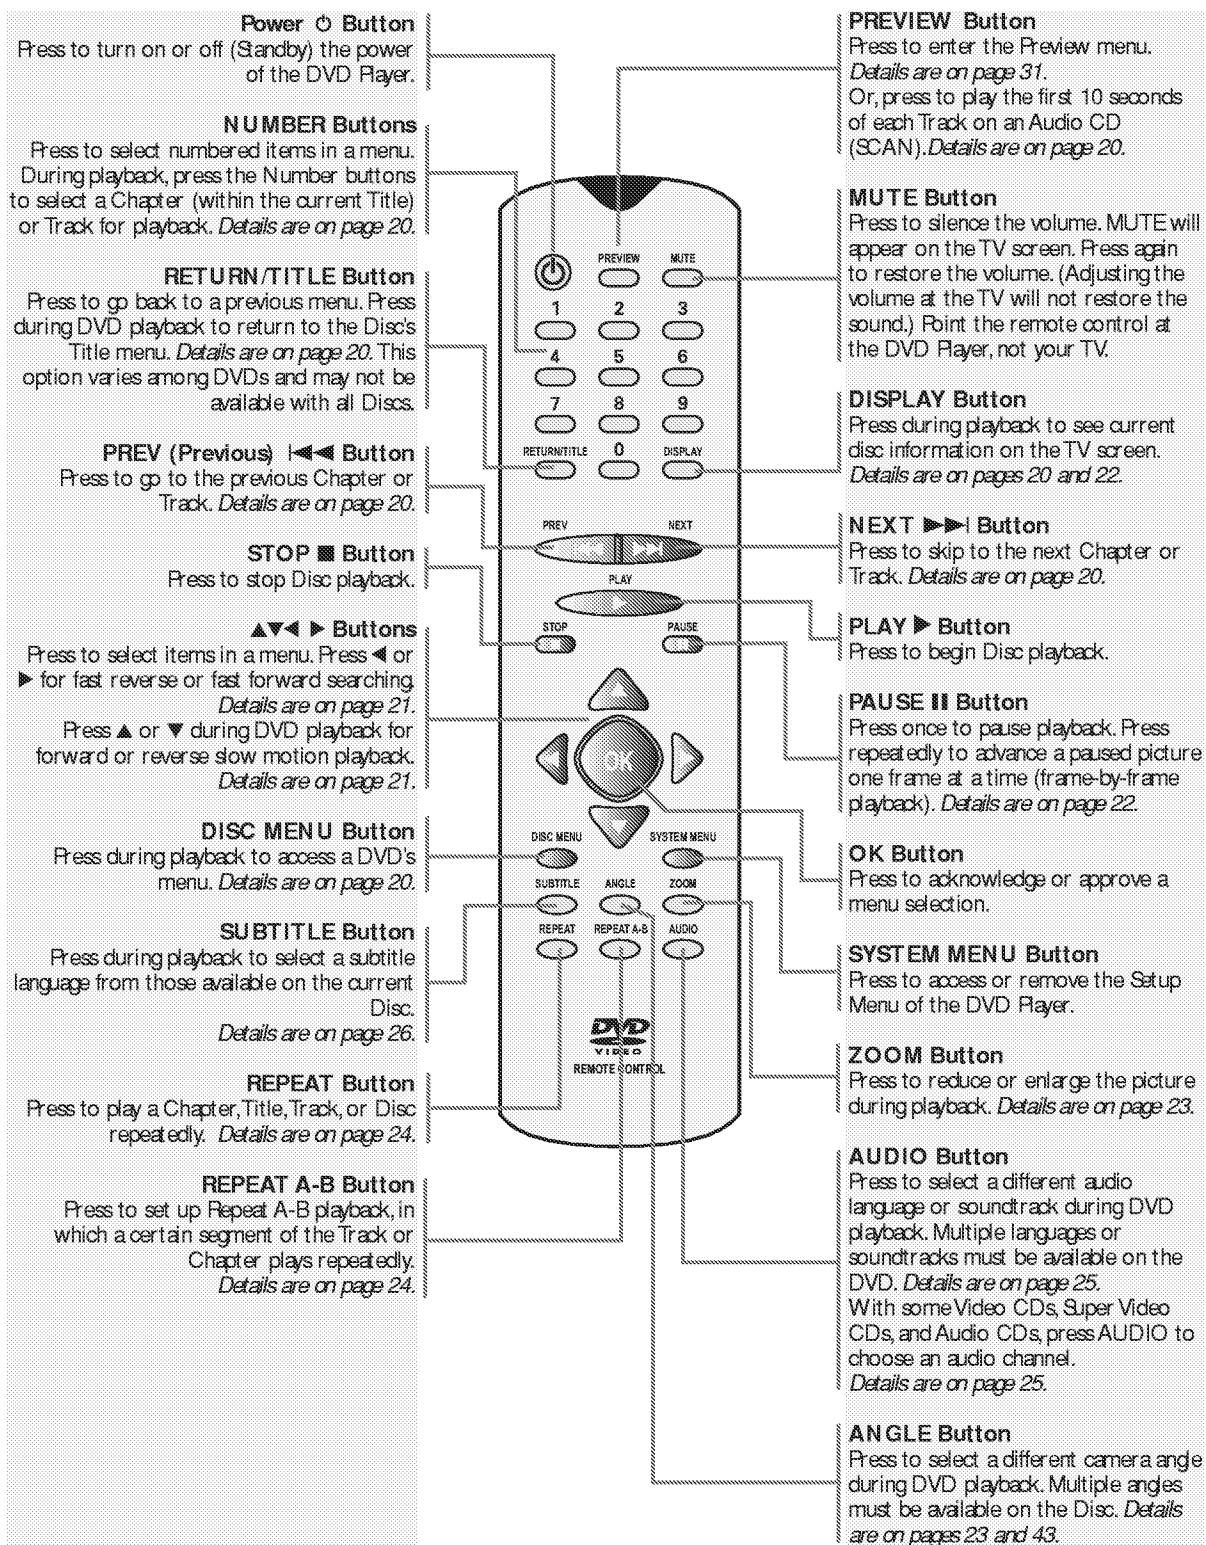

## 18 Front Panel

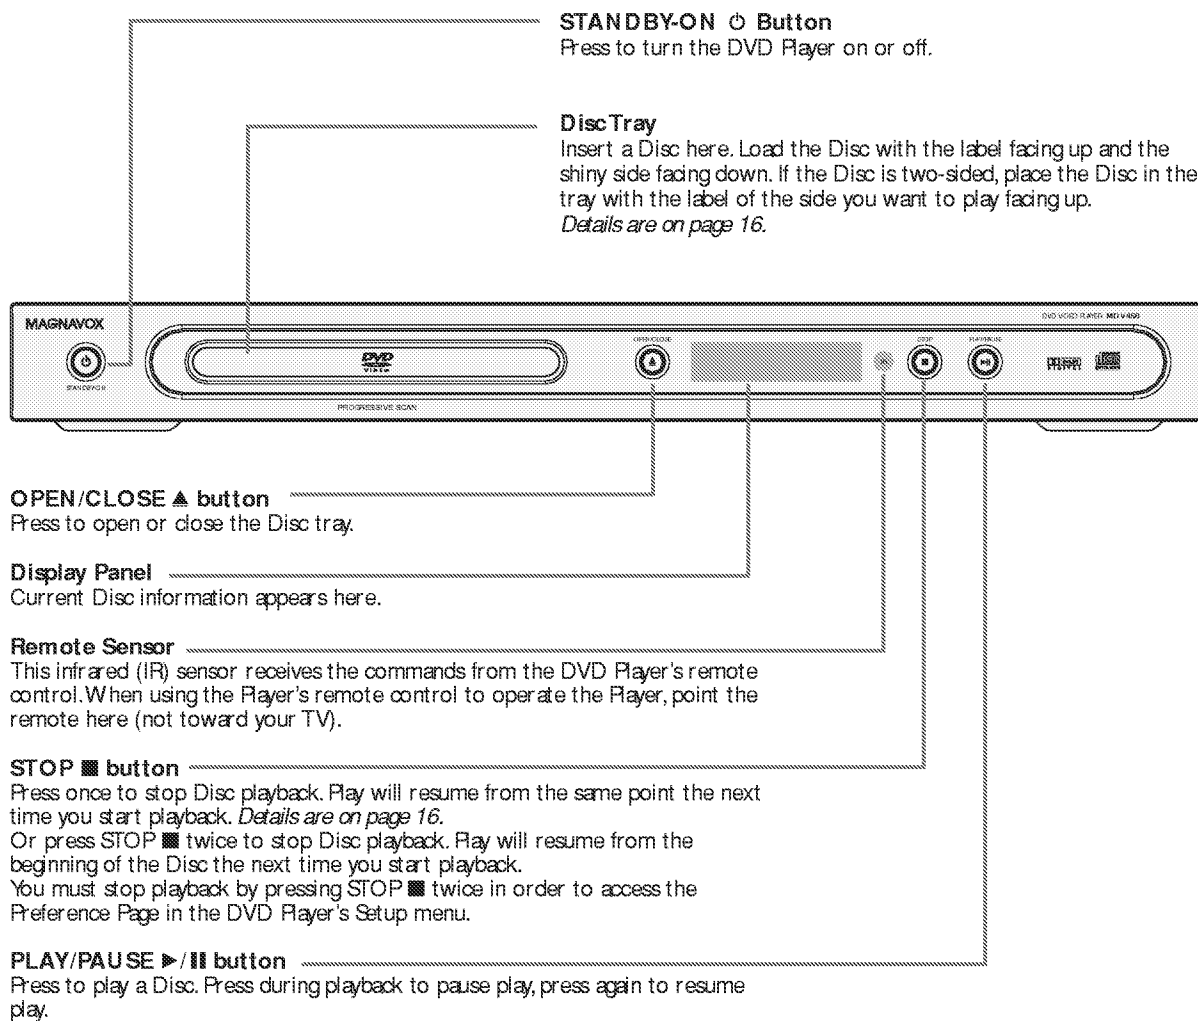

## Rear Panel 19

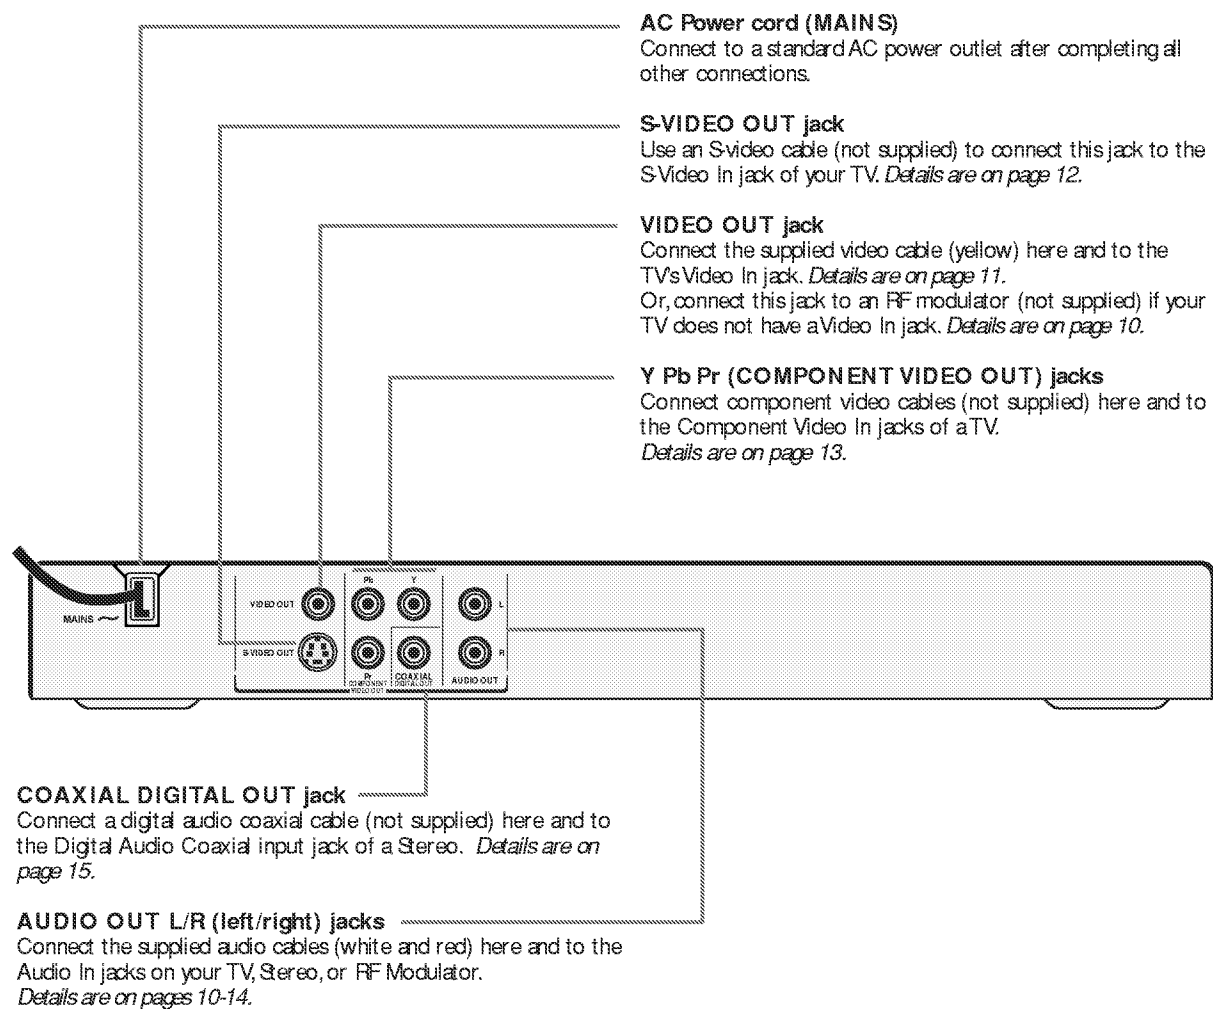

### Helpful Hint

- You only need one audio and one video connection between a TV and the Player, so you will not use all the jacks on the Player.

## 20 Title/Disc/PBC Menus, Chapter/Track Selection

### DVD

#### Title/Disc menus

- 1 Press **DISC MENU** during DVD playback. The main Disc menu (or Root menu) will appear. The menu may list features available on the Disc. These menus vary among DVDs, and not all Discs have the same features. Or, if the current Title has a specific Title menu, press the **RETURN/TITLE** button to access the Title menu. Title menus are not available on all Discs.
- 2 Press **▲ ▼ ◀ ▶** to select items in the menu, then press **OK**. Continue until you set up all the features you want or until playback begins. If Chapters or options are numbered, press the appropriate Number button to select the item. Some DVDs may not allow you to operate the Disc menu this way. Follow the instructions on the Disc.

### VIDEO CD

#### PBC menu

For VCD2.0 a Disc Menu may be available when playback control (PBC) is on.

- 3 Load a Video CD with PBC. A Disc Menu will show on the TV screen.
- 4 Use **▲ ▼ ◀ ▶** or the Number buttons to select the options, then press **OK**.
- 5 Return to the Disc Menu by pressing **RETURN/TITLE**. (For PBC ON only)
- 6 Press **DISC MENU** to switch PBC ON or OFF.

### DVD

### AUDIO CD

### VIDEO CD

#### Chapter/Track Selection



- 1 For DVD
  - Press **NEXT ▶▶▶** or **PREV ◀◀◀** briefly during playback to go to the next Chapter or to return to the beginning of the current Chapter.
  - Press **PREV ◀◀◀** twice briefly to step back to the previous Chapter.

#### For VIDEO CD / AUDIO CD

- Press **NEXT ▶▶▶** or **PREV ◀◀◀** briefly during playback to go to the next Track or to the previous Track respectively.
- To go directly to any Track, enter the Track number using the Number buttons.

- 2 To go directly to any Track/Chapter during playback, press the Number buttons to enter the Track/Chapter number. Precede single-digit numbers with a zero. For example, for Track six, press 0,6. Play will resume from the beginning of the Track/Chapter you selected. If you enter an invalid number, the current Track/Chapter will continue to play. Make sure the Track/Chapter you enter is available on the Disc. Make sure a Chapter is available within the current Title.

- 3 You also can select a Track, Title, or Chapter in the display. Press **DISPLAY**, then press **▶** to select the area beside Title, Track or Chapter. Press the Number buttons to enter the Track, Title, or Chapter number you want. Precede single-digit numbers with a zero. Play will resume at the beginning of the Track, Title, or Chapter you selected. Press **DISPLAY** again to remove the display.

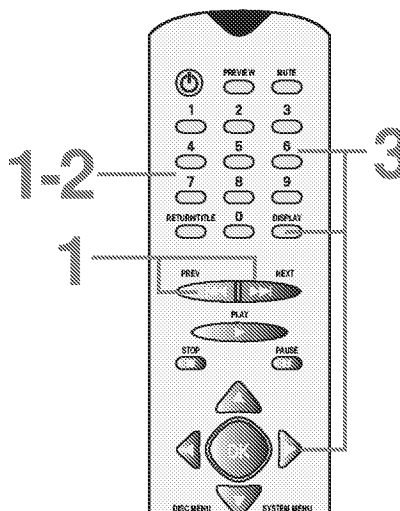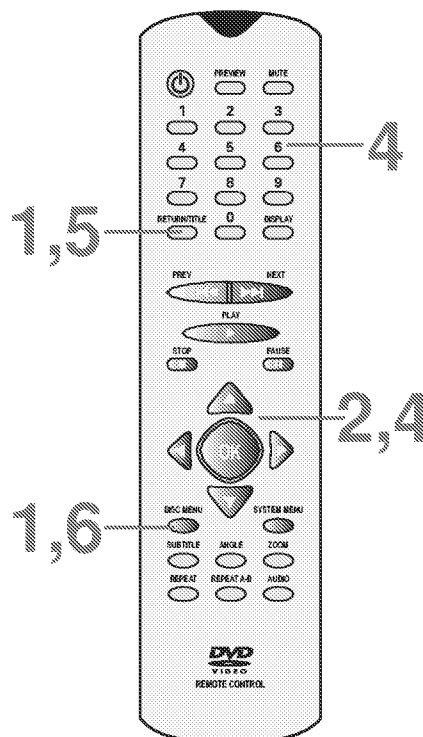

#### Helpful Hint

- To scan all the Tracks on an Audio CD, press the **FF/VIEW** button. The first 10 seconds of each Track will play. After each Track is introduced, Disc playback will start from the first Track. Or, to start play at a Track you find during scanning, press **FF/VIEW** again.


## Slow Motion, Fast Forward and Fast Reverse 21

DVD

VIDEO CD

### Slow Motion

- 1 During Disc playback, press **▲** to play the Disc forward at 1/2, 1/4, 1/8, or 1/16 the normal speed. The sound will be mute during slow motion playback.  
Or, press **▼** to play a DVD backward at 1/2, 1/4, 1/8, or 1/16 the normal speed. Slow reverse is not possible on Video CDs.
- 2 To return to normal playback, press **PLAY** **▶**.

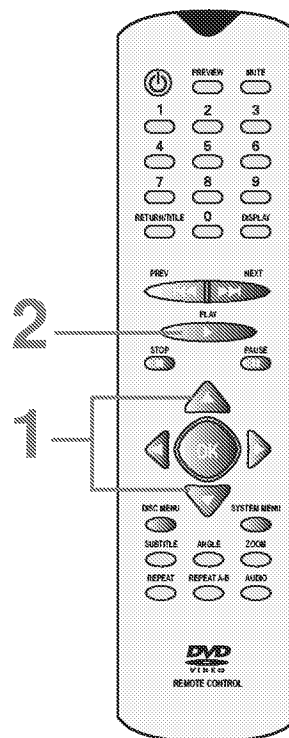


DVD

VIDEO CD

AUDIO CD

### Fast Forward and Fast Reverse

- 1 To fast forward a DVD or Video CD, press **▶** repeatedly to select two, four, eight, 16, or 32 times the normal speed. Sound will be mute.  
Or, press **◀** repeatedly to play the DVD or Video CD backward at two, four, eight, 16, or 32 times the normal speed. The sound will be mute.  
To fast forward an Audio CD at two, four, eight, 16, or 32 times the normal playback speed, press **▶** repeatedly during playback. Sound will be intermittent.  
To fast reverse an Audio CD at two, four, eight, 16, or 32 times the normal speed, press **◀** repeatedly. Sound will be intermittent.
- 2 To return to normal playback, press **PLAY** **▶**.

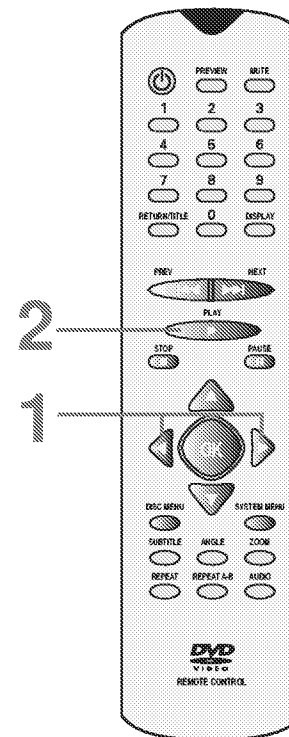

#### Helpful Hint




- Slow reverse is not possible on VCDs.


## 22 Still Picture/Frame-by-Frame Playback, Time Search

DVD

VIDEO CD

### Still Picture/Frame-by-Frame Playback

- 1 To pause a DVD or Video CD picture, press PAUSE  on the remote control during playback.
- 2 Press PAUSE  repeatedly to advance the still picture one frame at a time.
- 3 Press PLAY  to resume regular playback.

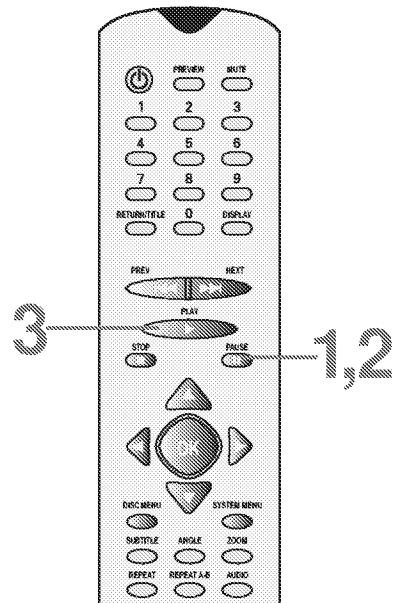


DVD






VIDEO CD


AUDIO CD
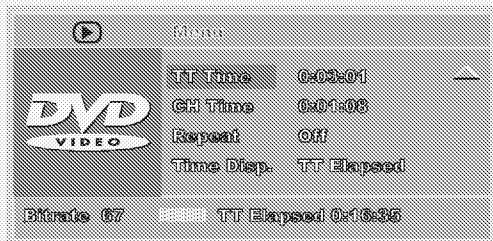
### Time Search

- 1 Press DISPLAY during playback. Current information will appear on the TV screen as in the DVD example below.



- 2 Press  or  to select an item (e.g. TT Time/CH Time) to change, then press .
- 3 Press the Number buttons or  or  to select a setting or to set the item as you prefer, then press OK. In the time search box, enter hours, minutes and seconds from left to right in the time edit box using the Number buttons. (e.g. "1:05.35")
- 4 Press DISPLAY to remove the information.

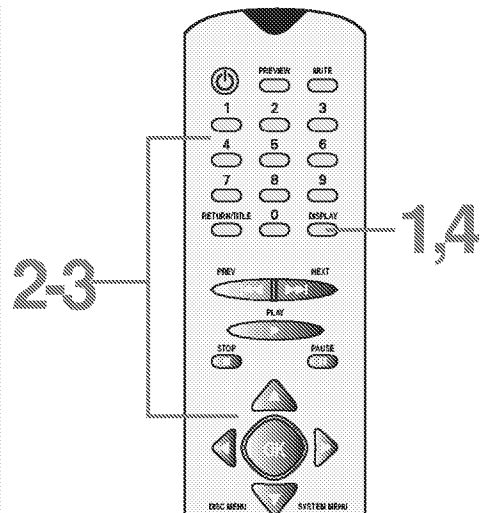

### Helpful Hints

- If you pause a picture for more than five minutes, the screen saver will appear (if it is on). Details are on page 43.
- The following will be available in the DISPLAY, depending on the Disc in the Player.
 

Title	Current Title/Total Titles
Chapter	Current Chapter/Total Chapters
Audio	Current audio channel/Language
Subtitle	Current subtitle language
Angle	Current angle/Total angles available
TT Time	Total Title time
CH Time	Total Chapter time
Repeat	Chapter/Title/All repeat or Off
Time Disp.	Display either the elapsed or remaining playing time of a Title or Chapters.
Bitrate	The amount of Audio and Video data being transferred.

## Zoom/Reduce, Camera Angle 23


DVD

VIDEO CD

### Zoom/Reduce

You can reduce or enlarge the video image during playback.

- 1 Press ZOOM repeatedly during Disc playback to make the picture two, three, or four times larger. Or, keep pressing ZOOM to reduce the picture to 1/2, 1/3, or 1/4 its normal size.
- 2 Press  $\blacktriangle$   $\blacktriangledown$   $\blacktriangleleft$   $\blacktriangleright$  to move around in the enlarged picture.
- 3 To return the picture to regular size, press ZOOM until the picture returns to its normal size.

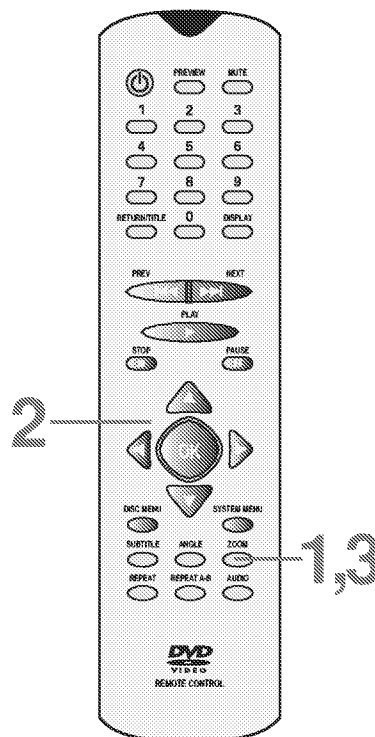


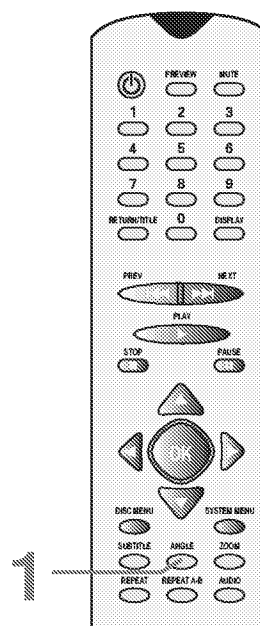
DVD

### Camera Angle

Some DVDs include scenes recorded from different angles. To watch segments from a different angle, follow these steps. The DVD must have multiple angles available. Check the DVD Disc case or Disc menu for details and availability.

- 1 During DVD playback, press the ANGLE button repeatedly to select a different angle.
- 2 In a few seconds, playback changes to the selected angle. If multiple angles are not available,  $\emptyset$  may appear in the top left corner of the TV screen when you press ANGLE.

The Ange Mark (  ) will appear on the TV screen if multiple angles are available during DVD play. Ange Mark must be on. Details are on page 43.



### Helpful Hints

- Zooming may not be possible on all DVDs.
- To zoom a J-PEG image, see page 32.

## 24 Repeat, Repeat A-B

DVD


VIDEO CD

AUDIO CD

### Repeat

You may play a Chapter, Track, Title or entire Disc repeatedly.

- 1 During Disc playback, press REPEAT to choose a Repeat option. Depending on the type of Disc, you may choose:
  - REPEAT CHAPTER: Repeat playback of the current chapter.
  - REPEAT TRACK/TITLE: Repeat playback of the current track/title.
  - REPEAT ALL: Repeat playback of the entire disc or all its programmed tracks.
  - SHUFFLE: Play tracks in random order repeatedly.
  - REPEAT OFF: Cancel the repeat mode.
- 2 To cancel repeat playback, press REPEAT until all the repeat modes disappear or "off" appears on the TV screen.

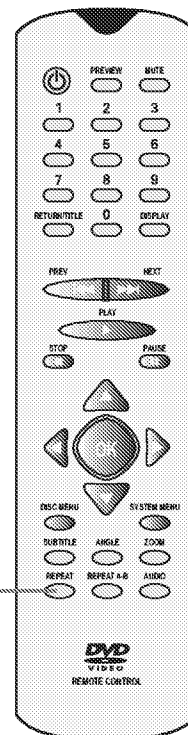

DVD


VIDEO CD

AUDIO CD

### Repeat A-B

You also may set the Player to play only a specific portion of a Title, Chapter, or Track repeatedly. Follow these steps.

- 1 Press PLAY ► to start Disc playback.
- 2 When the Disc reaches the point at which you want repeated playback to begin, press REPEAT A-B.
- 3 When the Disc reaches the point at which you want to end the segment, press REPEAT A-B again. The segment will begin playing repeatedly.
  - On a DVD, make sure the entire A-B segment is within a single Title.
  - On a Video CD or Audio CD, the A-B segment should be within a single Track. If you do not enter the B setting before the end of the Track is reached, Repeat A-B will be cancelled.
- 4 To resume regular playback, press REPEAT A-B again. The AB symbol will disappear from the top left corner of the TV screen.

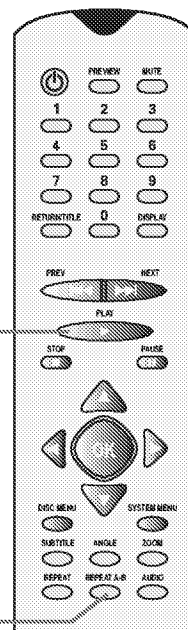

#### Helpful Hint

- REPEAT is not available for VCD2.0 when FEC is on.



## DVD Audio Language 25

### DVD

Some DVDs are recorded in multiple languages; some may have extra audio options such as a director's commentary or a music soundtrack. You can choose the language or the soundtrack that you want to hear by adjusting Audio in the Preference Page. To do so, follow the steps below.

The easiest way to choose a different audio language or soundtrack is to press the AUDIO button on the remote during DVD playback. The audio will change to the language or soundtrack you select.


- 1 Press **STOP** ■ twice to stop DVD playback.
- 2 Press **SYSTEM MENU**.
- 3 Press **▶** to select the Preference Page, then press **OK** or **▼**. You can select the Preference Page only if you have completely stopped DVD playback by pressing **STOP** ■ twice as directed in step 1.
- 4 Audio will be selected. Press **▶**.




- 5 Language options will appear to the right of Audio. Press **▲** or **▼** to choose the language you want, then press **OK**. You can only hear these languages if the language is recorded on the DVD.

If there is another language or soundtrack on the DVD that does not show in this AUDIO menu, press **▼** repeatedly to go to the next screen and choose OTHERS, then press **OK**.

At the next screen, press the Number buttons to enter the four-digit language code for the language you want. Use the codes listed on page 48 of this manual. Then, press **OK**. The Preference Page menu will reappear.

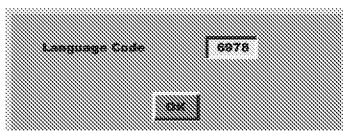

- 6 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

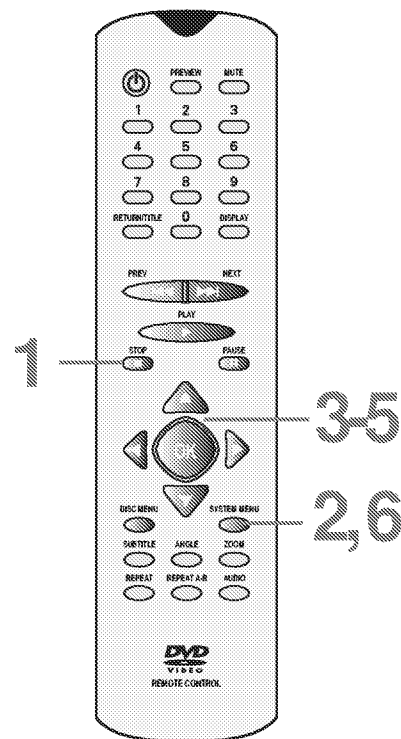

### Helpful Hints

- Some Audio CDs, Video CDs, or Super Video CDs are recorded on multiple audio channels. For example, a Karaoke Disc may record music on the left channel and vocals on the right channel. Press **AUDIO** during playback to choose which channels you want to hear. Options may include Mono Left, Mono Right, MIX-Mono, or Stereo. Check your Disc case for details.
- If adjusting the Audio language as described on this page does not change the Audio, change the settings in the DVD's Disc menu or by pressing the **AUDIO** button repeatedly during DVD playback. Make sure the language you want is available on the current DVD.
- When you press **STOP** ■ twice to stop playback and adjust Audio, this cancels the Resume feature. When you play the DVD again, playback starts at the beginning of the DVD.

## 26 DVD Subtitle Language

### DVD


Some DVDs include subtitles. Choose the language you want for available subtitles by adjusting Subtitle in the Preference Page. To do so, follow the steps below.

Or, the easiest way to choose subtitles is to press the SUBTITLE button on the remote repeatedly during DVD playback. The subtitles will appear in the language you select.


- 1 Press **STOP** ■ twice to stop DVD playback.
- 2 Press **SYSTEM MENU**.
- 3 Press **▶** to select the Preference Page, then press **OK** or **▼**. You can select the Preference Page only if you have completely stopped DVD playback by pressing **STOP** ■ twice as directed in step 1.
- 4 Press **▼** to select **Subtitle**, then press **▶**.



- 5 Language options will appear to the right of Subtitle. Press **▲** or **▼** to choose the language in which you want subtitles to appear. Then, press **OK**. You can see subtitles in these languages only if available on the current DVD. Check the DVD case for details on available subtitle languages. If there is a subtitle language on the DVD that does not show in the Player's Subtitle menu, choose **OTHERS** in the second menu screen and press **OK**. At the next screen, press the Number buttons to enter the four-digit language code for the language you want. Use the codes listed on page 48 of this manual. Then, press **OK**. The Preference Page menu will reappear.

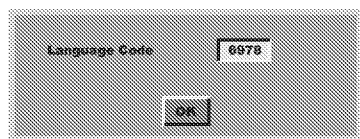

- 6 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

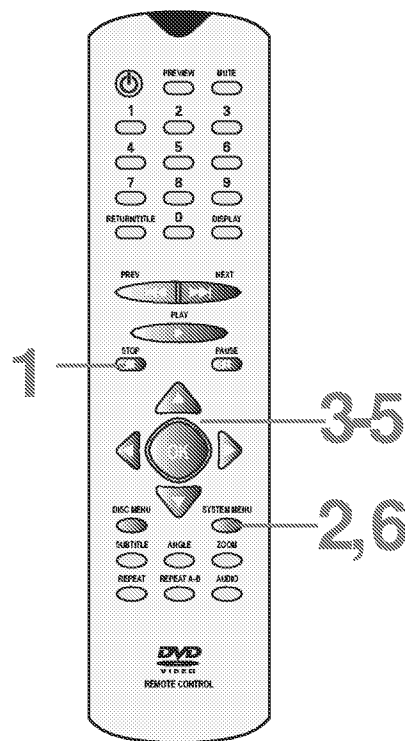

### Helpful Hints

- Some DVDs only allow you to choose Subtitle languages in the DVD Disc menu. If adjusting the Subtitle language as described on this page does not change the Subtitle during DVD playback, change the settings in the DVD's Disc menu or by pressing the SUBTITLE button repeatedly during DVD playback. Make sure the language you want is available on the current DVD.
- When you press **STOP** ■ twice to stop playback and adjust Subtitle, this cancels the Resume feature. When you start to play the DVD again, playback automatically starts at the beginning of the DVD.

## DVD Disc Menu Language 27

### DVD

DVDs have a Disc menu that allows you to choose options such as Audio Language, Subtitles, or other special features. Features vary among DVDs, so the menus are different for every DVD.

Some menus may be available in multiple languages. To choose a language for a Disc menu using the Preference Page, follow these steps.

- 1 Press **STOP** ■ twice to stop DVD playback.
- 2 Press **SYSTEM MENU**.
- 3 Press **▶** to select the Preference Page, then press **OK** or **▼**. You can select the Preference Page only if you have completely stopped DVD playback by pressing **STOP** ■ twice as directed in step 1.
- 4 Press **▼** to select Disc Menu, then press **▶**.




- 5 Language options will appear to the right of Disc Menu. Press **▲** or **▼** to choose the language in which you want the DVD Disc menu to appear. Then, press **OK**.


You can see Disc menu in these languages only if available on the current DVD. Check the DVD case for details on available menu languages.

If there is a menu language on the DVD that does not show in the Player's Disc Menu list, choose **OTHERS** in the second menu screen and press **OK**.

At the next screen, press the Number buttons to enter the four-digit language code for the language you want. Use the codes listed on page 48 of this manual. Then, press **OK**. The Preference Page menu will reappear.

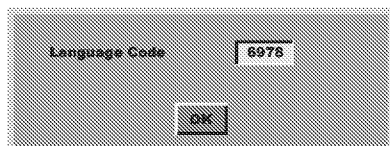

- 6 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

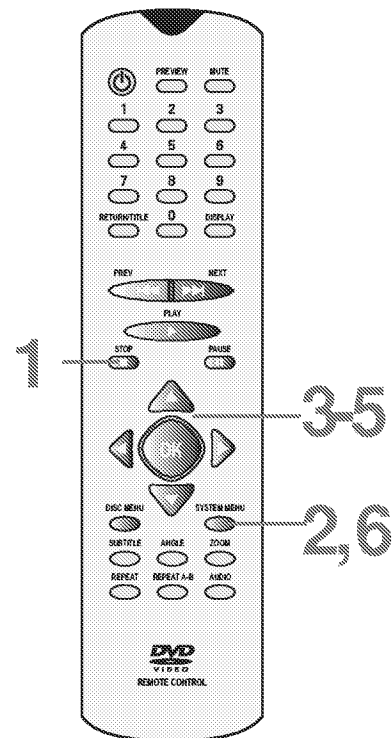

### Helpful Hints

- If adjusting the Disc menu language as described on this page does not change the language as you preferred, change the settings in the DVD's Disc menu. Make sure the language you want is available on the current DVD.
- When you press **STOP** ■ twice to stop DVD playback so you can adjust Disc Menu, playback automatically starts at the beginning of the DVD when you start playback again.


## 28 Parental Password

### DVD

The Parental feature limits viewing of DVDs. You need a password to change the Parental settings or to play Locked Discs. To set your password, follow the steps below.


To adjust the Parental level so DVDs cannot play if they exceed that level, see page 29.

- 1 Press **STOP** ■ twice to stop DVD playback.
- 2 Press **SYSTEM MENU**.
- 3 Press **▶** to select the Preference Page, then press **OK** or **▼**. You can select the Preference Page only if you have completely stopped DVD playback by pressing **STOP** ■ twice as directed in step 1.
- 4 Press **▼** to select Password, then press **▶**.

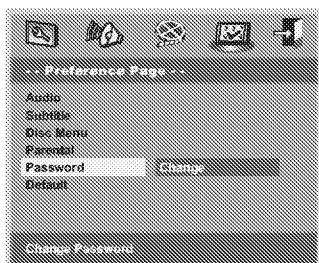

- 5 Change will be highlighted. Press **OK**.


- 6 A box beside Old Password will be highlighted. Press the **Number** buttons to enter your old four-digit password. (If this is the first time you have set a password, enter the default password (1009) in the Old Password box.) Press the **Number** buttons to enter a new four-digit password of your choice. The box beside Confirm PWD will be highlighted automatically. Press the **Number** buttons to enter the same new four-digit password you just entered for the New Password.

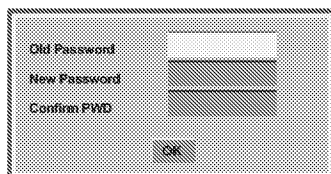

- 7 Press **OK** to save the new password. The previous menu will appear. Write your password here for future reference.

Code	Date

- 8 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

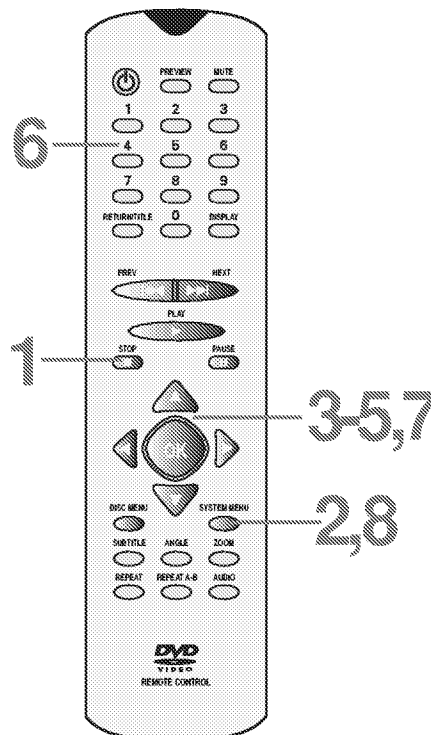


### Helpful Hints

- The default or factory preset password is 1009. You can use it to play a Locked Disc or enter it as the old password. The 1009 password is acceptable even after you set your own personal password.
- Magnavox denies any liability associated with unintended watching of Discs. Make sure your Discs play according to your Parental settings before you allow children access to the Player.
- Your password must have exactly four digits.

## Parental Levels 29

You can set the Player to block or allow playback according to the DVD movie rating. If someone tries to play a DVD whose rating exceeds the level you selected, PARENTAL VIOLATION may appear on the TV screen. Some DVDs may give you the option of entering your password to allow playback. If not, change the Parental setting so you can watch the Disc. Not all DVDs conform to the levels you select, as not all DVDs are coded or protected by the DVD manufacturer. Therefore, make sure the DVD plays according to your Parental setting before you allow children unlimited access to the Player or DVDs.

- 1 Press **STOP** ■ twice to stop DVD playback.
- 2 Press **SYSTEM MENU**.
- 3 Press **▶** to select the Preference Page, then press **OK** or **▼**. You can select the Preference Page only if you have completely stopped DVD playback by pressing **STOP** ■ twice as directed in step 1.
- 4 Press **▼** to select Parental, then press **▶**.

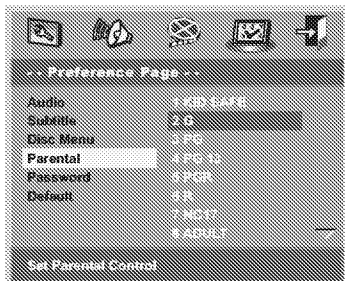


- 5 Press **▲** or **▼** to choose the Parental level at which you want to restrict playback, then press **OK**.  
For example, if you do not want children to watch movies rated above PG, select PG 13. DVDs rated PG can play without entering a password; however, DVDs rated PG-13, R, NC-17, or X (ADULT) cannot play unless you enter your password.  
Or, press **▼** repeatedly to select Off in the next menu if you want to disable this feature completely. All Discs will play.

### RATING EXPLANATIONS

- ADULT - Mature material; should be viewed only by adults due to graphic sexual material, violence, or language.
- NC-17 - No children under age 17; not recommended viewing for children under age 17.
- R - Restricted; recommended that parents restrict children under age 17 from viewing or allow children to view only when supervised by a parent or adult guardian.
- RGR - Parental Guidance Required
- PG 13 - Material is unsuitable for children under age 13.
- PG - Parental Guidance suggested.
- G - General Audience; recommended as acceptable for viewers of all ages.
- KID SAFE - Safe for children to view

- 6 A screen will prompt you to enter your password. Press the Number buttons to enter your four-digit password, then press **OK**. Your password will not appear on the TV screen, but Xs will show as you enter each digit. Password details are on page 28.
- 7 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

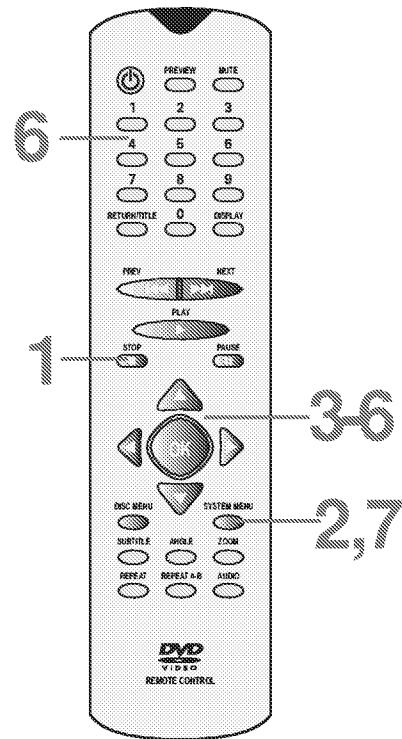

### Helpful Hints

- When you press **STOP** ■ twice to stop DVD playback so you can adjust the Parental level, playback automatically starts at the beginning of the DVD when you resume playback.
- The Parental settings do not affect Video CDs, Super Video CDs, or Audio CDs. Parental only affects DVD playback.

## 30 Program (not for Picture CD/MP3)

You may play Tracks or Chapters in an order you specify instead of normal order (1, 2, 3, etc.). The order you set is a Program. For example, if you want to set up an Audio CD so Track 12 will play first, put Track 12 in Program position number one (1).


To set up a Program, follow these steps.

- 1 Press **SYSTEM MENU**.
- 2 The General Setup Page will be selected. Press **OK** or **▼**.
- 3 Press **▼** to select **Program**. Press **▶** to select **Input Menu**.




- 4 Press **OK**. The **Program** menu will appear. This is where you enter the Track/Chapter numbers in the order in which you want to play them. The Number 1 space will be selected automatically as your starting point.

While the Number 1 space is highlighted, **press the Number buttons to enter the Title and/or Chapter/Track number you want to play first**. The number of available Titles, Chapters, or Tracks will appear at the top of the screen. Precede single-digit numbers with a zero. For example, for Track six, press 0, 6.

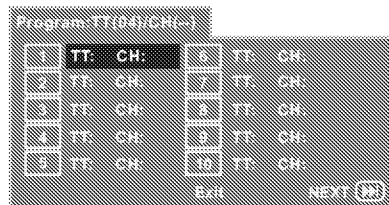

DVD example

- 5 Use the **▲▼◀▶** buttons to move to the next **Program position**. Use the **Number** buttons on the remote to enter other **Titles/Chapters/Tracks**. Repeat this process to fill the Program.  
If you enter an incorrect Title/Chapter/Track number, press **▲▼◀▶** to select the Program position. Use the **Number** buttons to reenter the correct Title/Chapter/Track number.  
To delete an item from the Program, use the **▲▼◀▶** buttons to select it. Then press **OK** or **PLAY▶** to erase the item.
- 6 **When you have entered all the items you want, press ▼, ◀, and/or ▶ to select Start at the bottom of the screen. Then, press OK.** This will store your selection in the Program. The Program will start playing automatically.  
To resume normal playback, press **STOP■** once to stop playback. Press **PLAY▶** to resume normal play from the current point.  
Or, press **STOP■** twice to stop playing the Program. When you press **PLAY▶**, play will start at the beginning of the Disc.

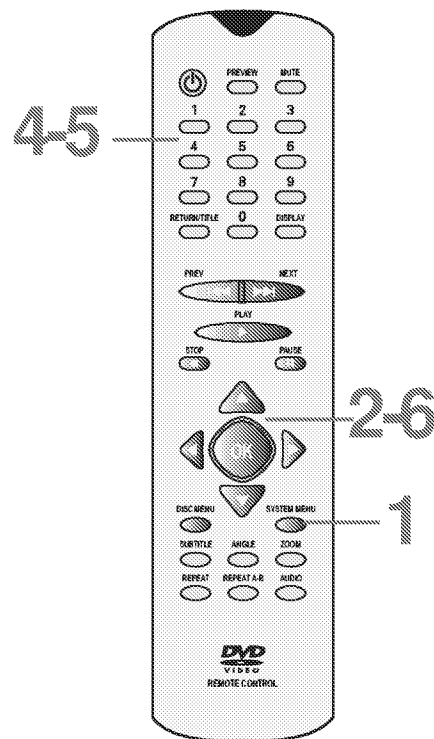

### Helpful Hints

- To access other Program Pages, press **PREV|◀◀** or **NEXT▶▶|**.
- To play a Program repeatedly, press **REPEAT** during playback until **ALL** appears on the TV screen.
- To stop entering Tracks in the Program, press **▼** and **◀** to select **Exit** at the bottom of the screen, then press **OK**. When you play the Disc, Tracks will play in normal order (1, 2, 3, etc.).
- The Program will accept a Title/Chapter/Track number only if it is on the current Disc.
- Program is available only when a DVD, SVCD, VCD, or Audio CD is in the Player.

## Preview 31

DVD

VIDEO CD

Some DVDs, Video CDs, or Super Video CDs may contain preview or introductory information. If you are not sure of the contents of a Disc, use Preview. Not all Discs contain this information. See your Disc case for details.

### 1 Press the PREVIEW button to see the Preview menu.



Video CD example



 
DVD example

### 2 Press ▲ or ▼ to select an option, then press OK.


- If you select Track Digest, Title Digest or Chapter Digest, the first five seconds of that segment(s) will play. A picture of each segment will appear on the screen. This introduces you to the contents of each Track, Title or Chapter.

To play a certain segment, press ▲ to go to the Select line. Press the Number buttons to enter the Track/Title/Chapter you want. Then, press OK to start playback.


Six segments will show on the screen at a time. To see other segments, press PREV ◀◀ or NEXT ▶▶ on the remote.



 
- Disc Interval (VCD) and Title Interval (DVD) divide a Disc or Title into intervals of 10 minutes. To start playing the Disc from a certain interval, press ▲ to go to the Select line. Press the Number buttons to choose a segment (01-06), then press OK to start play from that point.



 - Track Interval (VCD) and Chapter Interval (DVD) divide a single Track or Chapter into intervals of 10 minutes. To play the Track from a certain interval, press ▲ to go to the SELECT line. Press the Number buttons (01-06) to choose a segment, then press OK to start play from that point.



### 3 To remove the PREVIEW menus, press ▼ and/or ◀ to choose Exit, then press OK. To go to the first PREVIEW screen, press ▼ and/or ▶ to select Menu, then press OK.

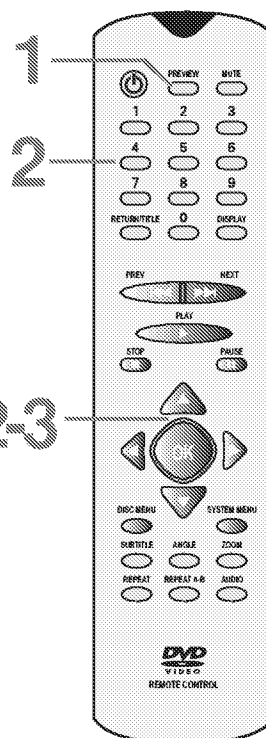


## 32 JPEG and MP3 Features

### General Information on CD-R and CD-RW s

- When you make Picture CDs or MP3 CDs to play on this DVD Player, the Disc should have at least 6-10 pictures or 2-3 MP3 music files. Make sure there is at least 3 MB (three megabytes) of information on the Disc. The maximum files per folder is 500.
- JPEG file names should end with the ".jpg" extension.
- To play a JPEG or MP3 file, press the Number buttons to select an item, then press OK. Or, press ▲, ▼, ◀, or ▶ to select an item when play is stopped, then press OK.

### MP3/JPEG playback

- 1 Load a Disc that contains MP3 or JPEG files. A menu that lists the available Tracks or images will appear.

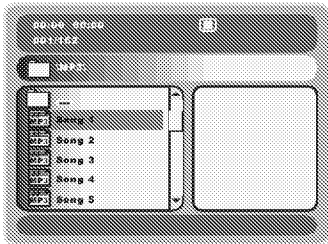

- 2 Press ▲ or ▼ to select a folder, then press OK to open the folder. Press ▶ to enter the file list.
- 3 Press ▲ or ▼ or use the Number buttons to choose an MP3 Track or JPEG image.
- 4 Press OK to play the item you selected.

### JPEG features

- Press PREVIEW during playback. You will see miniature images of the pictures. A maximum of 12 images will appear. Press ▲, ▼, ◀, or ▶ to move through the pictures menu. Press PREV ◀◀ or NEXT ▶▶ to see the other page. Press DISC MENU to return to the main CD menu.
- Press ▲, ▼, ◀, or ▶ to select Side Show ( ), then press OK. This will play all the files, beginning with the first picture on the current page.
- During JPEG playback, press ZOOM repeatedly to enlarge or reduce a JPEG image. Press ▲, ▼, ◀, or ▶ to move through the picture.
- During JPEG playback, press ▲, ▼, ◀, or ▶ to flip or rotate the image.

### Repeat/Shuffle (JPEG/MP3)


- While the menu is on the screen, press REPEAT repeatedly to choose:
  - Single - Play the selected file once, then return to the menu.
  - Repeat One - Keep a JPEG image still on the screen or play an MP3 file repeatedly.
  - Repeat Folder - Play all files in the selected folder repeatedly.
  - Shuffle - Play all files in the selected folder in random order.
  - Folder - Play all files in the selected folder.

### Program (JPEG/MP3)

- While playback is stopped, press DISC MENU repeatedly to toggle the menu between Folder and Filelist.
- With Filelist selected, press ▲ or ▼ to highlight the files you want to add to the program. Press ▶ to add the file to the playlist.
- Press DISC MENU to display the Playlist.
- Press ◀ to delete unwanted files from the Playlist.
- Turning off the DVD Player will erase the Program.


### MP3 playback features

- During playback, press ◀ or ▶ to fast forward or reverse playback. Press PLAY ▶ to resume normal play.
- Press PREV ◀◀ or NEXT ▶▶ to select other Tracks or files during play.

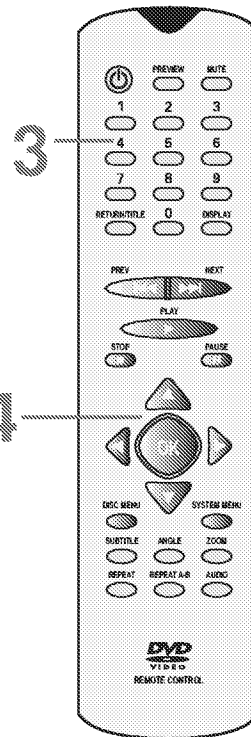

### Program (JPEG/MP3) menu display

Folder	Reverb mode:	Folder
Filelist	Off	Shuffle
Playlist	Concert	Single
	Living Room	Repeat One
	Hall	Repeat Folder
	Bathroom	
	Cave	
	Arena	
	Church	

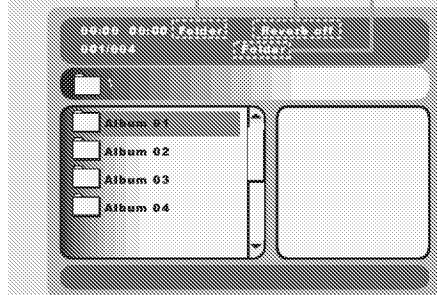


(Press DISPLAY to show the JPEG/MP3 playback information)





## TV Display 33

You may set the DVD Player to play video in one of three formats: Letterbox, Pan & Scan, or Widescreen (16:9). To choose a format, follow these steps. The format you select must be available on the Disc. If it is not, the settings for TV Display will not affect the picture during playback.

- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the Video Setup Page, then press **OK** or **▼**.
- 3 Press **▼** to select TV Display. Press **▶**.
- 4 Press **▲** or **▼** to select 4:3 Pan Scan, 4:3 Letter Box, or 16:9, then press **OK**.  
 Select 4:3 Pan Scan if you want the picture to be trimmed or formatted to fit your TV screen. This setting is possible only if the DVD is recorded in pan & scan or regular format. Check the Disc case for details.  
 Select 4:3 Letter Box if you want to see the entire, widened picture with black bars at the top and bottom of the screen. This looks like the picture you see when watching movies in a theater. This setting is possible only if the DVD was recorded in the letterbox or widescreen format. Check the Disc case for details.  
 Select 16:9 if you connected the DVD Player to a widescreen TV.

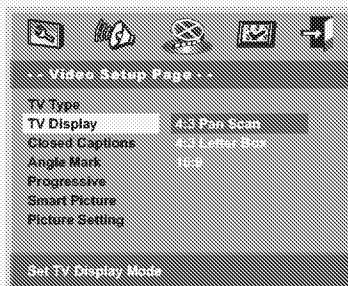

- 5 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

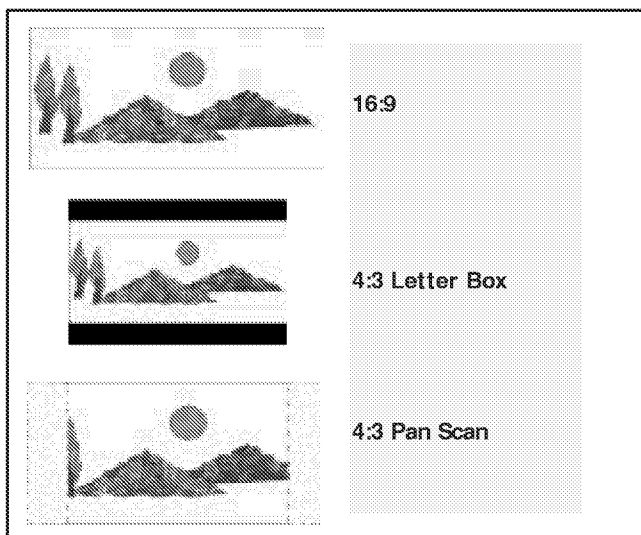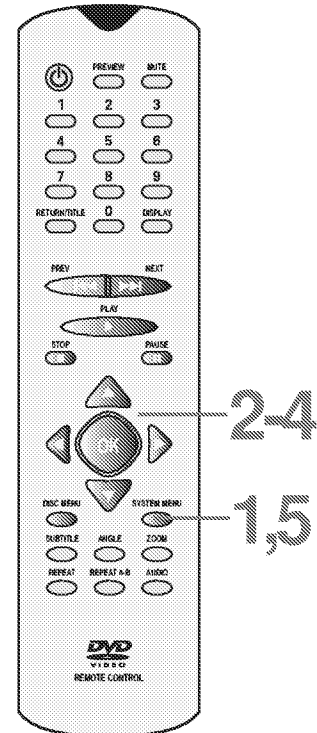

### Helpful Hints

- DVDs only play in the format in which they were recorded. For example, if the DVD case says the DVD is recorded in Letterbox or Widescreen format, you may play the DVD only with the black bars showing at the top and bottom of the widened picture. Even if you set TV Display to 4:3 Pan Scan, the picture will show in the widened format.
- Some widescreen TVs may show only part of the DVD Player's menu. Adjust the screen mode on your TV. See your TV owner's manual for details.


## 34 Smart Picture

Just as you can adjust your picture on your TV, you can adjust some picture elements at the DVD Player. Choose a picture setting that best displays the Disc you are playing. This feature is known as Smart Picture and can be adjusted by following these steps.

- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the **Video Setup Page**, then press **OK** or **▼**.
- 3 Press **▼** to select **Smart Picture**, then press **▶**.
- 4 Press **▲** or **▼** to select **Standard**, **Bright**, or **Soft**, then press **OK**.



- 5 Press **SYSTEM MENU**. Or, select the **Exit Setup Menu** icon in the top right corner of the menu and press **OK** to remove the menu.

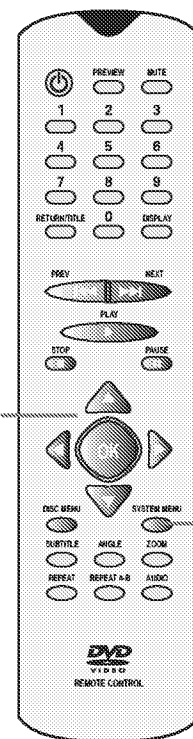

24

1,5

## Picture Setting 35

If you want to personalize the picture setting rather than using the preset values of Smart Picture, adjust Sharpness, Brightness, and Contrast.

- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the Video Setup Page, then press **OK** or **▼**.
- 3 Press **▼** to select Picture Setting, then press **▶**.
- 4 Picture Setting Setup will be selected. Press **▲** or **▼** to select Sharpness, Brightness, or Contrast, then press **▶**.




- 5 If you selected Sharpness, press **▲** or **▼** to select High, Medium or Low, then press **OK**. Choose Medium to make the picture's edge moderately sharp. Choose High to make the picture's edge Sharper. Choose Low to make the picture's edge softer.

If you selected Brightness or Contrast, press **◀** or **▶** to adjust the value of that element. Press **OK** to go back to Picture Setting Setup.

For Brightness, choosing a more positive value brightens the color on the screen and seems to add white to the picture. Choosing a more negative value darkens the colors in the picture. Choose zero (0) for the average setting.

For Contrast, choosing a more positive value adds more noticeable difference between the black and white in your picture and sharpens the picture. Choose a more negative Contrast value to blur the distinction between black and white in the picture. The picture will not seem as sharp.


- 6 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

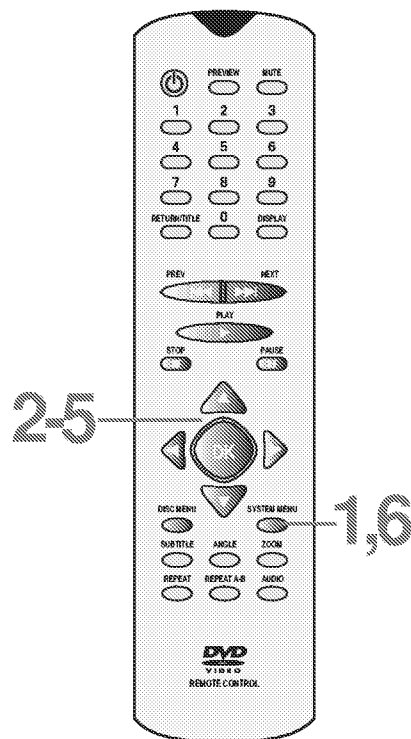

## 36 TVType


DVDs are recorded according to a color system, the most common of which are NTSC and PAL. NTSC is the most common in the United States. Your TV also operates according to a color system. This DVD Player is compatible with NTSC and PAL. However, in order for a DVD to play on this DVD Player, the color system of the DVD, the TV, and the DVD Player should match. If all three are not the same, the DVD may play in only black and white, the picture may roll continuously, or the picture may appear distorted. This feature allows you to set the DVD Player to match the color systems of your DVD and your TV.

- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the Video Setup Page, then press **OK** or **▼**.
- 3 TV Type will be selected. Press **▶**.

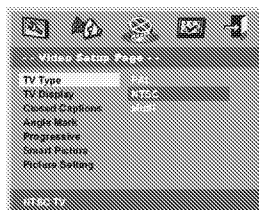


- 4 Press **▲** or **▼** to select **PAL**, **NTSC**, or **Multi**, then press **OK**. Choose NTSC if your TV is NTSC-compatible and your DVDs are recorded in NTSC. Choose PAL if your TV is PAL-compatible and your DVD is recorded in PAL. Choose Multi if your TV is compatible with both NTSC and PAL and you want the DVD Player to automatically select the color system of the current DVD. **If the setting does not match your TV, the picture will be distorted or lost.**


- 5 The first dialog box will be shown as below. Press **◀** or **▶** to select **OK** to confirm the change or select **CANCEL** to discard the change. Then press **OK**.

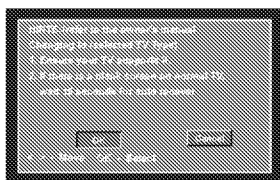

- 6 Now that the selected TV Type is active, check whether the picture is good, then answer the second dialog box.
  - If the picture is good, press **◀** or **▶** to select **OK** and press the **OK** button.
  - If the picture is distorted or lost, press **◀** or **▶** to select **CANCEL**, then press the **OK** button to recover the original setting. Or, wait **15 seconds** for auto recover.

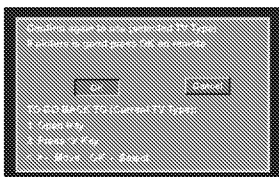

- 7 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

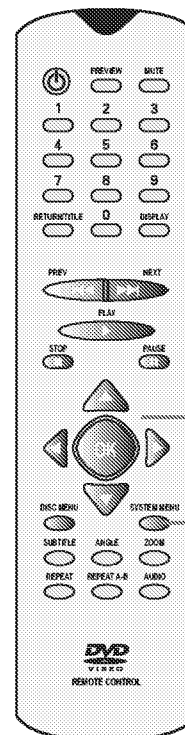


### Helpful Hint

- If you lose the DVD picture because the TV Type setting is wrong, press **OPEN/CLOSE ▲** on the DVD Player, then press "3" on the remote. The DVD image should reappear on the TV screen.


## Progressive 37

If you used the Player's Y Pb Pr jacks to connect to a TV, set Progressive correctly. This unit's COMPONENT VIDEO OUT Y Pb Pr jacks send either regular Component Video or Progressive Scan Video. Choose the setting that matches the video compatibilities of your TV.


- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the **Video Setup Page**, then press **OK** or **▼**.
- 3 Press **▼** to select **Progressive**, then press **▶**.

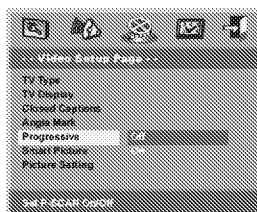


- 4 Press **▲** or **▼** to select **Off** or **On**, then press **OK**. Choose **On** only if your TV is set for **Progressive Scan Video** (see page 13). Otherwise you will not have a DVD picture on the TV. **If the setting does not match your TV, the picture will be distorted or lost.**
- 5 The first dialog box will be shown as below. Press **◀** or **▶** to select **OK** to confirm the change or **CANCEL** to discard the change. Then press the **OK** button.

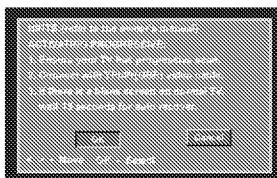

- 6 Now that **Progressive** is on, check whether the picture is good and answer the second dialog box.
  - If the picture is good, press **◀** or **▶** to select **OK** and press the **OK** button.
  - If the picture is distorted or lost, press **◀** or **▶** to select **CANCEL**, then press the **OK** button to recover the original setting. Or, wait **15 seconds for auto recover**.

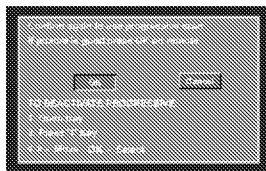

- 7 Press **SYSTEM MENU**. Or, select the **Exit Setup Menu** icon in the top right corner of the menu and press **OK** to remove the menu.

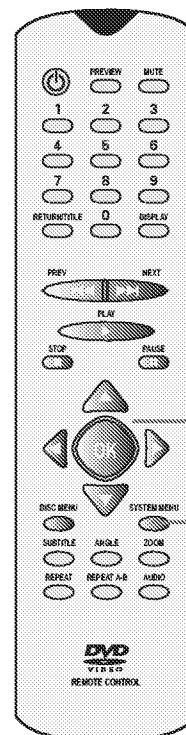

### Helpful Hint

- If you lose the DVD picture because the Progressive setting is wrong, press **OPEN/CLOSE ▲** on the DVD Player, then press "1" on the remote to turn off Progressive. The DVD image should reappear on the TV screen.

## 38 Downmix, Dual Mono


### Downmix

Use the **Speaker Setup Page** to adjust some of the player's audio settings. Adjust Downmix according to how you connected the Player to your TV and/or Stereo.

- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the **Audio Setup Page**, then press **OK** or **▼**.
- 3 **Speaker Setup Page** will be selected. Press **▶**.
- 4 **Downmix** will be selected. Press **▶**.
- 5 Press **▲** or **▼** to select **LT/RT** (left/right), **Stereo**, or **Virtual Surround**, then press **OK**.  
Choose **LT/RT** if you connect the Player to a Stereo that has **Dolby Pro Logic** decoding.  
Choose **Stereo** if you connect the Player to a TV or Stereo that has left and right Audio input jacks but does not have **Dolby Pro Logic** decoding. *Details are on page 14.*  
Choose **Virtual Surround** to allow the DVD player to use **Virtual Surround** sound effects.



- 6 Press **SYSTEM MENU**. Or, select the **Exit Setup Menu** icon in the top right corner of the menu and press **OK** to remove the menu.

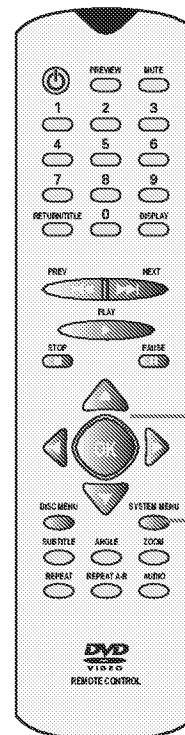


### Dual Mono

Use the **Dolby Digital Setup Page** to adjust **Dual Mono**.



- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the **Audio Setup Page**, then press **OK** or **▼**.
- 3 Press **▼** to select **Dolby Digital Setup**, then press **▶**.
- 4 **Dual Mono** will be selected. Press **▶**.
- 5 Press **▲** or **▼** to select the setting that matches the number of speakers you have. Choose **Stereo** when you have two speakers. Choose **L-Mono**, **R-Mono**, or **Mix-Mono** when you have just one speaker.
- 6 Press **SYSTEM MENU**. Or, select the **Exit Setup Menu** icon in the top right corner of the menu and press **OK** to remove the menu.

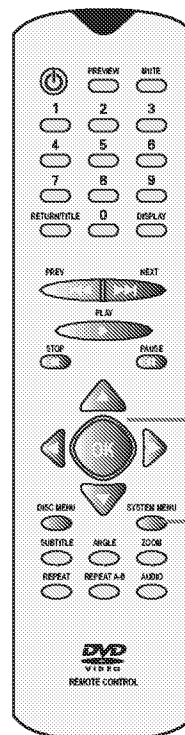


## Digital Output 39

If you connected the DVD Player to a Stereo using the COAXIAL DIGITAL OUT jack as shown on page 15, you need to adjust the Digital Output setting as described below. If you are not using the COAXIAL DIGITAL OUT jack, no adjustment is necessary.

- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the Audio Setup Page, then press **OK** or **▼**.
- 3 Press **▼** to select Digital Audio Setup, then press **▶**.
- 4 Digital Output will be selected. Press **▶**.
- 5 Press **▲** or **▼** to select **SPDIF Off**, **All**, or **PCM Only**, then press **OK**.  
Choose All to select the original default audio settings as received by most Stereos. However, if the sound is distorted, your Stereo may need to receive audio in the PCM format (pulse code modulation, contains only left and right audio signals). In this case, select PCM Only. See page 40. You may also need to adjust LPCM Output to match with the Disc. Choose SPDIF Off for all other situations, or if you did not use the COAXIAL DIGITAL OUT jack in your connections. Refer to your Stereo owner's manual for details.



- 6 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

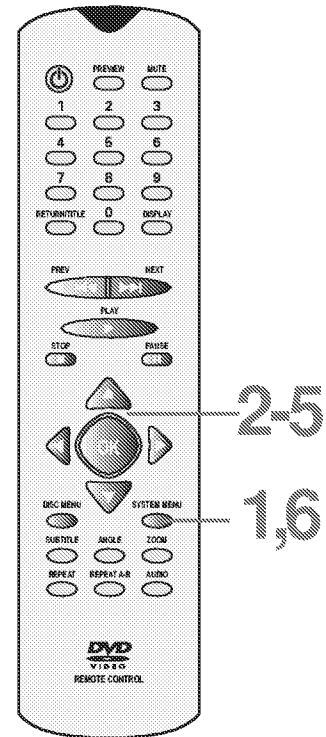

### Helpful Hint


- SPDIF is the Sony-Philips Digital Interface. It is a method of transferring digital audio.

## 40 LPCM Output, Dynamic

### LPCM Output

This option is available only if 'PCM Only' is selected for Digital Output (see page 39). Use LPCM Output to adjust the sampling rate to match your Discs.

- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the Audio Setup Page, then press **OK** or **▼**.
- 3 Press **▼** to select Digital Audio Setup, then press **▶**.
- 4 Press **▼** to select LPCM Output, then press **▶**.
- 5 Press **▲** or **▼** to select 48K or 96K, then press **OK**.  
Discs are recorded in a certain sampling rate. The higher the sampling rate, the better the sound quality. Some Discs are recorded in a high sampling rate of 96KHz. Select 96K if you are playing Discs recorded at this high rate. Otherwise, select 48K.

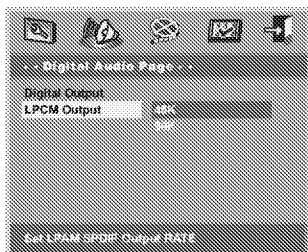


- 6 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.



### Dynamic

Dynamic reduces sudden volume changes by letting you adjust the difference between soft and loud sounds.

- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the Audio Setup Page, then press **OK** or **▼**.
- 3 Press **▼** to select Dolby Digital Setup, then press **▶**.
- 4 Press **▼** to select Dynamic, then press **▶**.
- 5 Press **▲** or **▼** to set Dynamic Range Compression to 1/8 through Full or to turn it OFF, then press **OK**.  
To hear the full range of sounds as recorded, choose OFF or a lower ratio such as 1/8 or 1/4. To minimize the difference in volume between loud segments (such as explosions or car chases) and quiet scenes, choose a higher ratio such as 3/4 or FULL.

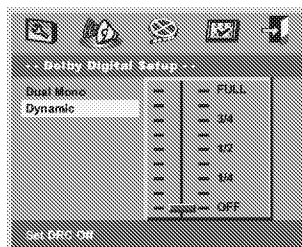

- 6 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

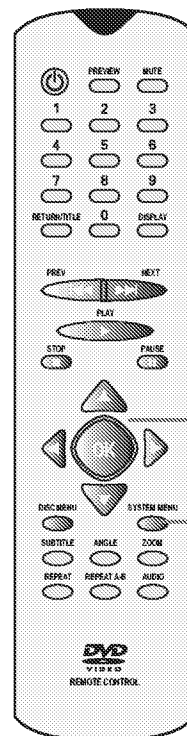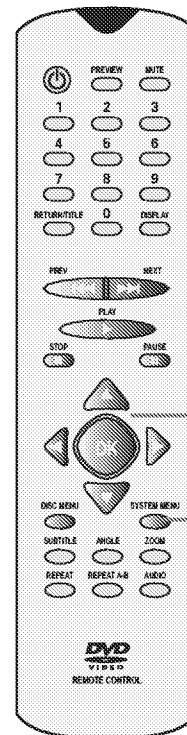



## Sound Mode (Equalizer), Reverb Mode 41

### Sound Mode (Equalizer)

Select the Sound Mode that matches the type of music you play most often. These preset Sound Modes adjust the frequency bands of the audio to enhance your favorite music style. Of course, if you vary your music style frequently, the Sound Mode is easy to adjust.

- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the Audio Setup Page, then press **OK** or **▼**.
- 3 Press **▼** to select Equalizer, then press **▶**.
- 4 Sound Mode will be selected. Press **▶**.



- 5 Press **▲** or **▼** to select None, Rock, Pop, Live, Dance, Techno, Classic or Soft, then press **OK**. Choose None to play the Disc with its original sound effects.
- 6 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.



### Reverb Mode

During music playback, this feature simulates echoes and frequencies that may be available in a particular environment. Choose the environment that you would like to recreate by changing the Reverb Mode setting.

- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the Audio Setup Page, then press **OK** or **▼**.
- 3 Press **▼** to select 3D, then press **▶**.
- 4 Reverb Mode will be selected. Press **▶**.



- 5 Press **▲** or **▼** to select Off, Concert, Living Room, Hall, Bathroom, Cave, Arena or Church, then press **OK**. Choose OFF to play the Disc with its original sound effects.
- 6 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

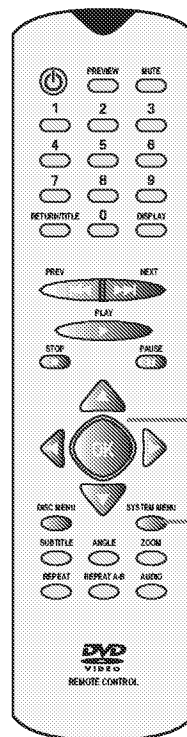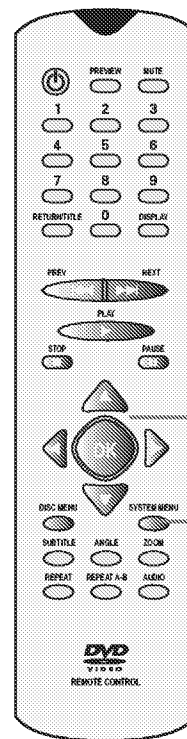

## 42 OSD Language, Closed Captions

### OSD Language

You can set the DVD Player's Setup menus and on-screen messages to appear in English or Spanish. These are the only two languages available. This language selection will not affect the languages of DVD Disc or Title menus or any audio, subtitle, or Closed Caption languages. To change the DVD Player's menu language, follow these steps.

- 1 Press **SYSTEM MENU**.
- 2 The General Setup Page will be selected. Press **OK** or **▼**.
- 3 Press **▼** to select **OSD Language**, then press **▶**.



- 4 Press **▲** or **▼** to select **ENGLISH**, **FRANÇAIS** (French), or **ESPAÑOL** (Spanish), then press **OK**.
- 5 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.



### Closed Captions

Closed captions are hidden in the video signal of some Discs. Different than subtitles, closed captions are intended for the hearing impaired and also show sound effects. For example, closed captions may include information such as "phone ringing" or "footsteps approaching" while a subtitle would only show spoken text. Though you can turn on Closed Captions in the DVD Player's menu, the captions must be available on the Disc. Also make sure you turn on Closed Captions on your TV. Otherwise, the captions will not appear.

- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the Video Setup Page, then press **OK** or **▼**.
- 3 Press **▼** to select **Closed Captions**, then press **▶**.



- 4 Press **▲** or **▼** to select **On** or **Off**, then press **OK**.
- 5 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

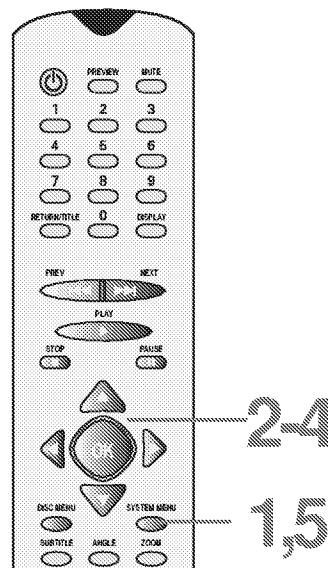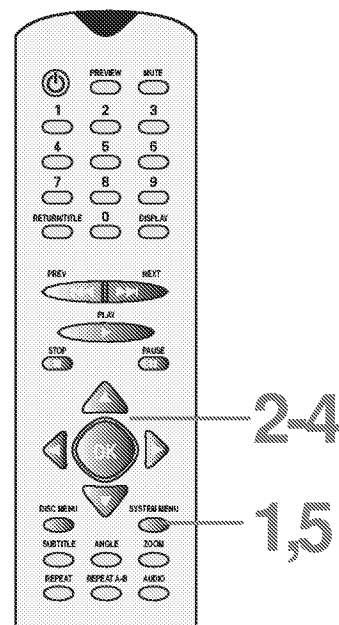

#### Helpful Hint


- If you have French or Spanish menus and need English:
  - 1) Press **SYSTEM MENU**. **PAGE REGLAGES GENERALIX** or **PÁG CONFIG. GENERAL** will be selected. Press **OK**.
  - 2) Press **▼** to select **LANGUE AFF** or **IDIOMA MENUS**, then press **▶**.
  - 3) Press **▲** to select **ENGLISH**, then press **OK**.
  - 4) Press **SYSTEM MENU**.

## Screen Saver, Angle Mark 43


### Screen Saver

The Screen Saver is the moving DVD logo that appears on your TV screen when playback is stopped. It prevents damage to your TV screen caused by leaving a still image on the TV too long.

- 1 Press **SYSTEM MENU**.
- 2 The General Setup Page will be selected. Press **OK** or **▼**.
- 3 Press **▼** to select Screen Saver, then press **▶**.

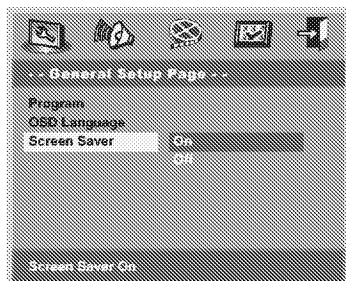

- 4 Press **▲** or **▼** to select **On** or **Off**, then press **OK**. Choose **On** to have the Screen Saver appear on your TV screen when you have not used the Player or its remote for approximately five minutes and playback is stopped. To disable the screen saver, choose **Off**. A blue DVD screen will appear when playback is stopped.
- 5 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

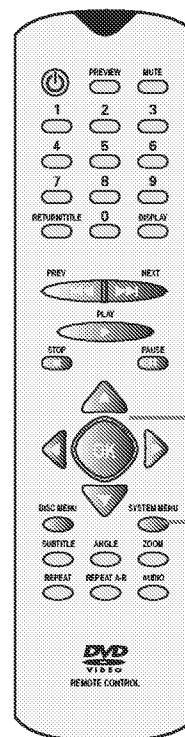


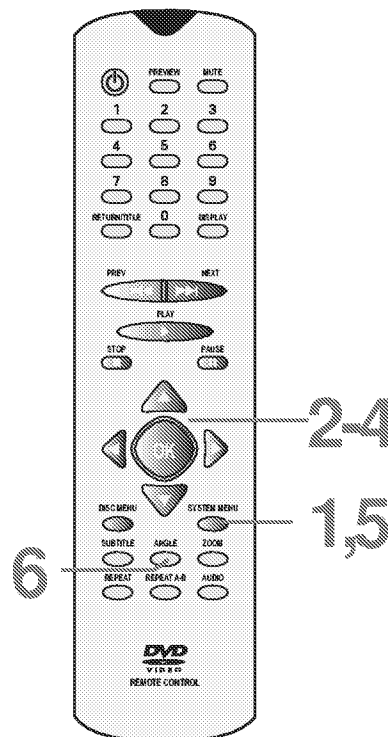
### Angle Mark

Some DVDs contain scenes that you can view from different angles or perspectives. If available, you can set the Angle Mark to appear during DVD playback to remind you when multiple angles are available.

- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the Video Setup Page, then press **OK** or **▼**.
- 3 Press **▼** to select Angle Mark, then press **▶**.



- 4 Press **▲** or **▼** to select **On** or **Off**, then press **OK**.
- 5 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.
- 6 During DVD play, if the Angle Mark (  ) appears, press the **ANGLE** button repeatedly to see the picture from a different perspective. Details are on page 23.




## 44 D.R.C, Defaults


### D.R.C

The D.R.C (Dynamic range control) compresses or softens the high volume outputs and raises low volume outputs to an audible level.

- 1 Press **SYSTEM MENU**.
- 2 Press **▶** to select the Audio Setup Page, then press **OK** or **▼**.
- 3 The Speaker Setup Page will be selected. Press **▶**.
- 4 Press **▼** to select D.R.C, then press **▶**.

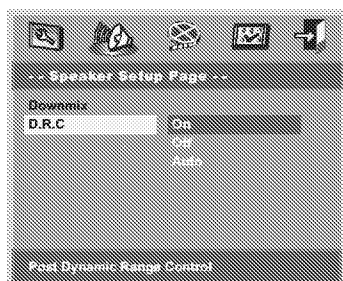


- 5 Press **▲** or **▼** to select **On**, **Off**, or **Auto**, then press **OK**. Choose **On** to adjust sound. Choose **Off** to disable D.R.C. Select **Auto** to adjust the dynamic level automatically according to the disc.
- 6 Press **SYSTEM MENU**. Or, select the Exit Setup Menu icon in the top right corner of the menu and press **OK** to remove the menu.

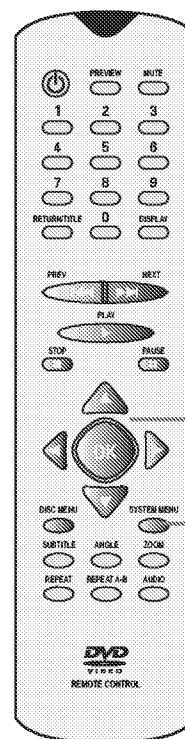

### Defaults

To restore the original settings of the DVD Player, follow the steps below.

- 1 Press **STOP** ■ twice to stop Disc playback completely.
- 2 Press **SYSTEM MENU**.
- 3 Press **▶** to select the Preference Page, then press **OK** or **▼**.
- 4 Press **▼** to select **Default**. Press **▶** to select **RESET**, then press **OK**. The original settings of the DVD Player will be restored. Then menus will disappear automatically.

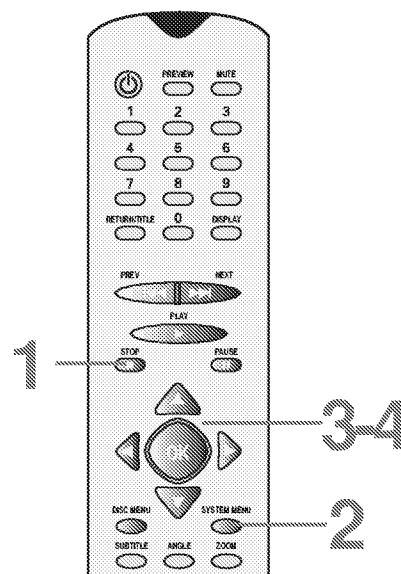

### Helpful Hints

- Restoring the Defaults will reset the Player's menus to English.
- When you reset the Defaults, all settings will be reset to factory defaults.

## Helpful Hints 45

.....

If you are having problems with your product, check this list of problems and possible solutions before requesting service. You may be able to solve the problem yourself.

If you need to call a customer service representative, please know the model number and serial number of your product before you call. This information is on the rear of the product. Also, please take a moment to identify the problem you are having, and be prepared to explain this to the representative. If you believe the representative will need to help you with operations, please stay near the product. Our representatives will be happy to assist you.

### No power

- Press the STANDBY-ON  $\odot$  button on the front of the DVD Player.
- Make sure you connected the DVD Player's power cord to an AC power outlet.
- Make sure the AC outlet has power by trying another appliance in the same outlet.

### No picture

- Make sure the TV power is on.
- Check the video cables. Make sure the cable(s) are fastened securely to the DVD Player and to the TV.
- Set your TV to the correct Video In channel. These channels are usually near channel zero (0). Or, you may have a button on the TV remote control that selects an Auxiliary or A/V IN channel. See your TV owner's manual for details. Or, go to your lowest TV channel (01 or 02), then change channels down until you see DVD playback or the Player's blue DVD screen on the TV.
- You only need one video connection between the DVD Player and the TV. *Details are on page 9.*
- Make sure your TV Type setting matches your television and DVDs. *Details are on page 36.*
- Check the Progressive setting. *Details are on page 37.* Set Progressive to On only if your TV has Progressive Scan.

### Distorted picture

- Check the Disc for fingerprints or scratches. Clean the Disc with a soft cloth, wiping from the center to the edge in a straight line. Do not wipe the Disc in a circular motion.
- Sometimes a small amount of picture distortion may appear. This is not a malfunction.

### The picture is distorted, the picture rolls, or the picture is only black and white.

- TVs have a color system standard, usually NTSC in the United States. If the Disc's or DVD Player's color system is different than your TV's color system, the picture may be distorted or colorless. *Details are on page 36.*
- A DVD or Video CD picture may become distorted or black and white if you switch among PAL and NTSC (for TV Type). If so, set TV Type items to correct the picture. *Details are on page 36.*

### The sound is distorted or there is no sound during Disc playback.

- Make sure you did not connect any cables from the DVD Player to a Stereo's "PHONO IN" jack.
- Make sure you did not connect the Player's COAXIAL DIGITAL OUT jack to an analog jack on the Stereo. (Analog audio jacks are usually labeled as such and are usually red and white.)

### No sound

- Check the audio connections. *Details are on pages 10-15.* Remember, you only need one audio connection. See page nine to see what connection best suits your situation.
- Make sure cables are connected firmly to all equipment.
- Select another channel, sound source, or Auxiliary station at your Stereo or TV. See your Stereo or TV manual for details. Or, continue selecting the different sound sources or modes on the Stereo or TV until you hear sound from the Disc that is in the DVD Player. *Details are on pages 10-15.*
- Make sure your Downmix and Digital Output settings match the capabilities of your Stereo or TV. *Details are on pages 38-39.*
- Check the Audio setting of a DVD in the DVD Disc Menu, if available, and adjust as necessary.

## 46 Helpful Hints (cont'd)

### Disc will not play.

- Make sure the Disc label is facing up. If you are playing a two-sided Disc, make sure the label of the side you want to play is facing up. *Details are on page 16.*
- Check the Parental Controls. *Details are on pages 28-29.*
- Check the Region Code of the DVD. The DVD must be coded for All regions or Region 1 in order to play on this DVD Player. *Details are on page 7.*
- See if the Disc is defective by trying another Disc. Make sure the Disc is not scratched or warped. Carefully clean the Disc. *Details are on page 6.*
- You must finalize CD-R, DVD+R, and DVD+RW discs before playing them on this Player.
- If you are playing a CD-R or CD-RW you made, make sure it contains at least 3 MB of data. *Details are on page 32.*

### An Audio CD will not play.

- Some Audio CDs available on the market are copy protected. These discs will not play on this DVD Player. See your retailer for options regarding non-protected Audio CDs.

### The DVD logo does not appear on the TV screen after you remove a Disc.

- Reset the DVD Player by switching it off, then on again.

### The DVD Player does not respond to the remote control.

- Aim the remote at the Remote sensor on the front of the Player (not the TV).
- Remove any obstacles between the DVD Player and the remote control. Move closer to the Player and try the remote again.
- Inspect or replace the batteries in the remote control. *Details are on page 8.*

### The DVD Player will not select some features, such as Angles, Subtitles, or multi-language Audio.

- The feature may not be available on the Disc. If it is not, the  $\emptyset$  will appear on the TV screen. Check the Disc case to see if the Disc has the feature. If the Disc does not have the feature, the DVD Player cannot create the feature. This is not a malfunction of the DVD Player.  
Or, the feature may not be available at the present time. Some features are only available during playback, while other items can be accessed only when play is stopped. Try stopping or starting playback, then try the feature again.

### The DVD Player does not work.

- Disconnect the power cord from the power outlet for a few minutes. Reconnect the power cord and try to operate the Player again as usual.

### The DVD Player turns itself off.

- If there is no activity at the DVD Player or with its remote control for 25 minutes and playback is stopped, the Player will turn itself off. This is an energy-saving feature (Smart Power) that cannot be altered. Press STANDBY-ON  $\odot$  on the Player or Power  $\odot$  on the remote to turn on the Player again.

### Disc play is irregular or DVD Disc menu operation is faulty.

- Due to the inconsistency of Disc formats provided by various Disc manufacturers, your DVD Player may require a playability enhancement or upgrade. As DVD technology has advanced, these enhancements have become both common and easy to complete.  
Please contact Magnavox at 1-800-705-2000 for assistance.

## Glossary 47

.....

**Analog:** Sound that has not been turned into numbers. Analog sound varies, while digital sound has specific numerical values. Analog sound is available when you use the red and white audio jacks on your equipment. These jacks send audio through two channels, the left and right.

**AUDIO OUT Jacks:** Jacks on the rear of the DVD Player that send audio to another system (TV, Stereo, etc.). The jacks are red and white.

**CD:** Compact Disc.

**Chapter:** A part of a Title.

**COAXIAL DIGITAL OUT jack:** Sends digital audio to a Stereo, allowing you to adjust the volume at the Stereo. The Stereo must have a Coaxial In jack. This connection provides the 5.1 channel surround sound as heard in movie theaters. The COAXIAL jack on the DVD Player is black.

**Color system:** There are various systems for transmitting television signals, for example PAL, SECAM, and NTSC. NTSC is the most common color system in the United States of America.

**Digital:** Sound that has been converted into numerical values. Digital sound is available when you use the Player's COAXIAL DIGITAL OUT jack, which sends audio through multiple channels instead of two channels as analog does.

**Dolby Digital:** A surround sound system that provides 5.1 channel sound as used in movie theaters.

**DVD:** Digital Video Disc.

**Interlaced Scan:** A video scanning system in which alternating lines are transmitted so half a picture is displayed each time the scanning beam moves down the screen. An interlaced frame has two fields.

**Letterbox:** Widescreen format; a TV aspect ratio setting (4:3). Displays the video in full-width, with black bars at the top and bottom of the TV screen. This format is similar to seeing a movie in a theater. If the Disc does not include a letterbox format, selecting letterbox may have no effect. Some DVDs are two-sided, with one side playing in widescreen format and the other side playing in a normal (pan & scan) format.

**Pan & Scan:** A TV aspect ratio setting (4:3). Displays the video with full-height picture with one or both sides of the picture trimmed to fit on your TV screen. Some movie companies refer to this as "reformatting the picture to fit your TV screen."

**PBC: Playback Control.** A special feature on some Video CDs/Super Video CDs that enables interactive use.

**PCM: Pulse Code Modulation.** A digital audio encoding system.

**Progressive Scan:** A video scanning system that displays all lines of a frame in one pass.

**RGB: Red-Green-Blue.** A top-quality video connection where red, green, and blue components of the picture are carried through separate wires. This also is referred to as the component video connection.

**S-Video:** Produces a clear picture by sending separate signals for the luminance and the color.

**Title:** A unit of recording on a DVD.

**VCD: Video Compact Disc.**

**VIDEO OUT Jack:** Yellow jack on the rear of the DVD Player that sends video (picture) to a TV.

**Widescreen:** A TV aspect ratio setting (16:9). Displays the video appropriately when you connect the DVD Player to a widescreen TV.

**Y Pb Pr Jacks:** The Component Video Out jacks on the rear of the DVD Player that send high-quality video to a TV that has Component Video In jacks. The jacks on the DVD Player are red, blue, and green. These jacks can transmit either Interlaced Scan video or Progressive Scan video, whichever is compatible with your TV.

# 48 Specifications, Language Codes

## Specifications

### PLAYABLE DISCS

DVD-Video	Audio CD
Video CD	Super Video CD
Picture CD	MP3-CD
CD Recordable (CD-R)	CD Rewritable (CD-RW)
DVD Recordable (DVD+R)	DVD Rewritable (DVD+RW)
Super Audio CD (SACD)	

### TV STANDARD

	PAL/50Hz	NTSC/60Hz
Number of lines	625	525
Playback	Multistandard	(PAL/NTSC)

### VIDEO PERFORMANCE

VIDEO OUT	1Vpp---75Ω
S-VIDEO OUT	Y: 1.00Vpp---75Ω C: 0.30Vpp---75Ω
Y Pb Pr	Y: 1.00Vpp---75Ω Pb: 0.7Vpp---75Ω Pr: 0.7Vpp---75Ω

### CABINET

Dimensions (w x d x h):	17.1 x 11 x 2.2 inches (435 x 280 x 55 mm)
Weight:	Approximately 4.85 lbs (2.2 kg)

### REAR CONNECTIONS

Component Video Out	Cinch (green/blue/red)
S-Video Out	Mini DIN 4-pins
Video Out	Cinch (yellow)
Audio Out	Cinch (white/red)
Digital Audio Out	One coaxial IEC958 for CDDA/LPCM/MPEG1 IEC1937 for MPEG2, Dolby Digital, and DTS

### AUDIO FORMAT

Digital	Mpeg AC-3/ DTS PCM	compressed Digital 16, 20, 24 bits fs, 44.1, 48, 96 kHz 24, 32, 56, 64, 96, 128, 256 kbps & variable bit rate fs, 16, 22.05, 24, 32, 44.1, 48kHz
	MP3(ISO 9660)	

### Analog Sound Stereo

### AUDIO PERFORMANCE

DA Converter	24 bit
Signal to Noise (1kHz)	90 dB
Dynamic range (1kHz)	> 80 dB
DVD	fs 96 kHz 4 Hz -44 kHz fs 48 kHz 4 Hz -22 kHz
Super Video CD	fs 48 kHz 4 Hz -22 kHz fs 44.1 kHz 4 Hz -20 kHz
Video CD/Audio CD	fs 44.1 kHz 4 Hz -20 kHz

### LASER

Type	Semiconductor laser GaAlAs
Wavelength	650nm (DVD) 780nm (Video CD/Audio CD)
Output power	7mW (DVD) 10mW (Video CD/Audio CD)
Beam divergence	60 degree

## Language Codes

You will need these codes if you want a different language for Subtitles, Audio, or Disc menus. *Details are on pages 25-27.*

A	Savonic . . . . . 6785	Hiri Motu . . . . . 7279	Limburchish . . . . . 7673	P	Tajik . . . . . 8471
Abkhazian . . . . . 6566	Chuvash . . . . . 6786	Hungarian . . . . . 7285	Lingala . . . . . 7678	Pali . . . . . 8073	Tamil . . . . . 8465
Afar . . . . . 6565	Cornish . . . . . 7587	I . . . . .	Lithuanian . . . . . 7684	Panjabi . . . . . 8065	Tatar . . . . . 8484
Afrikaans . . . . . 6570	Corsican . . . . . 6779	Icelandic . . . . . 7383	Luxembourgish . . . . . 7666	Persian . . . . . 7065	Telugu . . . . . 8469
Albanian . . . . . 8381	Croatian . . . . . 7282	Ido . . . . . 7379	M	Polish . . . . . 8076	Tha . . . . . 8472
Amharic . . . . . 6577	Czech . . . . . 6783	Indonesian . . . . . 7368	Macedonian . . . . . 7775	Portuguese . . . . . 8084	Tibetan . . . . . 6679
Arabic . . . . . 6582	D	Interlingua . . . . .	Malagasy . . . . . 7771	Provencal . . . . . 7967	Tigrinya . . . . . 8473
Armenian . . . . . 7289	Danish . . . . . 6865	International	Malay . . . . . 7783	Pushito . . . . . 8083	Tonga
Assamese . . . . . 6583	Dutch . . . . . 7876	Interlingue 7365, 7369	Malayalam . . . . . 7776	Q	(Tonga Islands) 8479
Avestan . . . . . 6569	Dzongkha . . . . . 6890	Inuktitut . . . . . 7385	Maltese . . . . . 7784	Quechua . . . . . 8185	Tsonga . . . . . 8483
Aymara . . . . . 6589	E	Inupiaq . . . . . 7375	Marx . . . . . 7186	R	Tswana . . . . . 8478
Azerbaijani . . . . . 6590	English . . . . . 6978	Irish . . . . . 7165	Mapri . . . . . 7773	Raeto-Romance 8277	Turkish . . . . . 8482
Bashkir . . . . . 6665	Esperanto . . . . . 6979	Italian . . . . . 7384	Marathi . . . . . 7782	Romanian . . . . . 8279	Turkmen . . . . . 8475
Basque . . . . . 6985	Estonian . . . . . 6984	J	Marshallese . . . . . 7772	Rundi . . . . . 8278	Twi . . . . . 8487
Belarusian . . . . . 6669	F	Japanese . . . . . 7465	Moldavian . . . . . 7779	Russian . . . . . 8285	U
Bengali . . . . . 6678	Faroese . . . . . 7079	Javanese . . . . . 7486	Mongolian . . . . . 7778	S	Uighur . . . . . 8571
Bihari . . . . . 6672	Fijian . . . . . 7074	K	N	Samoan . . . . . 8377	Ukrainian . . . . . 8575
Bislama . . . . . 6673	Finnish . . . . . 7073	Kalaallisut . . . . . 7576	Nauru . . . . . 7865	Sango . . . . . 8371	Urdu . . . . . 8582
Bokmal . . . . . 7866	French . . . . . 7082	Kannada . . . . . 7578	Navaho, Navajo 7886	Sanskrit . . . . . 8365	Uzbek . . . . . 8590
Norwegian . . . . . 7866	Frisian . . . . . 7089	Kashmiri . . . . . 7583	Ndebele, North 7868	Sardinian . . . . . 8367	V
Bosnian . . . . . 6683	G	Kazakh . . . . . 7575	Ndebele, South 7882	Serbian . . . . . 8382	Vietnamese . . . . . 8673
Breton . . . . . 6682	Gaelic, Scottish Gaelic 7168	Khmer . . . . . 7577	Ndonga . . . . . 7871	Shona . . . . . 8378	Volapuk . . . . . 8679
Bulgarian . . . . . 6671	Gallegan . . . . . 7176	Kinyarwanda . . . . . 8287	Nepali . . . . . 7869	Sindhi . . . . . 8368	W
Burmese . . . . . 7789	Georgian . . . . . 7565	Kirghiz . . . . . 7589	Northern Sami 8369	Sinhalese . . . . . 8373	Walloon . . . . . 8785
C	German . . . . . 6869	Komi . . . . . 7586	Norwegian . . . . . 7879	Slovak . . . . . 8375	Welsh . . . . . 6789
Castilian, Spanish 6983	Gikuyu, Kikuyu . . . . . 7573	Korean . . . . . 7579	Nynorsk . . . . .	Slovenian . . . . . 8376	Wolof . . . . . 8779
Catalan . . . . . 6785	Greek . . . . . 6976	Kuanyama . . . . . 7574	Norwegian . . . . . 7878	Somali . . . . . 8379	X
Chamorro . . . . . 6772	Guarani . . . . . 7178	Kurdish . . . . . 7585	O	Sotho, Southern 8384	Xhosa . . . . . 8872
Chechen . . . . . 6769	Gujarati . . . . . 7185	L	Occitan, Proven 7967	Sundanese . . . . . 8385	Y
Chewa, Chichewa, Nyanja . . . . . 7889	H	Lao . . . . . 7679	Old Bulgarian, Old Savonic, Old Church Savonic . . . . . 6785	Swahili . . . . . 8387	Yiddish . . . . . 8973
Chinese . . . . . 9072	Hausa . . . . . 7265	Latin . . . . . 7665	Oriya . . . . . 7982	Swati . . . . . 8383	Yoruba . . . . . 8979
Chuang, Zhuang 9065	Hebrew . . . . . 7269	Latvian . . . . . 7686	Oromo . . . . . 7977	Swedish . . . . . 8386	Z
Church Slavc,	Herero . . . . . 7290	Letzeburgesch . . . . . 7666	Ossetian, Ossetic 7983	Tagalog . . . . . 8476	Zulu . . . . . 9085
	Hindi . . . . . 7273	Limburchan, Limburger,		Tahitian . . . . . 8489	



## Limited Warranty 49

### MAGNAVOX LIMITED WARRANTY

#### Ninety (90) Days Free Product Exchange

MAGNAVOX warrants this product against defect in material or workmanship, subject to any conditions set forth as follows:

##### PROOF OF PURCHASE:

You must have proof of the date of purchase to exchange the product. A sales receipt or other document showing the product and the date that you purchased the product, as well as the authorized retailer included, is considered such proof.

##### COVERAGE:

Warranty coverage begins the day you buy the product. For a period of ninety (90) days from the date of purchase, if the product is determined to be defective, Magnavox will exchange the defective product with a new or renewed product, at its option, at no charge. The replacement product is covered only for the warranty period of the original product. When the warranty on the original product expires, the warranty on all replaced products also expires. When it is necessary for you to ship the product to Magnavox for exchange, you will pay the shipping cost for shipment to Magnavox. Magnavox will pay the shipping costs when returning a product to you.

Note: The exchange model supplied will be the most comparable one in Magnavox current inventory. Shipping of your product to Magnavox implies intent to follow the specified requirements of the warranty and exchange program. Product received by Magnavox cannot be returned. Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay of exchange process.

##### EXCLUDED FROM WARRANTY COVERAGE

Your warranty does not cover:

- Shipping charges to return defective product.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- Product repair and/or part replacement because of improper installation, connections to improper voltage supply, abuse, neglect, misuse, accident, unauthorized repair or other cause not within the control of Magnavox.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- Damage occurring to product during shipping when improperly packaged or cost associated with packaging.
- Product lost in shipment and no signature verification of receipt can be provided.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product sold AS IS or RENEW ED.

##### WHERE WARRANTY EXCHANGE IS AVAILABLE:

Exchange is available in all countries where Magnavox officially distributes the product. In countries where Magnavox does not distribute the product, the local Magnavox organization will attempt to exchange the product, although there may be a delay if the appropriate product is not readily available or special customs processes are implied.

##### FOR EXCHANGE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Magnavox Customer Care Center at:  
1-800-705-2000

##### FOR EXCHANGE IN CANADA...

1-800-661-6162 (French Speaking)  
1-800-705-2000 (English or Spanish Speaking)

 
 
 
REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. MAGNAVOX SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract agreement with the MAGNAVOX partnership within ninety (90) days of the date of sale, the limitation on how long an implied warranty lasts does not apply.

*This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.*


Magnavox, P.O. Box 520890, Miami, FL 33152 (402) 536-4171

EL6578ED01 / 01-04



## Information Index 51

 AC power cord	19	OK button	17
ANGLE button	17, 23	OPEN/CLOSE button	18
Angle Mark	43	OSD Language	42
Arrow ▲▼◀▶ buttons	17	Package contents	6
AUDIO button	17, 25	PAL	7, 36
AUDIO OUT (left/right) jacks	10-14, 19	PanScan	33
Battery installation	8	Parental levels	29
Brightness	35	Parental password	28
Camera angle	23	PAUSE button	17, 22
Chapter selection	20	PBC menu	20
Cleaning discs	6	PCM only	39
Closed Captions	42	Picture setting	35
COAXIAL DIGITAL OUT jack	15, 19, 39	PLAY button	16-17
Color systems	7, 36	PLAY/PAUSE button	18
Component Video	13	Playable discs	7
Contrast	35	Power ⏻ button	17
Defaults	44	PREV ◀◀ button	16-17, 20
Digital Output	39	Preview	31
DISC MENU button	17, 20	PREVIEW button	17, 20, 31
Disc menus	20	Program	30
Disc tray	16, 18	Progressive	37
DISPLAY button	17, 20, 22	Quick disc playback	16
Dolby Digital Setup	38, 40	Rear panel	19
Downmix	38	Reduce	23
D.R.C.	44	Region codes	7
Dual Mono	38	Remote control batteries	8
Dynamic	40	Remote control buttons	17
Environmental information	6	Remote sensor	18
Equalizer	41	Repeat	24
Fast forward and fast reverse	21	REPEAT button	17, 24
Features	6	Repeat A-B	24
Frame-by-frame playback	22	REPEAT A-B button	17, 24
Front panel	18	RETURN/TITLE button	17
Glossary	47	Reverb mode	41
Helpful Hints	45-46	RF modulator	10
Hookups	9-15	Safety information	4-5
Component Video	13	Scan	20
Composite or CVBS (yellow) video	11	Screen saver	43
Connecting to aTV and a digital stereo	15	Slow motion	21
Connecting to aTV and a two-channel stereo	14	Smart Picture	34
Determining the best possible connection	9	Smart Power	46
S-Video	12	Soft	34
TV has ANTENNA IN or RF IN jack only	10	Sound mode	41
Interlace	47	Specifications	48
JPEG	32	STANDBY-ON ⏻ button	18
Language codes	48	Still picture	22
Language settings		STOP button	17, 18
Audio	25	SUBTITLE button	17, 26
Disc menu	27	Subtitles	26
Player display	42	S-VIDEO (video out) jack	12, 19
Subtitles	26	SYSTEM MENU button	17
Letterbox	33	Time search	22
Limited warranty	49	Title menus	20
LPCM Output	40	Track selection	20
MP3	32	TV display	33
MUTE button	17	TV type	36
NEXT ▶▶ button	16-17, 20	VIDEO OUT jack	10, 11, 19
NTSC	7, 36	Warranty	49
Number buttons	17, 20	Widescreen (16:9)	33
		Y Pb Pr (Component video out) jacks	13, 19, 37
		Zoom	23
		ZOOM button	17, 23



**Philips Consumer Electronics North America**  
Knoxville, Tennessee 37914-1810, USA



This owner's manual is made of recyclable materials.  
Remember to recycle!

1B8466E002  
Printed in China



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>