

Quick Start Guide





Step A *Connect*

Step B *Setup*




Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

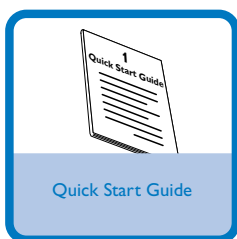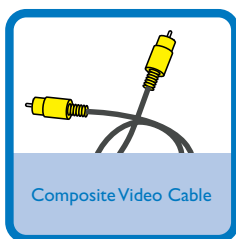

Remove the plastic protective sheet

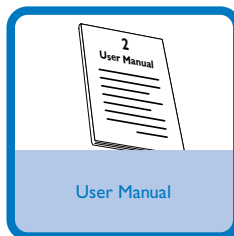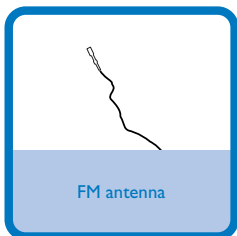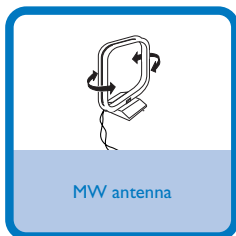

PHILIPS

Step A **Connect**

Tip

See the User Manual for other TV connection options.

1

Connect the speaker cables.

2



Connect the FM and MW antennas.

3


Connect the composite video cable to a TV.

4

Connect the power cords of the system and TV.

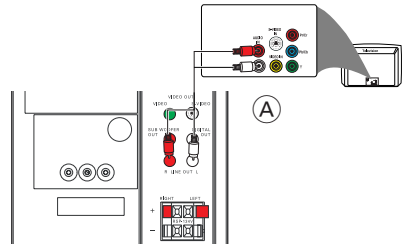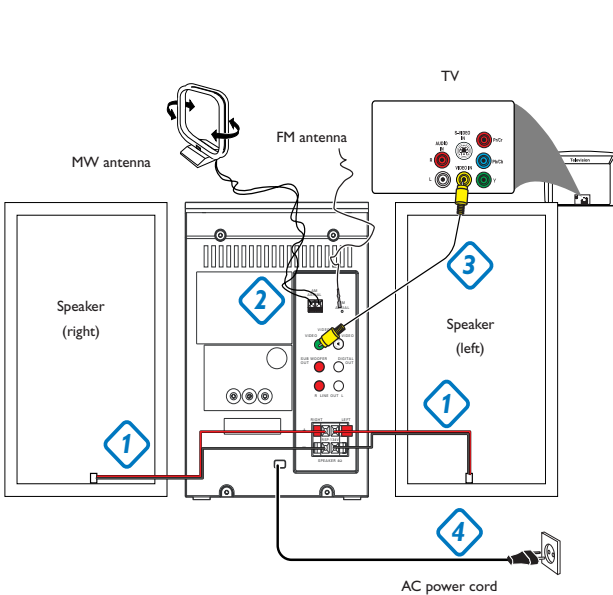

(A) To listen to the sound of this DVD Player through your TV, use the audio cables (white/red-not supplied) to connect **LINE OUT (L/R)** jacks of the DVD Player to the corresponding **AUDIO IN** jacks on the TV.

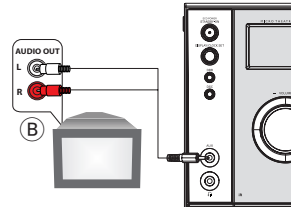

(B) To listen to the sound of your TV through this DVD player, use a cinch cable (not supplied) to connect **AUX** on the front panel of the DVD player to the corresponding **AUDIO OUT** jacks on the TV.

Step B **Setup**


Setting up the TV

1

Press **SOURCE (DISC on the remote)** to select disc source.

2


Turn on the TV and set it to the correct Video In channel.

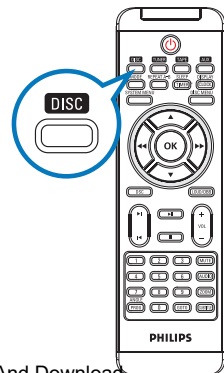





Step B Setup

Setting the clock

- 1 In standby mode, press and hold **DISPLAY/CLOCK SET** on the system.
- 2 When the hour digits flash, press **◀/▶** on the front panel or on the remote to set the hours.
- 3 Press **DISPLAY/CLOCK SET** again and the minute digits flash. Then press **◀/▶** on the front panel or on the remote to set the minutes.
- 4 Press **DISPLAY/CLOCK SET** again to confirm the time setting.

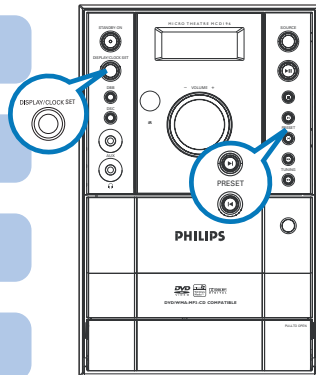


Setting system menu options

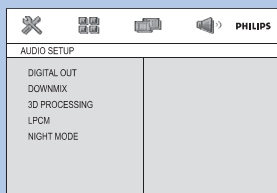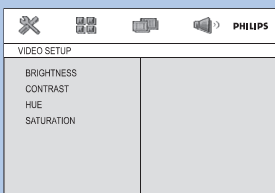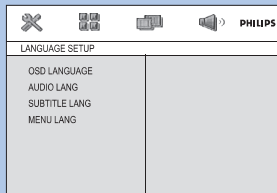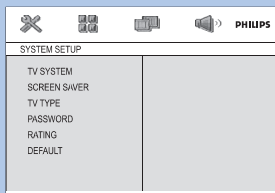

Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

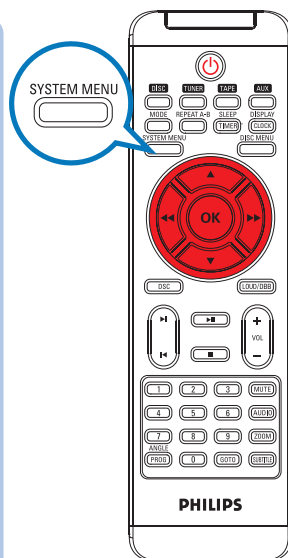



Playing a disc

1 Press **OPEN•CLOSE** to open the disc tray and load in a disc, then press the same button again to close the disc tray.
→ Make sure the label side of the disc is facing up.

2 Playback will start automatically. If not press **▶ ||**.

3 To stop playback, press **■**.

Programming and tuning to radio stations

1 Press **SOURCE** (**TUNER** on the remote) to select tuner source.

2 Press **PROG/ANGLE** for more than two seconds to program all available stations in order of waveband.

3 Press **PRESET** until the desired preset station is displayed.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>