

Quick Start Guide








Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

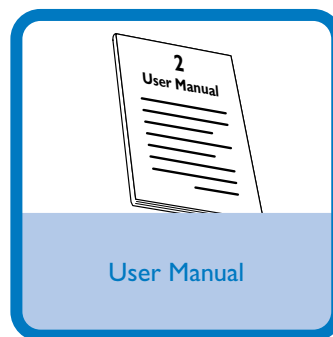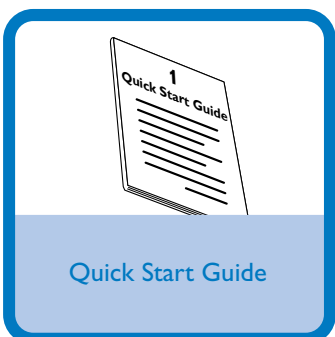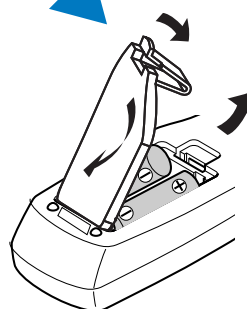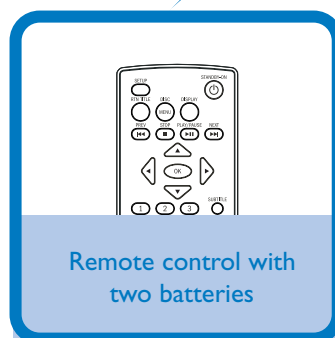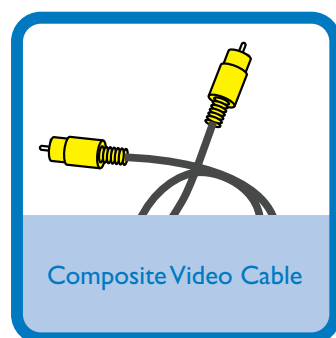

PHILIPS

Step A *Connect*


- 1 Connect the speaker cables.
- 2 Connect the audio cables.
- 3 Connect the composite video cable to a TV.
- 4 Connect the power supplies of the system, subwoofer and TV.

IMPORTANT!

– A separate power switch is provided on the front of the subwoofer. Please switch it on after completing all connections in order to enjoy 2.1-channel sound output.


Tip


– See the User Manual for other TV connection options.

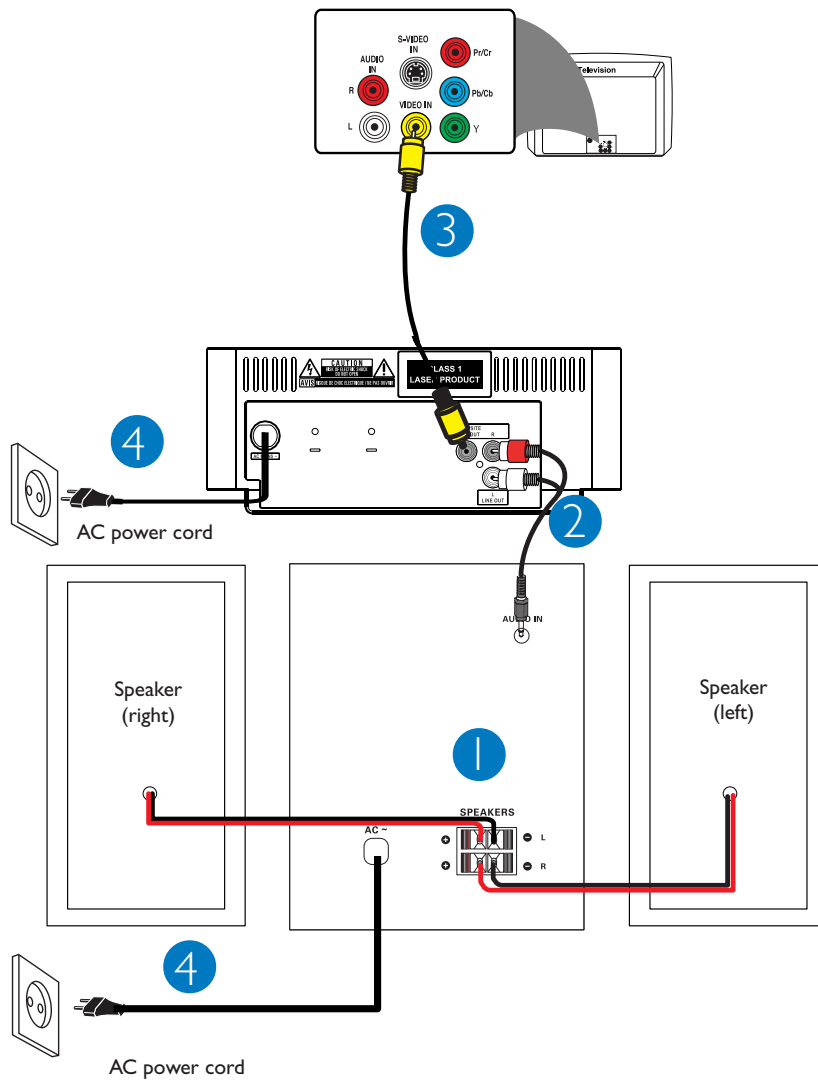

Step B Setup





Setting up the TV

- 1 Press **STANDBY-ON**  to turn the DVD player on.
- 2 Turn on the TV and set it to the correct Video In channel.

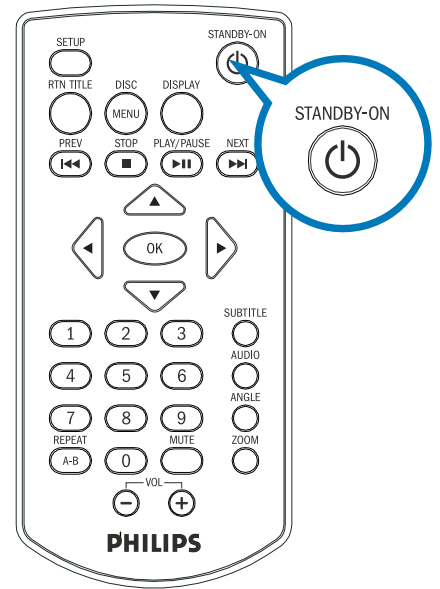

Step B Setup

Setting DVD menu options

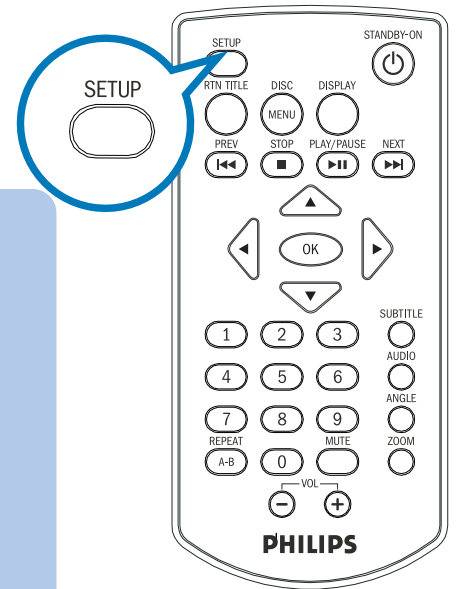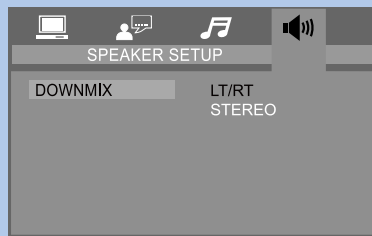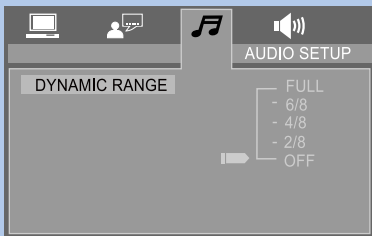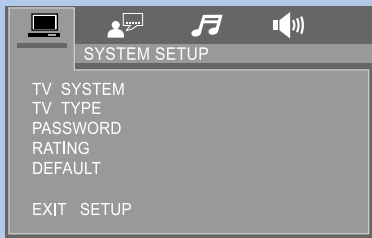

Tip

See chapters "Preparations" and "DVD Menu Options" in the User Manual for detailed descriptions.


Playing a disc

1 Push **OPEN•CLOSE** ▲ on the top of the system to open the disc door.

2 Insert a disc with the print side facing up and close the disc door.

3 Playback will start automatically. If not press ► ||.

4 To stop playback, press ■.

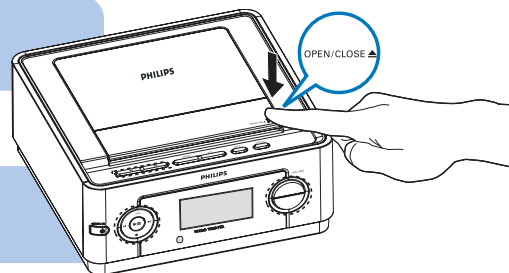


Tip

Detailed playback features and additional functions are described in the accompanied user manual.



© Royal Philips Electronics N.V. 2008
All rights reserved.

<http://www.philips.com>

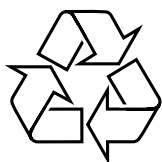

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>