



Register your product and get support at
www.philips.com/welcome

PhotoFrame

SPF4308
SPF4328
SPF4508
SPF4528



 
 
 
 
 
 
 
 
EN Quick start guide
ZH-CN 快速入门指南

© 2010 Koninklijke Philips Electronics N.V.
All rights reserved.



Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

V2.0

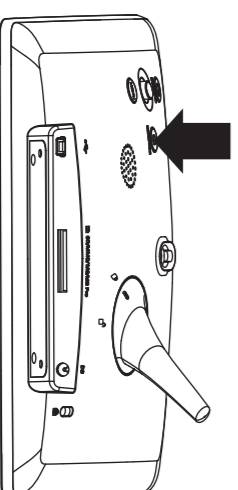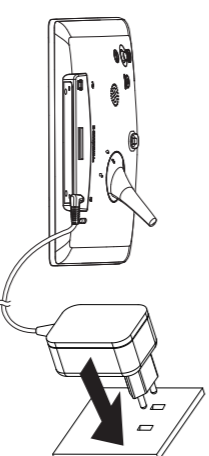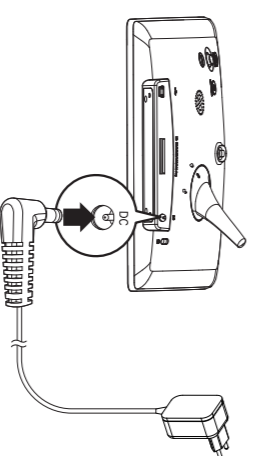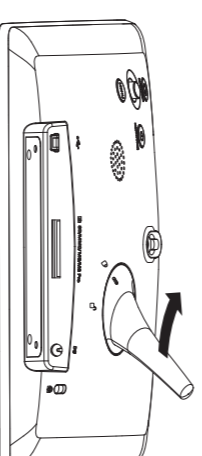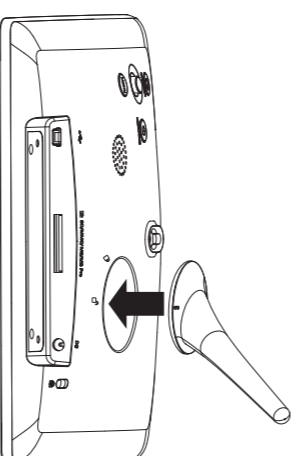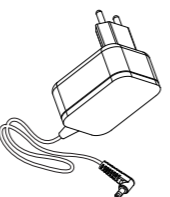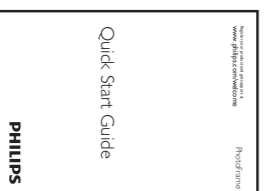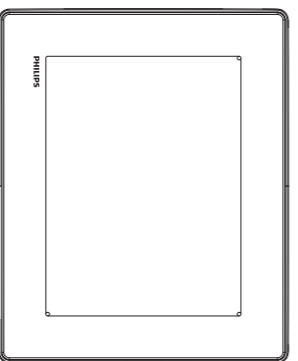




Printed in China




Know these buttons


Control Buttons	Functions
	- Press to turn on the PhotoFrame - Press and hold to turn off the PhotoFrame - Press to switch mode: slideshow/clock/calendar
	- Press to go back step by step - Press and hold to access the home screen
MENU	- Press to enter/exit a menu
OK (Joystick)	- Press to play, pause, or resume slideshow - Press to confirm a selection - Move up/down/right/left to select the upper/lower/right/left option



Know these keypad icons

	Input in English
	Input in supported European languages
	Input in Simplified Chinese
Русский	Input in Russian
\$#* / ABC	Switch to select symbols, punctuations, alphabet or numbers
aA	Switch between upper and lower case
	Enter a blank space
	Enter a line break

  
Startup

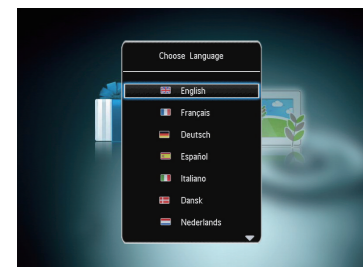

- 1 Connect the power cord to the DC socket of the PhotoFrame and then to a power supply socket.
↳ A few seconds later, the PhotoFrame turns on automatically.
- 2 Move the joystick up/down to select a language, and then press **OK**.
- 3 Move the joystick up/down/right/left to set time and date, and then press **OK**.
- 4 To start PhotoFrame, select [**Start PhotoFrame**] and then press **OK**.
- 5 To start slideshow, select [**Play**] and then press **OK**.
 - To pause slideshow, press **OK**.
 - To resume slideshow, press **OK** again.
 - To turn off the PhotoFrame, hold .

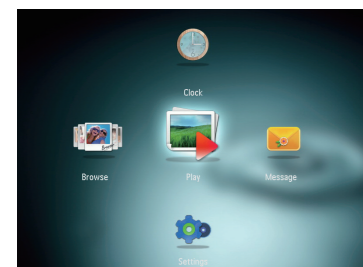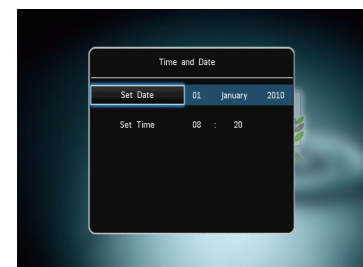  

 Transfer/Play media via a storage device

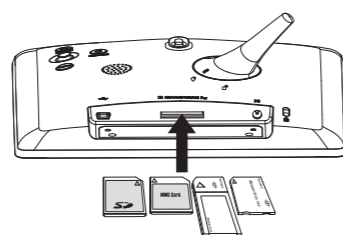

Note

- Videos and music are available only on SPF4508/SPF4528. For details on the supported media formats, see the digital User Manual in the supplied CD-ROM.

Media type supported:

 
- Photo (JPEG)
- Video clip (SPF4508/SPF4528)
- Background music (SPF4508/SPF4528)

Storage device supported:

- Secure Digital (SD)
- Secure Digital High Capacity (SDHC)
- Multimedia Card (MMC)
- Memory Stick (MS)
- Memory Stick Pro (MS Pro)

- 1 Insert a storage device into the PhotoFrame.
↳ An option menu is displayed.
- 2 Select an option, and then press **OK**.
- 3 Follow the on screen instructions to:
 - Play media on the storage device
 - Browse media on the storage device
 - Copy media on the storage device to PhotoFrame

View a created message

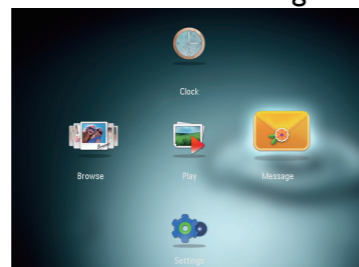



View a pop-up message:

If you have a pop-up message, the PhotoFrame prompts that you have a gift. Then, press **OK** to view the message.






View a message via the home screen:

- 1 In the home screen, select [**Message**] and then press **OK**.
- 2 Select [**View Message**], and then press **OK**.
- 3 Move the joystick right/left to select a message, and then press **OK** to view the message.

认识这些按钮

控制按钮	功能
	- 按下打开数码相框 - 按住关闭数码相框 - 按下切换模式: 幻灯片/时钟/日历
	- 按下逐步返回 - 按住进入主屏幕
MENU	- 按下进入/退出菜单
OK (操纵杆)	- 按下播放、暂停或恢复幻灯片放映 - 按下确认选择 - 向上/向下/向右/向左移动选择上面/下面/右边/左边的选项

 
认识这些键盘图标


	输入英语
	输入支持的欧洲语言
	输入简体中文
Русский	输入俄语
\$#* / ABC	切换选择符号、标点符号、字母或数字
aA	在大写字母和小写字母之间切换
	输入空格
	输入换行符

启动




- 1 将电源线连接到相框的 DC 插孔, 然后再连接到电源插座。
↳ 几秒钟后, 数码相框会自动打开。
- 2 向上/向下移动操纵杆选择语言, 然后按 **OK**。
- 3 向上/向下/向右/向左移动操纵杆设置时间和数据, 然后按 **OK**。
- 4 要启动数码相框, 请选择 [**启动相框**], 然后按 **OK**。
- 5 要开始幻灯片放映, 请选择 [**播放**], 然后按 **OK**。

 - 要暂停幻灯片放映, 请按 **OK**。
- 要继续幻灯片放映, 请再次按 **OK**。
- 要关闭数码相框, 请按住 .

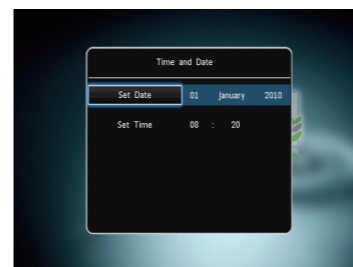

通过存储设备传输/播放媒体

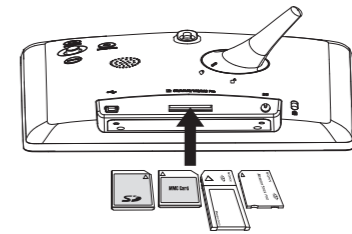 

注

- 视频和音乐仅适用于 SPF4508/SPF4528。有关支持的媒体格式的详情, 请参阅随光盘上的数字版本用户手册。

支持的媒体类型:

 
- 照片 (JPEG)
- 视频剪辑 (SPF4508/SPF4528)
- 背景音乐 (SPF4508/SPF4528)

支持的存储设备:

- SD 存储卡
- Secure Digital High Capacity (SDHC)
- MMC 卡
- Memory Stick (MS)
- Memory Stick Pro (MS Pro)

- 1 将存储设备插入数码相框。
↳ 将显示选项菜单。
- 2 选择一个选项, 然后按 **OK**。
- 3 按照屏幕上的说明执行以下操作:
 - 在存储设备上播放媒体
 - 在存储设备上浏览媒体
 - 将存储设备上的媒体复制到相框

查看创建的留言

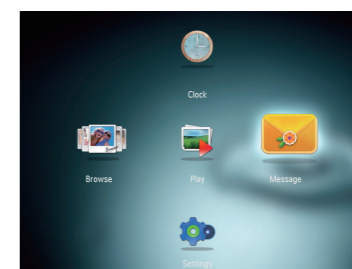

查看弹出留言:

如果收到弹出留言, 这是数码相框提醒您收到了礼物。此时按 **OK** 可查看留言。

通过主屏幕查看留言:

- 1 在主屏幕中, 选择 [**信息**], 然后按 **OK**。
- 2 选择 [**查看信息**], 然后按 **OK**。
- 3 向右/向左移动操纵杆选择留言, 然后按 **OK** 查看留言。

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>