

**Portable TV**

**PVD778**

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

User Manual





## Contents

1	General information.....	4
1.1	Safety .....	4
1.2	Unpacking.....	5
2	Overview of television keys and connectors.....	6
3	Getting started.....	8
3.1	Place the TV on a flat surface .....	8
3.2	Connect antenna.....	8
3.3	Connect AC power .....	9
3.5	Set OSD (On-Screen-Display) language.....	10
3.6	Set Area .....	10
3.7	Set TV channels.....	11
4	Further TV functions .....	11
4.1	Delete unwanted TV channel .....	11
4.2	Fine tuning.....	11
4.3	Adjust TV screen display .....	12
4.4	Other TV Settings .....	12
5	Connection .....	13
5.1	Headphone.....	13
5.2	Audio/Video input (e.g. Digital Camcorder) .....	13
6	Troubleshooting .....	14
7	Technical data.....	16

 
# 1 General information

**Congratulations on your purchase and welcome to Philips!**  
**To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).**


## 1.1 Safety

### 1.1.1 General

- 1 Place or mount the TV wherever you want but make sure that air can circulate freely through the ventilation slots.
- 2 Do not install the TV in a confined space such as a book case or a similar unit.
- 3 To prevent any unsafe situations, no naked flame sources such as lighted candles should be placed in the vicinity of the TV set. Avoid heat, direct sunlight and exposure to rain or water.



 - 4 As a safety precaution, do not touch any part of the TV, power lead or aerial lead during lightning storms.
- 5 Pull the power lead by the plug. Do not pull on the power lead. Do not use a poor fitting mains socket. Insert the plug fully into the mains. If it is loose, it may cause arcing and result in fire.




- 6 Take care not to connect too many equipment to the same mains socket as it may cause overloading resulting in fire or electric shock.
- 7 Avoid placing a vase or vases filled with water on top or near the TV. Water spilled into the set could result in electric shock. Do not operate set if water is spilled into the set. Unplug the power cord from the mains immediately and have the set checked by a qualified serviceman.
- 8 Installation of the TV set on the wall should be carried out by a qualified serviceman. Improper and incorrect installation may render the set unsafe.

### 1.1.2 Care of the screen

 - 1 Do not remove the protective sheet until you have completed the stand/wall mounting and connections. Please handle with care.
- 2 Do not use too wet a cloth which is dripping with water. Do not use acetone, toluene or alcohol to clean the TV. As a safety precaution, unplug the power cord from the mains when cleaning the set.

#### Note

**Use only the soft cloth provided to clean the glossy front of the TV.**



- 3 Do not touch, push or rub or strike the screen with anything hard as this may scratch, mar or damage the screen permanently.


## 1.2 Unpacking

 
First check and identify the contents of your package, as listed below:

- TV set
- Power adaptor (AY4195)
- User manual
- Auxilliary antenna

• Quick Start Guide

## 2 Overview of television keys and connectors

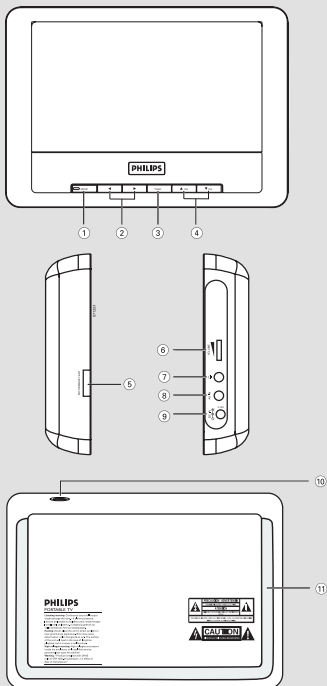


- ① **SETUP** : to display or exit menus.
- ② ◀ ▶ : to change value when a certain menu is selected.
- ③ **TV/AV** : to switch to AV mode or to resume TV mode
- ④ ▲ ▼ **CH** : to move cursor up/down to select menu items.
- ⑤ **POWER ON/OFF** : to switch the TV on and off. (Note: For zero power consumption, you need to remove the mains cord from the mains socket.)
- ⑥ **VOLUME** : to increase or decrease the volume.
- ⑦  : Headphone jack.
- ⑧ **AV IN** : Audio/Video input.
- ⑨ **DC IN** : Power supply socket.
- ⑩ **Antenna jack** : to connect antenna.
- ⑪ **Stand** : to place the TV set on a flat surface.

## 3 Getting started

 
### 3.1 Place the TV on a flat surface

Pull out the stand on the backside of the TV set.

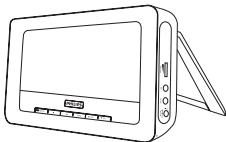

### 3.2 Connect antenna

 - 1 Insert the auxilliary antenna firmly into the antenna jack on the top side of the TV.
- 2 For optimal reception, pull out the auxilliary antenna to its full length and adjust it's direction (as far away as possible from VCR or other radiation sources).

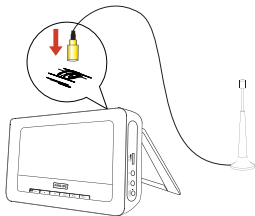


- For best reception, please connect PVD778 to the home antenna.
- Auxiliary antenna is used when there is excellent signal coverage. There is magnet at the bottom of the auxiliary antenna. Fix it onto a metallic surface.




### 3.3 Connect AC power

 Connect the supplied AC/DC adaptor to the DC IN jack of the TV and a power outlet.

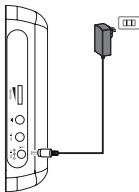

### 3.4 Switch on the TV

 To switch on the TV, slide the POWER ON OFF switch to ON position. The green LED beside the **SETUP** button lights up.

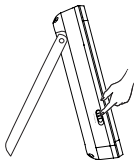

### 3.5 Set OSD (On-Screen-Display) language

- 1 Press **SETUP** repeatedly until the **SETUP** menu is highlighted.
- 2 Press **▲** or **▼** to select LANGUAGE.

TV MENU	
SETUP	PICTURE
LANGUAGE	ENGLISH
AREA	CHINA
AUTO SEARCH	
TV SYSTEM	PAL
TV SOUND	DK
FINETUNE	
DELETE CH	YES

- 3 Press **◀** or **▶** to select language.  
– *The selected OSD language will be applied immediately.*

### 3.6 Set Area

You need to select your country before starting to search for TV channel.

- 1 Press **SETUP** repeatedly until the **SETUP** menu is highlighted.
- 2 Press **▲** or **▼** to select AREA.

TV MENU	
SETUP	PICTURE
LANGUAGE	ENGLISH
AREA	CHINA
AUTO SEARCH	
TV SYSTEM	PAL
TV SOUND	DK
FINETUNE	
DELETE CH	YES

- 3 Press **◀** or **▶** to select your area: China, Russia, USA, India, Hongkong, Singapore.  
– *With the change of area, TV system (e.g. PAL, NTSC) and TV sound setting will be changed automatically. You can change TV system and TV sound settings manually by refer to chapter 4.4.*

## 3.7 Set TV channels

- 1 Press **SETUP** repeatedly until the **SETUP** menu is highlighted.
- 2 Press ▲ or ▼ to select **AUTO SEARCH**.

TV MENU	
SETUP	PICTURE
LANGUAGE	ENGLISH
AREA	CHINA
AUTO SEARCH	
TV SYSTEM	PAL
TV SOUND	DK
FINE TUNE	
DELETE CH	YES

- 3 Press ◀ or ▶ to start auto search.
  - *Auto channel search starts.*
- 4 When Auto channel search is complete, the screen displays the total number of TV channels found.
- 5 Press ▲ or ▼ to skip through the found channels.

## 4 Further TV functions

### 4.1 Delete unwanted TV channel

You can delete unwanted TV channel after Auto Search is completed.

- 1 Press ▲ or ▼ to select the unwanted channel.
- 2 Press **SETUP** repeatedly until **SETUP** menu is highlighted.
- 3 Press ▲ or ▼ to select **DELETE CHANNEL**.
- 4 Press ◀ or ▶ to select Yes or No.
  - *If YES is selected, the channel will be deleted.*

### 4.2 Fine tuning

 
If the received TV program is not clear enough, you may adjust TV frequency manually:

- 1 Press **SETUP** repeatedly until **SETUP** menu is highlighted.
- 2 Press ▲ or ▼ to select **FINE TUNE**.
- 3 Press ◀ or ▶ to start fine tuning.

## 4.3 Adjust TV screen display

You can adjust screen display ratio, brightness, contrast and color.

- 1 Press **SETUP** repeatedly until PICTURE menu is highlighted.



- 2 Press **▲** or **▼** to select one of the following items:  
**WIDE SCREEN** Allow you to set the display ratio to 4:3 or 16:9.  
**BRIGHT** Allow you to adjust brightness of the screen.  
**CONTRAST** Allow you to adjust contrast of the screen.  
**COLOR** Allow you to adjust the color of the screen.  
**RESET** Allow you to change the display settings back to factory default settings.
- 3 Press **◀** or **▶** to change value.

## 4.4 Other TV Settings

 
You can change TV system and TV sound settings manually.

- 1 Press **SETUP** repeatedly until **SETUP** menu is highlighted.
- 2 Press **▲** or **▼** to select one of the following items:  
**TV SYSTEM** You can select from PAL, SELAM, AUTO to NTSC.  
**TV SOUND** You can select from DK, 1, M, L, BG to DK.
- 3 Press **◀** or **▶** to select the preferred setting. Video Clip setup


## 5 Connection

### 5.1 Headphone

Connect the headphone to the headphone jack on the left side of the player.

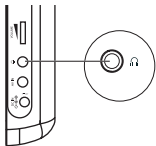

### 5.2 Audio/Video input (e.g. Digital Camcorder)

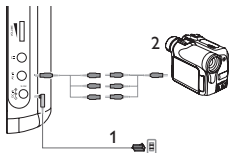 

## 6 Troubleshooting

If it appears that the TV is faulty, first consult this checklist. It may be that something has been overlooked.

**WARNING** Under no circumstances should you try to repair the set yourself as this will invalidate the guarantee. If a fault occurs, first check the points listed, before taking the set for repair. If you are unable to solve a problem by following these hints, consult your dealer or service centre.

Symptom	Remedy
No power	<ul style="list-style-type: none"><li>• Check if both plugs of the mains cord are properly connected.</li><li>• Check if there is power at the AC outlet by plugging in another appliance.</li></ul>
Distorted picture	<ul style="list-style-type: none"><li>• Sometimes a small amount of picture distortion may appear. This is not a malfunction.</li></ul>
No sound	<ul style="list-style-type: none"><li>• Check audio connections. If using a HiFi amplifier, try another sound source.</li></ul>
Loss of current TV programs when travelling to another country	<ol style="list-style-type: none"><li>1) Press <b>SETUP</b> &gt; <b>AREA</b> to select your country.</li><li>2) Select <b>Auto search</b>.</li></ol>
Cannot switch to AV-in or no signal	<ul style="list-style-type: none"><li>• Unplug the AV-in connection and plug in again.</li><li>• Check the connection from the AV output device, such as digital camera, video recorder, etc.</li><li>• Use the provided AV cable for connection.</li></ul>

<b>Symptom</b>	<b>Remedy</b>
Player feels warm	<ul style="list-style-type: none"><li>• When the player is in use for a long period of time, the surface will be heated. This is normal.</li></ul>
Display goes dimmer when AC is unplugged	<ul style="list-style-type: none"><li>• Adjust the brightness in the SETUP menu.</li></ul>
No/weak signal displayed on the screen	<ul style="list-style-type: none"><li>• TV signal is too weak or out of TV signal covering area.</li><li>• Make sure you are in an area with sufficient coverage.</li><li>• Receiving TV signal in a driving car may cause signal problems.</li></ul>

## 7 Technical data

TV system	PAL/SECAM/NTSC (45.25 - 863.75MHz)
Speaker	2 x 0.5W (RMS)
Dimensions	19 x 14 x 3.3cm 7.5 x 5.5 x 1.3 inches
Weight	0.5 kg /1.1 lb
Power supply	DC 12V 1A
Power consumption	≤ 10W
Operating temperature range	0 - 45°C (32 - 122°F)

**PHILIPS reserves the right to make design and specification changes for product improvement without prior notice.**

**Modifications not authorized by the manufacturer may void users authority to operate this device.**

**All rights reserved.**



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.








Meet Philips at the Internet  
<http://www.philips.com>



PVD778


 
## Addendum - Auxilliary antenna

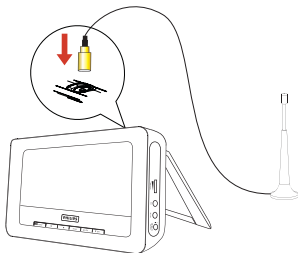

### Hints:

- 1 For best reception, please connect PVD778 to the home antenna.
- 2 Auxiliary antenna is used when there is excellent signal coverage.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>