

Quick Start Guide




What's in the Box?


You should find these items upon opening the box.

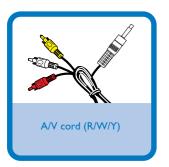

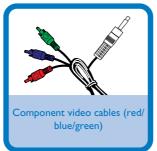

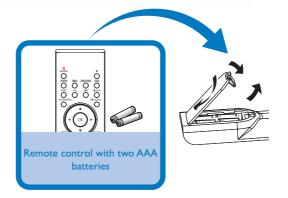





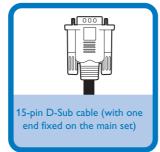





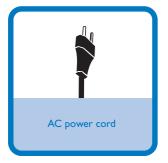

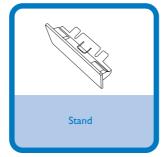






Step A Connect

Tips

- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan
 TV, refer to the user manual for proper connections and detailed setup.
- Never connect the AC power cord before connection of the 15-pin Sub cable to avoid causing any damage to the set.

- Connect the speaker (subwoofer) cables.
- Connect the FM antenna.
- Connect the A/V cord to a TV.
- Connect the power cords of the system and TV.

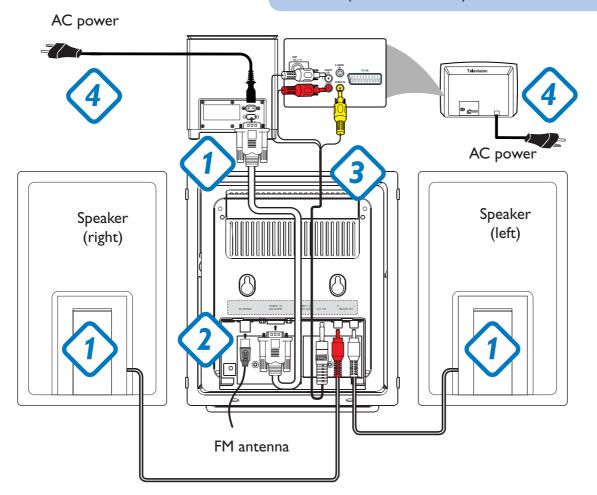

Step B Setup


Setting up the TV

0

Press **SOURCE** (**DISC** on the remote) to select disc source.

2

Turn on the TV and set it to the correct Video In channel.

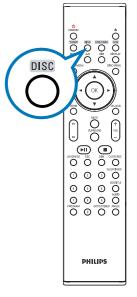



Setting the clock

IMPORTANT!

- To set clock in the Eco Power mode, press and hold STANDBY-ON/ECO POWER \circlearrowleft on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

0

In standby mode, press and hold CLOCK/RDS on the remote.

2


When the hour digits flash, press VOLUME-/+ (VOL+/- on the remote) to set the hours.

3

Press **CLOCK/RDS** again and the minute digits flash. Then press **VOLUME-/+** (**VOL+/-** on the remote) to set the minutes.

4

Press CLOCK/RDS again to confirm the time setting.

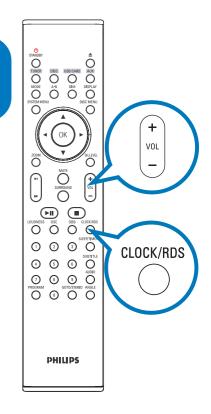

Setting DVD menu options


IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

1) Turn off your TV progressive scan mode or turn on to interlaced mode.

2) Press SYSTEM MENU on the remote to exit the system menu and then DISC to exit

progressive scan.

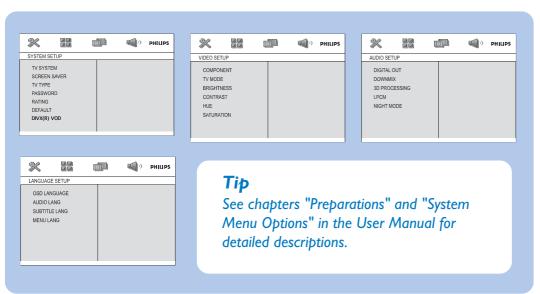



Playing a disc

Insert a disc into the slot loader.

- → Make sure the label side is facing you.
- → Make sure you have removed any other disc from the slot loader.

Playback will start automatically. If not press ▶ 11.

To stop playback, press ...



Programming and tuning to radio stations

Press **SOURCE** (**TUNER** on the remote) to select tuner source.

Press PROGRAM for more than two seconds to program all available stations in order of waveband.

Press **PRESET** / I until the desired preset station is displayed.

Playing a USB mass storage device


With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

Insert the USB device's USB plug into the socket on the set.



Press SOURCE once or more to select USB (or USB/CARD on the remote control).

Play the USB's audio files as you do with the albums/tracks on a CD,

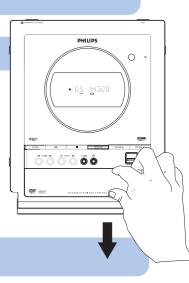

IMPORTANT! Slide down to expose some buttons and jacks on the front panel!



Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com