

Register your product and get support at
www.philips.com/welcome

DCB242



EN User Manual

PHILIPS

Contents

1	Important	5
	Notice	8
	Safety	5
<hr/>		
2	Your Docking Entertainment System	11
	Introduction	11
	Overview of the main unit	12
	Overview of the remote control	14
	What's in the box	11
<hr/>		
3	Get started	17
	Connect power	20
	Install batteries	17
	Prepare the remote control	18
	Set time and date	21
	Turn on	22
<hr/>		
4	Play	23
	Play from an external device	25
	Play from iPod/iPhone	23

5	Listen to radio	26
	Listen to Digital Audio Broadcasts (DAB)	26
	Listen to FM radio	30

6	Other features	33
	Adjust display brightness	36
	Set the alarm timer	33
	Set the sleep timer	35

7	Adjust sound	37
	Adjust volume level	37
	Enhance bass	37
	Select a preset sound effect	37

8	Product information	38
	Specifications	38

9	Troubleshooting	40
----------	------------------------	----

1 Important

Safety



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑩ Only use attachments/accessories specified by the manufacturer.
- ⑪ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑫ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- ⑬ **Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:**
- Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.
- ⑭ **Apparatus shall not be exposed to dripping or splashing.**
- ⑮ **Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).**
- ⑯ **Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.**
- ⑰ **Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.**



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

Notice



This product complies with the radio interference requirements of the European Community.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.



Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

2010 © Koninklijke Philips Electronics N.V. All rights reserved. Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

2 Your Docking Entertainment System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this unit, you can enjoy audio from the iPod, iPhone, other audio devices, or the FM/DAB radio.


The radio, iPod, or iPhone can be set as the alarm timer. You can set two alarm timers to go off at different time.


What's in the box

Check and identify the contents of your package:

- 1 x Main unit
- 1 x Remote control
- 1 x Power adaptor
- 1 x MP3 link cable
- 1 x User manual
- 1 x Quick start guide


Overview of the main unit

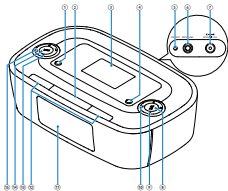

- ① 
 - Turn on the unit or switch to standby mode.
- ② **REPEAT ALARM/BRIGHTNESS CONTROL**
 - Repeat the alarm.
 - Adjust the display brightness.
- ③ **Dock for iPhone/iPod**
 - Load an iPhone/iPod.
- ④ **SOURCE**
 - Select a source: iPhone/iPod, DAB/FM tuner, or MP3 link.
- ⑤ **FM antenna**
 - Improve FM reception.
- ⑥ **MP3-LINK**
 - Jack for an external audio device.
- ⑦ **DC 9V**
 - Power supply socket.

- ⑧ **OK/▶||**
- Start or pause iPhone/iPod play.
 - Confirm selection.
- ⑨ **PRESET + ▲/PRESET - ▼**
- Select a preset radio station.
 - Navigate through the iPhone/iPod menu.
 - Adjust time.
- ⑩ **TUNING - ◀/TUNING + ▶**
- Skip to the previous/next audio file.
 - Search within an audio file.
 - Tune to a radio station.
 - Adjust time.
- ⑪ **Display panel**
- Show the current status.
- ⑫ **AL1/AL2**
- Set the alarm timer.
 - Turn off the alarm tone.
 - View alarm settings.
- ⑬ **VOL + ▲/VOL - ▼**
- Adjust volume.
- ⑭ **MENU**
- Select the iPhone/iPod menu.
 - Select the FM/DAB menu.
- ⑮ **SET TIME/AUTO SCAN ◀/SLEEP ▶**
- Set the clock and date.
 - Scan radio stations automatically.
 - Set the sleep timer.

Overview of the remote control

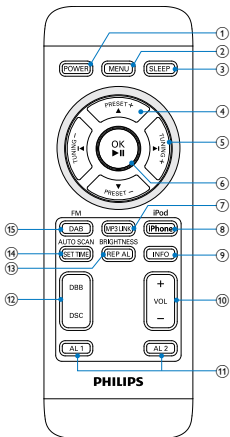

- 1 POWER**
 - Turn on the unit or switch to standby mode.
 - Deactivate the sleep timer.
- 2 MENU**
 - Select the iPhone/iPod menu.
- 3 SLEEP**
 - Set the sleep timer.

- ④ **PRESET + ▲/PRESET - ▼**
- Select a preset radio station.
 - Navigate through the iPhone/iPod menu.
 - Adjust time.
- ⑤ **TUNING - ◀/TUNING + ▶**
- Skip to the previous/next audio file.
 - Search within an audio file.
 - Tune to a radio station.
 - Adjust time.
- ⑥ **OK/▶ ||**
- Start or pause iPhone/iPod play.
 - Confirm selection.
- ⑦ **MP3 LINK**
- Select external audio device source.
- ⑧ **iPhone/iPod**
- Select iPhone or iPod source.
- ⑨ **INFO**
- Select different types of DAB station information.
 - In FM mode, select RDS information.
- ⑩ **+ VOL -**
- Adjust volume.
- ⑪ **AL 1/AL 2**
- Set the alarm timer.
 - Turn off the alarm tone.
 - View alarm settings.

- ⑫ **DBB**
- Turn on or off dynamic bass enhancement.
- DSC**
- Select a preset sound setting.
- ⑬ **REP AL/BRIGHTNESS**
- Adjust the display brightness.
 - Repeat the alarm.
- ⑭ **SET TIME/AUTO SCAN**
- Set the time and date.
 - Scan radio stations automatically.
- ⑮ **FM/DAB**
- Select the FM tuner/DAB source.

3 Get started



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence. If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the rear of the apparatus. Write the numbers here:

Model No. _____


Serial No. _____

Install batteries



Note

- You can only use AC power as power supply. Batteries (not supplied) are for backup purpose.

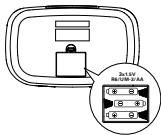

- 1 Open the battery compartment.
 - 2 Insert 3 x AA batteries with correct polarity (+/-) as indicated.
 - 3 Close the battery compartment.
-

Prepare the remote control




Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.

For first-time use:

- 1 Remove the protective tab to activate the remote control battery.

To replace the remote control batteries:

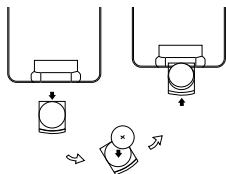

- 1 Open the battery compartment.
- 2 Insert one lithium CR2025 battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.



Note

- Before you press any function button on the remote control, first select the correct source with the remote control instead of the main unit.

Connect power



Caution


- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underside of the apparatus.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.
- Before connecting the AC adaptor, ensure that you have completed all other connections.
- Use the supplied AC power adaptor only.



Note

- The type plate is located on the bottom of the main unit.

- 1 Connect the AC power adaptor to:
 - the DC socket on the main unit
 - the power socket.

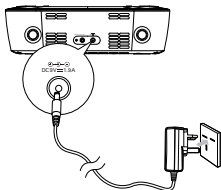

Set time and date

- 1 In standby mode, press and hold **SET TIME/AUTO SCAN** for 2 seconds.

 - ↳ **[SYNC ON]** is displayed and **[ON]** begins to blink.
- 2 Press **PRESET + ▲**/**PRESET - ▼** to select ON or OFF.

 - ↳ If you select **[ON]**, the unit reads the DAB station or iPhone/iPod time and sets the clock automatically.
 - ↳ If you select **[OFF]**, the unit turns off the time synchronization.
 - ↳ Press **SET TIME/AUTO SCAN** to confirm. The time format **[24H]** or **[12H]** begins to blink.

↳ 5 Press **SET TIME/AUTO SCAN** to confirm. The hour digits begin to blink.

- 6 Repeat steps 4-5 to set the hour, minute, year, month, and day.



Tip

- The accuracy of the transmitted time depends on the DAB station or the docked iPhone/iPod that transmits the time signal.

Turn on

- 1 Press **POWER** on the remote control.
- ↳ The unit switches to the last selected source.

Switch to standby

- 1 Press **POWER** again to switch the unit to standby mode.
- ↳ The time and date (if set) appear on the display panel.

4 Play

Play from iPod/iPhone

You can enjoy audio from iPod/iPhone through this unit.

Compatible iPod/iPhone

Apple iPod and iPhone models with a 30-pin dock connector:
Made for.


- iPod touch
- iPod classic
- iPod nano
- iPod with video
- iPod with color display
- iPod mini

Works with.


- iPhone
 - iPhone 3G
 - iPhone 3GS
-

Listen to the iPod/iPhone

- 1 Lift the iPhone/iPod dock cover on the top panel.

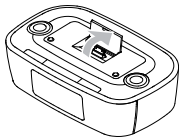

- 2 Place the iPhone/iPod into the dock.

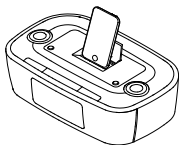

- 3 Press **iPHONE/iPOD** on the remote control to select iPod/iPhone source.

↳ The connected iPod/iPhone plays automatically.

- To pause/resume play, press **OK/▶ II**.
- To skip to a track, press **TUNING - I◀/TUNING + ▶I**.
- To search during play, press and hold **TUNING - I◀/TUNING + ▶I**, then release to resume normal play.
- To go back to the previous iPod/iPhone menu, press **MENU**. To scroll through the menu, press **PRESET + ▲/PRESET - ▼**. To confirm a selection, press **OK/▶ II**.

- ↳ If no key is pressed for more than 10 seconds, **OK/▶||** acts back as the play/pause key.
-

Charge the iPod/iPhone

When the unit is connected to power, the docked iPod/iPhone begins to charge.



Tip

- For certain iPod models, it may take up to a minute before the charging indication appears.

Play from an external device

You can also listen to an external audio device through this unit.

- 1 Press **MP3 LINK** to select the MP3 link source.
- 2 Connect the supplied MP3 link cable to:
 - the **MP3 LINK** jack (3.5mm) on the back of the unit.
 - the headphone jack on an external device.
- 3 Start to play the device (see the device user manual).

5 Listen to radio

Listen to Digital Audio Broadcasts (DAB)

Digital Audio Broadcasting (DAB), is a way of broadcasting radio digitally through a network of transmitters. It provides you with more choice, better sound quality, and more information.



- 1 Press **FM/DAB** repeatedly to select **DAB**.
 - ↳ The unit automatically scans DAB radio stations. The unit stores all available DAB radio stations and then broadcasts the first available station.
 - ↳ If no DAB service is available, **[NO SERV]** is displayed.

Scan DAB radio stations automatically

You can perform full scan to search for DAB radio stations.

- 1 In DAB mode, press and hold **SET TIME/AUTO SCAN** for more than 3 seconds.
 - ↳ The unit scans all available DAB radio stations and broadcasts the first available station.

Program DAB radio stations manually





- 1 Tune to a DAB radio station.
- 2 Press **SET TIME/AUTO SCAN** to activate the program mode.
- 3 Press **TUNING -** /TUNING +  to select a number.
- 4 Press **SET TIME/AUTO SCAN** to confirm.
- 5 Repeat the above steps to program other stations.



Note

- To overwrite a programmed station, store another station in its place.

Listen to a preset DAB radio station

- 1 In DAB mode, press **TUNING -** /TUNING +  to select a DAB radio station.
- 2 Press **OK**   to confirm.



Note

- If there is no DAB radio station available, steps mentioned above is invalid.

Show DAB information

- 1 During listening to DAB radio, press **INFO** repeatedly to scroll through the following information (if available):
 - ↳ Dynamic Label Segment (DLS)
 - ↳ Signal strength
 - ↳ Program type (PTY)
 - ↳ Ensemble Name
 - ↳ Channel and frequency
 - ↳ Signal error rate
 - ↳ Bit rate and audio status
 - ↳ Date

Perform more functions through DAB menu

- 1 In DAB mode, press and hold **MENU** to enter the DAB menu.
- 2 Press **TUNING -** / **TUNING +** to select:
 - **[MANUAL]** (tune manually)
 - **[SCAN]** (tune automatically)
 - **[DRC]** (dynamic range control)
 - **[TUNERRST]** (tuner reset)
 - **[VERSION]** (display software version)
- 3 If you select **[DRC]**, press **OK** to confirm, and then press **TUNING -** / **TUNING +** to select:

- **[DRC 0]:** Dynamic Range Control is switched off.
- **[DRC 1/2]:** Dynamic Range Control is set to half normal level.
- **[DRC 1]:** Dynamic Range Control is switched on; the default setting recommended for noisy environment.

4 Press **OK/▶||** to confirm.

To reset the tuner:

- 1 Follow steps 1-2 above to select **[TUNERRST]**.
- 2 Press **OK/▶||** to confirm, and then press **TUNING - ◀/TUNING + ▶** to select:
 - **[NO]:** Cancel.
 - **[YES]:** Reset the tuner.
- 3 Press **OK/▶||** to confirm.



Note

- If no button is pressed within 10 seconds, the menu exits.



Tip

- Dynamic range control (DRC) adds or removes a degree of compensation for the differences in the dynamic range between radio stations.

Listen to FM radio

Tune to a radio station



Tip

- Position the antenna as far as possible from TV, VCR or other radiation source.
- For optimal reception, do not place iPhone/iPod into the dock when you listen to the radio.



Note

- For optimal reception, fully extend and adjust the position of the antenna.

- 1 Press **FM/DAB** to select FM tuner.
- 2 Press and hold **TUNING - ◀**/TUNING + **▶** for more than 2 seconds.
 - ↳ The radio tunes to a station with strong reception automatically.
- 3 Repeat step 2 to tune to more stations.
 - To tune to a weak station, press **TUNING - ◀**/TUNING + **▶** repeatedly until you find optimal reception.



Program radio stations automatically

You can program a maximum of 20 preset radio stations.

- 1 In the tuner mode, press and hold **SET TIME/AUTO SCAN** for more than 2 seconds to activate automatic program mode.
 - ↳ The unit starts to search for radio stations.
 - ↳ All available stations are programmed in the order of waveband reception strength.
 - ↳ The first programmed radio station is broadcast automatically.

Program FM radio stations manually

You can program a maximum of 20 preset radio stations.

- 1 Tune to a radio station.
- 2 Press **SET TIME/AUTO SCAN** to activate the program mode.
- 3 Press **TUNING -** / **TUNING +**  to select a number.
- 4 Press **SET TIME/AUTO SCAN** to confirm.
- 5 Repeat the above steps to program other stations.



Tip

- To overwrite a programmed station, store another station in its place.

Listen to a preset radio station

- 1 In tuner mode, press **PRESET + ▲**/**PRESET - ▼** to select a preset number.

Show RDS information

RDS (Radio Data System) is a service that allows FM stations to show additional information. If you tune to a RDS station, the station name is displayed.

- 1 Tune to a RDS station.
- 2 Press **INFO** repeatedly to scroll through the following information (if available):
 - ↳ Station name
 - ↳ Radio text messages
 - ↳ Program type such as [NEWS] (news), [SPORT] (sport), [POP M] (pop music)...
 - ↳ Frequency

6 Other features

Set the alarm timer

You can set two alarms which go off at different time.

- 1 Ensure that you have set the clock correctly. (See "Get started - Set time and date".)
- 2 Press and hold **AL1** or **AL2** for 2 seconds.
 - ↳ The [AL1] or [AL2] icon and the hour digits begin to blink.
- 3 Press **TUNING -** | ◀ / **TUNING +** | ▶ to set the hour.
- 4 Press **AL1** or **AL2** to confirm.
 - ↳ The [AL1] or [AL2] icon and the minute digits begin to blink.
- 5 Repeat steps 3-4 to set the minute.
- 6 Repeat steps 3-4 to select whether to ring alarm the whole week, on weekdays, or at weekend.
- 7 Repeat steps 3-4 to select an alarm sound source: Buzzer, iPhone, FM, or DAB.
- 8 Repeat steps 3-4 to set the alarm volume.

Turn on/off the alarm timer



Note

- Ensure that you already set the alarms successfully.

- 1 Press **AL1/AL2** to turn on or off the alarm timer.
 - ↳ If the alarm timer is turned on, the alarm icon appears.
 - ↳ If the alarm timer is turned off, the alarm icon disappears.

Repeat alarm

- 1 When the alarm rings, press **REP AL/BRIGHTNESS**.
 - ↳ The alarm repeats ringing minutes later.



Tip

- You can press **TUNING - ◀/TUNING + ▶** to adjust interval (5-30 minutes) to repeat alarm.

Stop alarm ring

- 1 When the alarm rings, press the corresponding **AL1** or **AL2**.
 - ↳ The alarm stops but the alarm settings remain.

View the alarm settings

- 1 Press **AL1** or **AL2**.

Set the sleep timer

This unit can switch to standby automatically after a set period of time.

- 1 Press **SLEEP** repeatedly to select a set period of time (in minutes).
 - ↳ When the sleep timer is activated, the display shows **z^z**.

To deactivate sleep timer

- 1 Press **SLEEP** repeatedly until **[OFF]** (off) is displayed.
 - ↳ When the sleep timer is deactivated, **z^z** disappears on the display.

Adjust display brightness

- 1 Press **REP AL/BRIGHTNESS** repeatedly to select different levels of display brightness.

7 Adjust sound

Adjust volume level

- 1 During play, press + **VOL** - to increase/decrease the volume level.
-

Select a preset sound effect

- 1 During play, press **DSC** repeatedly to select:
 - **[POP]** (pop)
 - **[CLASSIC]** (classic)
 - **[JAZZ]** (jazz)
 - **[FLAT]** (flat)
 - **[ROCK]** (rock)
-

Enhance bass

- 1 During play, press **DBB** to turn on or off dynamic bass enhancement.
↳ If DBB is activated, **[DBB]** is displayed.

8 Product information



Note

- Product information is subject to change without prior notice.

Specifications

Amplifier

Rated Output Power	2 x 5 W RMS
Frequency Response	20 -20000 Hz, -3dB
Signal to Noise Ratio	>67 dB
Total Harmonic Distortion	<1%
Aux Input (MP3 link)	0.5 V RMS 20kohm

Tuner (FM)

Tuning range	87.5 - 108 MHz
Tuning grid	50 KHz
Sensitivity	
- Mono, 26dB S/N Ratio	<22 dBu
- Stereo, 46dB S/N Ratio	<43 dBu

Search Selectivity	>28 dBf
Total Harmonic Distortion	<2%
Signal to Noise Ratio	>55 dB

Tuner (DAB)

DAB tuning range	174.92-----239.20MHz
------------------	----------------------

General information

AC power (Power adaptor)	Input: 100-240V~, 50/60Hz, 0.7A; Output: 9.0V === 1.9A; Brand name: Philips; Model No.: AS190-090-BI190
Operation Power Consumption	15 W
Standby Power Consumption	<1 W
Dimensions	
- Main Unit (W x H x D)	280 x 82 x 170 mm
Weight	
- Main Unit	1.09 kg

9 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/welcome). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- Ensure that the batteries are inserted correctly.

No sound

- Adjust the volume.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.

Poor radio reception

- Increase the distance between the unit and your TV or VCR.
- Fully extend the FM antenna.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

Clock/timer setting erased

- Power has been interrupted or the power plug has been disconnected.
- Reset the clock/timer.



© 2010 Koninklijke Philips Electronics N.V.

All rights reserved.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>