

Register your product and get support at
www.philips.com/welcome

DC190



EN

User manual

1 Important

Safety

Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑩ Only use attachments/accessories specified by the manufacturer.
- ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution



when moving the cart/apparatus combination to avoid injury from tip-over.

- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑭ Apparatus shall not be exposed to dripping or splashing.
- ⑮ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑯ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.
- ⑰ Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Recycling

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

2 Your Docking Entertainment System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this unit, you can enjoy audio from the iPod, other audio devices, or the radio.

 
The radio, iPod, or buzzer can be set as the alarm timer. You can set two alarm timers to go off at different times.

What's in the box

Check and identify the contents of your package:


- Main unit
- 1 x AC adaptor
- 1 x MP3 link cable
- User manual
- Quick start guide

Overview of the main unit

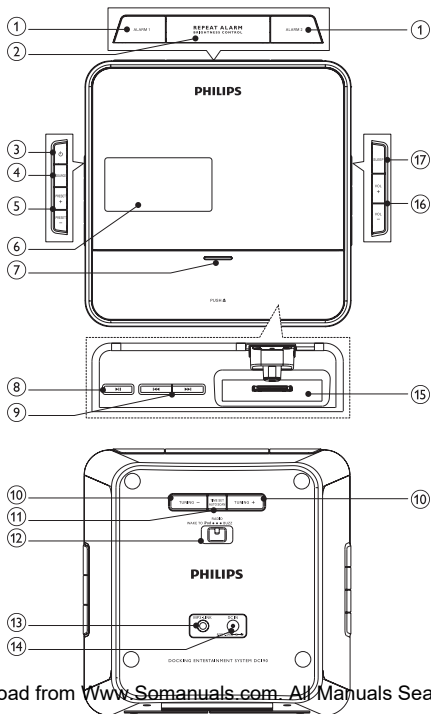

- ① **ALARM 1/ALARM 2**
- Set the alarm timer.
 - View the alarm time.
 - Turn off the alarm tone.

- ② **REPEAT ALARM/BRIGHTNESS CONTROL**
- Repeat the alarm.
 - Adjust the display brightness.


- ③ 
- Turn on the unit or switch to standby mode.


- ④ **SOURCE**
- Select a source: iPod, FM tuner or MP3 link.

- ⑤ **PRESET +/-**
- Select a preset radio station.
 - Adjust time.

- ⑥ **Display panel**
- Show current status.

- ⑦ **Dock compartment**

- ⑧ 
- Start or pause iPod play.

- ⑨ 
- Skip to the previous/next audio file.
 - Search within an audio file.

- ⑩ **TUNING +/-**
- Tune to a radio station.
 - Adjust time.

- ⑪ **TIME SET/AUTO SCAN**
- Set the clock.

- ⑫ **WAKE TO iPod/RADIO/BUZZ**
 - Select alarm mode.
- ⑬ **MP3-LINK**
 - Jack for an external audio device.
- ⑭ **DC IN**
 - Power supply socket.
- ⑮ **iPod dock**
 - Load an iPod player.
- ⑯ **VOL +/-**
 - Adjust volume.
 - Adjust time.
- ⑰ **SLEEP**
 - Set the sleep timer.

3 Get started



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No. _____

Serial No. _____

Connect power



Caution

 
- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underside of the apparatus.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.
- Before connecting the AC adaptor, ensure you have completed all other connections.




Note

- The type plate is located on the bottom of the main unit.

- 1 Connect one end of the AC adaptor to the **DC IN** socket on the main unit.

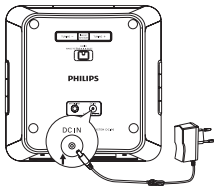

 - 2 Connect the other end of the AC adaptor to the wall outlet.

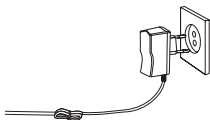


Set clock

- 1 In standby mode, press and hold **TIME SET/AUTO SCAN** for 2 seconds.
↳ The hour digits begin to blink.
- 2 Press **TUNING +/-** to set the hour.
- 3 Press **TIME SET/AUTO SCAN**.
↳ The minute digits begin to blink.
- 4 Press **TUNING +/-** to set the minute.
- 5 Press **TIME SET/AUTO SCAN** to confirm.
↳ The week day digits begin to blink.
- 6 Press **TUNING +/-** to set the week day.
- 7 Press **TIME SET/AUTO SCAN** to confirm.

Turn on

- 1 Press **⏻**.
↳ The unit switches to the last selected source.

Switch to standby

- 1 Press  again to switch the unit to standby mode.
↳ The clock (if set) appears on the display panel.
-

Adjust volume

- 1 During play, press **VOL +/-** to increase/decrease the volume.

4 Play

Play from iPod

You can enjoy audio from iPod through this unit.

 
Compatible iPod

Apple iPod models with a 30-pin dock connector:


- iPod classic, iPod touch, iPod nano, iPod 5th generation (video), iPod with color display, iPod mini.
-

Load the iPod

- 1 Push to open the dock compartment.

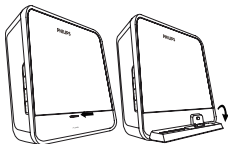

- 2 Place the iPod in the dock.

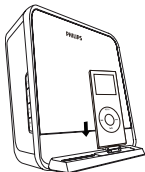 

Remove the iPod

- 1 Pull the iPod out of the dock.

Listen to the iPod

- 1 Ensure that the iPod is loaded correctly.
- 2 Press **SOURCE** repeatedly to select iPod source.
- ↳ The connected iPod plays automatically.
 - To pause/resume play, press ►||
 - To skip to a track, press |◀◀▶▶|.
 - To search during play, press and hold |◀◀▶▶|, then release to resume normal play.

Charge the iPod

When the unit is connected to power, the docked iPod begins to charge.

Play from an external device

You can also listen to an external audio device through this unit.

- 1 Press **SOURCE** repeatedly to select MP3 link source.
- 2 Connect the supplied MP3 link cable to:
 - the **MP3-LINK** jack (3.5mm) on the back of the unit.
 - the headphone jack on an external device.
- 3 Start to play the device (see the device user manual).

5 Listen to radio



Note

- Only FM radio reception is available on this unit.

Tune to a radio station



Tip

- Position the antenna as far as possible from TV, VCR or other radiation source.
- For optimal reception, fully extend and adjust the position of the antenna.

- 1 Press **SOURCE** repeatedly to select FM tuner.
- 2 Press and hold **TUNING +/-** for more than 2 seconds.
 - ↳ The radio tunes to a station with strong reception automatically.

- 3 Repeat step 2 to tune to more stations.
 - To tune to a weak station, press **TUNING +/-** repeatedly until you find optimal reception.

Program radio stations automatically

You can program a maximum of 20 preset radio stations.

- 1 In the tuner mode, press and hold **TIME SET/AUTO SCAN** for more than 2 seconds to activate automatic program mode.
 - ↳ All available stations are programmed in the order of waveband reception strength.
 - ↳ The first programmed radio station is broadcast automatically.

Program radio stations manually

You can program a maximum of 20 preset radio stations.

- 1 Tune to a radio station.
- 2 Press **TIME SET/AUTO SCAN** to activate the program mode.
 - ↳ The preset number begins to blink.
- 3 Press **PRESET +/-** to select a number.
- 4 Press **TIME SET/AUTO SCAN** to confirm.
- 5 Repeat the above steps to program other stations.



Note

- To overwrite a programmed station, store another station in its place.





Select a preset radio station

- 1 Press **PRESET +/-** to select a preset number.

6 Other features

Set the alarm timer

You can set two alarms which go off at different time.

- 1 Ensure that you have set the clock correctly.
- 2 Press and hold **ALARM 1** or **ALARM 2** for 2 seconds.
↳  **1** or  **2** and hour digits begin to blink.
- 3 Press **TUNING +/-** repeatedly to set the hour.
- 4 Press **ALARM 1** or **ALARM 2** to confirm.
↳  **1** or  **2** and minute digits begin to blink.
- 5 Repeat steps 3-4 to set the minute.
- 6 Repeat steps 3-4 to select whether to ring alarm on weekdays or at weekend.
↳ "L XX(volume level)" begins to blink.
- 7 Repeat steps 3-4 to set the maximum alarm volume.

Set alarm mode






- 1 Adjust the **WAKE TO iPod/RADIO/BUZZ** control to select the source for the alarm.
↳ When the alarm time comes, the selected iPod, radio or buzzer turns on.



Tip

- If iPod source is selected but no iPod is loaded, the buzzer is selected automatically.

Activate and deactivate the alarm timer

- 1 Press **ALARM 1** or **ALARM 2** repeatedly to activate the timer.
 - ↳ If the timer is activated,  or  is displayed.
 - To deactivate the alarm time, press **ALARM 1** or **ALARM 2** repeatedly until  is displayed.
 - ↳ If the timer is deactivated,  or  disappears.

Repeat alarm

- 1 When the alarm rings, press **REPEAT ALARM/BRIGHTNESS CONTROL**.
 - ↳ The alarm repeats ringing minutes later.



Tip

- You can press **TUNING+/-** to adjust interval to repeat alarm.

Stop alarm ring

- 1 When the alarm rings, press the corresponding **ALARM 1** or **ALARM 2**.
 - ↳ The alarm stops but the alarm settings remain.

View the alarm settings

- 1 Press **ALARM 1** or **ALARM 2**.

Set the sleep timer

This unit can switch to standby automatically after a set period of time.

- 1 Press **SLEEP** repeatedly to select a set period of time (in minutes).
↳ When the sleep timer is activated, the display shows **zZz**.



Tip

- When the sleep timer is activated, the volume will gradually decrease.

To deactivate sleep timer

- 1 Press **SLEEP** repeatedly until **[OFF]** (off) is displayed.
↳ When the sleep timer is deactivated, **zZz** disappears on the display.

Adjust display brightness

- 1 Press **BRIGHTNESS CONTROL** repeatedly to select different levels of display brightness.

7 Product information



Note

- Product information is subject to change without prior notice.

Specifications

Amplifier

Rated Output Power	2X1.5 W RMS
Signal to Noise Ratio	>55 dB
MP3 Link	0.6 V RMS 10 kohm

Tuner

FM

Tuning Range	87.5 - 108 MHz
Tuning grid	50 KHz
Sensitivity	
- Mono, 26dB S/N Ratio	<22 dBu
- Stereo, 46dB S/N Ratio	<45 dBu
Search Selectivity	<28 dBu
Total Harmonic Distortion	<3%
Signal to Noise Ratio	>45 dB

General information

AC power (power adaptor)	Input: 100-240V~, 50/60Hz, 0.5A; Output: 6.5V $\overline{\text{---}}$ 1.3A; Brand name: Philips; Model No.: AS100-065-AB130
Operation Power Consumption	<5W
Standby Power Consumption	<2W
Dimensions	
- Main Unit (W x H x D)	144 x 144 x 62 mm
Weight	
- Main Unit	0.44 kg

8 Troubleshooting



Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/welcome). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.

No sound

- Adjust the volume.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.

Poor radio reception

- Increase the distance between the unit and your TV or VCR.
- Fully extend the FM antenna.

Timer does not work

- Set the clock correctly.
- Switch on the timer.

Clock/timer setting erased

- Power has been interrupted or the power plug has been disconnected.
- Reset the clock/timer.

部件名称 Name of the Parts	有毒有害物质或元素 Hazardous/toxic Substance					
	铅 (Pb, Lead)	汞 (Hg, Mercury)	镉 (Cd, cadmium)	六价铬 (Chromium 6+)	多溴 联苯 (PBB)	多溴二 苯醚 (PBDE)
Housing 外壳	O	O	O	O	O	O
PWBs 电路板组件	X	O	O	O	O	O
Accessories (Remote control & cables) 附件 (遥控器, 电源线, 连接线)	X	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363 - 2006 标准规定的限量要求以下。

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363 - 2006.

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363 - 2006 标准规定的限量要求。

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363 - 2006.



环保使用期限 Environmental Protection Use Period

此标识指期限（十年），电子信息产品含有的有毒有害物质或元素在正常使用的条件下不会发生外泄或突变，用户使用该电子信息产品不会对环境造成严重污染或对其人身、财产造成严重损害的期限。

This logo refers to the period (10 years) during which the toxic or hazardous substances or elements contained in electronic information products will not leak or mutate so that the use of these [substances or elements] will not result in any severe environmental pollution, any bodily injury or damage to any assets.



© 2009 Koninklijke Philips Electronics N.V.

All rights reserved.

Download from www.Somanuals.com. All Manuals Search And Download

DC190_93_UM_V1.2



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>