

便携式 DVD 播放器

PET704

用户手册
User manual

PHILIPS

Be responsible
Respect copyrights

说明书会随时修改，恕不另行通知。商标归荷兰皇家飞利浦电子股份有限公司及其相关所有者所有。

2007 © 荷兰皇家飞利浦电子股份有限公司。版权所有。

飞利浦（中国）投资有限公司

上海天目西路 218 号办公楼 22 楼

邮编 200070

企业标准令代号：Q/320412 GBK/C143-2005

客服服务热线：4008 800 008

http://www.philips.com



中国印刷

wk7413

一般信息

电源

本装置使用提供的交流电话适配器、汽车适配器或可充电电池组。

- 确定交流电话适配器的输入电压与当地电压相符。否则，可能损坏交流电话适配器和本装置。
- 光盘避免直接受阳光照射或远离热源。
- 播放时存放光盘于光盘盒（套）中。
- 使用柔软、不含油的干净布从里向外清洁光盘。

• 与汽车电源（点烟器）适配器连接时，确定适配器输入电压与汽车电源电压一致。

• 长时间不使用本装置时从电源插座拔出交流电话适配器或移除电池。

• 握住插头来断开交流电话适配器。切勿拉电源卡。

- 安全和维护
- 激光射线对眼睛有害，切勿拆开本装置。
- 如果液体或杂质进入本装置内部，拔掉交流电话适配器切断电源。
- 小心勿将本装置或光盘受到强烈震动。这样会导致故障。
- 不要在过热场所（如加热设备附近）放置光盘以免阳光直接照射。
- 严禁用水：切勿将光盘放入水盆中。播放器中进水会造成严重损坏。

- 切勿使用任何含有酒精、氨基、苯或研磨剂的清洁剂，这些可能损伤光盘。
- 设备不能受到液体滴洒，切勿放置任何可能导致危险的物体于设备上（如底部液体的物体、点燃的蜡烛）。
- 切勿触摸镜头！

注意：长时间使用播放器，其表面会发热，这是正常现象。

未经授权对任何从互联网下载记录或对CD/VCD/DVD的复制是违反版权法规和国际条约的行为。

本设备不应当被用于以上行为。

说明书会随时修改，恕不另行通知。商标归荷兰皇家飞利浦电子股份有限公司及其相关所有者所有。

2007 © 荷兰皇家飞利浦电子股份有限公司。版权所有。

飞利浦（中国）投资有限公司

上海天目西路 218 号办公楼 22 楼

邮编 200070

企业标准令代号：Q/320412 GBK/C143-2005

客服服务热线：4008 800 008

http://www.philips.com



准备

Digital Audio Out (数字音频输出)



- 提示
- 您也可以使用同轴插孔进行数字音频输出。
- 关于连接的更多信息请参阅您的附加设备的用户手册。
- 播放器支持 NTSC/PAL/AUTO 电视机。

一般说明

本手册提供了操作本 DVD 播放器的基本说明。但是一些 DVD 光盘播放时需用特殊方式操作或只允许有限的操作命令。在这些情况下，播放器可能不会响应所有的操作命令。这类情况发生时，请参照光盘说明。当屏幕上出现 **OK** 图标时，播放器或光盘不允许该操作。

- 除非另有说明，所有的操作均可通过遥控器进行。遥控器总是直接接至播放器，确定红外光路上没有障碍物。
- 主要设备上有相应键时，也可以使用这些键。

- 菜单导航
- 您的播放器有一个直觉菜单导航系统引导您的各种设置和操作。
- 使用功能键激活 / 取消相关操作。
- 使用 **A**、**B** 键浏览菜单。
- 按 **OK** (确认) 键确认您的选择。

遥控器操作

- 除非另有说明，所有的操作均可通过遥控器进行。遥控器总是直接接至播放器，确定红外光路上没有障碍物。
- 主要设备上有相应键时，也可以使用这些键。

菜单导航

- 您的播放器有一个直觉菜单导航系统引导您的各种设置和操作。
- 使用功能键激活 / 取消相关操作。
- 使用 **A**、**B** 键浏览菜单。
- 按 **OK** (确认) 键确认您的选择。

装戴光盘和打开开关

1 按 **OPEN** (打开) 键打开光盘门。

2 标签一面向上插入您的选择的光盘（双面 DVD 光盘插入时也如此）。确定光盘在正确的凹槽 适当当地放置。

3 轻轻关上光盘。

4 按 **POWER** (电源) 开关到 **ON** (开) 位置打开播放器。5 按 **OK** (确认) 键确认您的选择。

慢动作

按 **PAUSE** (慢动作) 键一次或更多次可得如下慢放选项：

x1 1/2 x5* 1/2 x 后向

x2 1/4 x6* 1/4 x 后向

x3 1/8 x7* 1/8 x 后向

x4 1/16 x8* 1/16 x 后向

按 **OK** (确认) 键或 **PLAY** (播放) 键恢复正常播放。

*仅限于 DVD

改变音频输出

重复按 **AUDIO** (音频) 键可得如下音频选项。

x1 左声道

x2 右声道

x3 混合声道

x4 立体声

图像缩放

图像缩放功能允许您缩放视频图像以及放大图像恢复到全景。重复按 **ZOOM** (缩放) 键来选择如下选项。

Zooming options (缩放选项)

Zoom x 1 2X

Zoom x 2 3X

Zoom x 3 4X

Zoom x 4 1/2

Zoom x 5 1/3

Zoom x 6 1/4

Zoom x 7 正常

一般特徵

慢动作

按 **PAUSE** (慢动作) 键一次或更多次可得如下慢放选项：

x1 1/2 x5* 1/2 x 后向

x2 1/4 x6* 1/4 x 后向

x3 1/8 x7* 1/8 x 后向

x4 1/16 x8* 1/16 x 后向

按 **OK** (确认) 键或 **PLAY** (播放) 键恢复正常播放。

改变音频输出

重复按 **AUDIO** (音频) 键可得如下音频选项。

x1 左声道

x2 右声道

x3 混合声道

x4 立体声

图像缩放

图像缩放功能允许您缩放视频图像以及放大图像恢复到全景。重复按 **ZOOM** (缩放) 键来选择如下选项。

Zooming options (缩放选项)

Zoom x 1 2X

Zoom x 2 3X

Zoom x 3 4X

Zoom x 4 1/2

Zoom x 5 1/3

Zoom x 6 1/4

Zoom x 7 正常

一般特徵

MUTE (静音)

按 **MUTE** (静音) 键一次使播放器静音。再按 **MUTE** (静音) 键一次取消静音。

REPEAT (重复)

重复按 **REPEAT** (重复) 键可得如下重复选项：

DVD 操作

VCD 操作

x1 重复章节

x2 重复标题

x3 全部重复

x4 取消重复

REPEAT (重复) A & B

重复或循环标题里的一个次序：

• 在您选择的开始点按 **A & B** 键；• **A** 出现在屏幕上。• 在您选择的结束点再次按 **A & B** 键• **AB** 出现在屏幕上，重复序列开始。• 退出该序列按 **A & B** 键。

特别的 DVD 特徵

播放 DVD 光盘

开机之后，插入光盘关闭光盘门，播放自动开始。屏幕显示加载的光盘类型。光盘可能会要求您从菜单选择一个条目。使用 **▲**、**▼**、**▶**、**◀** (上、下、左、右) 键突出显示您选择的光盘类型，然后按 **OK** (确认) 键。

注意：因为 DVD 电影在世界的不同的地方和不同的时间发布是很正常的，所有的播放器都有地区代码以及光盘可能有一个可选的地区代码。如果要加载一个与您所在地区的代码不同的光盘，在屏幕上会看到地区代码提示“光盘不会播放，必须取消加载”。

播放 JPEG 光盘

• 开机以后，插入光盘，屏幕显示加载的光盘类型和光盘内容信息。

按 **▶** 键开始播放。• 当播放带有 MTV/Karaoke (卡拉OK) 的 VCD 时，按数字键 (0-9) 选择轨道，按 **▶** (播放) 键或 **OK** (确认) 键播放该轨道。按 **RETURN** (返回) 键回到选择菜单。

播放 DivX®@ Disc

• 飞利浦允许您使用 DivX®@ VOD 服务购买或租借视频的 DivX®@ VOD (Video On Demand) 注册代码。更多信息请访问 www.divx.com/vod。

• 在 www.divx.com/vod 上使用注册代码从 DivX®@ VOD 服务购买或者租借视频。通过单击“立即购买”按钮，您将被重定向到 DivX®@ VOD 网站。• 在 **SETUP** (设置) 菜单中选择 DivX®@ VOD。

• 注册代码会出现。

• 在 www.divx.com/vod 上使用注册代码从 DivX®@ VOD 服务购买或者租借视频。通过单击“立即购买”按钮，您将被重定向到 DivX®@ VOD 网站。• 在 **SETUP** (设置) 菜单中选择 DivX®@ VOD。

• 注册代码会出现。

• 在 www.divx.com/vod 上使用注册代码从 DivX®@ VOD 服务购买或者租借视频。通过单击“立即购买”按钮，您将被重定向到 DivX®@ VOD 网站。• 在 **SETUP** (设置) 菜单中选择 DivX®@ VOD。

• 注册代码会出现。

• 在 www.divx.com/vod 上使用注册代码从 DivX®@ VOD 服务购买或者租借视频。通过单击“立即购买”按钮，您将被重定向到 DivX®@ VOD 网站。• 在 **SETUP** (设置) 菜单中选择 DivX®@ VOD。

• 注册代码会出现。

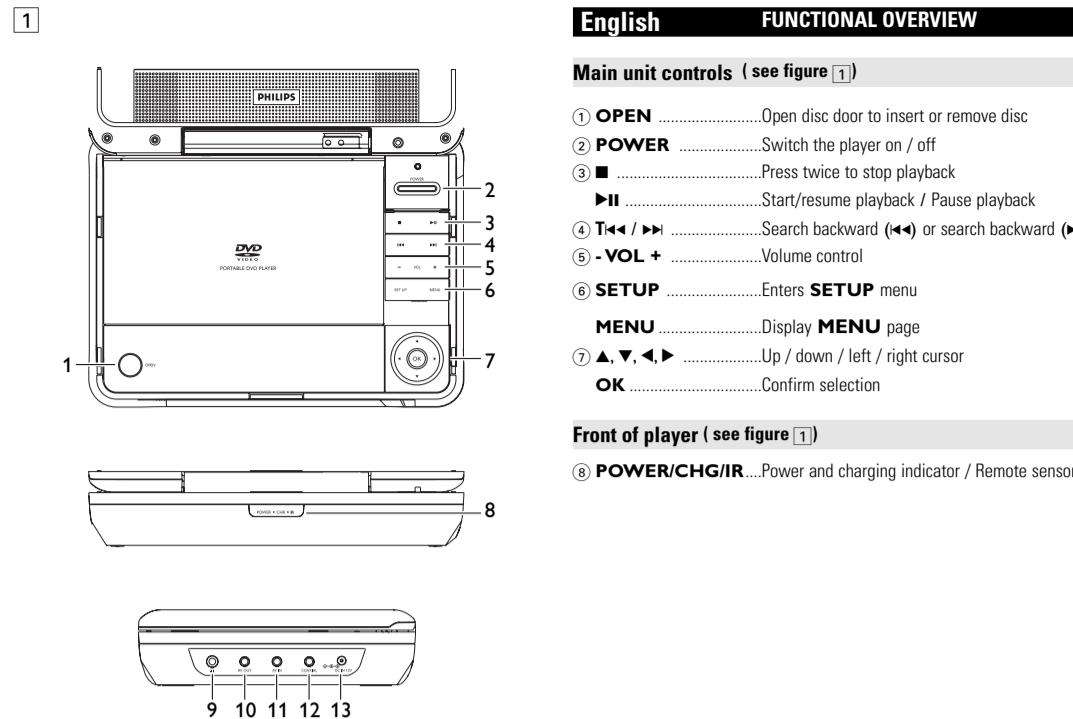
• 在 www.divx.com/vod 上使用注册代码从 DivX®@ VOD 服务购买或者租借视频。通过单击“立即购买”按钮，您将被重定向到 DivX®@ VOD 网站。• 在 **SETUP** (设置) 菜单中选择 DivX®@ VOD。

• 注册代码会出现。

• 在 www.divx.com/vod 上使用注册代码从 DivX®@ VOD 服务购买或者租借视频。通过单击“立即购买”按钮，您将被重定向到 DivX®@ VOD 网站。• 在 **SETUP** (设置) 菜单中选择 DivX®@ VOD。

• 注册代码会出现。

• 在 www.divx.com/vod 上使用注册代码从 Div

**English** FUNCTIONAL OVERVIEW**Main unit controls (see figure 1)**

- ① **OPEN** Open disc door to insert or remove disc
- ② **POWER** Switch the player on / off
- ③ **■** Press twice to stop playback
- ④ **II** Start/resume playback / Pause playback
- ⑤ **T◀ / R▶** Search backward (◀) or search forward (▶)
- ⑥ **VOL +** Volume control
- ⑦ **SETUP** Enters **SETUP** menu
- ⑧ **MENU** Display **MENU** page
- ⑨ **OK** Up / down / left / right cursor
- ⑩ **POWER/CHG/IR** Power and charging indicator / Remote sensor

Front of player (see figure 1)

- ⑪ **POWER/CHG/IR** Power and charging indicator / Remote sensor

FUNCTIONAL OVERVIEW**Right of player (see figure 1)**

- ⑫ **PHONE** Headphones jack
- ⑬ **AV OUT** Audio/Video output jack
- ⑭ **AV IN** Audio/video input jack
- ⑮ **COAXIAL** Digital audio output jack
- ⑯ **DC IN 12V** Power supply socket

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

REMOTE CONTROL**Remote controls (see figure 2)**

- ① **▲, ▼, ▶, ▷** Up / down / left / right cursor
- ② **OK** Confirms selection
- ③ **VOL + / -** Volume control
- ④ **II** Previous chapter (◀) or next (▶) chapters, tracks or titles
- ⑤ **▶** Pauses playback
- ⑥ **▶** Starts / resumes playback
- ⑦ **■** Press twice to stop playback
- ⑧ **◀ / ▷** Search backward (◀) or forward (▶)
- ⑨ **OSD** On Screen Display on / off
- ⑩ **▶** Slow motion
- ⑪ **AUDIO ZOOM** Audio language selector
- ⑫ **ANGLE** Enlarges video image
- ⑬ **A > B** To repeat or loop a sequence in a title
- ⑭ **PLAY-MODE** Selects play order options
- ⑮ **0 - 9** Numeric keypad
- ⑯ **MUTE** Muting player volume
- ⑰ **REPEAT** Repeats chapter / title / disc
- ⑱ **RETURN** For VCD menu page
- ⑲ **ANGLE** Selects DVD camera angle
- ⑳ **SUBTITLE** Subtitle language selector
- ㉑ **LANGUAGE** Language selector
- ㉒ **MENU** Displays MENU page
- ㉓ **SETUP** Enters SETUP menu
- ㉔ **Infra Red port**
- ㉕ **BATTERY COMPARTMENT**

INTRODUCTION**Your portable DVD player**

Your portable DVD player plays digital video discs conforming to the universal DVD Video standard. With it, you will be able to enjoy full-length movies with true cinema picture quality, and stereo or multichannel sound (depending on the disc and on your playback set-up).

The unique features of DVD-Video, such as selection of soundtrack and subtitle languages, and of different camera angles (again depending on the disc), are all included.

What's more, parental lock lets you decide which discs your children will be able to see. You will find your player remarkably easy to use with the On-Screen Display and player display in combination with the remote control.

INTRODUCTION**Playable disc formats**

In addition to DVD-Video disc, you will also be able to play all Video CDs and audio CDs (including CDR, CDRW, DVD-R and DVD+R).

DVD-Video

Depending on the material on the disc (a movie, video clips, a drama series etc.) these discs may have one or more Titles, and each Title may have one or more Chapters. To make access easy and convenient, your player lets you move between Titles, and also between Chapters.

**Video CD**

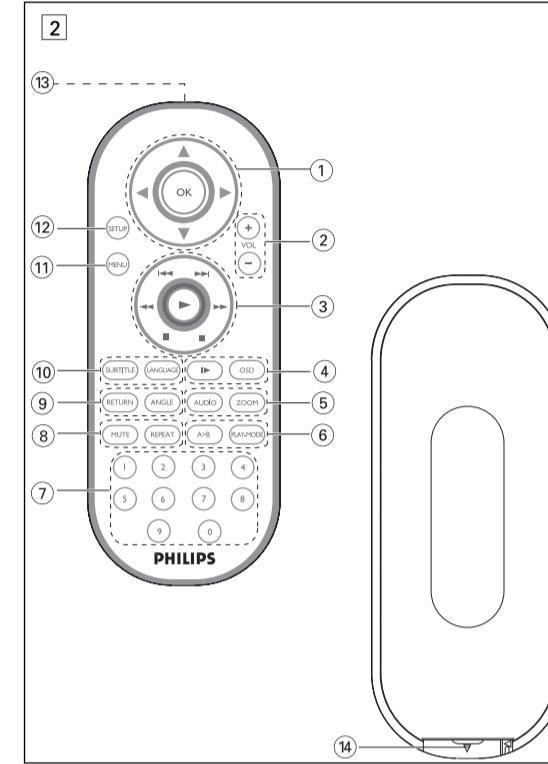
Depending on the material on the disc (a movie, video clips, a drama series etc.) these discs may have one or more Tracks, and tracks may have one or more indexes, as indicated on the disc case. To make access easy and convenient, your player lets you move between tracks and between indexes.

Audio CD / MP3 CD

Audio CDs / MP3 CDs contain music tracks only. You can play them in the conventional way through a stereo system using the keys on the remote control and/or main unit, or via the TV using the On Screen Display (OSD).

**CD with JPEG files**

You can also view JPEG still photos on this player.

**GENERAL INFORMATION****GENERAL INFORMATION****Power Sources**

This unit operates on a supplied AC adaptor, car adaptor, or a rechargeable battery pack. Make sure that the input voltage of the AC adaptor is in line with the local voltage. Otherwise, the AC adaptor and unit may be damaged.

Do not touch the AC adaptor with wet hands to prevent electric shock.

When connecting with car power (cigarette lighter) adaptor, be sure the input voltage of the adaptor is identical with car voltage.

Unplug the AC adaptor from the outlet or remove the battery pack when the unit is not used for long periods of time.

Hold the plug to disconnect the AC adaptor. Do not pull the power cord.

Safety and maintenance

Do not expose the unit for longer time as dangerous to eyes. Any service should be done by qualified service personnel.

Take care not to cut the power or leave objects get inside the unit. Take care not to drop the unit or subject it to strong shocks, which may cause malfunction.

Do not expose to excessive heat caused by heating equipment or direct sunlight.

Do not use this product where water may cause major damage.

Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the player.

Do not expose to extreme temperatures or splashing. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lit candles)

Do not touch the lens!

Note: When the player is in use for a long period of time, the surface will be heated. This is normal.

GENERAL INFORMATION**Handling discs**

- Do not attach paper or tape to the disc.
- Keep the disc away from direct sunlight or heat sources.
- Store the disc in a disc case after playback.
- Clean, wipe the disc outwards from the center with a soft, lint-free cloth.

**On handling the LCD screen**

The LCD is manufactured using high precision technology. You may, however, see tiny black points that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

Environmental information

We have reduced the packaging to its minimum and made it easy to separate into mono materials: cardboard, PS, PE and PET. Your set consists of materials that can be recycled if disassembled by a specialized company. Please observe the local regulations to dispose of packaging, exhausted batteries and old equipment.

Copyright information

All other brand and product names are trademarks of their respective companies or organizations.

Unauthorized duplication of any recordings downloaded from the internet or made from CDs / VCDs / DVDs is a violation of copyright laws and international treaties.

The making of unauthorized copies of copy-protected material, including computer programmes, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Playing a DVD disc

After switching on, inserting the disc and closing the door, playback starts automatically. The screen shows the type of disc loaded. The disc may invite you to select an item from a menu. Use the **▲, ▼, ▶, ▷** keys to highlight your selection and press **OK**.

Note: Since it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and discs can have the same or equivalent type.

If you load a disc of a different region code to your player, you will see the region code notice on the screen. The disc will not play, and should be unloaded.

Playing an audio or video CD disc

After switching on, inserting the disc and closing the door, the screen shows the type of disc loaded as well as information about the disc's contents.

Press **OK** to play back.

While playing VCD with MTV/Karaoke, press number keys (0-9) to select the track and press **R** or **OK** to play the track. Press **RETURN** to go back to the menu.

Playing DivX® disc

Philips provide you the DivX® VOD(DVD on Demand) registration code that allows you to rent and purchase videos using the DivX® VOD service. For more information, visit www.divx.com/vod.

Please select the DivX® VOD on the **SETUP** menu.

The registration code will appear.

Use the registration code to purchase or rent the videos from DivX® VOD service at www.divx.com/vod. Follow the instructions and download the video onto a CD-R for playback on this DVD player.

TIP

All the downloaded videos from DivX® VOD can only be played back on this DVD player.

Playing a JPEG disc

Using the full display screen, this shows the rest of the JPEG files, one-by-one, located in the selected current folder.

- Use the **◀, ▶** to rotate the picture.
- Use the **▲** to flip up/down.
- Use the **▼** to flip left/right.

During the slide show, press **MENU** to go back to folder screen.

Use the **▲, ▼, ▶, ▷** to highlight the preview picture and access the on-screen functions.

Note: Unless stated otherwise, all operations described are based on remote control operation.

Playing a MP3-CD

The following playback features are available for MP3-CDs. Please refer to the corresponding sections for more information.

Volume control, skipping tracks, searching, repeat, shuffle, etc.

Use the **▲, ▼, ▶, ▷** keys to highlight your selected music folder.

Press **OK** to play.

Playing a JPEG disc

Using the full display screen, this shows the rest of the JPEG files, one-by-one, located in the selected current folder.

- Use the **◀, ▶** to rotate the picture.
- Use the **▲** to flip up/down.
- Use the **▼** to flip left/right.

During the slide show, press **MENU** to go back to folder screen.

Use the **▲, ▼, ▶, ▷** to highlight the preview picture and access the on-screen functions.

Note: Unless stated otherwise, all operations described are based on remote control operation.

Playing a MP3-CD

The following playback features are available for MP3-CDs. Please refer to the corresponding sections for more information.

Volume control, skipping tracks, searching, repeat, shuffle, etc.

Use the **▲, ▼, ▶, ▷** keys to highlight your selected music folder.

Press **OK** to play.

Playing a JPEG disc

Using the full display screen, this shows the rest of the JPEG files, one-by-one, located in the selected current folder.

- Use the **◀, ▶** to rotate the picture.
- Use the **▲** to flip up/down.
- Use the **▼** to flip left/right.

During the slide show, press **MENU** to go back to folder screen.

Use the **▲, ▼, ▶, ▷** to highlight the preview picture and access the on-screen functions.

Note: Unless stated otherwise, all operations described are based on remote control operation.

Playing a MP3-CD

The following playback features are available for MP3-CDs. Please refer to the corresponding sections for more information.

Volume control, skipping tracks, searching, repeat, shuffle, etc.

Use the **▲, ▼, ▶, ▷** keys to highlight your selected music folder.

Press **OK** to play.

Playing a JPEG disc

Using the full display screen, this shows the rest of the JPEG files, one-by-one, located in the selected current folder.

- Use the **◀, ▶** to rotate the picture.
- Use the **▲** to flip up/down.
- Use the **▼** to flip left/right.

During the slide show, press **MENU** to go back to folder screen.

Use the **▲, ▼, ▶, ▷** to highlight the preview picture and access the on-screen functions.

Note: Unless stated otherwise, all operations described are based on remote control operation.

Playing a MP3-CD

The following playback features are available for MP3-CDs. Please refer to the corresponding sections for more information.

Volume control, skipping tracks, searching, repeat, shuffle, etc.

Use the **▲, ▼, ▶, ▷** keys to highlight your selected music folder.

Press **OK** to play.

Playing a JPEG disc

Using the full display screen, this shows the rest of the JPEG files, one-by-one, located in the selected current folder.

- Use the **◀, ▶** to rotate the picture.
- Use the **▲** to flip up/down.
- Use the **▼** to flip left/right.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>