
uick start guide

www.philips.com/welcome Register your product and get support at

Charge

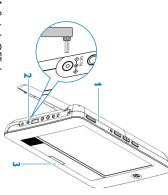

- Switch OFF the set
- and the AC outlet. Connect the supplied adaptor to the set
- The RED light comes on
- fully charged goes off, it means that the battery pack is approximately 4 hours. When the RED light The battery pack will be fully charged in

hours to fully charge the battery pack. will appear and it will take approximately 8 the player is in use. However, the RED light **TIP** Your battery will continue to charge while




- Switch ON the set.
- The GREEN light comes on.
- facing the front of the player. of the player with the label side of the disc Slide the disc into the slot on the right side
- The set will automatically start to play. Use the control keys on the set or the To eject the disc, press ■ remote control. ▲ twice


does not play mini DVD discs. If the disc gets DVD discs into the player.The DVD player IMPORTANT Do not load any 8-cm min tuck inside the player, press

twice to ject the disc. Iry the following steps if the sc remains stuck inside the player.

- Press

 to eject the disc. Power off and then power on the player
- player until the disc comes out. the slot facing down, gently shake the If this does not work, hold the player with

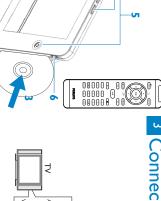

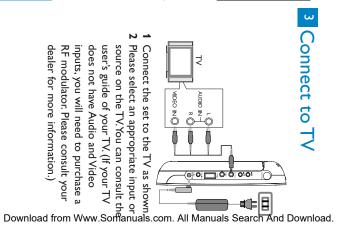

PHILIPS

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com