

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

PET941D



---

EN User manual

---

**PHILIPS**

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.


# Contents

<b>1</b>	<b>Important</b>	4
	Important safety instructions	4
	Notice	6
<b>2</b>	<b>Your portable DVD player</b>	7
	Introduction	7
	What's in the box	8
	Overview of the main unit	9
	Overview of the remote control	11
<b>3</b>	<b>Get started</b>	13
	Charge the battery	13
	Install remote control battery	14
	Connect additional equipment	14
<b>4</b>	<b>Use your player</b>	15
	Turn on	15
	Select OSD language	15
	Play discs	16
	Play options	16
	Adjust brightness of screen backlight	17
<b>5</b>	<b>Adjust settings</b>	17
<b>6</b>	<b>Product information</b>	18
<b>7</b>	<b>Troubleshooting</b>	19

# 1 Important

---

## Important safety instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑩ Only use attachments/accessories specified by the manufacturer.
- ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑭ Apparatus shall not be exposed to dripping or splashing.
- ⑮ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- ⑯ This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).



## Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

---

## Hearing safety

### Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.
- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

### To establish a safe volume level:

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

### Listen for reasonable periods of time:

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.


### Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

---

## Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

This product complies with the radio interference requirements of the European Community. 

This product complies with the requirements of the following directives and guidelines: 2004/108/EC + 2006/95/EC.


### Environmental information


All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)


Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

---


## Recycling

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. 

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC: 

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health. 

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead: 

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.   
Pb

Always bring your product to a professional to remove the built-in battery.

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

"DivX, DivX" Certified, and associated logos are trademarks of DivX, Inc. and are used under license.



**This player includes this label:**



## 2 Your portable DVD player

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).






---

### Introduction

Your portable DVD player plays digital video discs that conform to the universal DVD Video standard. With it, you can play movies with true cinema picture quality and stereo or multi-channel sound (depending on disc and playback set-up).

You can also select sound track, subtitle languages, and different angle of view (again depending on DVD disc). Besides, you can restrict the play of discs that are not suitable for children.

You can play the following discs on the DVD player (including CD-R, CD-RW, DVD±R and DVD±RW):

 
	DVD-Video
	Video CD
	Audio CD
	MP3 CD
	DivX
	Discs with JPEG files

## What's in the box

Check and identify the contents of your package:

- Portable DVD player
- Remote control
- AC power adaptor, DSA-9W-09 F (DVE) or AY4132 (Philips)
- Car adaptor
- Earphone
- AV cables
- User Manual
- Quick Start Guide


## Overview of the main unit

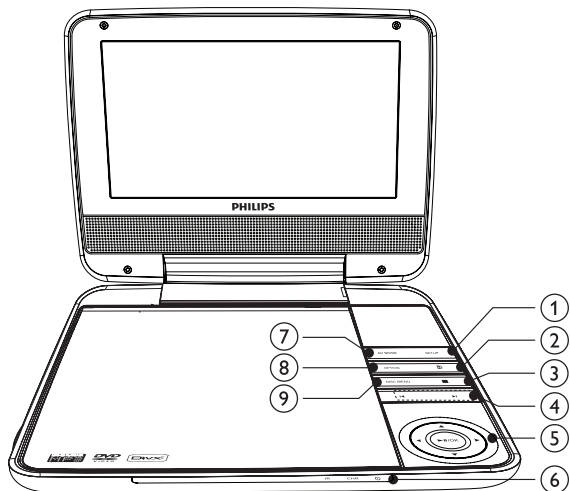


- ① **SETUP**
  - Accesses or exits the setup menu.
- ② **B:**
  - Adjusts brightness of the screen backlight.
- ③ **■**
  - Stops disc play.
- ④ **◀, ▶**
  - Skips to the previous or next title, chapter, or track.
- ⑤ **▲, ▼, ◀, ▶**
  - Navigates through the menus.
- ◀, ▶**
  - Searches backward/forward at different speeds.
- ▶ || OK**
  - Confirms an entry or selection.
  - Starts, pauses or resumes disc play.



 
- ⑥ **IR/CHR/⓪**
  - Remote control sensor/Charging indicator/Power indicator.
- ⑦ **AV MODE**
  - Turns off the front panel display when the player is connected to TV.
- ⑧ **OPTION**
  - Accesses options relating to the current activity or selection.
- ⑨ **DISC MENU**
  - For DVD, accesses or exits disc menu.
  - For VCD, turns on or off PBC (Playback Control) mode.
  - For VCD version 2.0 or SVCD with PBC turned on, returns to the menu.

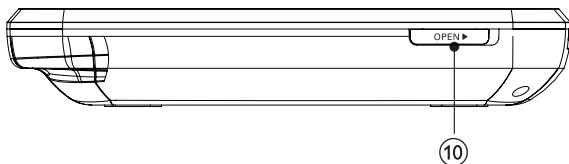

 
- ⑩ **OPEN ►**
  - Opens the disc compartment.

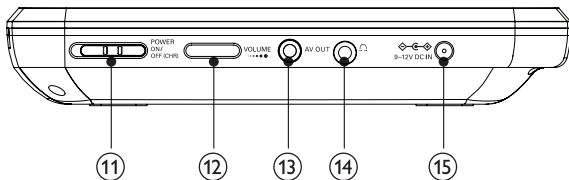

- ⑪ **POWER ON/OFF**
  - Turns on/off DVD player.
- ⑫ **-VOL +**
  - Increases or decreases volume.
- ⑬ **AV OUT**
  - Audio/video output jack.

- ⑭  Headphone jack
- ⑮ DC IN  Power supply socket

## Overview of the remote control

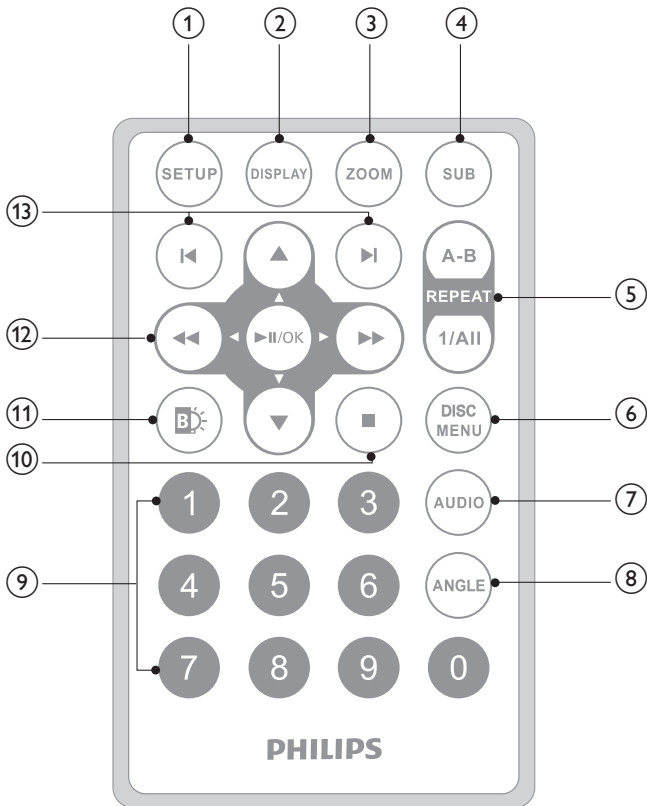 

- ① **SETUP**
  - Accesses or exit the setup menu.
- ② **DISPLAY**
  - Displays play information.
- ③ **ZOOM**
  - Zooms in or out.
- ④ **SUB**
  - Selects DVD subtitle language.
- ⑤ **A-B REPEAT**
  - Marks the section for repeat play.
- REPEAT 1/ALL**
  - Repeats a chapter/track/title.
- ⑥ **DISC MENU**
  - For DVD, accesses or exits disc menu.
  - ForVCD, turns on or off PBC (Playback Control) mode.
- ⑦ **AUDIO**
  - For DVD, selects an audio language.
  - ForVCD, selects an audio mode.
- ⑧ **ANGLE**
  - Selects a different viewing angle of a DVD.
- ⑨ **0 - 9**
  - Inputs numbers.
- ⑩ **■**
  - Stops disc play.
- ⑪ **Brightness icon**
  - Adjusts brightness of the screen backlight.
- ⑫ **▲, ▼, ◀, ▶**
  - Moves cursor up/down/left/right.
- ◀◀, ▶▶**
  - Searches backward or forward at different speeds.
- ▶||OK**
  - Confirms an entry or selection.
  - Starts, pauses or resumes disc play.
- ⑬ **◀, ▶**
  - Skips to previous/next chapter; track or title.

### 3 Get started



#### Caution

- Use the controls only as stated in this user manual.

Always follow the instructions in this chapter in sequence.  
If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## Charge the battery



#### Caution

 
- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the player.
- Use only the supplied AC adaptor to charge the battery.



#### Note

- The type plate is located on the bottom of the player.
- You can only charge the player when it is in power-off mode.

- 1 Slide the **POWER ON/OFF** switch to **OFF** position.
- 2 Connect the supplied AC adaptor to the player and to the AC outlet.

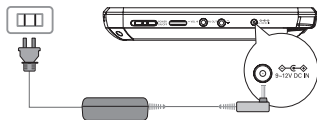

- ↳ The charge indicator turns on. It takes about 7 hours to fully charge the battery.
- ↳ When the battery is fully charged, the charge indicator turns off.

---

## Install remote control battery



### Caution

 
- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Perchlorate Material - special handling may apply. See [www.dtscc.ca.gov/hazardouswaste/perchlorate](http://www.dtscc.ca.gov/hazardouswaste/perchlorate).

### For first-time use:

- 1 Remove the protective tab to activate the remote control battery.

### To replace the remote control battery:

- 1 Open the battery compartment.
- 2 Insert 1 CR2025 battery with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

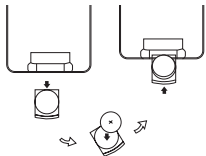

---

## Connect additional equipment

 


### Caution

- Turn off your player before connecting to any additional equipment.

You can connect the player to a TV or an amplifier to enjoy DVDs or Karaoke.

Match the color of the AV cables (the AV cable connected to TV is not supplied) with the jacks: the yellow cable is for the yellow video jack, the red/white cable is for the red/white audio jacks.

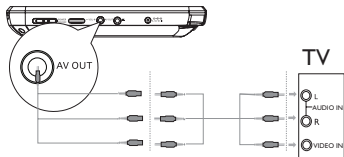

### Tip

- To conserve energy, press **AV MODE** to turn off the front panel display.

## 4 Use your player

### Turn on

Slide the **POWER ON/OFF** switch to the **ON** position.

- ↳ The  indicator turns on.

### Select OSD language

You can choose a different language for the on-screen display text.

- Press **SETUP**.  
↳ The setup menu appears.



- Select **[-- General Setup Page --] > [OSD Language]**.
- Press **▶** to select an option.
- Press **▶ II/OK** to confirm.
- Press **SETUP** to exit.

---

## Play discs

- 1 Slide **OPEN**▶ on the player.
- 2 Insert the disc with label side facing up.
- 3 Push down to close the disc compartment.  
↳ Play starts automatically. If not, press ▶ **|||OK**.
  - If a menu appears, select an item, then press ▶ **|||OK** to start play.
  - To pause, press ▶ **|||OK**. Press again to resume play.
  - To stop, press ■ twice.
  - To select the previous/next item, press ◀ or ▶.
  - To start search within video/audio, press ◀ or ▶ once or more.

---

## Play options

- 1 During play, press **OPTION** to select some play options.  
For DVD
  - [Audio]
  - [Subtitle]
  - [Repeat]
  - [Time Disp.]For VCD
  - [Audio]
  - [Repeat]
  - [Time Disp.]For audio CDs
  - [Repeat One]
  - [Repeat Folder]
  - [Repeat Off]For JPEG CDs
  - [Repeat One]
  - [Repeat Folder]
- 2 Follow the on-screen instructions.

## Adjust brightness of screen backlight



### Note

- You can adjust brightness of the screen backlight to match lighting conditions.

During play, press **⏸** repeatedly to select an option.

- [Bright]
- [Normal]
- [Dim]



### Tip

- To achieve the longest playtime, select [Dim].
- To achieve the best view, select [Bright].

## 5 Adjust settings

To maximize your play experience, use **SETUP** to fine tune your settings.

- Press **SETUP**.  
↳ The setup menu is displayed.
- Press **▲▼** to select an option and press **▶||/OK** to confirm.

### [-- General Setup Page --]

[OSD Language] Select on-screen display language.

[Screen Saver] Activate/deactivate screen saver.

[Resume] Select whether to start play from the point where it was last stopped.

[Angle Mark] select angle mark display options.

### [-- Display Setup Page --]

[Brightness] Adjust screen brightness.

[Contrast] Adjust screen contrast.

[Screen Display] Select display ratio.



### [-- Battery Life Setup Page --]

[LCD Backlight]	Adjust the default brightness level of screen backlight.
-----------------	--

### [-- Preference Page --]

[Audio]	Select audio language.
[DVD Subtitle]	Select DVD subtitle language.
[DivX Subtitle]	Select DivX subtitle language.
[Disc Menu]	Select disc menu language.
[Parental]	Select parental level.
[Password]	Change password (3308 by default).
[DivX VOD]	Get DivX registration code.
[Default]	Restore original settings.

3 Press ◀ to go back to previous menu level.

4 Press **SETUP** to exit.

## 6 Product information



### Note

- Product information is subject to change without prior notice.

Dimensions	240 x 178 x 40 mm
Weight	1.1 kg
Power supply	Input: 100-240V 50/60Hz 0.3A Output: DC 9V 1A
Power consumption	9 W
Operating temperature range	0-45°C
Laser wavelength	650 nm
Video system	NTSC & PAL

Frequency response	20Hz-20KHz $\pm$ 1dB
Signal/noise ratio	$\geq$ 80 dB
Audio distortion + noise	$\leq$ -80 (1KHz)
Channel separation	$\geq$ 80 dB
Dynamic range	$\geq$ 80 dB
Audio out (analog audio)	Output level: 2V $\pm$ 10%
Load impedance	10 K $\Omega$
Video out	Output level: 1Vp - p $\pm$ 20%
Load impedance	75 $\Omega$

## 7 Troubleshooting



### Warning

- Risk of electric shock. Never remove the casing of the player.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using the player, check the following points before requesting service. If the problem remains unsolved, register your player and get support at [www.philips.com/welcome](http://www.philips.com/welcome).

### No power

- Ensure that both plugs of the mains cord are properly connected.
- Ensure that there is power at the AC outlet.
- Check if the built-in battery is drained.

### No sound

- Ensure that the AV cable is connected correctly.

### Distorted picture

- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Make sure that the video output format of the disc is compatible with the TV.
- Change the video output format to match your TV or program.

- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

#### **Cannot play disc**

- Ensure the disc label is upwards.
- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Check if the disc is defective by trying another disc.

#### **No response to the remote control**

- Ensure that the path between the remote control and the player is clear from obstacles.
- From a close distance, point the remote control directly at the player.
- Replace the remote control batteries.
- The function does not work for this disc. Refer to the disc instructions.

#### **The player feels warm**

- When the player is in use for a long period of time, its surface will be heated. This is normal.

## AUSTRALIA - Philips Manufacturers Warranty for Australia only

These warranty conditions are valid for the following consumer electronics products: Colour Televisions, Projection TV, Plasma & LCD TV, Video Cassette Recorders, CD Recorders & Players, DVD Players, DVD Recorders, DVD Recorders with HDD, Audio Systems, Home Theatre systems, Digital Set Top Box & Portable Audio products.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions.

### 1 Year Free Repair Service - at Philips ASC

Colour Television, Plasma Television, LCD Television, Projection Television, DVDR/VCR Combo, DVD Recorders with Hard Drive, LCD Projectors, Wireless Audio Systems, Audio Systems, Home Theatre Systems & Digital Set-Top-Box,

### 1 Year free Replacement - at your Retailer

Portable Audio, MP3 Infotainment products, Video Cassette recorders, DVD Player, DVD/VCR Combo Player, DVD Recorder without HDD & Portable DVD/LCD players.

### Conditions of Repair Warranty

- All claims for warranty service should be made to your nearest Philips Authorised Service Centre or the Philips Technology Care Centre. Reasonable evidence of date of purchase must be provided.
- This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
- If a replacement product is supplied under the repair policy it is warranted, under this warranty, for the remainder of the warranty of the original purchased product only.
- Home service is provided only within the normal service area of one of our recommended Authorised Service Centres (ASC). It will be provided for television receivers only with a screen size of 67cms or above (product includes CRT, LCD TV, PTV, and Plasma TV). Televisions with screen size less than 67cms and all other products types are to be taken out by the consumer to the workshop of your nearest Authorised Service Centre, at the Consumer's expense.
- This Manufacturers Warranty is limited to 3 months for the above listed Consumer Electronics products if used in commercial applications.
- Philips may, at its discretion choose to replace rather than repair any product covered by this warranty.
- Product accessories are covered by the same warranty period. Please contact the Philips Technology

Care Centre for free replacement of faulty accessories.

- This Manufacturers Warranty is neither transferable nor valid in countries other than Australia.

### This warranty does not cover:

- Mileage or travel outside the normal service area covered by selected Authorised Service Centre.
- Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.
- Product failures caused by misuse, neglect, accidental breakage, transit damage, inexpert repairs or modification by un-authorised persons, external fires, lightning strikes, floods, vermin infestation or liquid spillage.
- Cleaning of video or audio heads.
- Inadequate receiving antennae.
- Replacement of worn or used batteries or other consumables.
- Consumer products used in commercial applications (This warranty is limited to 3 months only).
- Second hand products.

The conditions contained in this warranty card replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

Service is provided through more than 100 accredited Authorised Service Centres throughout Australia. For direct contact with the nearest recommended Authorised Service Centre in capital & regional cities/towns

### Authorised Service Centre Network

1300 361 392

Customer support is provided in Australia by our trained call centre staff. For assistance with product features and specifications, please call

### Technology Care Centre

1300 363 931

Please record the following information for your records and keep in a safe place. We recommend retaining your purchase receipt to assist with any warranty claim.

Model number:.....  
 Serial number:.....  
 Date of purchase:.....  
 Retailer:.....

**Philips Consumer Electronics**  
 a division of **Philips Electronics Australia Limited**  
 ABN 24 008 445 743,  
 Level 1, 65 Epping Road NORTH RYDE NSW 2113.

Warranty valid for all new products purchased after **1<sup>st</sup> January 2007**

## **NEW ZEALAND - Guarantee and Service for New Zealand**

---

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

### **Conditions**

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

### **How to claim**

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

### **The Guarantee Controller**

**Philips New Zealand Ltd.**

✉ **P.O. Box 41.021**

**Auckland**

☎ **(09) 84 94 160**

fax ☎ **(09) 84 97 858**



© 2009 Koninklijke Philips Electronics N.V.

All rights reserved.

PET941D\_79\_UM\_V1.1



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>