Register your product and get support at www.philips.com/welcome

AD7000W/12



EN User manual



Download from Www.Somanuals.com. All Manuals Search And Download.

Download from Www.Somanuals.com. All Manuals Search And Download.

Contents

1	Important Safety Notice	4 4 5
2	Your Entertainment System Introduction	7 7
	What's in the box	7
	What else you need	/
	Overview of the main unit Get started to use AirPlay	8 8
3	Prepare	9
	Connect power Turn AD7000W on	9 9
4	Connect to your home Wi-Fi network	10
	for AirPlay	10
	Scenario 2: Connect to a non-WPS router	11
5	Play	17
	stream audio from your i lunes music library	17
	Control play	18
	Use advanced sound settings Play/charge your iPod/iPhone/iPad through	18
	USB socket	19
	Play from an external device	19
6	Update firmware	20
	Download the update file	20
	Update from the configuration page	20
7	Product information	22
	Specifications	22
8	Troubleshooting	23

1 Important

Safety

Information for Europe:

Know these safety symbols





The 'exclamation mark' calls attention to features for which you should carefully read the supplied literature to prevent operating and maintenance problems.

The 'lightening bolt' symbol indicates uninsulated components within the product that can cause an electric shock.

To reduce the risk of fire or electric shock, do not expose the product to rain or moisture and do not place any objects filled with liquids, such as vases, on the product.

- 1 Read these instructions.
- 2 Keep these instructions.
- Heed all warnings.
- (4) Follow all instructions.
- 5 Do not use this product near water.
- 6 Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

- 8 Do not remove the casing of this product.
- (9) Do not expose the product to dripping / splashing water, rain or high humidity.
- (10) Keep this product away from direct sunlight, naked flames or heat.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other electrical equipment (including amplifiers).
- (12) Do not place any other electrical equipment on the product.
- 13 Do not place any sources of danger on the product (e.g. objects containing liquids, burning candles).
- This product may include batteries. Please refer to safety and disposal instructions for batteries in this user manual.
- (15) Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

Risk of overheating! Never install this apparatus in a confined space. Always leave a space of at least four inches around this apparatus for ventilation. Ensure curtains or other objects never cover the ventilation slots on this apparatus.

Mains fuse

This information applies only to products with a UK mains plug.

This product is fitted with an approved molded plug. If you replace the fuse, use one with:

- the ratings shown on the plug,
- a BS 1362 approval, and
- the ASTA approval mark.

Contact your dealer if you are not sure about what type of fuse to use.

Caution:To conform with the EMC directive (2004/108/EC), do not detach the plug from the power cord.

Notice

CE

This product complies with the radio interference requirements of the European Community.

(CE 0560 I R&TTE Directive 1999/5/EC													
	BG	\checkmark	RO	\checkmark	BE	\checkmark	LT	1	LI	\checkmark	IS	\checkmark	SE	\checkmark
	DK	~	ES	\checkmark	CZ	1	NL	~	AT	~	LV	1	SK	~
	FR	~	UK	\checkmark	FI	1	PT	<	CY	~	MT	1	ΡL	~
	HU	\checkmark	NO	\checkmark	GR	1	SI	~	EE	\checkmark				
	IT	\checkmark	LŪ	\checkmark	IE	1	СН	1	DE	1				

The device can be operated in the EU without restrictions indoor, but cannot be operated outdoors in France in the whole of the band until further notice.

This product complies with the requirement of the 1999/5/EC directive.

Modifications

Modifications not authorized by the manufacturer may void user's authority to operate this product.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Information about the use of batteries:

Caution

- Risk of leakage: Only use the specified type of batteries. Do not mix new and used batteries. Do not mix different brands of batteries. Observe correct polarity. Remove batteries from products that are not in use for a longer period of time. Store batteries in a dry place.
- Risk of injury: Wear gloves when handling leaking batteries. Keep batteries out of reach of children and pets.
- Risk of explosion: Do not short circuit batteries. Do not expose batteries to excessive heat. Do not throw batteries into the fire. Do not damage or disassemble batteries. Do not recharge non-rechargeable batteries.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.





"Made for iPod,""Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance. AirPlay, iPod, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

Class II equipment symbol:



CLASS II apparatus with double insulation, and no protective earth provided.

- Note

 The type plate is located on the bottom of the apparatus.

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome. If you contact Philips, you will be asked for the

Entertainment

model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No.____

2 Your

System

Serial No.

Introduction

Apple AirPlay technology enables you to play your iTunes music library, hosted on a Mac, PC, iPhone, iPod touch, or iPad on any AirPlayenabled device (for example, your AD7000W) connected to the Wi-Fi network.

With an AirPlay-enabled device (for example, your AD7000W), you can:

- stream audio from your iTunes music library to any room in your house
- choose which AirPlay-enabled devices you want to play music on (if you have more than one such devices in your house)
- stream audio to multiple AirPlayenabled devices at the same time (from the iTunes music library on your PC/Mac only)

🔆 Тір

• Please visit www.philips.com/welcome for information about more Philips AirPlay-enabled devices.

With AD7000W, you can also:

- charge your iPod/iPhone/iPad through the USB socket with an Apple USB cable (not supplied).
- play your iTunes music library on your iPod/iPhone/iPad through the USB socket directly while charging.
- play music from other audio devices through the MP3-LINK socket.

What's in the box

Check and identify the contents of your package:

- Main unit (with a built-in Wi-Fi module)
- 1 x AC power adapter
- 1 x MP3 link cable
- User manual (in CD-ROM)
- Quick start guide

What else you need

To stream audio wirelessly by AirPlay, you need:

- A Wi-Fi certified router
- A host for your iTunes music library, for example, an iPod touch/iPhone/ iPad installed with iOS 4.3 (or later) or a Wi-Fi enabled PC/Mac installed with iTunes 10 (or later)

Your AD7000W should be connected to the same local network as your iTunes host device through the Wi-Fi router.

List of compatible iTunes host devices for AirPlay

In terms of AirPlay, AD7000W is compatible with:

- a Wi-Fi enabled PC/Mac installed with iTunes 10 (or later); and
- the following iPod/iPhone/iPad models . installed with iOS 4.3 (or later):
 - iPad 2 •
 - iPad
 - iPhone 4 .
 - iPhone 3GS
 - iPod touch (2nd, 3rd, and 4th generation)

Overview of the main unit



(1) Power indicator

- (2) +/-
 - Adjust volume.

(3) 也

- Turn the unit on/off.
- (Press and hold) reset the unit. •

(5) MP3-LINK

Connect an external audio player through the supplied MP3 link cable.

(6) DC IN

- Connect the power adaptor.
- (7) USB
 - Connect an iPod/iPhone/iPad through an Apple USB cable (not supplied).

Get started to use AirPlay

To get started with AirPlay, you need to:

- 1 Upgrade your iPod touch/iPhone/iPad to the latest iOS version (iOS 4.3 or later).
 - Or install the latest version of iTunes (iTunes 10 or later) on your PC/Mac.
- 2 Connect power to AD7000W, then turn it on (see 'Prepare' on page 9).
- 3 Connect AD7000W to your existing home Wi-Fi network (see 'Connect to your home Wi-Fi network for AirPlay' on page 10).
- 4 Make sure that your iPod touch/iPhone/ iPad or PC/Mac are also connected to the same Wi-Fi network.

FN 8

(4) WI-FI SETUP button/indicator

- Connect the unit to a Wi-Fi network.
- Show the Wi-Fi connection status of the unit.

3 Prepare

Always follow the instructions in this chapter in sequence.

Connect power

Caution

- Risk of product damage! Make sure that the power supply voltage matches the voltage printed on the bottom of the unit.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.
- Before you connect the AC adaptor, make sure that you have completed all the other connections.

Turn AD7000W on

1 Press ७ on the back to turn the unit on.

- 2 Wait for successful boot-up of the unit.
 - → The boot-up takes about 35 seconds.
 - → During boot-up, the Wi-Fi SETUP indicator on the back of the unit blinks green quickly.
 - ➡ After boot-up, if no Wi-Fi connection has been set up for AD7000W, the Wi-Fi SETUP indicator starts to blink green slowly.
- To switch the unit to Eco standby mode, press © again.
- To switch the unit on from Eco standby mode, press & again.



- Connect the AC power cord to
 - the DC IN socket on the back of the unit.
 - the wall power socket.

4 Connect to your home Wi-Fi network for AirPlay



To connect AD7000W to your existing home Wi-Fi network, you need to apply your home Wi-Fi settings to AD7000W.

You can do this in two ways (depending on which type of Wi-Fi router you use):

- Automatically if your Wi-Fi router is WPS (Wi-Fi Protected Setup)enabled and supports PBC (Push Button Connection) (see 'Scenario 1: Connect to a WPS router' on page 10)
- Manually if your Wi-Fi router does not support WPS (see 'Scenario 2: Connect to a non-WPS router' on page 11)

Once connected successfully, AD7000W will remember your home Wi-Fi settings. Then you can enjoy AirPlay whenever AD7000W is powered on and connected to your home Wi-Fi network automatically. Before connection of AD7000W to you home Wi-Fi network, check the points below.

- 1 Make sure that your Wi-Fi router is powered on and working properly.
- 2 Make sure that AD7000W has been powered on and booted up successfully (see 'Turn AD7000W on' on page 9).
- 3 Identify the type of your Wi-Fi router (see the user manual of your Wi-Fi router for details).

Scenario 1: Connect to a WPS router

- Note

- Before you press any button on AD7000W, make sure that AD7000W has been booted up successfully (see 'Turn AD7000W on' on page 9).
- 1 Press the WPS button on your home Wi-Fi router.



- 2 Shortly after step 1, press Wi-Fi SETUP on the back of AD7000W.
 - → The Wi-Fi SETUP indicator blinks red, yellow and green alternately.
 - → Within 2 minutes, the WI-FI SETUP indicator stops blinking and stays green, and the unit beeps.

➡ AD7000W is connected to your home Wi-Fi network successfully.



🔆 Тір

- For some Wi-Fi routers, you may need to hold the WPS button for Wi-Fi connection or enable the WPS PBC function from the router configuration pages. See the user manuals of the specific routers for details.
- If the Wi-Fi SETUP indicator on AD7000W blinks yellow, it means that the Wi-Fi connection has failed. Please wait for 2 minutes and try again. If the problem remains, try to set up the Wi-Fi connection manually (see 'Scenario 2: Connect to a non-WPS router' on page 11).
- If the Wi-Fi connection fails again, press and hold Φ on the back of AD7000W to reset it, and then try again.

Scenario 2: Connect to a non-WPS router



• You can also follow the procedures below to connect AD7000W to a WPS router manually.

To connect AD7000W to a Wi-Fi router manually, you need access to AD7000W's built-in configuration web page for change of its internal Wi-Fi settings. To do so, you need a Wi-Fi enabled device with an Internet browser for temporary Wi-Fi connection to AD7000W. The Wi-Fi enabled device can be an iPod touch/ iPhone/iPad or a Wi-Fi enabled PC/Mac.

Follow the sequence below for connection of AD7000W to a non-WPS Wi-Fi router.

- 1 Collect settings of your home Wi-Fi router and write down on paper for use during AD7000W Wi-Fi setup (see 'Collect settings of your home Wi-Fi router' on page 11).
- 2 Switch AD7000W to Assisted Wi-Fi Setup mode (see 'Switch AD7000W to Assisted Wi-Fi Setup mode' on page 12).
 - A new Wi-Fi network created by AD7000W will appear, with the network name (SSID) of Philips Fidelio AirPlay.
- 3 Connect your Wi-Fi enabled device to the newly created Wi-Fi network temporarily (see 'Connect your Wi-Fi enabled device to the newly created Wi-Fi network' on page 12).
- 4 Open the built-in web page of AD7000W with the Internet Browser of your Wi-Fi enabled device (see 'Open the built-in web page of AD7000W' on page 14).
- 5 Change the internal Wi-Fi settings of AD7000W based on the settings you wrote on paper at step 1 (see 'Change the internal Wi-Fi settings of AD7000W' on page 15).
- 6 Restore your Wi-Fi enabled device back to your existing home Wi-Fi settings (see 'Restore your Wi-Fi enabled device back to your existing home Wi-Fi setting' on page 16).

Collect settings of your home Wi-Fi router

- Note

Always consult the user manual of your home Wi-Fi router for detailed instructions.

- 1 Connect your Wi-Fi enabled device to your existing home Wi-Fi network.
- 2 Launch the Internet browser (for example, Apple Safari or Microsoft Internet Explorer) on your Wi-Fi enabled device.
- **3** Open the configuration page of your home Wi-Fi router.
- 4 Find the Wi-Fi settings tab and write down the following information on paper:
 - A Network name (SSID)
 - (B) Wi-Fi security mode (usually WEP, WPA or WPA2 if enabled)
 - © Wi-Fi password (if Wi-Fi security is enabled)
 - DHCP mode (enabled or disabled)
 - (E) Static IP address settings (if DHCP mode is disabled)

Switch AD7000W to Assisted Wi-Fi Setup mode



 Before you press any button on AD7000W, make sure that AD7000W has been booted up successfully (see 'Turn AD7000W on' on page 9).



- Press and hold **Wi-Fi SETUP** on the back of AD7000W for more than 5 seconds.
 - → The Wi-Fi SETUP indicator blinks green and yellow alternately.
 - A new Wi-Fi network created by AD7000W will appear, with the network name (SSID) of Philips Fidelio AirPlay.
 - → It may take up to 45 seconds for successful creation of this new Wi-Fi network.

- Note

- After you finish manual Wi-Fi setup for AD7000W, the new Wi-Fi network created by AD7000W will disappear.
- If you fail to enter Assisted Wi-Fi Setup mode, power off AD7000W and power on it, then try again after successful boot-up.
- Make sure that there are no other Philips AirPlayenabled devices in Assisted Wi-Fi Setup mode at the same time. Multiple Wi-Fi networks created this way may interfere with each other.

Connect your Wi-Fi enabled device to the newly created Wi-Fi network

The new Wi-Fi network created by AD7000W only allows access of one Wi-Fi enabled device. To avoid interference from any other Wi-Fi devices, you are recommended to temporarily disable the Wi-Fi function on your other Wi-Fi devices.

Option 1: Use your iPod touch/iPhone/iPad

Select Settings -> Wi-Fi on your iPod touch/iPhone/iPad.

Settings	_
Airplane Mode	OFF
🛜 Wi-Fi	
O Notifications	< Hq
Carrier	>
Sounds	>
Brightness	>
Wallpaper	>
General	>

2 Select Philips Fidelio AirPlay from the list of available networks.

ettings Wi-Fi Network	(S
BELKIN-KATE	170
bullate-g2009-X0	
Philips Fide	elio AirPlay
Philips_ridelio_Air	
17-LINK, 858758	170
TP-LINKSKE	
-	
Other	>

- 3 Wait until successful Wi-Fi connection on your iPod touch/iPhone/iPad.
 - \mapsto \Rightarrow is displayed at the upper left corner of your iPod touch/iPhone/iPad.

Tip

• If Philips Fidelio AirPlay is not in the list, try to scan the available Wi-Fi networks again.

Use your Wi-Fi enabled PC/Mac

Note

- See the user manual of your PC/Mac for how to connect your PC/Mac to a Wi-Fi network.
- During Wi-Fi network connection, do not connect any network cable to your PC/Mac.
- 1 Open the Wi-Fi setup tool or control panel on your PC/Mac.
- 2 Scan the available Wi-Fi networks.

sctwork Tasks	Choose a wireless network
S Bafreshinetexci.ist	Click an item in the list below to connect to a geneless network in range or to get more information.
Set up a vitreless network for a home or small office	
Ielated Tasks	
V Learn about wireless networking	Searching for wireless networks in range
Change the order of preferred networks	
Change advanced settings	
	1

3 Select Philips Fidelio AirPlay from the list of available networks.



4 Wait until successful Wi-Fi connection on your PC/Mac.



🔆 Тір

 If Philips Fidelio AirPlay is not in the list, try to scan the available Wi-Fi networks again.

Open the built-in web page of AD7000W

- Launch Apple Safari browser or any other Internet browser on your Wi-Fi enabled device.
- 2 Type in **192.168.1.1** at the browser address bar and confirm.
 - ➡ The AD7000W configuration web page is displayed.



If you use Safari on your Wi-Fi enabled PC/ Mac, you can also select 'Philips_Fidelio XXX' from the Bonjour pull-down list to enter the AD7000W configuration web page directly.

- 1 Click ***** -> Preferences.
 - → The Bookmarks menu is displayed.



2 Tick Include Bonjour for Bookmarks bar.



- 3 Select 'Philips_Fidelio XXX' from the Bonjour pull-down list shown at the bookmarks bar.
 - → The AD7000W configuration web page is displayed.

	Fidelio	£ .	2
[Bonjour 🔻 Apple	Yahoo! Go	to connect your wileless
	About Bonjour		
	Philips_Fidelio 2	15838	teared F t Glix Apry Is
	(states)		(m)

Change the internal Wi-Fi settings of AD7000W

On the AD7000W configuration web page, you can change the internal Wi-Fi settings of AD7000W for connection of AD7000W to your existing home Wi-Fi network.

_	
_	No1

 Make sure that the settings on the configuration web page match your home Wi-Fi network settings that you wrote on paper.



- Follow the on-screen instructions to change and confirm the internal Wi-Fi settings of AD7000W.
 - ➡ After a while, the indicator on the back of AD7000W stops blinking and stays green, and the unit beeps.
 - → AD7000W is connected to your existing home Wi-Fi network successfully.



- If the WI-FI SETUP indicator on AD7000W does not stay green steadily, it means that the Wi-Fi connection has failed. Please power off both your Wi-Fi router and AD7000W and then power on them again to see whether AD7000W can be connected to your home Wi-Fi network. If the problem remains, try the above procedures again.
- After you finish the above changes or power-off and power-on of AD7000W, the new Wi-Fi network created by AD7000W will disappear.

🔆 Тір

- If you like, you can change the name of your AD7000W in Advanced settings -> AirPlay Device Name on the AD7000W configuration web page. This is helpful when you have multiple Philips AirPlay-enabled devices in your house and you need to distinguish between them.
- If you want to enter the network name (SSID) manually (for example, if you want to hide your SSID), go to Advanced settings -> CONFIGURE MANUALLY on the AD7000W configuration web page.

Restore your Wi-Fi enabled device back to your existing home Wi-Fi setting



• Make sure that the settings at steps 2 to 3 below match your home Wi-Fi network settings you wrote on paper:

1 Select Settings -> Wi-Fi on your iPod touch/iPhone/iPad.

• Or open the list of available Wi-Fi networks on your PC/Mac.

Settings	_
Airplane Mode	OFF
🛜 Wi-Fi	
Notifications	< bit
Carrier	>
Sounds	>
Brightness	>
Wallpaper	>
General	>

2 Select your network name (SSID) from the list of available wireless networks.

Settings Wi-Fi Netw	orks		
Longo III			n l
Bellage and	F		
angewild in	C	Ban Balan Hy You Yola 	
Project Statements			
The same		? 📀	
v 🕟	A *	रु 📀	
Other	لر	>	
Ask to Join Networks	s ON		
Known networks wi automatically. If no know	ll be joine vn networ	d ks are	

- **3** Enter the network key if required.
- 4 Wait until successful Wi-Fi connection to your home Wi-Fi network.

5 Play

Stream audio from your iTunes music library to AD7000W



 Make sure that your iTunes host device is connected to the same Wi-Fi network as AD7000W.Your iTunes device can be an iPod touch/iPhone/iPad installed with iOS 4.3 (or later) or a Wi-Fi enabled PC/Mac installed with iTunes 10 (or later).

Stream from your iPod touch/iPhone/ iPad

- 1 Launch the **iPod** application on your iPod touch/iPhone/iPad.
- 2 Tap on the AirPlay icon.



3 Select Philips_Fidelio XXXX (or user customized name) from the AirPlay list.



Select a media file and start play.
 After a while, you will hear music from AD7000W.





- If you fail to hear music after successful setup, do one of the following on your iPod touch/iPhone/iPad:
- (1) Disconnect and then re-connect to the same Wi-Fi router again;
- (2) Close all applications running at the background;
- (3) Power off and then power on your iPod touch/ iPhone/iPad again.

Stream from your PC/Mac

1 Launch iTunes 10 (or a later version) on your PC/Mac.

2 Click the AirPlay icon on the window.

000							
		and the second s		£		 Arrest Aug	
Company Company	and the second s	A max A	No. Mail 104 Address 105 Address 104 Address 105 Address 104 Address 105 Address 106 Address 107 Address 108 Address 109 Address 100 Address 101 Address 102 Address 103 Address 104 Address 105 Address		-		
						1	

3 Select Philips_Fidelio_AirPlay XXXX (or user customized name) from the AirPlay list.

a ba pa juna pas	a general be				-				
000	10.00			10	Ś		_	(Ch hand have
end Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Technique Te		- Anne - Anne - Canada and Anno - Canada and Ann	V D My Ph Multiple	Comput ips_Fide	er ll 2 lio 21	583B		邀	(University
									G1.7

4 Select a media file and start play.

→ After a while, you will hear music from AD7000W.

In the part parts of	the defendence of the				-							
-		- 20		100	to the West					(all a a)	Constant Sec.	_
			* 1° 11								Concession in which the	_
1000.001	March March	1.000		The 240	-		-					
		1.14.0	1940	Dist and supply								
10 mm		-0 4 1400	Niske Nilseen	452 (10000)								
12717844		10. 11.144	10/994	AN DECIMANNE								
2 house		1.1.484	Particil .	ON Reference	10044							
1. Aug.		10 . 9 646	176.54	an faladerer	tenere!							
		1. 1.066	(a) ++(p+(p))	10.004404								
(Difference)		8.0.000	11.18	10.0000000								
<u></u>		1.4.480		4.0 1000-000								
Charlen .		it. I start	HOLEN BE STORE HERE.	ALL INCOMPOSITION								
		(i bais		And man inter	- 1446							
and the second		10. 9 1000	1 m 100	THE REPORT OF								
		4 4610	one resident shere a	AND THREE ADDRESS.	. 640							
		1.1.00		And interviewing the								
(Bring)		1. 1 1.00	And in	in its home teamsed	iam.							
2 million		1.1100	adaption of	An independent								
U Deserve.		V int	Anne	+4	-							
D Tartina Tart			_									
				Philips	Fide	elio 2	2158	зв	1000	\$2 (1)	_	
									_			
										_		
				and the second se	-		_	_	_		CONTRACTOR OFFICE	

🔆 Tip

- When you stream audio from your iTunes music library on a PC/Mac, you can select more than one AirPlayenabled devices (if available) at step 3 to stream music to all of them at the same time.
- If you are using an earlier version of iTunes, the AirPlay icon may be \$ instead of .

Control play

You can select different play options from either your iTunes host device or AD7000W.



- Make sure that you have successfully streamed audio from your iTunes music library to AD7000W.
- To pause or resume play, press ► II.
- To adjust volume, press +/- repeatedly.

🔆 Тір

 If you are streaming music from a PC/Mac, to control music play from AD7000W, remember to tick Allow iTunes audio control from remote speakers in Edit -> Preferences -> Devices on iTunes.

Use advanced sound settings

If your iTunes host device is an iPod touch/ iPhone/iPad:

For advanced sound settings and additional features, you can use your iPod touch/iPhone/ iPad to download the **Philips Fidelio** application from Apple App Store. It is a free application from Philips.

If your iTunes host device is a Wi-Fi enabled PC/Mac:

For advanced sound settings, you can use the equalizer available on iTunes directly (View -> Show Equalizer).



• See the iTunes help documentation for more details.

Play/charge your iPod/iPhone/ iPad through USB socket

- Note

• The USB socket is only compatible with iPod/iPhone/ iPad.

You can play or charge your iPod/iPhone/iPad through the USB socket with an Apple USB cable (not supplied).

If you have stopped audio streaming by AirPlay, after successful USB connection, the unit switches to the USB source automatically.



- Connect an Apple USB cable (not supplied) to:
 - the USB ↔ socket on the back of AD7000W.
 - the dock connector on your iPod/ iPhone/iPad.

Compatible iPod/iPhone/iPad

The USB socket supports play and charge of the following iPod, iPhone, and iPad models.

- iPad 2
- iPad
- iPhone 4

- iPhone 3GS
- iPhone 3G
- iPhone
- iPod classic
- iPod 5G
- iPod 4G
- iPod nano (2nd, 3rd, 4th, 5th, and 6th generation)
- iPod touch (1st, 2nd, 3rd, and 4th generation)

Play from an external device

You can also listen to an external audio player through the unit.

If you have stopped both audio streaming by AirPlay and play through the USB socket, the unit switches to the MP3 link source automatically.



- Connect the supplied MP3 link cable to:
 - the MP3-LINK socket on the back of the unit.
 - the headphone jack on an external audio player.

6 Update firmware

- Note

• You can only update the firmware from a PC/Mac.

Download the update file



- 1 On your PC/Mac, go to www.philips.com/ support.
- 2 Enter the model number to find the latest firmware upgrade file available.
- **3** Save the upgrade file to your hard drive.

Update from the configuration page

Warning

 Always connect your AD7000W to AC power for firmware upgrade. Never power off your AD7000W during firmware upgrade.

- Note

- To use an Internet browser other than Apple Safari on your PC/Mac, remember to go to the Wi-Fi router configuration page and write down the IP address of your AD7000W. See the user manual of your Wi-Fi router for how to find the IP addresses of devices connected to the Wi-Fi router.
- 1 Power on AD7000W (see 'Turn AD7000W on' on page 9).
 - H takes about 35 seconds for the unit to boot up. During boot-up, the WI-FI SETUP indicator on the back of the unit blinks green quickly.
 - ➡ After boot-up, you can hear a beep and the WI-FI SETUP indicator turns to green steadily. AD7000W is connected to the last configured Wi-Fi network automatically.
- 2 Make sure that AD7000W and your PC/ Mac are connected to the same Wi-Fi router.
- 3 Open Apple Safari on your PC/Mac, then select 'Philips_Fidelio XXX' from the Bonjour pull-down list.
 - Or open any other Internet browser on your PC/Mac, then type in the IP address of AD7000W (available on the Wi-Fi router configuration page) at the address bar.
 - → The AD7000W configuration web page is displayed.



4 Follow the on-screen instructions to complete the firmware update.

- Note

- In case the firmware update fails, you can try the above procedures again.
- After successful firmware update, if there is any problem with the Wi-Fi connection, press and hold & on AD7000W for more than 5 seconds to reset the device, and then try to set up the Wi-Fi network for AD7000W again (see 'Connect to your home Wi-Fi network for AirPlay' on page 10).

7 Product information

- Note

• Product information is subject to change without prior notice.

Specifications

Amplifier

Rated Output Power	2 X 5 W RMS
Frequency Response	63 Hz - 18 kHz, ±3 dB
Signal to Noise Ratio	> 90 dB
MP3 Link	600 mV RMS 20 kohm

Speakers

Speaker Impedance	8 ohm
Speaker Driver	66 mm full range
Sensitivity	82 dB/m/W

Wireless

Wireless	802.11b/g
standard	5
Wireless	WEP (64 or 128 bit),
security	WPA/WPA2 (8-63 characters)
Frequency	2412 - 2462 MHz (CH1-
range	CH11) (for /79, /37, /55, /97)
	2412 - 2472 MHz (CH1-
	CH13) (for /12, /10, /05)
PBC (one	Yes
button push)	

General information	
AC power	Input: 100 - 240
	V~, 50/60 Hz
	1A/1.2 A
	Output: 12 V ===
	3.0 A
Operation Power	25 W
Consumption	
Power Consumption in	< 0.5 W
Standby Mode	
Dimensions	
- Main Unit (L x W x H)	298 × 98 ×
	168 mm
Weight	
- With Packing	2.02 kg
- Main Unit	1.36 kg

8 Troubleshooting

Warning

• Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www. philips.com/welcome). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

No power

- Make sure that the AC power plug of the device is connected properly.
- Make sure that there is power at the AC outlet.

No sound

- Adjust the volume.
- Check the Wi-Fi network connection.
 Set up the network again if needed (see 'Connect to your home Wi-Fi network for AirPlay' on page 10).

No response from the unit

- Press and hold & on AD7000W for more than 5 seconds to reset the device. Then set up the Wi-Fi network for AD7000W again (see 'Connect to your home Wi-Fi network for AirPlay' on page 10).
- Disconnect and reconnect the AC power plug, and then switch on the device again.

Wi-Fi network connection failed

- Check if your Wi-Fi router is Wi-Fi 802.11b/g certified. This device is only compatible with Wi-Fi 802.11b/g certified routers.
- If your Wi-Fi router is Wi-Fi 802.11n certified, make sure to enable the 802.11b/g mode. AD7000W does not support connection to routers with 802.11n only.
- This device does not support the WPS-PIN method.
- If your Wi-Fi router supports WPS and the WPS-PBC method but fails to connect to AD7000W, try the manual Wi-Fi setup method (see 'Scenario 2: Connect to a non-WPS router' on page 11).
- Enable SSID broadcast on the Wi-Fi router.
- Keep away from potential sources of interference which may affect Wi-Fi signal, such as microwave ovens.
- If you fail to use your PC for Wi-Fi network setup, check whether your PC is using a Wi-Fi network. You cannot use Ethernet connection for AirPlay network setup.
- Make sure that the SSID name of your home router consists of alphanumeric characters, with no space or special characters like %/#/* inserted.
- If you choose to rename the AirPlay device 'Philips_Fidelio XXXX' in the setting menu, do not use special characters or symbols.
- For some new types of Wi-Fi routers, a network name (SSID) may be created automatically when you use WPS for connection. Always change the default network name (SSID) to a simple one that consists of alphanumerical characters, and also change the Wi-Fi security mode to secure your network.

Occasional breaking of AirPlay music streaming

Do one or all of the following:

- Move AD7000W closer to your Wi-Fi router.
- Remove any obstacles between AD7000W and your Wi-Fi router.
- Avoid using Wi-Fi channel which is overlapped by the nearby Wi-Fi network.
- Check if your network speed is fast enough (in cases where multiple devices share the same router, the AirPlay performance may be affected).Turn off the other devices connected to your home router.
- Enable the Quality of Service (QoS) option (if available on the Wi-Fi router).
- Turn off other Wi-Fi routers.

No AirPlay icon on my iTunes host device

- Make sure that AD7000W is already connected to your home Wi-Fi network.
- Before you open iTunes, make sure that you have enabled Bonjour service in your PC. Take Windows XP for example: to enable the service, you can click Start->Control Panel, and double-click Administrative Tools-> Services->Bonjour Service, then click Start followed by OK on the pop-up menu.
- If the problem remains, try to restart AD7000W.

AirPlay connection failed with Mac or PC

- Temporarily disable the firewall and security software to see whether it blocks the ports that AirPlay uses to stream content. See the help documentation of your firewall and security software on how to unblock the ports used by AirPlay.
- When you use iPod Touch/iPhone/iPad/ Mac/PC for AirPlay, if the music play breaks or stops, try to restart your iPod Touch/ iPhone/iPad, iTunes or AD7000W.
- Video streaming or FTP downloads may overload your router and therefore may cause interruptions during AirPlay music play.Try to reduce the load of your router.

Download from Www.Somanuals.com. All Manuals Search And Download.





© 2011 Koninklijke Philips Electronics N.V. All rights reserved. AD7000W_12_UM_V1.0

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com