

# Quick start guide










Step A *Connect*

Step B *Setup*

Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.

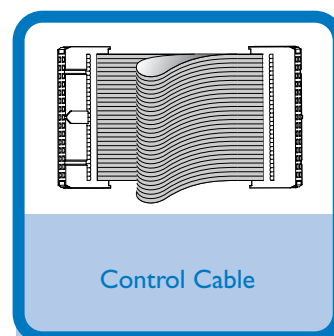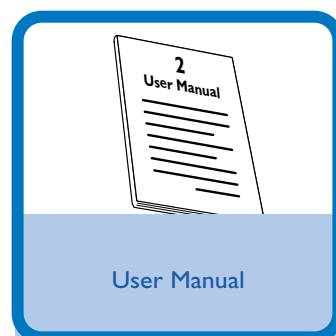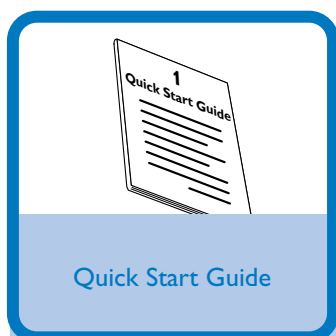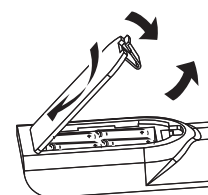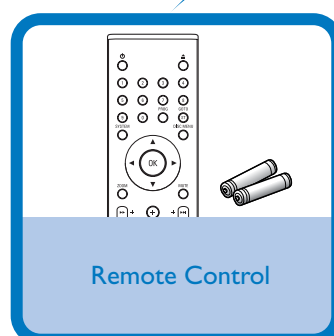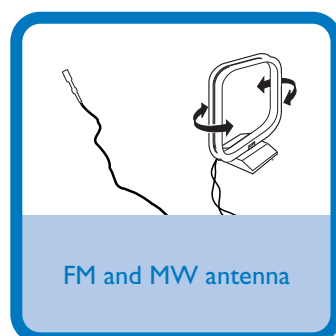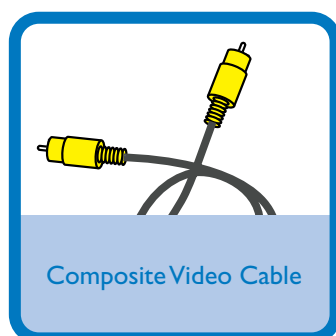

# Step A *Connect*

**1** Connect the speakers to the **SPEAKERS** (8ohm) terminals with two speaker cables. Right speaker to "R" and left speaker to "L", red wire to "+" and silver wire to "-".

**2** For radio reception, connect the supplied MW loop antenna wires to the **AMAERIAL** jack.

### *Tip*

*It is unnecessary to connect the FM pigtail antenna since it is fixed to the main unit.*


**3** Connect the serial port marked **CONTROL CABLE** at the rear of the DVD player to the same port at the rear of the power amplifier with the supplied control cable.

**4** Connect the **VIDEO OUTPUT** jack at the rear of the DVD player to the video input jack on the TV using the supplied video cable (yellow).

### *Tip*



*See the User Manual for other TV connection options.*

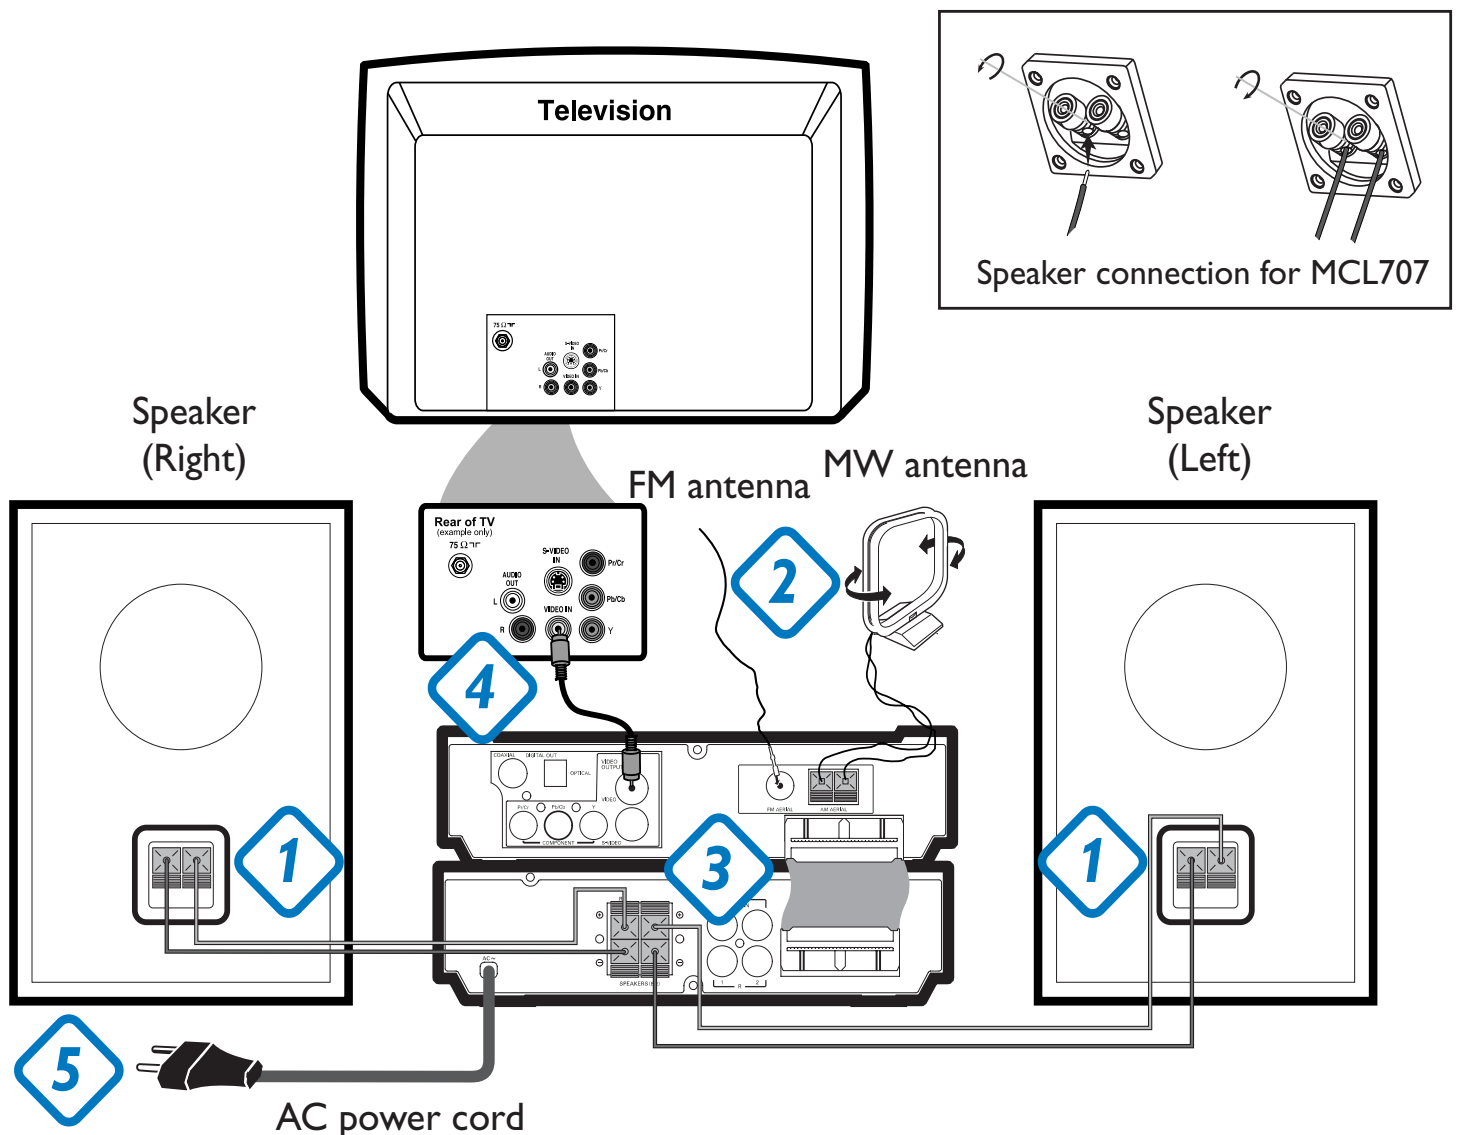
**5** Connect the power cord of the DVD system to the AC power outlet.



# Step B Setup

## Setting up the TV

- 1 Press **STANDBY ON**  on the front panel of the DVD player or  on the remote to switch the DVD system on and then select the disc source.



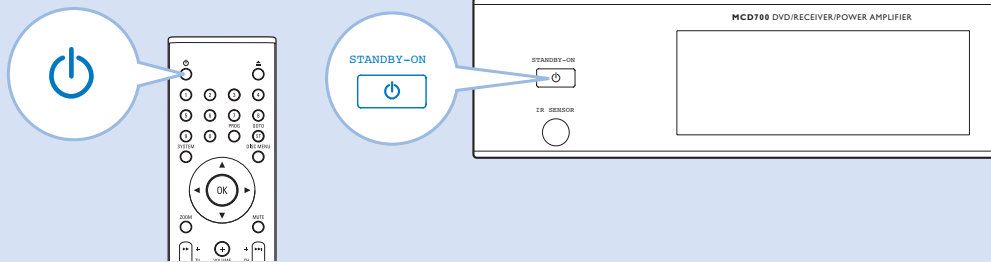


- 2 Switch on the TV set and set to the correct video-in channel until the blue Philips DVD background screen appears on the TV.

**Tip**  
See your TV manual for more details.

## Setting TV type and preferences



- 1 Press **SYSTEM** on the remote to enter the system menu.
- 2 Press **◀▶** on the remote to enter the 'Preference Page'. Then, select the color system matching your TV and the preferred audio, subtitle and disc menu languages using **◀▶▲▼** and **OK** on the remote.
- 3 Press **◀▶** on the remote to enter the 'General Setup Page' and select the preferred OSD language using **◀▶▲▼** and **OK** on the remote.

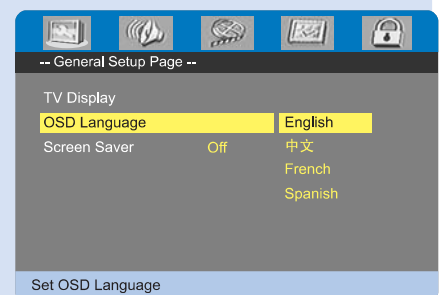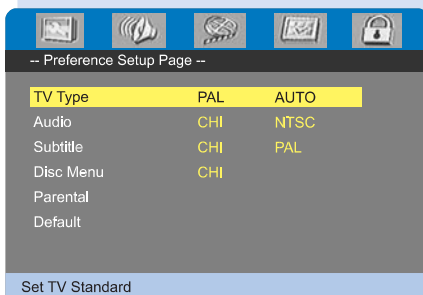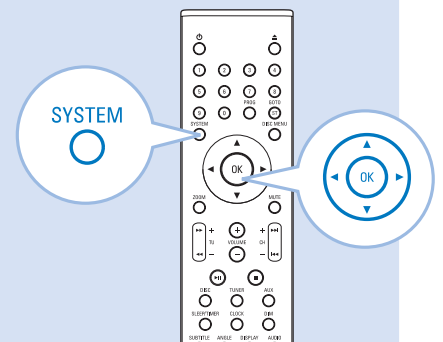

**Tip**  
You can enter the 'Preference Page' in full stop mode only.


## Loading a disc

- 1 Select the disc source, then press **OPEN•CLOSE** at the top of the DVD player or  on the remote.

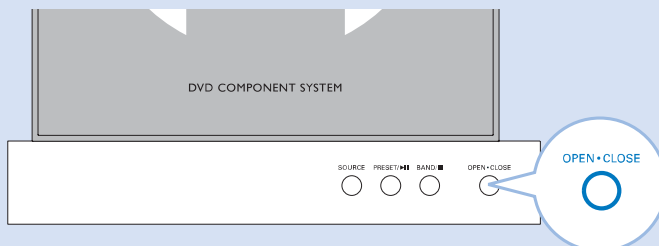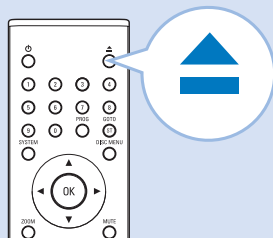



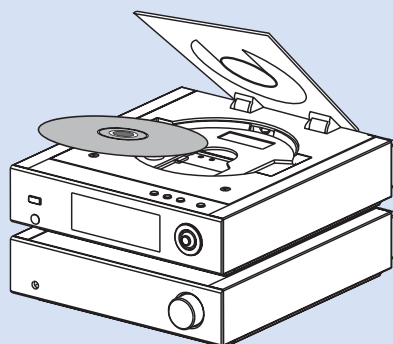

- 2 Load in a DVD disc with the label side facing up.

- 3 A disc menu pops up.




## Playback

- 1 Use     and **OK** or **Numeric Keypad (0-9)** on the remote to select a playback feature or item.





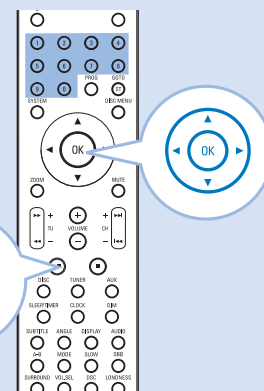


 
### Tip

Refer to the User Manual for playback of other types of discs.

- 2 Press **PRESET/▶||** (or  on the remote) to start playback.



## Types of Discs used on this DVD System

Type	Record	Playback	Edit
 DVD+RW	X	✓	X
 DVD VIDEO	X	✓	X
 VIDEO CD	X	✓	X
 Super VCD	X	✓	X
 AUDIO CD	X	✓	X
 VIDEO CD	X	✓	X
 MP3-CD	X	✓	X
 WMA	X	✓	X



2005 © Koninklijke Philips Electronics N.V.  
All rights reserved.

[www.philips.com](http://www.philips.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>