

3 Enjoy


Start recording

Recording from the TV or an external device

- 1 Insert a recordable DVD into the recorder.
- 2 Press **SOURCE** repeatedly to select the source to record from. (eg, TUNER, CAM1, DV, EXTI or EXT2).
- To record a TV programme, use **up ▲** or **down ▼** keys to scroll through the channels, or press 0 -9 to select the channel that you want to record.
- 3 Press **REC MODE** repeatedly to select a desired recording mode. It determines the picture quality and recording time to the recordable DVD.

Record Quality	Hours of Recording that can be stored 4.7 GB DVD±R/±RW disc	Types of discs for recording
High Quality HQ	1	DVD+RW, DVD+R
Standard Play SP	2	DVD-RW, DVD-R
Long Play LP	3	DVD-R
Extended Play EP	4	DVD-R
Super Long Play SLP	6	DVD±R DL

- 4 Press **RECORD ●** to start recording.
- To set the recording length, press **RECORD ●** repeatedly to toggle between 30, 60 and 90 minutes recording time.
- 5 To stop the recording before the scheduled time, press **STOP ■**.

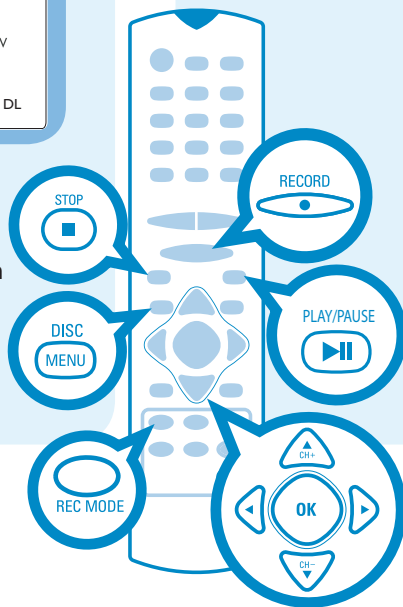

Start playback


- 1 Press **OPEN/CLOSE ▲** to open the disc tray, load in a disc and close the disc tray.
- 2 Press **DISC MENU**, then use **up ▲** or **down ▼** keys to select a title.
- 3 Press **PLAY/PAUSE ►||** to start playback.
- 4 To stop playback, press **STOP ■**.

Quick Start Guide




- 1 Connect
- 2 Set up
- 3 Enjoy


What's in the box?

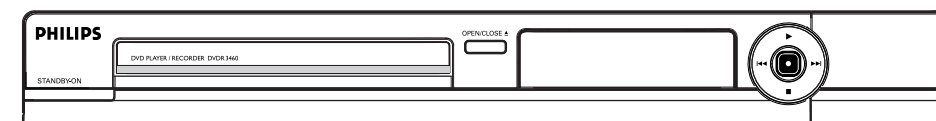


DVD Player/ Recorder

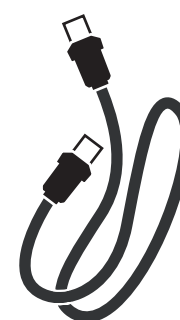

RF antenna Cable

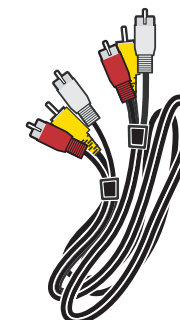

Audio/video cable

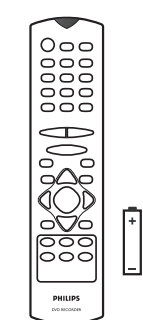

Remote Control and 2 batteries



Need help?

User Manual

See the user manual that came with your Philips recorder.

Online

Go to www.philips.com/welcome




2007 © Koninklijke Philips N.V.
All rights reserved.

12 NC 3139 245 2664I

1 Connect


Start with the 'Basic Connection.'
If you have a Cable Box or Satellite Receiver, follow the instructions for 'Connection with a Cable Box or Satellite Receiver'.

Basic Connection

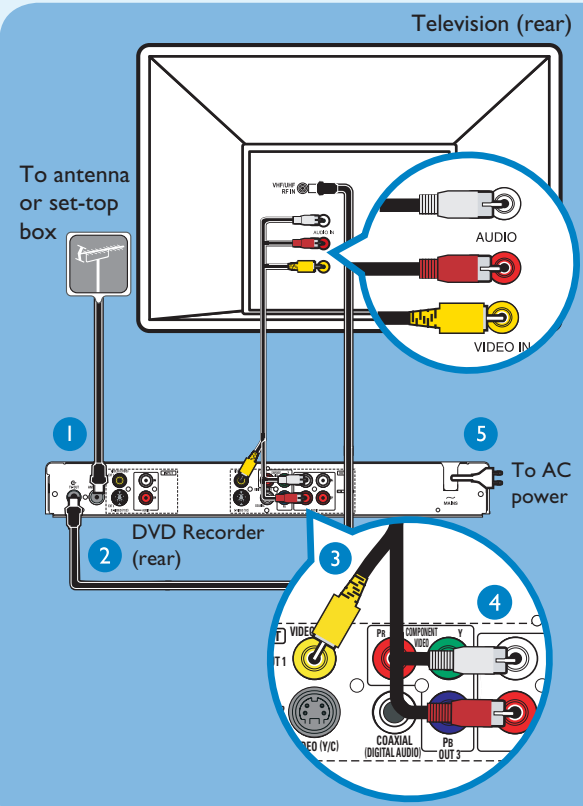

- 1 Disconnect the antenna cable from your TV and connect it to the **ANTENNA-IN** socket on this recorder.
- 2 Use an RF antenna cable to connect the **TV-OUT** socket on this recorder to the Antenna In socket on the TV.
- 3 Use the supplied video cable (yellow plug) to connect the **VIDEO (CVBS) OUTPUT** jack on this recorder to the VIDEO IN jack on the TV.
- 4 Use the supplied audio/video cable (red/ white plugs) to connect the **AUDIO OUTPUT** jacks on this recorder to the AUDIO IN jacks on the TV.
- 5 Connect the power cable from the recorder to an AC power outlet.

Connection with a Cable Box or Satellite Receiver

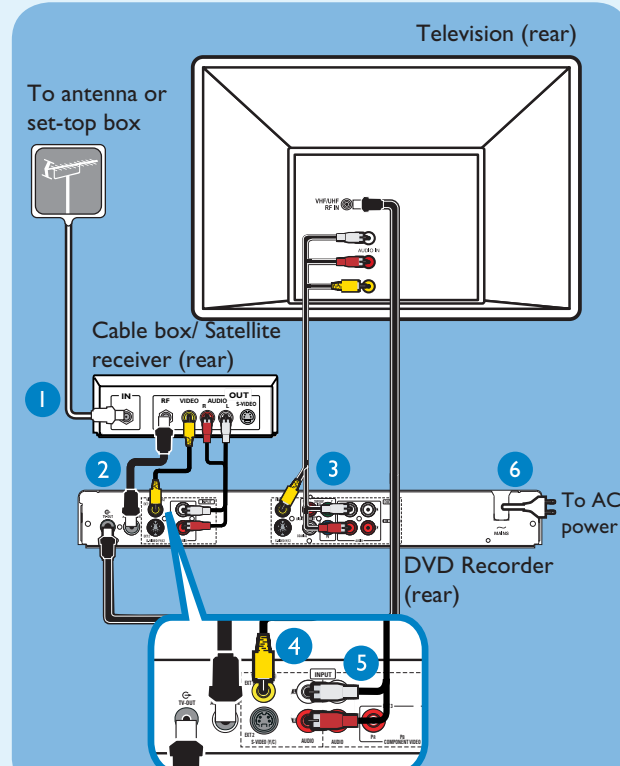

- 1 Keep the existing antenna connection from the Antenna TV signal to the Cable Box/ Satellite Receiver.
- 2 Use an antenna cable to connect the **ANTENNA-IN** jack on the recorder to the RF OUT jack on the Cable Box/Satellite Receiver.
- 3 Follow steps 3 to 5 under 'Basic Connections' before you proceed to step 4 below.
- 4 Use the yellow video cable (not supplied) to connect the **VIDEO (CVBS) INPUT** jack on this recorder to the VIDEO OUT jack on the Cable Box/ Satellite Receiver.
- 5 Use the audio cable (red/white plugs – not supplied) to connect the **AUDIO INPUT** jack on this recorder to the AUDIO OUT jack on the Cable Box/ Satellite Receiver.


Note The antenna connection may be different depending on the Satellite Receiver/Cable Box. Refer to its user manual for proper antenna connection.

For additional connection diagrams, see the accompanying User Manual.

2 Set up

A Finding the viewing channel

- 1 Press **STANDBY-ON** on the recorder.
- 2 Turn on the TV and other connected devices (e.g. Cable Box, Satellite Receiver). You should see the welcome menu.

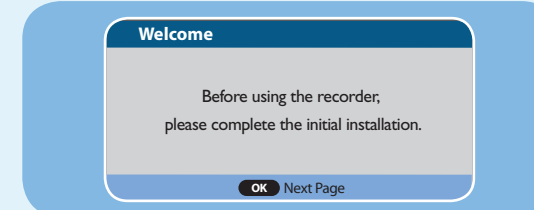


- 3 In case you don't see the recorder's welcome menu, press the Channel Down button on the TV's remote control repeatedly (or AV, SELECT, - button) until you see the menu. This is the correct viewing channel for the recorder.

B Start basic setup

Use the recorder's remote control and follow the on-screen instructions to complete the installation.


- 1 Press **OK** on the remote control. Use **▲▼** keys to select the tuner mode.

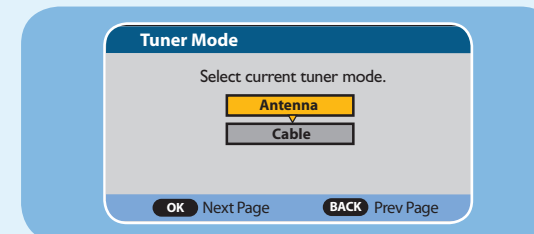

{ **Antenna** }
if the recorder is connected directly to an indoor or outdoor antenna.


{ **Cable** }
if the recorder is connected directly to the cable signal or through set-top box.

- 2 Press **OK** on the remote control. The auto scan menu appears and the automatic TV channel search starts.

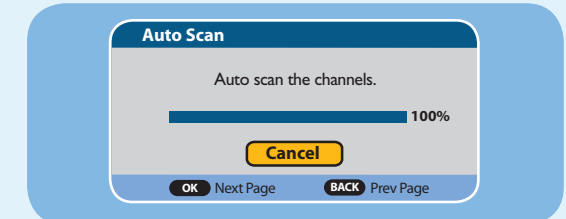

Note This process may take several minutes.


- 3 Press **OK** on the remote control to continue. The clock setting menu appears.

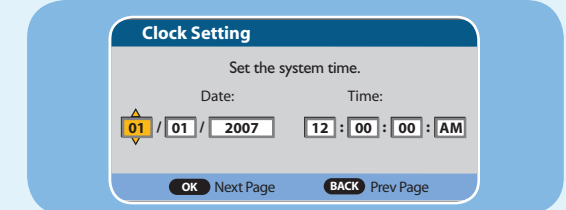

- 4 Use **▲▼** keys to set the current date and time, use **◀▶** keys to select different entry fields.

Note You may use the numeric keypad **0-9** on the remote control to enter the date and time.

- 5 Once complete, press **OK** to confirm. The final installation screen appears.

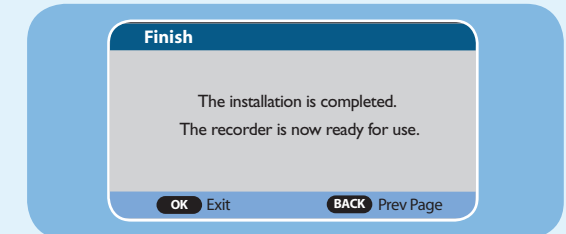

- 6 Press **OK** to exit.

The DVD recorder is now ready for use.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>