 


PHILIPS

electronic toaster



HD2548 / HD2528



PHILIPS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using.

1. Do not touch hot surfaces. Use handles or knobs.
2. To protect against electrical shock, do not immerse cord, plug, or Toaster in water or other liquids.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts or before cleaning appliance.
5. To disconnect, make sure lever knob is in up position, then remove plug from electrical outlet. Remove plug by gripping plug body and pulling it from the outlet. Never yank or twist cord to unplug.
6. Do not operate this appliance with a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. To avoid the risk of electrical shock, do not disassemble; return the Toaster to an Authorized Norelco Service Location for examination, repair, or adjustment. Incorrect reassembly can cause a risk of electrical shock when Toaster is used.
7. Use this appliance only for its intended use as described in this manual. Do not use accessory attachments not recommended by Philips Electronics North America Corporation as they may cause fire, electric shock or injury.
8. Do not use outdoors or operate where oxygen is being administered or in the presence of explosive and/or flammable fumes.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.

10. Let the Toaster cool completely before putting away.
11. Do not place on or near a hot gas or electric burner, or in heated oven.
12. Do not operate Toaster without correctly replacing Crumb Tray. Failure to clean Crumb Tray may result in a fire hazard.
13. Oversized foods, metal foil packages, or utensils must not be inserted in toaster as they may involve a risk of fire or electrical shock.
14. A fire may occur if Toaster is covered by or touching flammable material, including curtains, draperies, and walls, etc, when in operation. Do not operate under wall cabinets.
15. Do not attempt to dislodge food while Toaster is plugged in. Unplug Toaster and allow to cool completely before carefully removing obstruction. Do not use a knife or similar sharp tool as these may cause damage to heating elements.
16. Do not clean with metal scouring pads. Pieces can break off pad and touch electrical parts, involving a risk of electrical shock.
17. This Toaster is intended for household use ONLY; it is not for commercial or industrial use.
18. Do not operate while unattended. Unplug after each use.
19. Extreme caution must be used when moving an appliance containing hot food, frosting, or juicy fillings.
20. To disconnect the Toaster from electrical outlet, make sure Lift Lever is in the up position, then remove plug from electrical outlet.
21. Any Service of the Toaster should be performed by an Authorized Norelco Service Location.

SAVE THESE INSTRUCTIONS

SPECIAL INSTRUCTIONS

This Philips Toaster has a short cord to reduce the hazards of becoming entangled in or tripping over a longer cord. An extension cord may be used if the rating is equal to or greater than the rating of the Toaster. Use an extension cord rated 13 amperes or greater. Care must be taken to arrange extension cord so that it will not drape over countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Operating the Toaster and another appliance at the same time from the same electrical circuit could cause an electrical overload condition, which would blow the fuse or trip the circuit breaker.

WARNING:

- Always use the Light or Low setting for pastry items because frosting and fillings can ignite. If frosting or filling does drip into Toaster well, follow instructions in "Cleaning" before using the Toaster again to prevent risk of fire.
- Immediately unplug Toaster if fire or smoke is observed.
- Please read and save this Instructions For Use booklet.

SPECIAL POLARIZED PLUG INSTRUCTIONS

This Philips Toaster has a polarized plug (one blade is wider than the other.)

To reduce the risk of electric shock:


- Plug will fit into polarized outlet only one way.
- If plug does not properly fit outlet at first, reverse it.
- If plug still does not fit, contact a qualified electrician.

DO NOT ATTEMPT TO DEFEAT THIS SAFETY FEATURE


Table of Contents

Features	2
Toasting Bread	3-4
Toasting Frozen Bread	4
Toasting on One Side	4
Reheating Toasted Bread	4
Cleaning	5
For Assistance	5
Warranty	Back Cover

 
Features

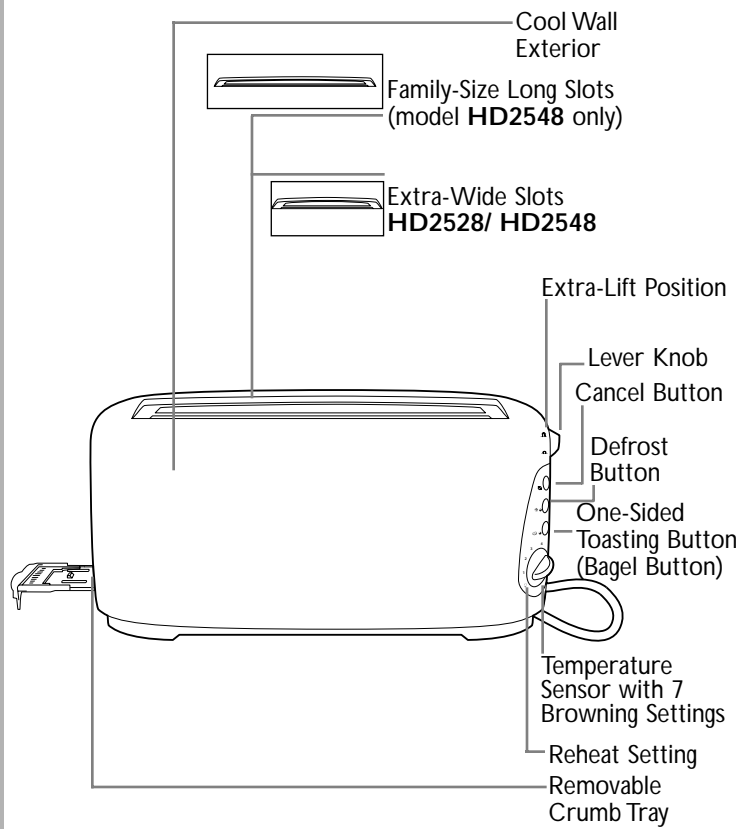

HD2548 / HD2528 Control Panel

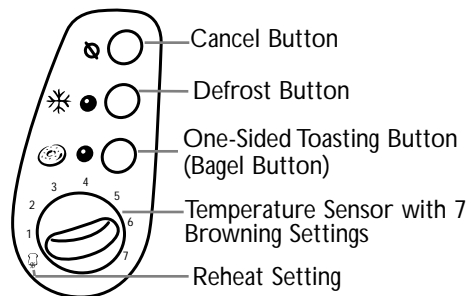 


Toasting Bread

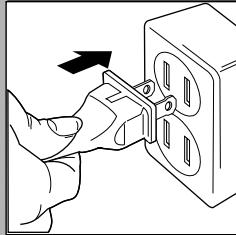 


- 1** Put the appliance in a safe place, away from fire hazards such as curtains, and plug cord into 120V AC electrical outlet.

 You can adjust the length of the cord by looping part of it around the brackets on the base of the appliance.

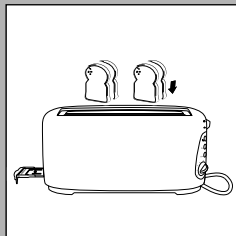

- 2** Put one or two slice(s) of bread in the HD2528 Toaster or a maximum of four slices in the HD2548 Toaster.

 
NOTE: Toaster heating elements may give off an unpleasant smell as they heat up initially. This is normal for a new appliance.

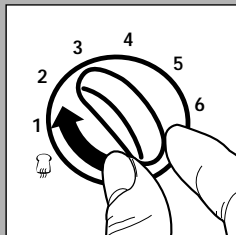

- 3** Select the desired browning setting. The Temperature Sensor and electronic timer provide even toasting results.

Select a low setting (1-2) for lightly toasted bread and a high setting (5-7) for a dark browning result.

 
NOTE: When toasting a series of slices, no re-adjustments of the browning control is required.

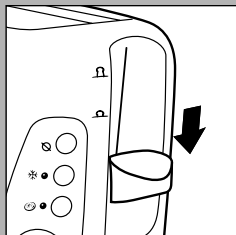


- 4** Push the lever knob down to turn appliance on. The lever knob will only stay down if the appliance has been plugged into electrical outlet.

- 5** When toast is ready, it pops up automatically. Then Toaster turns off the heating elements.

 Never leave Toaster unattended during use.

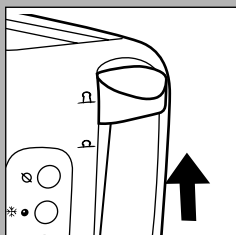

Metal parts of Toaster will get hot while in use. Be careful not to touch them.

 
The Toaster will shut off automatically. You can stop the toasting process and pop the bread up at any time by pressing the Cancel button .

To remove smaller items, you can lift the lever knob slightly further upwards (until it will not go any further).

If the bread gets stuck in the Toaster; unplug cord from electrical outlet, let Toaster cool completely, then carefully remove the bread from the Toaster. Do not use metal objects to do this and avoid touching the metal parts of the Toaster.

Do not toast buttered breads.
Do not toast or warm extremely thin or broken bread slices or very small-size slices such as mini-baguettes, mini-bagels, small cocktail-size breads, bread sticks, etc.

Toasting Frozen Bread

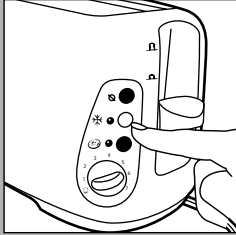


- 1 Follow instructions 1 & 2 in Toasting Bread section and set the temperature sensor to desired browning setting before you push the lever knob down and press Defrost button * .

Toasting on One Side


Perfect for bagels and baguettes:

 - 1 Cut a bagel or baguette (max. 5" in / 13cm) in half.
- 2 Put the halved parts in the Toaster with the side to be toasted facing the middle heater of the toaster.

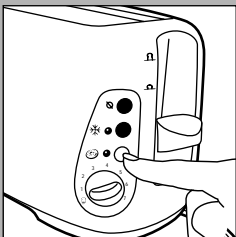

- 3 Follow the instructions in "Toasting Bread" and press One-Sided Toasting button ☺ .

 Reheating Toasted Bread

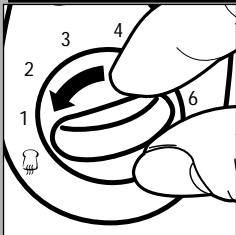


- 1 Follow instructions in 1 & 2 in Toasting Bread section and set the temperature sensor to Reheat setting ☺ . You will hear a click. Then push the lever knob down.

Cleaning


- 1 Unplug cord from electrical outlet.
- 2 Clean the Toaster with a moist cloth.
Do not use abrasive cleaners.

 Never immerse the appliance in water.

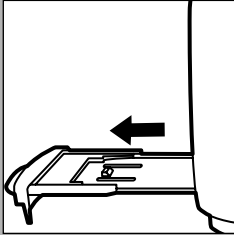

- 3 Remove crumbs from the appliance by sliding the removable crumb tray out of the Toaster.
Do not hold the appliance upside down and do not shake it to remove the crumbs.

 IMPORTANT: To reduce the risk of fire, frequently remove crumbs from Toaster.

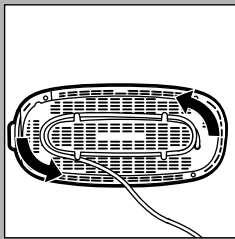

- 4 You may store the cord by looping it around the brackets on the base of the Toaster.

For assistance

For assistance call toll free:

1-800-243-7884
or visit our website: www.philips.com.

FULL TWO YEAR WARRANTY

Philips Electronics North America Corporation warrants each new Philips product, model HD2548 / HD2528 (except cord), against defects in materials or workmanship for a period of two years from the date of purchase and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.*

PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE.

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply take or ship the product postage prepaid to the nearest Authorized Norelco Service Location or call PHILIPS directly at 1-800-243-7884 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

Note: No other warranty, written or oral, is authorized by Philips Electronics North America Corporation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

* Read enclosed instructions carefully.

Manufactured for:
Norelco Consumer Products Company
A Division of Philips Electronics North America Corporation
1010 Washington Blvd., Stamford, CT 06912-0015

For Assistance call 1-800-243-7884

MADE IN CHINA.



This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

PHILIPS and Philips Shield are Registered Trademarks of Koninklijke Philips Electronics N.V.

© 2002 Philips Electronics North America Corporation.
All Rights Reserved.

INNOVATION meets DESIGN



Products subject to change

KITCHEN APPLIANCES from PHILIPS
www.philips.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>