


1. CONNECTING YOUR TV-VIDEO COMBI	4	9. ADDITIONAL FUNCTIONS	21
Connecting the cables	4	How to read TELETEXT	21
Connecting a decoder or other equipment	4	Selecting the display brightness	21
2. INSTALLING YOUR TV-VIDEO COMBI	5	Parental control	22
Initial installation	5	Switching the On-screen display (OSD) on or off	22
Allocating a decoder	5	Switching to 16:9 wide screen picture	23
Manual TV channel search	6	Continuous playback	23
Manual radio channel search	7	Switch off function (SLEEP TIMER)	24
Satellite receiver	7	Switch on function (WAKE-UP TIMER)	24
Special installation functions	7	10. Before you call an engineer	25
Automatic TV channel search	7	Technical terms used	25
Channel Number Allocation	8		
Delete a TV Channel	8		
Setting the language	8		
Setting the time and date	9		
3. IMPORTANT NOTES FOR OPERATION	10		
SUMMARY OF USER GUIDE	10		
User guide (OSD)	10		
4. TV SET FUNCTIONS	11		
Selecting a TV programme	11		
Automatic volume control (AVL)	11		
5. RADIO FUNCTIONS	12		
Selecting a radio channel	12		
Searching a radio channel	12		
6. PLAYBACK FUNCTIONS	13		
Playing a cassette	13		
Playing NTSC cassettes	13		
Tape position indication	13		
Searching for tape position with the picture (picture search)	13		
Still picture	13		
Searching for tape position without the picture (wind and rewind)	14		
Instant View	14		
Automatic search for a tape position (index search) ..	14		
Picture interference	15		
Cleaning the video heads	15		
7. MANUAL RECORDING	16		
Recording without automatic switch-off	16		
Recording with automatic switch-off (OTR one-touch-recording)	16		
Protecting your recordings	16		
Auto-assembling	17		
8. PROGRAMMED RECORDING (TIMER)	18		
'VPS' (Video Programming System) and 'PDC' (Programme Delivery Control)	18		
Programming a recording (with 'VIDEOplus')	18		
Programming a recording (without 'VIDEOplus')	19		
How to check or change a TIMER	20		

OPERATING INSTRUCTIONS IN BRIEF

The remote control

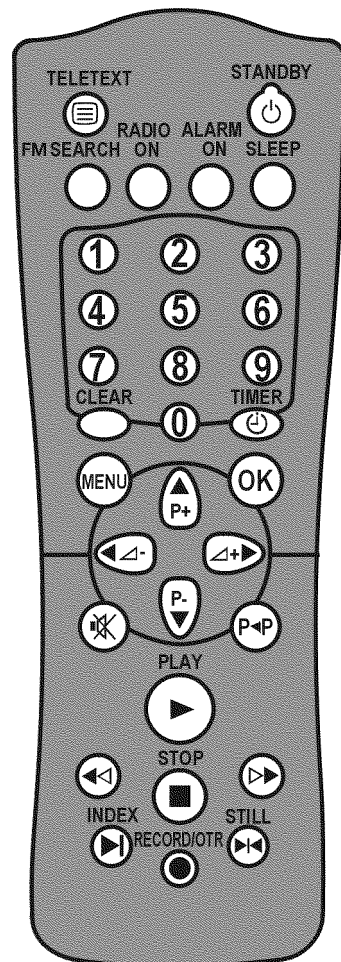

- TELETEXT** **TELETEXT**: To switch TELETEXT on or off
- STANDBY** **Switch off**: To switch off set, interrupt menu function, interrupt a programmed recording (TIMER)
- FM SEARCH** **Radio**: To search for radio channels
- RADIO ON** **Radio**: To switch on the radio and to switch between radio and TV mode
- ALARM ON** **Switch on function**: To switch the radio- or buzzer-alarm on or off.
- SLEEP** **Sleep timer**: To select the switch-off time in 15 minutes intervals.
- 0-9** **Number buttons**: 0 - 9
- CLEAR** **Delete**: To delete last entry or clear programmed recording (TIMER)
- TIMER** **TIMER**: To make a manual TIMER programming or to alter or clear a programmed TIMER
- MENU** **Menu**: To call up or end main menu
- OK** **Store/Confirm**: To store or confirm entry
- P +/- ▲ ▼** **Programme number**: To select a programme number up or down
- ▲ P+** **Select**: One line up
- P- ▼** **Select**: One line down
- ◀ ▲ - / ▲ + ▶** **Volume**: To regulate the volume for the radio and the TV
- ◀ ▲ -** **Select**: Cursor left
- ▲ + ▶** **Select**: Cursor right
- * /** **Volume off**: To switch the volume on or off

P◀P **Previous programme number**: To select the previous programme number

PLAY▶▶ **Playback**: To play a recorded cassette

◀◀ **Rewind**: During STOP and STANDBY: rewind, during PLAYBACK: reverse scanning

STOP■ **Pause/Stop**: To stop the tape, except while a TIMER-recording is being made

▶▶ **Forward wind**: During STOP and STANDBY: forward wind, during PLAYBACK: forward scanning

INDEX▶▶ **Index search**: In combination with **◀◀** / **▶▶**: to search for previous/next recording on the cassette

RECORD/OTR● **Record**: To record the programme selected

STILL▶▶ **Still picture**: To stop the tape and show a still picture

Coloured TELETEXT- buttons: To select TELETEXT pages/chapters directly


(red) Select page/chapter shown in red at the bottom of the screen

(green) Select page/chapter shown in green at the bottom of the screen

(yellow) Select page/chapter shown in yellow at the bottom of the screen

(blue) Select page/chapter shown in blue at the bottom of the screen

Front of the set

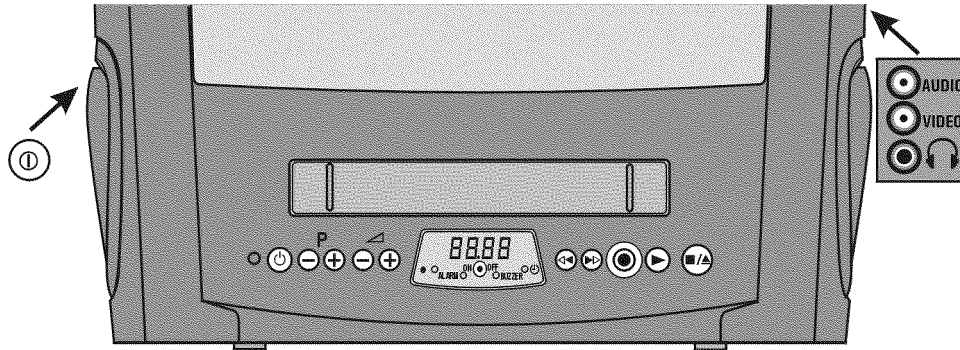

① Power switch : To switch off the set
Beware: When you switch the set off with the power switch, TIMER-recordings are not possible!

⏻ Standby : To switch off, interrupt a function, interrupt a programmed recording (TIMER)

P +/- **Programme number** : To select programme number up or down

⏮ +/- **Volume** : To regulate the volume

ON/OFF **Radio** : To switch on the radio and to switch between radio- and TV-mode

⏮ **Rewind** : During STOP and STANDBY: rewind, during PLAYBACK: reverse scanning

⏭ **Forward wind** : During STOP and STANDBY: forward wind, during PLAYBACK: forward scanning

Ⓛ **Record** : To record the programme selected

▶ **Playback** : To play a recorded cassette


■/▲ **Pause/Stop, eject cassette** : To stop the tape and during STOP eject the cassette

AUDIO **Audio input socket**

VIDEO **Video input socket** : To connect a camcorder or videogames

🎧 **Headphones socket** : To connect headphones


Back of the set

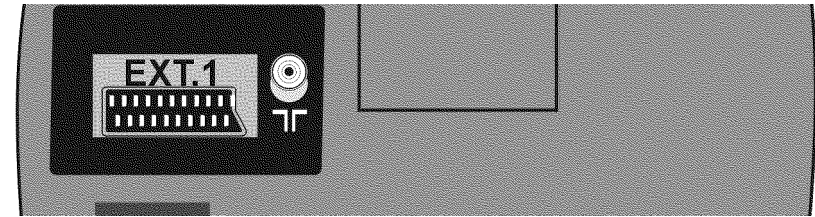

EXT.1 **Scart socket** : To connect a satellite receiver, decoder, video recorder, etc.

📡 **Aerial input socket** : To connect the aerial cable

The display at the front of the machine

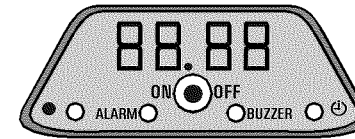

In the display the time, the radio frequency or the radio programme number will be shown.
Also, these lights may light up in the display:

● **Recording light** : Will light up when a recording is being made

ALARM ● **Radio alarm** : Will light up when the radio alarm is activated

●BUZZER **Buzzer alarm** : Will light up when the buzzer alarm is activated

⏻ **Timer light** : Will light up when a Timer recording has been programmed; will flash when a Timer recording cannot start











OPERATING INSTRUCTIONS PHILIPS 14PV340/05, 14PV345/05S

Congratulations! You now own one of the most sophisticated and simple-to-use TV-VIDEO Combinations on the market. With this TV-VIDEO Combi you can record and play VHS-standard cassettes.



Please take the time to read this operating manual before using your TV-VIDEO Combi.

Safety instructions and other notes

-  **Danger: High voltage!**
Do not remove the top cover as there is a risk of an electrical shock!
-  The TV-VIDEO Combi does not contain any components that can be repaired by the customer. To switch off the TV-VIDEO Combi completely you must push the mains switch.
-  Make sure that air can circulate freely through the ventilation slots on the TV-VIDEO Combi.
-  Make sure that no objects or liquids enter the TV-VIDEO Combi. If liquid is spilt into it, disconnect the TV-VIDEO Combi immediately from the power supply and call the After-sales Service for advice.
-  The TV-VIDEO Combi should **not be used immediately after transportation** from a cold to a hot area or vice versa, or in conditions of extreme humidity. After unpacking the TV-VIDEO Combi, it should be allowed to **acclimatize for at least three hours** before installation.
-  These operating instructions have been printed on nonpolluting paper.
-  Deposit old batteries at the relevant collection points.
-  Please make use of the facilities available in your country for disposing of the packaging of the TV-VIDEO Combi in a way that helps to protect the environment.
-  This electronic equipment contains many materials that can be recycled. Please inquire about the possibilities for recycling your old set.
-  VIDEOPlus+ and PlusCode are registered trademarks of Gemstar Development Corporation. The VIDEOPlus+ system is manufactured under licence from Gemstar Development Corporation.

VIDEOPlus+

So that you can identify your machine in the event of theft, enter the serial number (PROD.NO) here. The serial number is printed on the type plate fixed at the rear of the set.

MODEL NO. 14PV340/05, 14PV345/05S



PROD.NO:

This product complies with the requirements of the Directive 73/23/EEC + 89/336/EEC + 93/68/EEC.

Technical information

Measurements in cm (W / H / D): 39.2 / 40.7 / 39.8
Power consumption (Standby): less than 45W (less than 4W)
Voltage: 198-264V 50Hz
Headphones: Output resistance less than 120 Ohms maximum output voltage more than 2.6V at 120 Ohms

Emergency interrupt

You can use the  button on the TV-VIDEO Combi or the remote control to interrupt any function. If you want to interrupt a running Timer recording, hold the  button for several seconds. So if you are having operating problems, you can just interrupt the function and start again. And you can practise operating your set without any worries. No matter which buttons you press, you cannot damage it.

Important!

If you switch the machine off with the mains switch while a Timer recording or a Wake-up Timer has been programmed, you will hear a soft warning signal. This signal should remind you that a programmed recording and the Wake-up function will only work with the machine switched to standby.

Special functions on your TV-VIDEO Combi

SmartClock

If a television programme, which transmits TELETEXT, is stored with programme number 'P01', time and date will be set automatically.

Plug & Play

When you have plugged your TV-VIDEO Combi into the mains, you will be welcomed with an OSD picture. All you have to do is follow the instructions in the "intelligent help line" for the next step. Enjoy the Automatic TV channel search/save function and the automatic time adjustment.

AVL

Automatic Volume Leveller. It minimises sudden changes in TV volume when commercial spots are transmitted.

Digital Studio Picture Control

Philips has developed a system which produces the best possible playback quality. It reduces disturbance on old, worn video cassettes, and emphasises the detail on very good quality cassettes.

VIDEO *Plus*[®]

Simple programming system for TV-VIDEO Combis. Makes programming as easy as making a telephone call. Simply enter the programme code which you will find in your listings magazine.

TURBO ▼DRIVE

The precision tape drive from Philips with rewind times of 100 seconds (E180) and automatic tape length recognition.

Digital Clock Radio

Your Philips TV-VIDEO Combi combines perfect TV and VIDEO picture and sound quality with full digital radio and alarm clock functionality.

Alarm functions

If you wish to be waken up by TV, radio, buzzer or your favorite video tape you can programme your Combi to be switched on at a desired time.



We guarantee that your TV-VIDEO Combi will switch to the new millennium with no problems whatsoever.

1. CONNECTING YOUR TV-VIDEO COMBI

Important for the United Kingdom

This apparatus is fitted with an approved moulded 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- 1 Remove fuse cover and fuse.
- 2 Fix new fuse which should be a BS1362 5A, A.S.T.A. or BSI approved type.
- 3 Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

i Note: * The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

How to connect a plug:

The wires in the mains lead are coloured in accordance with the following code:


BLUE - 'NEUTRAL' ('N')

BROWN - 'LIVE' ('L')

- 4 The BLUE wire must be connected to the terminal which is marked with the letter 'N' or coloured BLACK.
- 5 The BROWN wire must be connected to the terminal which is marked with the letter 'L' or coloured RED.
- 6 Do not connect either wires to the earth terminal in the plug which is marked with the letter 'E' or by the safety earth symbol \perp or coloured green or green-and-yellow.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.


Connecting the cables

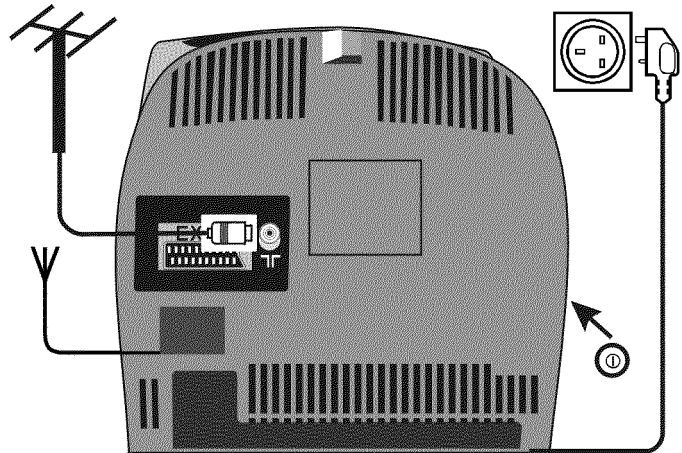

- 1 Insert the aerial plug into the **TR** socket.
- 2 Insert the plug of the mains cable into the wall socket.
- 3 Adjust the radio aerial at the back of the machine to obtain the best possible reception quality by positioning the ends of the aerial in opposite directions.
- 4 If the little red light at the front of the set is not alight, please switch on the set. The power switch **Ⓢ** is located on the left side panel of the set.

Connecting a decoder or other equipment


You can also connect additional equipment to the **EXT.1** socket. For instance, a satellite receiver, decoder or camcorder.

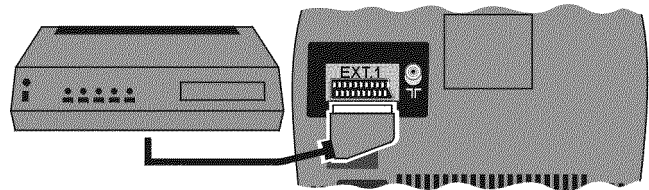


2. INSTALLING YOUR TV-VIDEO COMBI

Initial installation

- 1 Open up the battery compartment of your remote control and place the batteries in it as shown in the picture.

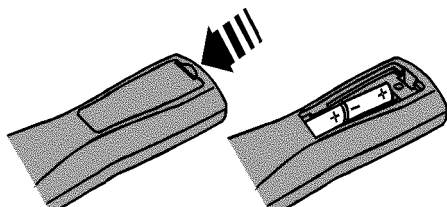

- 2 Close the battery compartment.
- 3 If the aerial (antenna) has been connected to the TV-VIDEO Combi and the radio aerial has been adjusted, press the **OK** button. 'Automatic TV channel search' starts. This picture will appear on the screen:

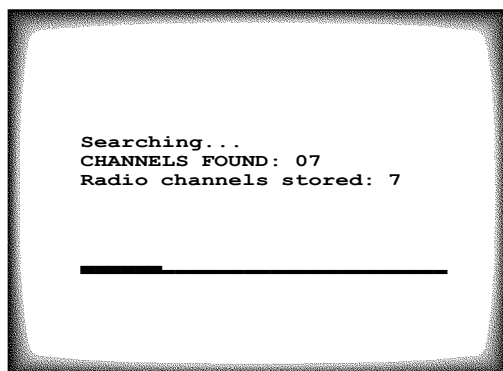

Wait until all TV channels have been found. This can take several minutes.


When 'autoinstall' is ready, 'Installation comp.' will briefly appear on the TV screen.

- ▶ If you have connected a decoder, you must install it as described in the next section.
- ▶ If you have connected a satellite receiver, please read the section 'satellite receiver'.

Allocating a decoder

Some TV stations will send coded TV channels, that you can only watch when you use a decoder. You can connect such a decoder (descrambler) to your TV-VIDEO Combi. With the following function, the connected decoder will automatically be activated for the TV programme you want to watch.

- 1 Choose the TV channel on which you wish to use the decoder with the **P+/-▲▼** button on the TV-VIDEO Combi or the number buttons **0-9** on the remote control.
- 2 Press the **MENU** button on the remote control. The main menu will appear.
- 3 Select the line 'Installation' with the **P-▼** or **▲P+** button and confirm with the **↵+▶** button.
- 4 Select the line 'Manual store' with the **P-▼** or **▲P+** button and confirm with the **↵+▶** button.
- 5 Select the line 'Decoder' with the **P-▼** or **▲P+** button.

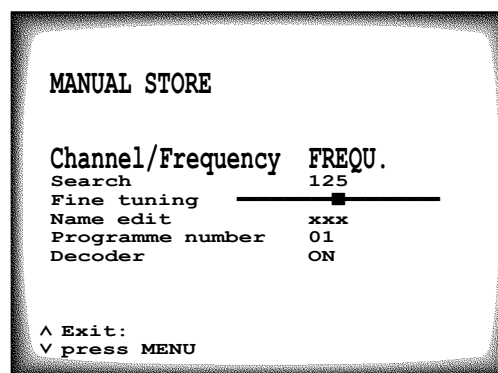


- 6 Select function 'ON' with the **◀◀- OR ▶▶+** button. When you select 'OFF', the function will be switched off.
- 7 Confirm with the **OK** button.
- 8 To end, press the **MENU** button. Your decoder has now been allocated to this TV channel.

Manual TV channel search

In certain cases the 'Automatic TV channel search' may not be able to find all of the TV channels (e.g. coded TV channels). In that case, use this manual method to set the channels.

- 1 Press the **MENU** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the **P-▼** or **▲P+** button and confirm with the **↔+▶** button.
- 3 Select the line 'Manual store' with the **P-▼** or **▲P+** button and confirm with the **↔+▶** button.

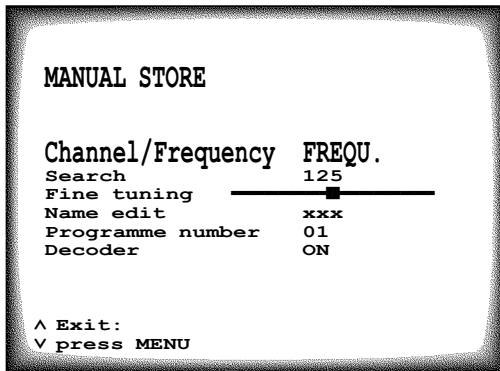


- 4 In the line 'Channel/Frequency', select the display for:
'FREQU.': frequency
'C CH': channel
'S CH': special channel
- 5 If you know the frequency or channel of the desired TV channel, you can enter the data in line 'Search' with the digit buttons **[0-9]**.
i If you don't know the frequency or channel of the TV channel of your choice, press the **↔+▶** button to start the channel search.
- 6 In the line 'Programme number' select the programme number you want e.g.: 'P01', using the **↔-◀** or **↔+▶** button.
- 7 If you want to change the TV channel name, press the **↔+▶** button in line 'Name edit'.

- 8 Select the letter or number you want to change with the **↔-◀** or the **↔+▶** button. Change it with the **P-▼** or the **▲P+** button. Select the next letter or number in the same way.
To store, press the **OK** button.
- 8 If you want to change the automatic tv channel setting, select the line 'Fine tuning'.
With the **↔-◀** or **↔+▶** button you can vary the automatic tv channel setting. **Important:** This re-tuning is only necessary and useful in **special cases**, e.g.: when there are stripes on the picture with cable-TV systems.
- 9 Press the **OK** button to store the TV channel.
i If you want to search for further TV channels, start again at step **5**.
- 10 To end, press the **MENU** button.

Manual radio channel search

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Installation' with the **P-▼** or **▲P+** button and confirm with the **↵** button.
- 3 Select the line 'Radio store' with the **P-▼** or **▲P+** button and confirm with the **↵** button.

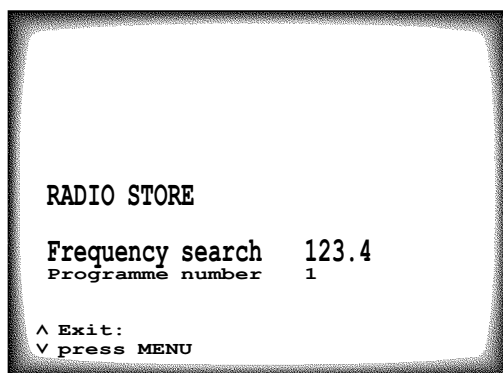

- 4 If you know the frequency of the desired radio channel, you can enter the data in line 'Frequency search' with the digit buttons **0-9**.
 - i If you don't know the frequency of the radio channel of your choice, press the **↵** button to start the channel search.
- 5 In the line 'Programme number' select the programme number you want e.g.: '02', using the **↵-** or **↵+** button.
- 6 Press the **OK** button to store the radio channel.
 - i If you want to search for further radio channels, start again at step **4**.
- 7 To end, press the **MENU** button.

Satellite receiver

You can receive channels from the satellite receiver via the scart socket **EXT.1**.
To do this, select the channel number 'E1' with the **P+/-▲▼** button. You will have to select the channels to be received by the satellite receiver on the receiver itself.


Special installation functions

You can select one of the following installation functions in order to adapt your TV-VIDEO Combi to your own specific requirements.

Automatic TV channel search

Your TV-VIDEO Combi will search for all TV and radio channels.
If you want to start the automatic TV channel search again, then follow the instructions below.

- 1 Press the **MENU** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the **P-▼** or **▲P+** button and confirm with the **↵** button.
- 3 Select the line 'Autoinstall' with the **P-▼** or **▲P+** button.
- 4 Press the **↵** button. The 'Automatic TV channel search' starts.

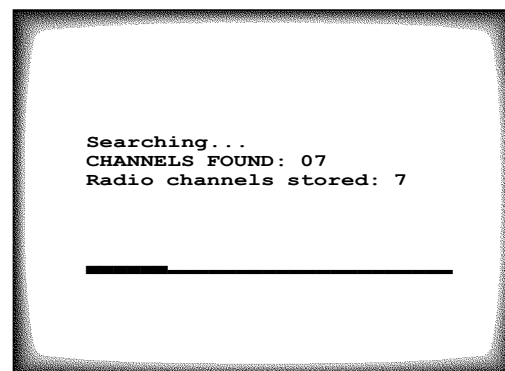


- 5 When the TV channel search is complete, 'Installation comp.' will appear on the screen.

How to search for a TV channel manually, you can read in the section 'Manual TV channel search'.

- i** Automatic Channel Installation:
Some cable companies or broadcasters offer the possibility to install TV channels automatically with 'ACI'. Information about the installation offered and how to select it, will appear on the screen. This set will recognize and install TV channels with 'ACI' automatically. TV channels will be stored from programme number 1 onward. If 'ACI' cannot identify a TV channel, you can search for it using the method as described in the section 'Manual TV Channel Search'.

Channel Number Allocation


- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Installation' with the menu buttons **P-▼** or **▲P+** and confirm with the menu button **↘+▶**.
- 3 Select the line 'Sort channels' with the menu buttons **P-▼** or **▲P+** and confirm with the menu button **↘+▶**.

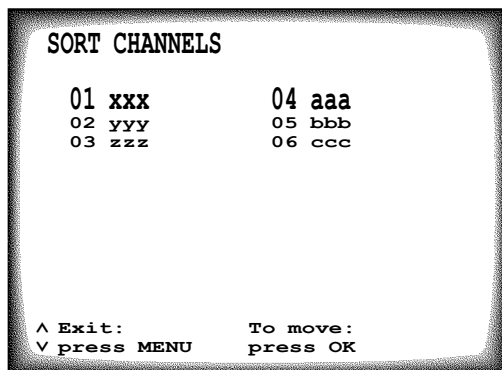

- 4 With the menu buttons **P-▼**, **▲P+**, **◀◁-** or **↘+▶**, select the TV channel to which you want to allocate a programme number and press the **OK** button.
- 5 With the menu buttons **P-▼**, **▲P+**, **◀◁-** or **↘+▶**, shift the TV channel to the programme number you wish to allocate to this TV channel and press the **OK** button.
- 6 Repeat steps **4** to **5** until you have allocated a programme number to all the required TV channels.
- 7 To end, press the **MENU** button.

Delete a TV Channel

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Installation' with the menu buttons **P-▼** or **▲P+** and confirm with the menu button **↘+▶**.
- 3 Select the line 'Sort channels' with the menu buttons **P-▼** or **▲P+** and confirm with the menu button **↘+▶**.

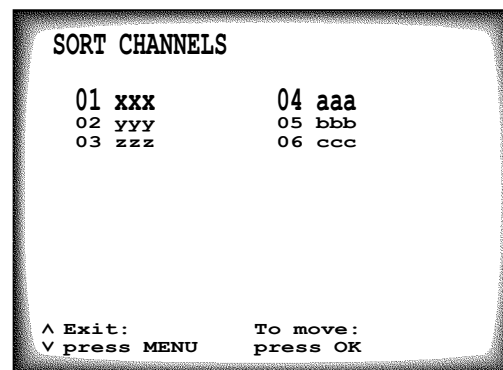

- 4 With the menu buttons **P-▼**, **▲P+**, **◀◁-** or **↘+▶**, select the TV channel you want to delete and press the **CLEAR** button.
- 5 Repeat step **4**, until you have deleted all the required TV channels.
- 6 To end, press the **MENU** button.


Setting the language

You can select the language for the on-screen display (OSD).

- 1 Press the **MENU** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the **P-▼** or **▲P+** button and confirm with the **↘+▶** button.
- 3 Select the line 'LANGUAGE' with the **P-▼** or **▲P+** button.
- 4 Select your language with the **◀◁-** or **↘+▶** button.
- 5 To end, press the **MENU** button.

Setting the time and date

- 1 Press the **MENU** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the menu buttons **P-▼** or **▲P+** and confirm with the menu button **↵**.
- 3 Select the line 'Set clock' with the **P-▼** or **▲P+** button and confirm with the **↵** button.

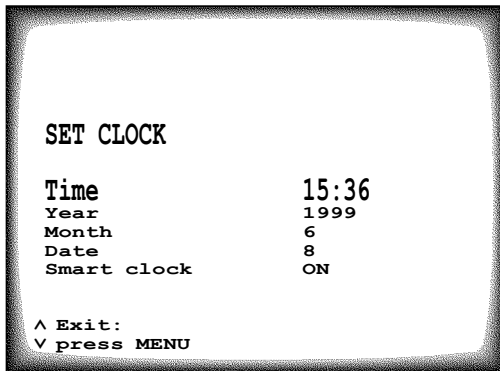

- 4 Check the time in line 'Time'. If required, please change the time with the **0-9** buttons on the remote control.
- 5 Check 'Year', 'Month' and 'Date' in the same way. You can switch between entry fields with **P-▼** or **▲P+** button. Confirm with the **OK** button.
- 6 To end, press the **MENU** button.

- i When you are watching TV or when the TV-VIDEO Combi is switched to standby, the time will appear in the display at the front of the machine.

Automatic clock and date setting (SMART CLOCK)



- i If a TV programme, which transmits TELETEXT, is stored with programme number 'P01', time and date will be set automatically.
- i The clock will automatically be adjusted to winter time and summer time.

- 1 Press the **MENU** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the menu buttons **P-▼** or **▲P+** and confirm with the menu button **↵**.
- 3 Select the line 'Set clock' with the **P-▼** or **▲P+** button and confirm with the **↵** button.
- 4 Select the line 'Smart clock' with the menu buttons **P-▼** or **▲P+**.
- 5 Switch the function on with the menu buttons **◀↵-** or **↵▶**.
- 6 Confirm with the **OK** button.
- 7 To end, press the **MENU** button.


3. IMPORTANT NOTES FOR OPERATION

SUMMARY OF USER GUIDE


The OSD menu offers the following functions. More details on each can be found in the appropriate chapter.

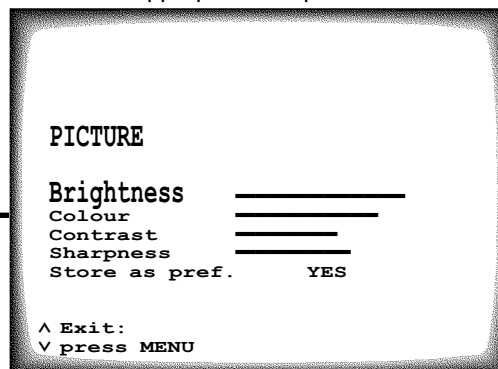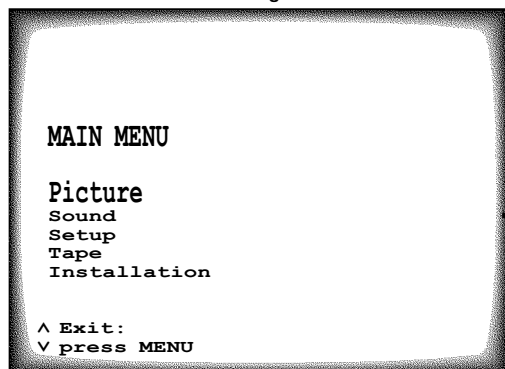


Chapter: 'TV SET FUNCTIONS'

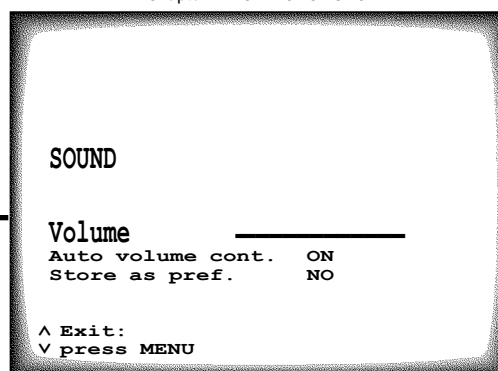

Chapter: 'TV SET FUNCTIONS'

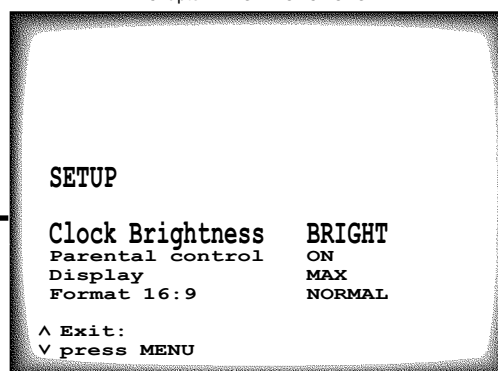

Chapter: 'ADDITIONAL FUNCTIONS'

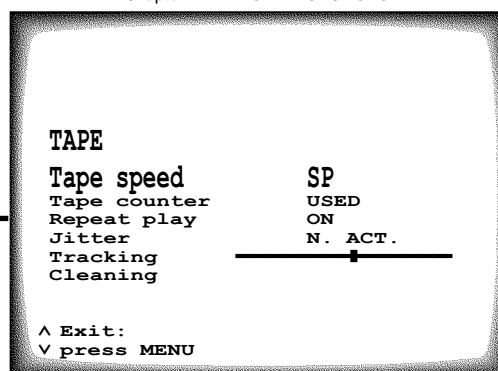


Chapter: 'PLAYBACK FUNCTIONS'

User guide (OSD)

The OSD (On-screen display) shows the various functions in the form of a menu on the television screen. You can then choose the settings you require. There is a summary of the menus on this page. The main button functions are displayed in a help line along the bottom of the screen.

- To call up the menu:** With the **MENU** button.
- To select a line:** With the **P-▼** or **▲P+** button.
- To select within a line:** With the **◀◄-|** or **▶|►+** button.
- To enter or change your selection:** With the **0-9**, **◀◄-|** or **▶|►+** button.
- To enter or change your selection in the TIMER entry columns:** With the **P-▼** or **▲P+** button.
- To cancel:** With the **MENU** button.
- To save:** With the **OK** button.
- To confirm:** With the **▶|►+** button.
- To close the menu:** With the **MENU** menu button.

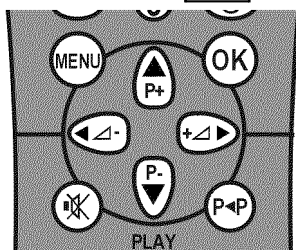

- To confirm the messages in red on the screen:** Press the **OK** button.
- You can switch the machine on with the **P+/-▲▼**, **P◄P** or **0-9** button or by putting in a cassette.

4. TV SET FUNCTIONS


Selecting a TV programme

Select the required TV channel (=programme number) with the **P+/-▲▼** button or with the digit buttons **[0-9]** on the remote control.

- i** If you don't know the programme number of the required TV channel:
- 1 Press the **P+/-▲▼** button for more than 2 seconds. The TV channel list appears on the screen.
 - 2 Select the required TV channel with the **P+/-▲▼** button.
After 1 second the TV-VIDEO Combi will switch to the selected programme number.

Picture settings

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Picture' with the menu buttons **P-▼** or **▲P+** and confirm with the menu button **↵**.

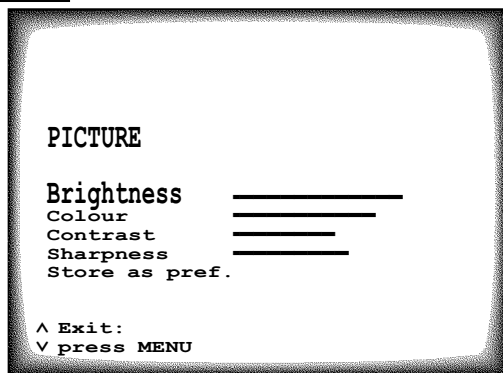

- 3 Select the required line with the menu buttons **P-▼** or **▲P+** and alter with the menu buttons **◀▶** or **↵**.
i To store this setting as a standard setting, select 'YES' in line 'Store as pref.' and confirm with the **OK** button.


Volume control

You can control the volume level with the **◀▶** button.

If you want to mute the sound temporarily (e.g.: during a telephone call), press the **⊗** button on the remote control. When you press the **⊗** button again, the sound will return at its original volume level.

Sound settings

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Sound' with the **P-▼** or **▲P+** button and confirm with the **↵** button.

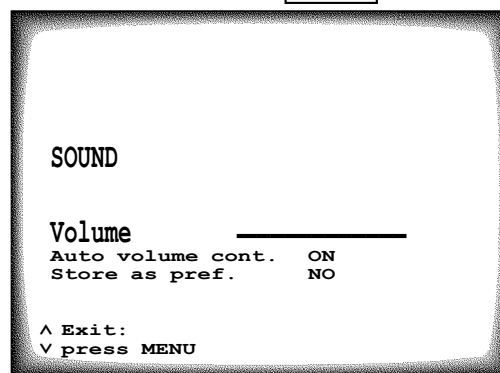

- 3 Select the line 'Volume' with the **P-▼** or **▲P+** button and alter with the **◀▶** button.
i To store this setting as a standard setting, select 'YES' in line 'Store as pref.' and confirm with the **OK** button.
i To call up the standard settings, switch the set off and on again.

Automatic volume control (AVL)

- Switch on 'Auto volume cont.', to activate the automatic volume control. It minimises sudden changes in TV volume when commercial spots are transmitted.

5. RADIO FUNCTIONS

To switch the radio on, press the **RADIO ON** button. You can switch between radio- and TV-mode with the **RADIO ON** button. You can switch the radio off with the **STANDBY** button.

i You can be waken up by the radio. Read the paragraph 'Switch on function (WAKE-UP TIMER)' in the chapter 'Additional functions'.

i You can not call up any menu function while the radio function is switched on.

Selecting a radio channel

Select the required radio channel with the **P +/- ▲ ▼** button or with the digit buttons **0-9** on the remote control. The programme number will appear in the display.

Searching a radio channel

You can search for radio channels that have not been stored, while you are listening to the radio.

1 Press the **FM SEARCH** button.

i The TV-VIDEO Combi will search for the next radio channel. The corresponding frequency will appear in the display.

2 Repeat step **1** to search for the next radio channel.

Storing a radio channel

- 1** If you want to store a radio channel, switch to TV-mode with the **RADIO ON** button.
- 2** Press the **MENU** button. The main menu appears.
- 3** Select the line 'Installation' with the menu buttons **P- ▼** or **▲ P+** and confirm with the menu button **↵**.
- 4** Select the line 'Radio store' with the menu buttons **P- ▼** or **▲ P+** and confirm with the menu button **↵**.
- 5** In line 'Programme number' select the programme number you want the radio channel to be stored on, using the **↵** or **↵ -** button.
- 6** Press the **OK** button.
- 7** To end, press the **MENU** button.

Showing the frequency

- Press the **OK** button while you are listening to the radio. You will see the frequency of the radio channel you are listening to on the display.

6. PLAYBACK FUNCTIONS

Playing a cassette

- 1 Put a cassette into the cassette slot.
- 2 Press the **PLAY▶** button.
- 3 If you press the **STOP■** button once, the TV-VIDEO Combi will switch to pause. To stop, press the **STOP■** button again.
- 4 To eject the cassette, press the **■/▲** button on the TV-VIDEO Combi or press the **STOP■** button on the remote control several seconds.
 - i Some hired cassettes may have a poor picture or poor sound quality. This is not a fault in your machine. Please read 'Eliminating picture interference'.
 - i Some functions switch off automatically after a while (for example, pause, still picture, picture search). This helps to protect the cassette and avoids wasting power.

Playing NTSC cassettes

With this set you can play cassettes that have been recorded on another video recorder in the NTSC standard (for example, American cassettes).

- i Some special features (for example, still picture) are not possible while you are playing an NTSC cassette.

Tape position indication

- i Press the **OK** button to display the current tape position.
- i To change the type of tape position display, proceed as follows:
 - 1 During playback, press the **MENU** button.
 - 2 Select the line 'Tape' with the menu buttons **P-▼** or **▲P+** and confirm with the **▶/▶** button.
 - 3 Select the line 'Tape counter' with the menu buttons **P-▼** or **▲P+**.
 - 4 With the menu buttons **◀/▶** or **▶/▶** select 'USED' to check the time used, or 'LEFT' to check the time left on the tape.
 - 5 Confirm with the **OK** button.

Searching for tape position with the picture (picture search)

- 1 While a cassette is playing, press the **◀◀** (reverse) or **▶▶** (forward) button once or several times.
- 2 To stop at a certain picture, press the **PLAY▶** button.
 - i During picture search, the picture quality may not be so good and there will be no sound.

Still picture

- 1 Press the **STILL▶◀** button. A still picture will appear on the screen.
- 2 Each time you press **STILL▶◀** again, the picture will move on one step.

Searching for tape position without the picture (wind and rewind)

- 1 Stop the tape with the **STOP ■** button.
- 2 Press the **◀◀** (reverse) or **▶▶** (forward) button.
- 3 To stop at a certain picture, press the **STOP ■** button.

Instant View

With this function you can switch to picture search during wind and rewind.

- 1 If you hold the **◀◀** (rewind) or **▶▶** (wind) button during wind or rewind, you will switch to picture search.
- 2 When you release the button, the TV-VIDEO Combi will automatically switch back to rewind or wind.

Automatic search for a tape position (index search)

At the start of each recording, the TV-VIDEO Combi will write an index code on the tape.

- 1 Press the **INDEX▶** button. Press the **▶▶** button to select the next code mark or the **◀◀** button for the previous code mark.
- 2 When the TV-VIDEO Combi finds the code mark, it will automatically switch to play.

Picture interference


When the picture quality is poor when you play a cassette, please follow these instructions.

Tracking during playback

- 1 During playback, press the **[MENU]** button.
- 2 Select the line '**TAPE**' with the menu buttons **[P-▼]** or **[▲P+]** and confirm with the **[↘+▶]** button.
- 3 Select the line '**Tracking**' with the menu buttons **[P-▼]** or **[▲P+]**.
- 4 Hold the menu buttons **[↙-]** or **[↘+▶]** until the playback quality is at its best.
- 5 Confirm with the **[OK]** button.
- 6 To end, press the **[MENU]** button. This setting will remain until you remove the cassette.

Tracking during still picture

If the still picture vibrates vertically, you can improve the still picture as follows:

- 1 During still picture, press the **[MENU]** button.
- 2 Select the line '**TAPE**' with the **[P-▼]** button or **[▲P+]** and confirm with the **[↘+▶]** button.
- 3 Select the line '**Jitter**' with the **[P-▼]** or **[▲P+]** button.
- 4 Hold the **[↙-]** or **[↘+▶]** button until the picture quality is at its best.
- 5 Confirm with the **[OK]** button.
- 6 To end, press the **[MENU]** button.
 Please note, however, that interference may still occur with poor quality cassettes.

Cleaning the video heads

If horizontal lines appear on the screen when you play a cassette, you should clean the video heads.



- 1 During playback, press the **[MENU]** button.
- 2 Select the line '**TAPE**' with the menu buttons **[P-▼]** or **[▲P+]** and confirm with the **[↘+▶]** button.
- 3 Select the line '**Cleaning**' with the menu buttons **[P-▼]** or **[▲P+]**.
- 4 Press the **[OK]** button. '**CLEANING**' appears on the screen.
- 5 Wait a few seconds, until the message disappears and then press the **[MENU]** button.

7. MANUAL RECORDING

Use 'Manual Recording' to make a spontaneous recording (for example, a programme currently being shown).

- If you want to start and stop a recording manually, read the section: 'Recording without automatic switch-off'.
- If you want to start a recording manually but have it stopped automatically, read the section: 'Recording with automatic switch-off'.

Recording without automatic switch-off

- 1** Insert a cassette.
- 2** Use the **P +/- ▲ ▼** button to select the programme number you want to record, for example, 'P01'.
 - i** Programme number 'E1' is provided for recording from external sources (via the **EXT.1** scart socket).
- 3** To start recording, press the **RECORD/OTR ●** button on the remote control or **●** on the TV-VIDEO Combi. When you are recording, the red recording light at the front of the TV-VIDEO Combi will be alight.
- 4** Stop recording with the **STOP ■** button.
 - i** During a recording you can only watch the current programme.
 - i** To switch off the screen, press the **STANDBY ☺** button.

Recording with automatic switch-off (OTR one-touch-recording)

- 1** Put a cassette in the machine.
- 2** Use the **P +/- ▲ ▼** button to select the programme number you want to record.
- 3** Press the **RECORD/OTR ●** button on the remote control. When you are recording, the red recording light at the front of the TV-VIDEO Combi will be alight.
- 4** Press the **RECORD/OTR ●** button again and again until the display on the TV-VIDEO Combi shows the desired end time or length of the recording.
 - i** To cancel this information, press the **CLEAR** button.
- 5** Confirm with the **OK** button.
- 6** To end, press the **MENU** button.

Protecting your recordings

So that you don't accidentally delete an important recording, remove the special tab on the narrow side of the cassette with a screwdriver or slide the special tab to the left. Later, if you no longer want to protect your recording, you can seal the gap again with sticky tape or slide the special tab to the right.

Auto-assembling

You can use the auto-assembling function to join individual recordings without any major picture disturbance between them.

- 1 While the cassette is playing, search for the correct position on the tape.
- 2 Stop the cassette by pressing the **STOP** button. 'Pause' will appear on the TV screen.
- 3 Now start recording as usual by pressing the **RECORD/OTR** button on the remote control.

Selecting the recording speed (SP or LP)

You can reduce the recording speed by half. This makes it possible to record, for example, eight-hours instead of four-hours on an 'E240' (four-hour) cassette.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'TAPE' with the **P-▼** or **▲P+** button, and confirm with the **↙+▶** button.
- 3 Select the line 'Tape speed' with the **P-▼** or **▲P+** button.
- 4 Select the required recording speed with the **↙-▶** or **↘+▶** button.
 - i▶ 'LP': Long Play = half recording speed (double recording time).
 - 'SP': Standard Play = normal recording speed.
 - i▶ The picture quality will be adversely affected when recording at half recording speed ('LP').
 - i▶ For playback, the correct recording speed will automatically be selected.
- 5 Confirm with the **OK** button.
- 6 To end, press the **MENU** button.

8. PROGRAMMED RECORDING (TIMER)

Use programmed recording to automatically start and stop a recording at a later date.

To make a programmed recording, your TV-VIDEO Combi needs to know:

- * the date you want to make the recording;
- * the programme number for the TV channel you want to record;
- * the start and stop time of the recording;
- * whether you want to use VPS or PDC;
- * the recording speed (SP/LP).

The TV-VIDEO Combi stores all the information in a TIMER block. You can programme up to 6 TIMER blocks a month in advance.

'VPS' (Video Programming System) and 'PDC' (Programme Delivery Control)

With 'VPS and PDC', the TV station controls the start time and the length of the recording. This means that the TV-VIDEO Combi switches itself on and off at the **right time** even if a TV programme you want to record begins earlier or finishes later than expected.

Usually the start time is the **same** as the VPS or PDC time. But if your TV guide gives a VPS or PDC time which is different to the programme's start time (for example, 20.15 and VPS 20.14), you must enter '20.14' as the start time.

If you want to programme a time that is different from the VPS or PDC time, you must switch off VPS or PDC.

Programming a recording (with 'VIDEOplus')

All the information required for a programming is contained in the PlusCode-programming number.

VIDEOplus


- 1 Press the **TIMER** button on the remote control.
- 2 Select the line 'VIDEOplus' with the menu buttons **P-▼** or **▲P+** and confirm with the **◀+▶** button.

- 3 Enter the entire PlusCode-programming number (up to 9 digits) printed in your TV guide next to the start time of a TV programme.

For example, 5-234-89 or 5 234 89


Enter 523489 for the PlusCode-programming number.

If you make a mistake, you can clear your instructions with the **CLEAR** button.

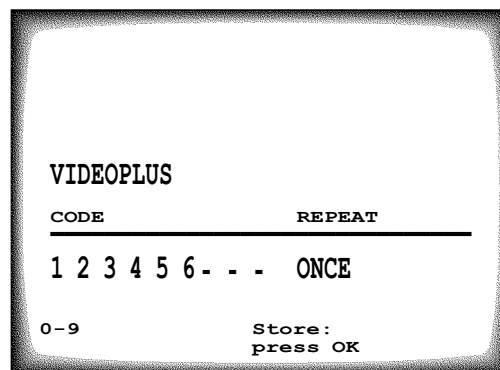




 
 


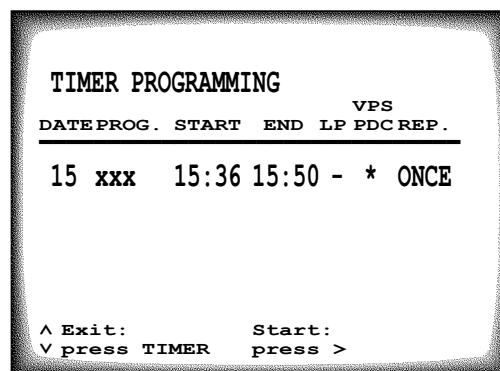




- 4 In the column 'REPEAT' select daily or weekly programming with the **▲P+** or **P-▼** button.
 - 'Mo-Fr': If you want to make a recording every day from Monday to Friday.
 - 'Mo-Su': If you want to make a recording every day from Monday to Sunday.
 - 'WEEKLY': If you want to make a recording every week on the same day of the week.
 - 'ONCE': If you want to make only one recording.



 
- 5 Confirm with the **OK** button. Your programming details will then appear on the TV screen.





 

- ▶ If VIDEOplus does not recognise the TV channel, 'P??' will appear on the TV screen. Instead of 'P??', you can select the programme number you want with the number buttons **[0-9]**.
- ▶ If 'Code error' appears on the TV screen, this means you entered an incorrect PlusCode number or the incorrect date. Correct your instructions or end with the **TIMER** button.

-  If 'Daily error' appears on the TV screen, the date was incorrectly entered.
-  Under 'VPS/PDC', use the  or  button to switch 'VPS or PDC' on or off.
-  Under 'LP', use the  or  button to select the recording speed 'SP' or 'LP'.
-  The TIMER lamp on the front of the set lights up when one or more of the TIMER blocks are occupied.
-  When you are recording, the red recording light at the front of the TV-VIDEO Combi will be alight.
-  If the end of the cassette is reached during a recording, the TV-VIDEO Combi automatically ejects the cassette.
-  If you forget to load a cassette, 'No cassette' will appear.
-  If you inserted a cassette with erase protection when you want to start a recording, the cassette will be ejected.




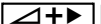 
6 Confirm with the  button.


 'Press **STANDBY** to start recording' will appear on the screen. If you have programmed a recording that should start within the next few minutes, confirm with the  button. If you have programmed a recording that will start at some later point in time, confirm with the  button.


-  A programmed recording can only start, when the machine is switched to standby.
-  If you entered the wrong date for a daily/weekly recording, your TV-VIDEO Combi will correct it automatically.

 
7 If you confirmed with the  button, exit the menu with the  button.


 
Programming a recording (without 'VIDEOPlus')

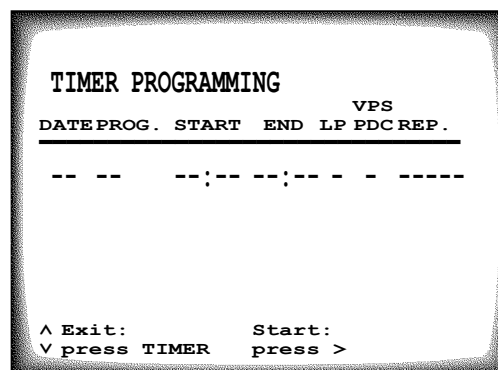

 
- 1** Press the  button on the remote control.
- 2** Select the line 'Timer programming' with the menu buttons  or  and confirm with the  button.

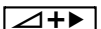

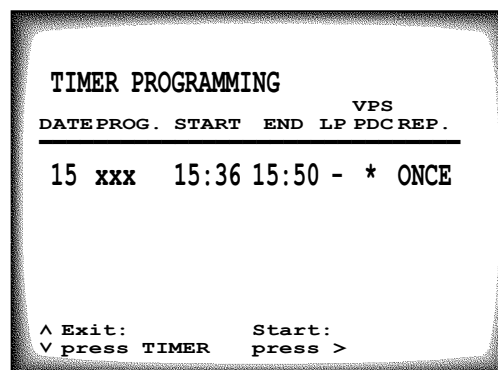 









 

 





3 Press the  button.





 
 

 


 


 



 

4 Select the entry field with the  or  button.

5 Enter information with the menu buttons  or  or with the digit buttons .



 
 




-  Under 'REP.', use the  or  button to select daily or weekly programming.
 - 'Mo-Fr': recordings every day from Monday to Friday.
 - 'Mo-Su': recordings every day from Monday to Sunday.
 - 'WEEKL': recordings every week on the same day of the week.
 - 'ONCE': If you want to make only one recording.
-  Under 'LP', use the  or  button to select the recording speed 'SP' or 'LP'.

-  Under 'VPS/PDC', use the  or  button to switch 'VPS or PDC' on or off.
 -  When you are recording, the red recording light at the front of the TV-VIDEO Combi will be alight.
- 6** Confirm with the  button when the information is correct.
 - 'Press **STANDBY to start recording**' will appear on the screen. If you have programmed a recording that should start within the next few minutes, confirm with the  button. If you have programmed a recording that will start at some later point in time, confirm with the  button.
 -  A programmed recording can only start, when the machine is switched to standby.
 -  If you entered the wrong date for a daily/weekly recording, your TV-VIDEO Combi will correct it automatically.
 - 7** If you confirmed with the  button, exit the menu with the  button.
 -  The programming information has been stored in a TIMER block.
 - 8** Make sure that the cassette you have put in can be recorded on.

How to check or change a TIMER

- 1** Press the  button on the remote control.
- 2** Select the line '**Timer programming**' with the menu buttons  or  and confirm with the  button.
- 3** Select the TIMER you want to check or change with the  or  button and confirm with the  button.
- 4** Select the entry field with the  or  button.
- 5** Change any information with the  or  button or with the  buttons.
 -  Under '**LP**', use the  or  button to select the recording speed 'SP' or 'LP'.
- 6** Confirm with the  button.
- 7** To end, press the  button.
- 8** Make sure that the cassette you have put in can be recorded on.

How to clear a TIMER

- 1** Press the  button on the remote control.
- 2** Select the line '**Timer programming**' with the menu buttons  or  and confirm with the  button.
- 3** Select the TIMER you want to clear with the menu buttons  or .
- 4** Press the  button.
- 5** Switch off with the  button.

9. ADDITIONAL FUNCTIONS

How to read TELETEXT

- Press the **TELETEXT** button to switch the TXT decoder on and off. The TV-VIDEO Combi is now receiving the TXT of the TV channel currently selected.
- To store the current page as preferred page, press the **OK** button.
The next time you call up TELETEXT, you will automatically turn to this page.
- If you want to select an other page, type in the number of the page with the digit buttons **[0-9]**. With the colour buttons on your remote control you can directly select the page numbers shown at the bottom of the TV screen.

Extra TELETEXT functions


To use the extra TELETEXT functions, press the **MENU** button, when you are in TELETEXT.

- To enlarge the print, select the symbol '⊕' and confirm with the **OK** button.
- To switch off the TELETEXT decoder temporarily, select the symbol '⊗' and confirm with the **OK** button.
- To call up a TELETEXT sub-page:
 - 1** Select the symbol '○' and confirm with the **OK** button.
 - 2** Enter the page number of the sub-page with the **[0-9]**-buttons (for example: 0123).
- To call up concealed information, select the symbol '⊞' and confirm with the **OK** button.
- To stop the pages from being turned over, select the symbol '⊕' and confirm with the **OK** button.
- To show TELETEXT transparently, select the symbol '⊞' and confirm with the **OK** button.

Selecting the display brightness

You have a choice of several levels of display brightness (clock, radio frequency, programme number).

- 1** Press the **MENU** button. The main menu appears.
- 2** Select the line 'Setup' with the **P-▼** or **▲P+** button and confirm with the **↔** button.

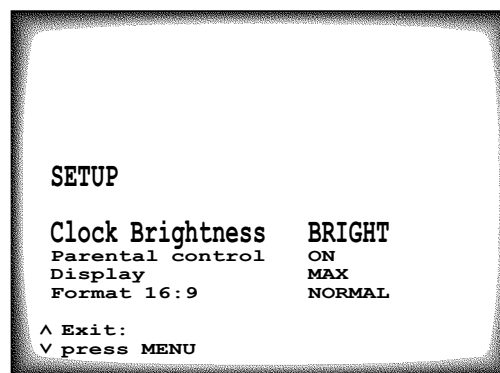


- 3** Select the line 'Clock Brightness' with the **P-▼** or **▲P+** button.
- 4** Select one of the options with the **↔** or **↔** button: 'OFF' (display is switched off), 'SBY-OFF' (display is switched off in standby mode), 'LOW', 'MIDDLE', 'HIGH', 'BRIGHT'.
- 5** Confirm with the **OK** button.
- 6** To end, press the **MENU** button.

Parental control

This function will prevent unauthorised use of your TV-VIDEO Combi. All button-functions will be locked.

i You can make programmed recordings while the parental control is on.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Setup' with the **P-▼** or **▲P+** button and confirm with the **◀+▶** button.

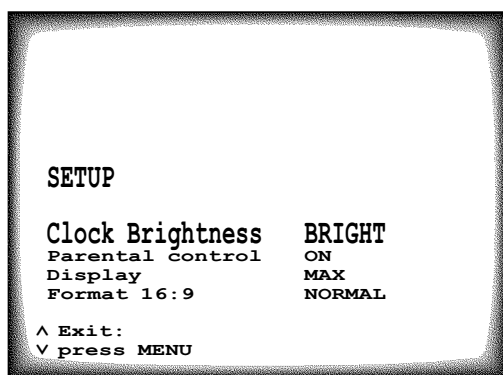


- 3 In the line 'Parental control' select 'ON' with the **◀◀-** or **▶+▶** button.
- 4 Confirm with the **OK** button.
- 5 To end, press the **MENU** button. Keep the remote control in a safe place.
- 6 If you want to switch off the parental control, select 'OFF' in line 'Parental control'.
 - i** If a button is pressed with activated parental control, 'Parental Control active' will appear in the display.
 - i** If you want to eject a cassette with activated parental control, press the **STOP** button several seconds.

Switching the On-screen display (OSD) on or off

You can switch the On Screen Display of the current operating information on or off.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Setup' with the menu buttons **P-▼** or **▲P+** and confirm with the **◀+▶** button.

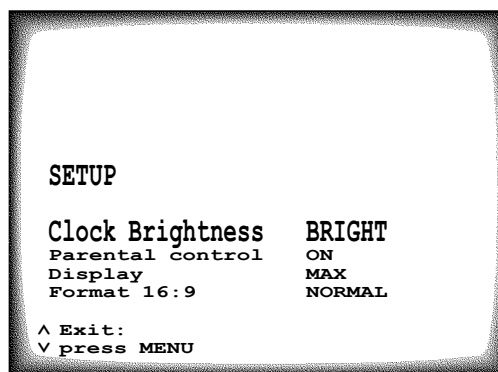



- 3 Select the line 'Display' with the menu buttons **P-▼** or **▲P+**.
- 4 Select one of the options indicated with the menu buttons **◀+▶** or **◀◀-**.
 - 'MAX': OSD appears for a few seconds each time an operating mode is selected and then disappears.
 - 'MIN': OSD is minimised.
 - 'PROGR.': the programme number is constantly indicated.
 - 'COUNTER': the counter is constantly indicated.
- 5 Confirm with the **OK** button.
- 6 To end, press the **MENU** button.
 - i** With the **OK** button you can superimpose the On Screen Display of current operating mode on the TV screen.

Switching to 16:9 wide screen picture

If you are using a cassette with 16:9 wide screen recordings, you can switch this function 'ON'. The TV-VIDEO Combi will now automatically switch to wide screen.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Setup' with the **P-▼** or **▲P+** button and confirm with the **↵** button.

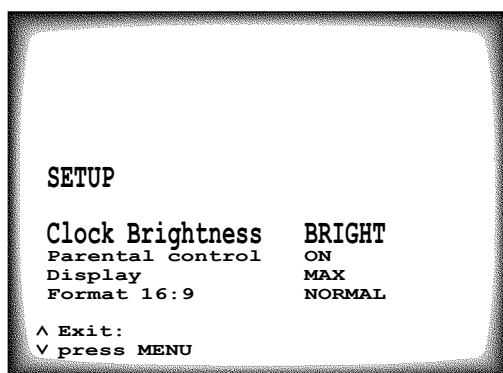

- 3 Select the line 'Format 16:9' with the **▲P+** or **P-▼** button.
- 4 Select one of the possibilities with the **↵** or **↵** button.
'NORMAL': Normal size picture.
'EXTEND.': Extended size picture.
'COMPR.': 16:9 format picture.
 When you watch TV you can select between 'EXTEND.' and 'NORMAL'.


5 Confirm with the **OK** button.

6 To end, press the **MENU** button.

Continuous playback

You can automatically play a cassette again and again. When the end of the tape or the recording has been reached, it will rewind and start again.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'TAPE' with the menu buttons **P-▼** or **▲P+**. Confirm with the menu button **↵**.

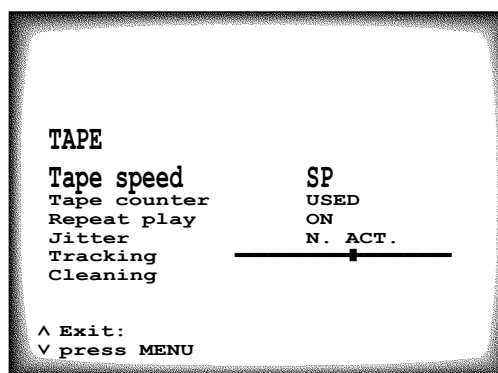

- 3 Select the line 'Repeat play' with the menu buttons **P-▼** or **▲P+**.
- 4 Select 'ON' with the menu buttons **↵** or **↵**. If you select 'OFF', the function will be switched off.
- 5 Confirm with the **OK** button.
- 6 Press the **MENU** button.

Switch off function (SLEEP TIMER)

You can programme your set to switch off after a predetermined period.

- 1 Press the **TIMER** button on the remote control.
- 2 Select line 'sleep timer' with the **P-▼** or **▲P+** button and confirm with the **↔** button.
- 3 Determine the time left until switch off in 15 minutes intervals using the **P-▼** or **▲P+** button.
 - ▶ You can switch the function off with the **CLEAR** button on the remote control.
 - ▶ You can always simply select the switch-off time with the **SLEEP** button on the remote control.
- 4 Confirm with the **OK** button.
- 5 To end, press the **TIMER** button.

Switch on function (WAKE-UP TIMER)

You can programme your set to switch on at a predetermined time.

- 1 Press the **TIMER** button on the remote control.
- 2 Select the line 'wake-up timer' with the **P-▼** or **▲P+** button and confirm with the **↔** button.
- 3 Select the line TV/TVCR, RADIO or BUZZER with the **P-▼** or **▲P+** button and press the **↔** button.
- 4 Select the entry field with the **◀▶** or **↔** button.
- 5 Enter the information with the **P-▼** or **▲P+** button or with the number buttons **0-9**.
 - In the column 'REP.' select one of the following options with the **▲P+** or **▲P+** button:
 - 'ONCE': Wake-up alarm only once.
 - 'Mo-Fr': Wake-up alarm every day from Monday to Friday.
 - 'Mo-Su': Wake-up alarm every day from Monday to Sunday.
 - 'Sa-Su': Wake-up alarm during the weekend.
 - 'WEEKL': Wake-up alarm every week on the same day.
- 6 Activate the function in the first entry field.
 - You can also always switch the programmed WAKE-UP TIMER for the radio and the buzzer on/off with the **ALARM ON** button on the remote control.
- 7 Press the **OK** button.
- 8 To end, press the **TIMER** button.
 - If 'Date corrected' appears on the screen, press the **OK** button and check the date of the programming in the second entry field.
 - ▶ When a wake-up Timer has been programmed and switched on, the corresponding light will light up in the display.
 - ▶ If you want to switch off the alarm when it is going off, press the **STANDBY** button. If you want the alarm to repeat after ten minutes, press any key on the remote control or the Combi, except the **STANDBY** button.

10. Before you call an engineer

If, contrary to expectation, you have any problems using this TV-VIDEO Combi, it may be caused by one of the reasons mentioned below. You can also call the **customer service centre** in your country.

You will find the phone number in the enclosed guarantee leaflet.

Your TV-VIDEO Combi does not respond to any button being pressed:

- There is no power supply: check the power supply
- A programmed recording is currently being made: cancel the programmed recording with the **STANDBY** button.
- Parental control is on: switch the parental control off.
- Continuous playback is on: switch the continuous playback off.
- There is a technical problem: switch off with the **power switch** for 30 seconds, then switch it on again.

Cassette is jammed in the TV-VIDEO Combi:

- Don't use force. Switch off with the **power switch** for 30 seconds, then switch it on again.

Remote control does not work:

- Remote control not pointed toward the TV-VIDEO Combi: point it at the TV-VIDEO Combi.
- Batteries have run out: change the batteries.

No picture when you play a cassette:

- There is no recording on the cassette: change the cassette.

Poor picture quality when you play a cassette:

- The cassette badly worn or of poor quality: use new cassette.
- Tracking is not properly adjusted or the video heads are dirty: turn to chapter 'PLAYBACK' and read the section 'Eliminating picture interference'.
- You are playing a cassette with a LongPlay recording on it: Excellent picture quality is only guaranteed with recordings made in StandardPlay recording speed.

The TV-VIDEO Combi will not record:

- The TV channel you want to record is not stored or you selected the wrong programme number: check TV channels stored.
- You have loaded a cassette which cannot be recorded on: undo the erase protection on the cassette.

Programmed recording does not work:

- You have not set the TIMER properly: check the TIMER blocks.
- You have programmed the wrong time or date: check time and date.
- You have put in a cassette that cannot be recorded on: undo the erase protection on the cassette.
- 'PDC' or 'VPS' switched on but 'PDC/VPS time' wrong: enter PDC or VPS time exactly to the minute. Have the aerial checked.

'Smart Clock' setting does not work:

- You have stored a TV channel on programme number 'P01' that does not transmit TELETEXT: On 'P01' store a TV channel that transmits TELETEXT.
- Poor TELETEXT reception: On 'P01' store a TV channel with good TELETEXT reception.
- You have not activated the Smart Clock function: Switch the function 'ON'.

You hear a very short and soft noise coming from your TV-VIDEO Combi at 3:00 at night:

- 'Smart Clock' is checking the time: Switch off the Smart Clock function.

TELETEXT does not start at page 100:

- You have stored a different preferred page: Store page 100 as preferred page.

Technical terms used

Current tape position : The part of the tape currently being played.

External source : A device connected via a socket (for example, scart socket) which is transmitting audio/video signals to the TV-VIDEO Combi.

Index marking : A marking which is automatically made on the tape at the beginning of every recording. This marking (recording ID) can be searched for with the Index search function.

Scart cable : Also known as a Euro-AV cable. This standard cable is an easy method of connecting various TV, audio and video devices, such as a HIFI and Dolby Surround set, video recorder, DVD player, SAT receiver, decoder, computer and similar devices. Other signals in addition to audio and video signals can be transmitted on it.

TV system : There are various systems for transmitting television signals, for example, PAL, SECAM, PAL BG, SECAM DK, SECAM L/L, NTSC etc. The system used by your television depends on which country you are in.

TXT : Also known as Teletext, Fasttext, Videotext, FLOF etc.

OTR : One touch recording. This function enables you to select the switch-off time in intervals of 30 minutes.

3103 166 23922
9334/011



14PV340/05, 14PV345/05S



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>