



 
# PHILIPS


12nc: 8239 210 97091  
Printed in China



27DVCR55


There are many ways to connect your new TV/VCR/DVD to your other equipment. This Quick-Use Guide shows the easiest, most common connections for the TV/VCR/DVD.

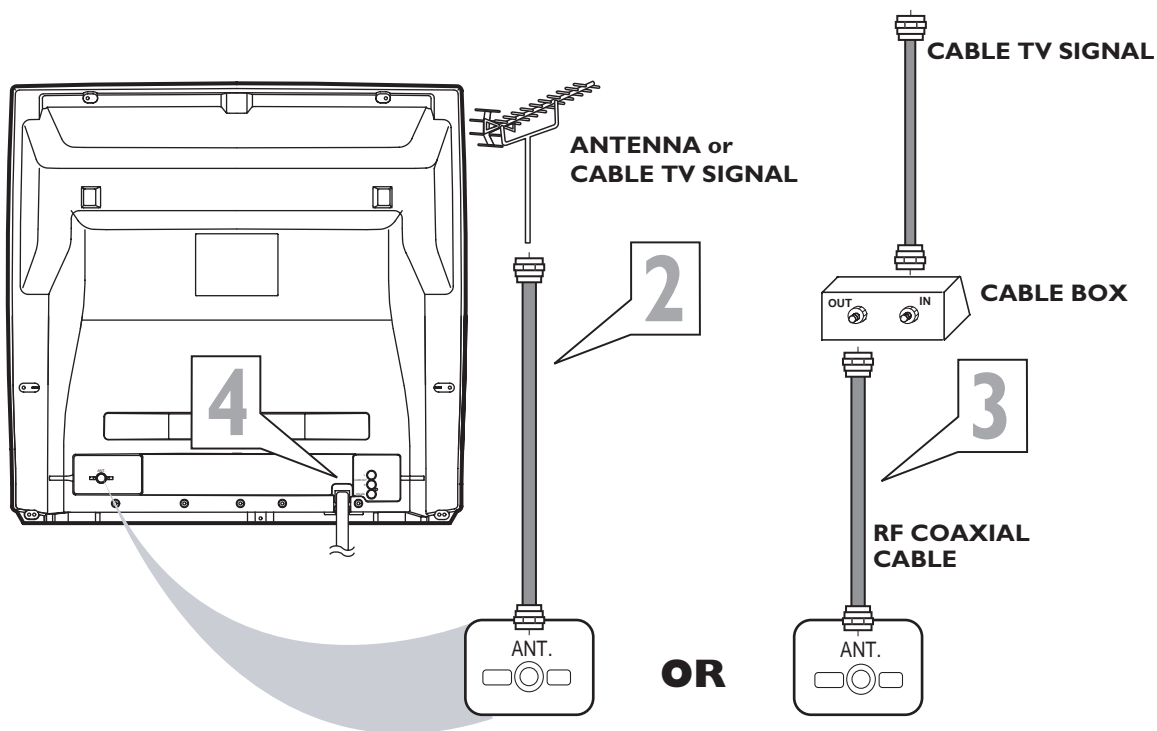


- 1** Disconnect all equipment from the power outlets. Connect the equipment to the power outlets only after you have finished hooking up everything. Never make or change connections with equipment connected to the power outlet.
- 2** If you do not have a Cable Box, simply connect your Antenna or Cable TV signal directly to the ANT(enna) jack on the rear of the TV/VCR/DVD.
- 3** If you do have a Cable Box or Satellite Receiver, first connect the Cable TV or Satellite signal to the IN jack on the Cable Box or Satellite Receiver. Then, use an RF coaxial cable (not supplied) to connect the OUT jack of the Cable Box or Satellite Receiver to the ANT(enna) jack on the TV/VCR/DVD. To view any channel, set the TV/VCR/DVD to the output channel of the Cable Box or Satellite Receiver (channel 3 or 4). Then, select channels at the Cable Box or Satellite Receiver.
- 4** When all connections are complete, plug the power cord of the TV/VCR/DVD into an active power outlet.
- 5** Press the STANDBY-ON  button on the TV/VCR/DVD or its remote to turn on the TV/VCR/DVD. The first time you turn on the TV/VCR/DVD, you should complete the TV/VCR/DVD setup. See the other side of this Quick-Use Guide for details.

# Quick Use Guide (cont'd)
 
## Setting Up the TV/VCR/DVD the First Time


**1** Press **STANDBY-ON**  to turn on the TV/VCR/DVD.

**2** Press **ENTER** repeatedly to select **English, French, or Spanish** as the language for TV/VCR/DVD setup menus.

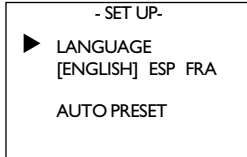

**3** Press **▲** or **▼** to select **AUTO PRESET**. Then press **ENTER** to set up TV channels. When setup is complete, the lowest TV channel will appear on the TV/VCR/DVD.

 **4** To watch TV, press the **CH. ▲** or **▼** button to select memorized channels. Remember, if you are using a Cable Box or Satellite Receiver, set the TV/VCR/DVD to channel 3 or 4. Change channels at the Cable Box or Satellite Receiver.

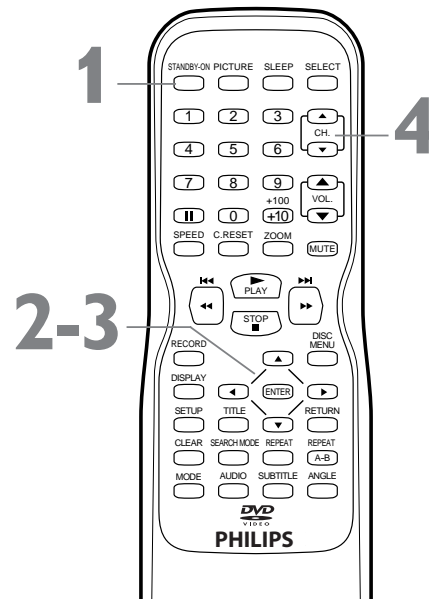

## Playing a Disc

 
 
**1** Press **STANDBY-ON**  to turn on the TV/VCR/DVD.

**2** Press **SELECT** to put the unit in DVD mode. The green DVD light will appear on the front of the TV/VCR/DVD.

**3** Press **OPEN/CLOSE ▲** on the front of the TV/VCR/DVD to open the disc tray. Put a Disc in the tray with the label facing up and the shiny side facing down.

**4** Press **PLAY ►** to close the tray. Playback may start automatically. If not, press **PLAY ►** again. If a DVD Disc menu appears, use the **◀▶▲▼**, **ENTER**, or Number buttons to select features or start playback. Follow the instructions in the menu.

**5** To stop playing the Disc, press **STOP ■**.

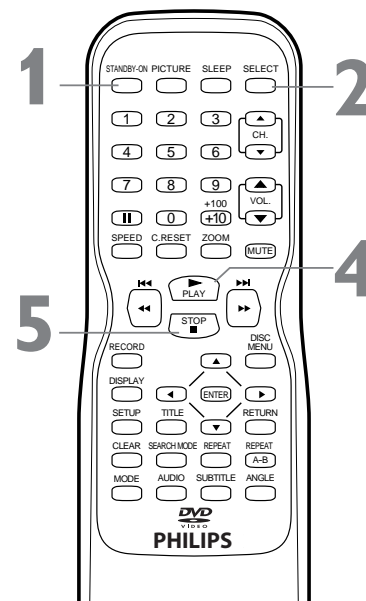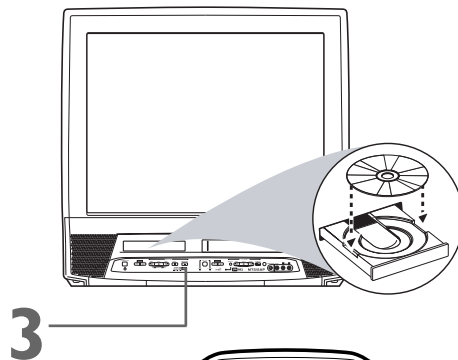

## Playable Discs

The TV/VCR/DVD will play the following Discs.



DVDs must have a Region Code of ALL regions or Region 1.



DVDs must be recorded in the **NTSC** Color System.

8239 210 97091 / Printed in China  
OEMN02248/TD958UJ\*\*\*\*\*

Detailed playback features and additional functions are described in the accompanying owner's manual.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>