


VERIZON FIOS TV REMOTE CONTROL

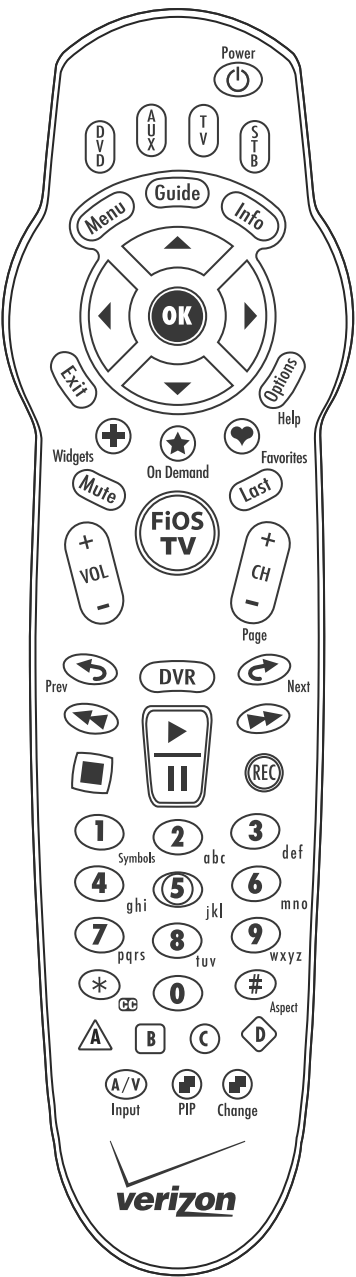

Model: RC144 5302 / 00B

For additional information about your FiOS TV service and your remote, go to www.verizon.com/fiostv

For video instructions, press the **Menu** key on your remote then select **Help** on the Main Menu

Verizon Customer Support
888-553-1555

STEP 1 - INSTALL BATTERIES

Install two new AA batteries. Make sure they are oriented correctly. To test if the batteries have been installed correctly, press a few keys on the remote. One of the Device Keys [DVD, AUX, TV, STB] on the top of the remote will flash briefly when you press a key.

STEP 2 - GET TO KNOW YOUR REMOTE

Your remote is now ready to control your FiOS TV Set Top Box (STB). To start, try the following.


 

 

Make sure the remote has a clear, direct and unobstructed view of any device you want to control.

- Turn on your TV.
- Press the **STB** key on the top of the remote to make sure you are in FiOS TV "STB Mode."
- Press the **CH+** key to see the next higher channel.
- Press **5 - 0** then **OK** to tune to channel 50.
- Press **Last** to return to the last channel.
- Press **Info** to see information about the current program. Press **Exit** to return to TV watching.
- Press **Guide** to see a list of TV programs. Press **Exit** to return to TV watching.
- Press the **Menu** key to launch the FiOS TV Main Menu. From the Main Menu you can access all the features of your FiOS TV service.
- Press **▲**, **▼**, **◀**, and **▶** keys to navigate through this menu. We suggest that you become familiar with all the options on the Main Menu. To select any item, press **OK**. Press **Exit** at any time to return to TV watching.

You are probably already familiar with most of the keys on the remote; however, there may be a few which are new to you.

- **Options** displays extra options or provides help based on what you are doing.
- **Favorites** displays your list of favorite channels. (The first time you press the key, you will be invited to set up your favorite channels.)
- **On Demand** displays a list of movies and other types of programs you can watch at any time.
- Press **Widgets** to access local weather, traffic and other information.

If you have a STB with a built in DVR...

- **DVR** displays your list of recorded programs.
-  is a rocker button, press the lower half of the button  to pause the program. Press upper half of the button  to continue to play from where you left off.
-  jumps back a few seconds in the program you are watching.
- If you are watching a recorded program,  jumps forward in the program.
- **REC** records the current program.

STEP 3 - PROGRAM YOUR REMOTE

Your new remote control comes from the factory ready to control your FiOS TV service. However, **VOL+**, **VOL-** and **MUTE** will not work until you program the remote with the brand of TV you have. In addition to your STB and TV, your remote can also control two additional devices, for example, a DVD player and an audio receiver.

This is called "programming the remote." If you don't want to control devices other than your FiOS TV STB, you do not need to program the remote.

HOW TO PROGRAM YOUR REMOTE

We will use the example of programming your remote to control a TV. The procedure is the same for DVD players and audio receivers.

1. Look up your TV make in the TV code listing on the other side of this sheet.
2. Circle the first 4-digit number displayed for your make of TV.
3. Turn on your TV.
4. Press and hold the **TV** key.
5. While holding down the **TV** key, press the **OK** key.
6. Release both keys. The Device Keys will blink twice.
7. Enter the 4-digit TV code you circled. The TV key will blink 3 times.
8. To test to see if this was the correct code, point the remote at your TV and press **Power**. If the TV turns off, you have successfully programmed your remote.
9. If the TV did not turn off, repeat all the steps with the next code in the list.
10. For future reference, underline the code that worked for you.

Note: If some of the keys on the remote do not operate your TV as you would expect, then

try the next code in the list for your brand of TV.


 
 
 
 
To program the remote to control a VCR or DVD player, press and hold the **DVD** key, instead of the **TV** key, in step 4 and 5. To program an audio receiver, press and hold **AUX** instead.

 
Note: You can assign a DVD or VCR to the DVD key. The AUX key is reserved for audio receivers, amplifiers and VCR.

Note: The remote will exit programming mode after 20 seconds if no key is pressed.

WHAT IF NONE OF THE CODES WORKED?

If none of the codes worked, try the following procedure. (As before, we will use the example of a TV. For other devices use the appropriate Device Key instead of the **TV** key in step 2 and 3.)

1. Turn on your TV.
2. Press and hold the **TV** key.
3. While holding down the **TV** key, press **OK**.
4. Release both keys. The Device Keys will blink twice.
5. Press **9 - 2 - 2**.
6. Point the remote at the TV.
7. Press .
8. Press . Every time you press  the remote sends out a new power-off command to the TV. Keep pressing  until the TV turns off. (You can press  to go back.)
9. When the TV turns off, you have found the right code. Press **OK** to store this code.

Note: There are over 300 TV and DVD codes. The most common codes are tried first, but you may still need to press  over 300 times to find the right code. If you reach the end of the list of codes the entire remote will flash twice and return to normal operation. You can exit programming at any time by pressing **Exit**.

SWITCHING MODES

Press a Device Key on top of the remote to switch modes. For example, to control your DVD player, press **DVD**. To return to your FiOS TV STB box, press **STB**. Pressing the **TV**, **DVD** or **AUX** key is like picking up the remote for that device.

Note: When you press **Guide**, **Widgets**, **On Demand**, **Favorites**, **FiOS TV**, or **DVR** the remote assumes you want to control the STB and will automatically switch you to STB mode.

OPTIONAL: Reprogram How the Channel, Volume and Power Keys Operate

THE CHANNEL KEYS

CH+, **CH-** and **Last** control the Set Top Box (STB) even after you press the **TV**, **DVD** or **AUX** Device Key. This is the way most people will want the remote to work. However, you can change the way the Channel Keys work so that when you press a Device Key, the Channel Keys will operate the selected device.

If you want the Channel Keys to control different devices ...

1. Press and hold the **STB** key.
2. While holding down the **STB** key, press the **OK** key.
3. Release both keys. The Device Keys will blink twice.
4. Press **9 - 6 - 6**. The STB key will blink twice.
5. Press **OK**. The STB key will blink 3 times to indicate success in programming.

Note: To return to controlling the channel via the STB only, press **STB** in step 5.

THE VOLUME KEYS

VOL+, **VOL-** and **Mute** always control the TV volume even

when you are in STB or DVD modes. (However, the Volume Keys will always control the AUX device when in AUX mode.) This is the way most people will want the remote to work. However, you can change how the Volume Keys work.

If you always want the Volume Keys to control the AUX device ...

Some people may want to always adjust the volume using their AUX device (typically a home theater receiver) regardless of the mode they are in.

1. Press and hold the **STB** key.
2. While holding down the **STB** key, press **OK**.
3. Release both keys. The Device Keys will blink twice.
4. Press **9 - 5 - 5**. The STB key will blink twice.
5. Press **AUX**. The AUX key will blink 3 times to indicate success in programming.

Note: To return to controlling the volume via the TV, press **TV** in step 5. If you want to control the volume through any device (by pressing a Device Key, then a Volume Key), press **OK** in step 5. This will also control the volume of your STB in STB mode.

RE-SETTING THE REMOTE

Note: All previous programming will be lost.

To reset the remote to the original setting, do the following steps.

1. Press and hold the **STB** key.
2. While holding down the **STB** key, press **OK**.
3. Release both keys. The Device Keys will blink twice.
4. Press **9 - 0 - 0**. The STB key will blink 3 times to indicate success in programming.

THE POWER KEY

When you are in STB mode, the **Power** key can be programmed to turn on/off just the STB or the STB together with other devices.

If you want the Power Key to control multiple devices with a single power key press...

1. Press and hold the **STB** key.
2. While holding down the **STB** key, press **OK**.
3. Release both keys. The Device Keys will blink twice.
4. Press **9 - 7 - 7**. The STB key will blink twice.
5. One after the other, press each Device Key you want the Power Key to control in the order you want them to turn on or off.
6. Press **OK** when done. The STB key will blink 3 times to indicate success in programming.

For example, to program the Power Key to turn on or off your TV, AUX and STB, in that order, with one press of **Power**, press [**STB+OK**], [**9-7-7**], [**TV**], [**AUX**], [**STB**], [**OK**].


If you find that your devices do not always turn on or off together as expected, then you should program your remote to control only one device at a time.


If you want the Power Key to control only one device at a time...

To power any device, you will need to press the appropriate Device Key, then the **Power** Key.

1. Press and hold the **STB** key.
2. While holding down the **STB** key, press **OK**.
3. Release both keys. The Device Keys will blink twice.
4. Press **9 - 7 - 7**. The STB key will blink twice.
5. Press **OK**. The STB key will blink 3 times to indicate success in programming.

The original setting for the Power key depends on which remote you have. (Please check the Play / Pause key on your remote to see which remote you have.)

 The **Power** key controls only the selected mode.

 The **Power** key controls both STB and TV in STB mode.

Codes for Audio Amplifiers

BOSE	0701
Curtis Mathes	0327
Denon	3777
GE	0105
Harman/Kardon	0919
JBL	3781
JVC	0358
Left Coast	0919
Lexicon	3784
Marantz	0919, 3778
McIntosh	3785
Optimus	0327
Parasound	3782
Philips	0919
Pioneer	0040, 0327, 3775
Polk Audio	0919
RCA	0327
Sony	0716
Soundesign	0105
Soundmatters	3783
Victor	0358
Wards	0040, 0105
Yamaha	0160, 0381, 3776, 3779, 3780

Codes for Audio Receivers

ADC	0558
Adcom	3725
Aiwa	0148, 0216, 1415, 1432, 1668, 3614, 3615, 3616, 3617, 3627, 3636, 3670, 3680, 3718
Alco	1417
Amphion Media Works	1590, 1642
AMW	1590, 1642
Anam	1101
Anthem	3757
Apex Digital	1457
Audiotronic	1216
Audiovox	1417, 3754
BOSE	0666, 1256, 1280, 1960, 3741
Capetronic	0558
Carver	0216, 1216, 3636
Classic	3664
Coby	3751
Denon	1387, 3602, 3633, 3662, 3663, 3676, 3681, 3682, 3691, 3694, 3700, 3702, 3703, 3704, 3709, 3721
Emerson	3603
Fisher	1828

GE	3635
Harman/Kardon	0137, 0216, 0918, 1331, 1333, 3626, 3636, 3699
Hilachi	1828
Integra	0162, 1325, 1347
JBL	0137, 1333, 3626, 3752
JVC	1401, 1522, 3618, 3659, 3668, 3686, 3695, 3706, 3712, 3713, 3715, 3729, 3737, 3738
Kenwood	1340, 1596, 1597, 3619, 3646, 3649, 3656, 3658, 3675, 3688
KLH	1417, 1455
Koss	1393, 3749
Lexicon	3758
LG	1320
Linn	0216, 3636
Magnavox	0216, 0558, 1216, 1296, 1541, 3636
Marantz	0216, 1216, 1296, 1316, 3636, 3727
McIntosh	3759
Mitsubishi	1420, 3708

NAD	3637
Nakamichi	3638, 3639
Onkyo	0162, 0869, 1325, 1347, 1558, 3628, 3650, 3653, 3660, 3666, 3669, 3687, 3693, 3697, 3705, 3707, 3710, 3711, 3719, 3753
Optimus	0558, 0697, 1050, 1101, 3634
Ortron	1393
Panasonic	1315, 1335, 1343, 1545, 1575, 1660, 1790, 1791, 3629, 3630, 3667, 3683, 3701, 3723, 3728, 3731, 3732, 3733, 3734, 3736, 3742, 3743, 3745, 3746, 3747, 3750
Philips	0216, 1216, 1293, 1296, 3636, 3698, 3749
Pioneer	0041, 0177, 0558, 0657, 1050, 1411, 3607, 3608, 3625, 3644, 3645, 3652, 3654, 3677, 3678, 3679, 3689, 3690, 3722, 3740

Polaroid	3605
Polk Audio	0216, 1316, 3726
Proscan	1281, 3635
RCA	0558, 1050, 1101, 1281, 1417, 1538, 3609, 3620, 3635, 3748
Rotel	3760
RCA & Dimensia	3610, 3611, 3612, 3613, 3635

Rio	1896
Samsung	1322, 1527, 3720, 3755
Sansui	0216, 3636
Sanyo	1496, 1828
Sherwood	1104, 3632, 3724
Sonic Blue	1896
Sony	1085, 1285, 1468, 1585, 1685, 1785, 1786, 1885, 3606, 3621, 3622, 3631, 3640, 3641, 3642, 3643, 3648, 3651, 3657, 3671, 3672, 3673, 3674, 3684, 3685, 3714, 3716, 3717, 3730, 3735, 3739, 3744

Soundesign	0697
Sunfire	1340
Teac	1101, 1417
Technics	1335, 1545, 3629, 3630, 3661, 3665, 3667
Thorens	1216
Venturer	1417
Wards	0041, 0216, 3625, 3636
Yamaha	0162, 0203, 1203, 1303, 1358, 1402, 3600, 3601, 3604, 3623, 3624, 3625, 3647, 3655, 3692, 3696, 3756

Zenith	1320
--------	------

Codes for Television

Abex	3026
Admiral	0120, 0490, 3001, 3027
Advent	0788, 0810, 0842, 0844, 0869
Adventura	3028
Aiko	0119, 3009
Aiwa	3195
Akai	0057, 0087, 0699, 0729, 0839, 3002, 3182, 3219, 3247, 3248
Albatron	0727, 0870
Alleron	3013
America Action	0207
Ampro	0778
Amtron	3012
Anam	0207
Anam National	3003, 3012
AOC	0057, 0205, 3004, 3005
Apex	3041, 3117, 3189
Apex Digital	0183, 0775, 0792, 0794, 0906, 3183
Audiovox	0119, 0207, 0478, 0650, 0829, 0902, 3012
Aventura	0198
Belcor	0205
Bell & Howell	0181, 3001, 3015
Benq	1059
Bradford	0207, 3012
Brilliant	3227, 3228, 3230
Brockwood	0205
Broksonic	0207, 0263, 0490, 3182, 3204
Candle	0057, 0205, 3005, 3006, 3028
Carnivale	0057
Carver	0081
Celebrity	0027, 3002
Celera	0792
Centurion	3007
Changhong	0792
Citizen	0057, 0087, 0119, 0205, 3005, 3006, 3009, 3012, 3022, 3025, 3203
Clarion	0207
Colorlyme	0205, 3005
Colt	3199
Commercial Solutions	0074, 1474
Concerto	0205, 3005
Contec	0207
Contec/Cony	3008, 3012
Craig	0207, 3012
Crosley	0081
Crown	0207, 3012, 3018
Curtis Mathes	0057, 0074, 0081, 0087, 0120, 0172, 0181, 0193, 0205, 0478, 0493, 0729, 1174, 1374, 3000, 3005, 3015, 3022, 3025
CXC	0207, 3012
Daewoo	0119, 0205, 0478, 0650, 0688, 0699, 1688, 3004, 3005, 3009, 3025, 3081, 3100, 3153, 3203
Daytron	0205, 3005, 3025
Dell	1107, 1205
Denon	0172
Dimensia	3000
Dumont	0044, 0205, 3024
Durabrand	0198, 0205, 0207, 0490, 1061
Dwin	0120, 0747, 0801
Electroband	0027, 3002
Electrograph	1782
Electrohome	0205, 3002, 3003, 3005
Element	3264
Emerson	0181, 0198, 0205, 0207, 0263, 0490, 0650, 3005, 3008, 3010, 3011, 3012, 3013, 3015, 3025, 3031, 3186, 3203, 3204, 3218

Envision	0057, 0205, 0840, 3005
Epson	0860, 0867, 3144
ESA	0198, 0839
Fisher	0181, 3014, 3015
Fujitsu	0710, 0836, 0880, 3013, 3159, 3160, 3162, 3163, 3164
Funai	0198, 0207, 3012, 3013, 3198
Futurtech	0207, 3012
Gateway	1782, 1783
GE	0074, 0078, 0205, 0478, 1174, 1374, 1474, 3000, 3003, 3005, 3016, 3017, 3037, 3124, 3200, 3201, 3208
Gibraltar	0044, 0057, 0205, 3024
Go Video	0913
Goldstar	0057, 0205, 3004, 3005, 3008, 3025, 3026, 3202
Grunpy	0207, 3012, 3013
Haier	1061
Hallmark	0205, 3005
Harley Davidson	3198
Harman/Kardon	0081
Harvard	0207, 3012
Havermy	0120
Helios	0892
Hello Kitty	0478
Hisense	0775
Hitachi	0172, 0205, 1172, 3005, 3008, 3039, 3044, 3180, 3198
HP	3253, 3254
Hyundai	0876
Ilo	3249, 3250, 3252
IMA	3012
Infinity	0081, 3018
Infocus	3255, 3256, 3257
Insignia	0198
Inteq	0044
Janeil	3028
JBL	0081, 3018
JC Penney	0205, 3000, 3004, 3005, 3006, 3016, 3017, 3022, 3025, 3026
JCB	0027, 3002
Jensen	0205, 0788, 0842, 0844, 3005
JVC	0080, 0758, 1280, 3008, 3017, 3019, 3070, 3096, 3097, 3101, 3134, 3174, 3175
Kawasho	0205, 3002, 3005
KEC	0207
Kenwood	0057, 0205, 3005
KLH	0792, 0794
Kloss Novabeam	3012, 3028
Konka	3032, 3238, 3239, 3240, 3241, 3242, 3243, 3244
KTV	0057, 0207, 3012, 3025
LG	0205, 0727, 0883, 1205, 1292, 3004, 3145
Lloyd's	3198
Loewe	3018
Logik	3001
Luxman	0205, 3005
LXI	0074, 0081, 0181, 0183, 0205, 3000, 3005, 3015, 3018
Magnasonic	3203
Magnavox	0057, 0081, 0205, 0733, 0829, 1281, 1481, 3005, 3006, 3018, 3046, 3047, 3056, 3098, 3102, 3154, 3198, 3212, 3218
Magnin	3200
Majestic	3001
Marantz	0057, 0081, 0205, 0731, 0882, 1181, 3005, 3018
Matsushita	0277, 0677
Maxent	1782
Megapower	0727

Megaltron	0172, 0205, 3005
Memorex	0177, 0181, 0205, 0490, 3001, 3004, 3005, 3015, 3105, 3106, 3197, 3202
MGA	0057, 0177, 0205, 3004, 3005, 3200
Midland	0044, 0074, 0078, 3017, 3024, 3025, 3026
Minutz	3016
Mitsubishi	0120, 0177, 0205, 0863, 0895, 1277, 3004, 3005, 3075, 3091, 3107, 3109, 3111, 3170, 3176, 3201
Monivision	0727, 0870
Montgomery Ward	3001
Motorola	0120, 3003, 3027
MTC	0057, 0087, 0205, 3004, 3005, 3022
Multitech	0207, 3012
Multivision	3020
NAD	0183, 0205, 0893, 3005, 3029
NEC	0057, 0205, 0524, 0909, 1731, 3003, 3004, 3005
Net-TV	1782
Nikko	0057, 0119, 0205, 3005, 3009
Norcent	0775, 0851
NTC	0119, 3009
Olevia	3131, 3226, 3231, 3232, 3233
Onwa	0207, 3012
Optimus	0181, 0193, 0277, 0677, 3029, 3197
Optoma	0914
Optonica	0120, 3021, 3027
Orion	0263, 0490, 1490, 3011, 3031, 3090, 3204
Panasonic	0078, 0277, 0677, 1437, 3003, 3017, 3018, 3036, 3038, 3049, 3057, 3061, 3063, 3065, 3068, 3079, 3086, 3092, 3104, 3110, 3112, 3113, 3122, 3129, 3130, 3133, 3135, 3149, 3152, 3177, 3185, 3191, 3193, 3194, 3197, 3209, 3215, 3217, 3223
Panavision	3216
Penney	0057, 0074, 0078, 0087, 0183, 0205, 1374, 3200, 3202
Philco	0057, 0081, 0205, 3003, 3004, 3005, 3006, 3008, 3018, 3106
Philips	0081, 0205, 0717, 1181, 1481, 3003, 3006, 3008, 3018, 3040, 3043, 3047, 3060, 3067, 3071, 3084, 3085, 3095, 3114, 3118, 3192, 3212
Philips Magnavox	3040, 3046, 3047, 3067, 3071, 3085, 3095, 3102
Pilot	0057, 0205, 3025
Pioneer	0193, 0205, 0706, 0893, 3005, 3029, 3108, 3115, 3157, 3165, 3179
Polaroid	0792, 0892, 3140, 3264
Portland	0119, 0205, 3004, 3005, 3009, 3025
Price Club	3022
Prima	0788, 0810, 0842, 0844
Princeton	0727, 0744
Prism	0078, 3017
Proscan	0074, 1374, 1474, 3000, 3124
Proton	0205, 0493, 3005, 3008
Proview	3224, 3225, 3234
Pulsar	0044, 0205, 3024
Pye	3258, 3259, 3260, 3261, 3262, 3263
Quasar	0078, 0277, 0677, 3003, 3017, 3197, 3209
Radio Shack	3015
Radio Shack/Realistic	0205, 3000, 3005, 3008, 3012, 3015, 3021, 3025, 3026

RadioShack	0057, 0074, 0181, 0205, 0207, 3198
RCA	0074, 0117, 0205, 0706, 1074, 1174, 1274, 1374, 1474, 1574, 3000, 3003, 3004, 3005, 3034, 3045, 3083, 3088, 3119, 3124, 3181, 3184, 3190, 3200, 3201, 3211, 3213
Realistic	0057, 0181, 0205, 0207, 3015
Runco	0044, 0057, 0524, 0630, 3024
Sampo	0057, 0205, 1782, 3005, 3025, 3026
Samsung	0057, 0087, 0205, 0729, 0793, 0839, 0841, 1087, 3004, 3005, 3008, 3022, 3025, 3026, 3058, 3094, 3127, 3128, 3136, 3137, 3148, 3156, 3172, 3205
Sansui	0490, 3031, 3048, 3090, 3182, 3198, 3204
Sanyo	0181, 0205, 0826, 0920, 3014, 3015, 3200
Scotch	0205, 3005
Scott	0205, 0207, 0263, 3005, 3008, 3011, 3012, 3013, 3251
Sears	0074, 0081, 0181, 0183, 0198, 0205, 3000, 3005, 3013, 3014, 3015, 3019, 3030, 3198, 3202
Sharp	0120, 0205, 0518, 0715, 0716, 0878, 3005, 3008, 3021, 3025, 3027, 3073, 3121, 3125, 3132, 3138, 3142, 3206, 3222
Sheng Chia	0120
Shogun	0205
Signature	3001
SIM2 Multimedia	3265
Simpson	3006
Sony	0027, 0861, 1127, 3002, 3050, 3054, 3069, 3077, 3103, 3116, 3123, 3126, 3143, 3150, 3151, 3155, 3178, 3198
Soundesign	0205, 0207, 3005, 3006, 3012, 3013
Squareview	0198, 3030
SSS	0205, 0207, 3012
Starlite	0207, 3012
Studio Experience	0870
Superscan	0120, 0891, 3218
Supre-Macy	3028
Supreme	0027, 3002
SVA	0775, 0892
Sylvania	0057, 0081, 0198, 0205, 3005, 3006, 3018, 3042, 3082, 3095, 3099, 3105, 3139, 3161, 3186, 3192, 3196, 3210, 3218, 3221, 3229, 3235, 3236, 3237, 3245, 3246
Symphonic	0198, 0207, 3010, 3012, 3030, 3064, 3198
Syntax	3131, 3231, 3232, 3233
Tandy	0120, 3027
Tatung	1783, 3003
Technics	0078, 0277, 3017
Techview	0874
Techwood	0078, 0205, 3005, 3017
Teknika	0081, 0087, 0119, 0177, 0205, 0207, 3001, 3004, 3005, 3006, 3008, 3009, 3012, 3013, 3022, 3025
Telecaption	3023
Telefunken	0729
Thomas	3198
TMK	0205, 3005
TNCI	0044
Toshiba	0087, 0181, 0183, 0677, 0859, 0872, 1172, 1183, 1283, 1292, 1383, 1683, 1731, 3015, 3022, 3023, 3051, 3052, 3053, 3055, 3059, 3062, 3066, 3072, 3074, 3078, 3080, 3087, 3089, 3093,

	3147, 3167, 3168, 3169, 3171, 3173, 3182, 3187, 3188, 3207, 3214, 3220
Totevision	3025
TVS	0490
Universal	3016
V Inc.	0912
Vector Research	0057
Victor	0080, 3019
Vidikron	0081
Vidtech	0205, 3004, 3005
Viewsonic	0884, 0891, 0912, 1782, 3141, 3154
Viking	3028
Viore	3252
Vizio	0891, 0912, 1783
Wards	0057, 0081, 0205, 0893, 1183, 3000, 3001, 3004, 3005, 3010, 3013, 3016, 3018, 3021
Waycon	0183
Westinghouse	0027, 0478, 0912, 0916
White Westinghouse	0490, 0650
Yamaha	0057, 0205, 0796, 0860, 0866, 3004, 3005
Zenith	0044, 0119, 0205, 0490, 1292, 3001, 3024, 3033, 3035, 3076, 3120, 3146, 3158, 3166, 3198, 3204

Codes for Video – VCR

ABS	1999
Admiral	0075
Adventura	0027, 3808
Aiwa	0027, 0064, 3808
Akai	3801, 3905
Alienware	1999
American High	0062, 3806
Apex Digital	3858
Asha	3804
Audio Dynamics	3802
Audiovox	0064, 3805
Beaumarck	3804
Bell & Howell	3803
Broksonic	0211, 1506, 3850, 3871, 3888
Calix	0064, 3805
Candle	3804, 3805
Canon	0062, 3806
Carver	0108
Citizen	0064, 1305, 3804, 3805, 3887
Colorlyme	3802
Colt	3884
Craig	0064, 0074, 3804, 3805, 3807
Curtis Mathes	0062, 0087, 0189, 1062, 3800, 3802, 3804, 3806
Cybernex	3804
Cyberpower	1999
Daewoo	0072, 1305, 3808, 3835, 3887
Davidson	0027
DBX	3802
Dell	1999
Dimensia	3800
DIRECTV	0766
Durabrand	0066
Dynatech	0027, 3808
Electrohome	0064, 3805
Electrohonic	0064, 3805
Emerex	0059
Emerson	0027, 0064, 0211, 1305, 1506, 3805, 3806, 3808, 3861, 3887, 3888, 3904
ESA	3844

Fisher	0074, 3803, 3807, 3842
Fuji	0060, 0062, 3801, 3806
Funai	0027, 3808, 3812, 3861, 3883
Garrard	0027, 3808
Gateway	1999
GE	0062, 0087, 0834, 1062, 1087, 3800, 3804, 3806, 3885, 3892, 3911
Go Video	3851, 3854, 3859, 3867, 3869
Goldstar	0064, 1264, 3802, 3805, 3886
Gradiente	0027, 3808
Harley Davidson	0027, 3808, 3883
Harman/Kardon	0108, 3802
Headquarter	3803
Hewlett Packard	1999
Hi-Q	0074, 3807
Hitachi	0027, 3883
Howard Computers	1999
HP	1999
Hughes Network Systems	0766
Humax	0766
Hush	1999
IBUYPOWER	1999
Instant Replay	3806
JC Penney	3802, 3803, 3804, 3805, 3806
JCL	3806
JVC	3802, 3803, 3822, 3828, 3832, 3833, 3846, 3847, 3848, 3849, 3868, 3878, 3879
KEC	0064
Kenwood	3802, 3803
Kodak	0062, 0064, 3805, 3806
LG	3805, 3845
Linksys	1999
Lloyd's	0027, 3808, 3883
LXI	0064, 3805
Magnasonic	1305, 3887
Magnavox	0027, 0062, 0066, 0108, 1808, 3806, 3829, 3836, 3840, 3883, 3898, 3904
Magnin	3805, 3885
Marantz	0062, 0108, 3802, 3803, 3806
Marta	0064, 3805
Matsushita	0062, 0189, 3806
Media Center PC	1999
MEI	0062, 3806
Memorex	0027, 0062, 0064, 0066, 0074, 0075, 0189, 1264, 3803, 3804, 3805, 3806, 3807, 3808, 3811, 3843, 3850, 3882, 38

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>