

SV2000

**Video
Cassette
Recorder**

Owner's Manual

IMPORTANT!
Return Your Warranty Registration Card
Within 10 Days. See Why Inside.

MODEL SVA102

Return your Warranty Registration Card today to ensure you receive all the benefits you're entitled to.

Once your purchase is registered, you're eligible to receive all the privileges of owning this product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

SV2000

Congratulations on your purchase, and welcome to the "family!"

Dear product owner:

Thank you for your confidence in this product. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the SV2000 "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly, you can count on our uncompromising commitment to your total satisfaction.


All of this is our way of saying welcome - and thanks for investing in an SV2000 product.

P.S. Remember, to get the most from your product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!



Know these

safety symbols

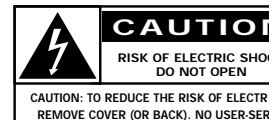

⚡ This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

⚠ The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

ATTENTION: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

For Customer Use

Below, enter your product's model number and serial number, which are located on the rear of the cabinet. Keep this information for future reference.

Model No. _____ Serial No. _____

MAC5097

Introduction 3

Welcome to your VCR owner's manual.

This manual has six sections: *Setting Up Your VCR*; *Description of Controls*; *Basic Operations*; *Recording*; *Playing*; and *Information You May Need*. The instructions explain all of the VCR's features, which are listed below. You cannot hurt your VCR by trying the features! So read on – and relax.

Features

- Auto Return
- Automatic Channel Setup
- Automatic Playback Features
- Automatic Tracking Adjustment
- Display Panel
- High Quality (HQ) System
- On-Screen Displays in English or Spanish
- One-Touch Recording
- Real-Time Counter
- Remote Control
- Rental Play
- Repeat Play
- Special Effects Playback: Forward and Reverse Searching; Still
- Timer Recording

Safety Precautions

Warning: To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

Federal Communications Commission (FCC) Warning: Any unauthorized changes or modifications to this equipment void the user's authority to operate it.

This VCR, equipped with a High Quality (HQ) system, is compatible with existing Video Home System (VHS) equipment. Philips Consumer Electronics Company recommends that you use only video cassette tapes that are labeled with the **VHS** mark. The use of other tapes may result in poor picture quality and excessive deposits on the video heads, which may not be covered by the warranty if damage occurs.

Note to the Cable TV System Installer: This reminder is provided to call the Cable TV system installer's attention to Article 820-40 of the National Electrical Code, which provides guidelines for proper grounding – in particular, specifying that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible.



As an ENERGY STAR® Partner, Philips Consumer Electronics Company has determined that this product meets the ENERGY STAR® guidelines for energy efficiency. ENERGY STAR® is a U.S. registered mark. Using products with the ENERGY STAR® label can save energy. Saving energy reduces air pollution and lowers utility bills.

Copyright 1999 Philips Consumer Electronics Company. All rights reserved.

Helpful Hints

- Before doing anything else, record the VCR's model and serial numbers in the spaces provided on page two. These numbers will help us assist you if you ever call for help.
- Your new product, its packaging, and this manual contain materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount that needs to be properly disposed. Your product uses batteries that should not be thrown away when depleted but should be disposed of as small chemical waste. Please find out about the local regulations on disposal of your old product, batteries, manual, and packaging whenever you replace existing equipment.

4 Table of Contents

Setting Up Your VCR

Introduction	3
Table of Contents	4
Before Using Your VCR	5
Hookups Without a Cable Box/Direct Broadcast System	6-7
Hookups With a Cable Box/Direct Broadcast System	8-9
Hookups With a Stereo TV	10
Turning on Your VCR	11
Automatic Channel Setup	12-13
Setting the Clock	14-15
Language Selection	16

Description of Controls

On-Screen Status Displays	17
Remote Control Buttons	18-19
VCR Display Panel	20
Front Panel	21
Rear Panel	22

Basic Operations

Playing	23
Recording	24

Recording

One-Touch Recording	25
Timer Recording	26-29
Auto Return	30
Recording One Channel/Watching Another	31
Rerecording (Tape Duplication)	32

Playing

Repeat Play	33
Special Effects Playback	34
Rental Play	35
Real-Time Counter Memory	36
Automatic Playback Features	37

Information You May Need

Helpful Hints	38-39
Glossary	40
Specifications	41
Limited Warranty	42
Index	43
Accessories	44

Before Using Your VCR 5

Putting Batteries in the Remote Control

1


Remove the battery compartment lid on the bottom of the remote control by sliding the lid in the direction of the arrow.

2

Insert two AA batteries inside the battery compartment with their + and – ends aligned as indicated.

3

Replace the battery compartment lid.

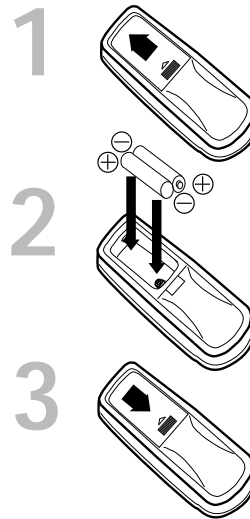

Using the Remote Control

- Point the remote control at the VCR's remote sensor (see page 21) when using the remote control to operate the VCR.
- Do not put objects between the remote control and the VCR.

Erasure Prevention


Video cassette tapes have record tabs to ensure that recordings are not erased accidentally.

1

To prevent accidental erasure, break off the tab with a screwdriver.

2

To record again, cover the hole with cellophane tape.

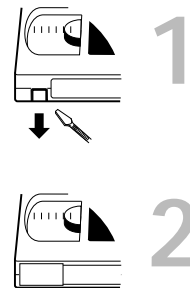

VCR maintenance

- In this VCR, use only tapes with the **VHS** mark.
- Make sure any light adhesive stick-on notes are removed from the video cassette tape before putting the tape in the VCR. Removable labels like these can jam the VCR.
- Periodic maintenance is required to maintain your VCR's performance. The video heads will eventually require cleaning or replacement. Cleaning or replacement of the video heads should be performed by an authorized service center.

Helpful Hints


- The remote control and its batteries are supplied.
- Do not mix alkaline and manganese batteries.
- Do not mix old and new batteries.

6 Hookups Without a Cable Box/Direct Broadcast System

The basic VCR/TV connection – antenna/cable to VCR to TV – is shown below. If you have a Cable Box or a Direct Broadcast System, please see pages eight-nine. If you have a Stereo TV, please see page 10. After you hook up the VCR, go to page 11 to turn on the VCR.


1

Disconnect the antenna or cable from your TV.

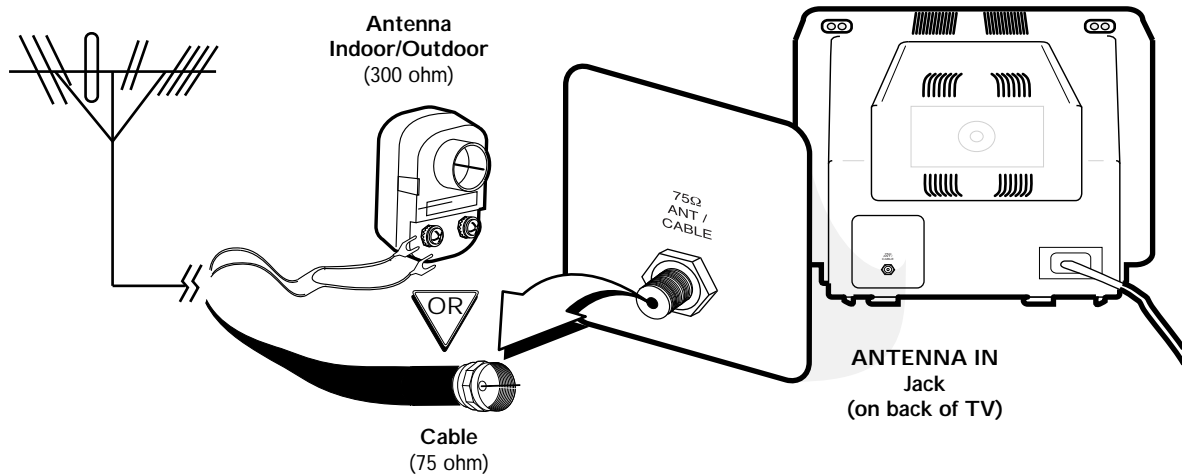

2


Connect the antenna or cable to the ANT(enna) IN Jack of your VCR.

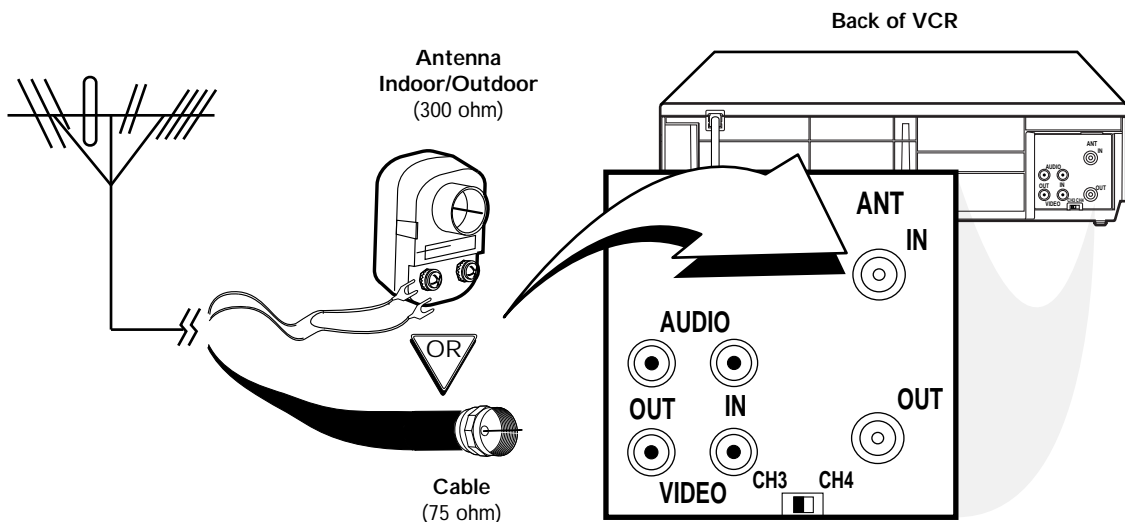

Hookups Without a Cable Box/Direct Broadcast System (cont'd) 7

3

Connect the RF coaxial cable (supplied) to the **OUT** Jack on the back of the VCR and to the **ANTENNA IN** Jack on the TV. (You may use either a snap-on type (supplied) or screw-on type of coaxial cable, whichever you prefer.)

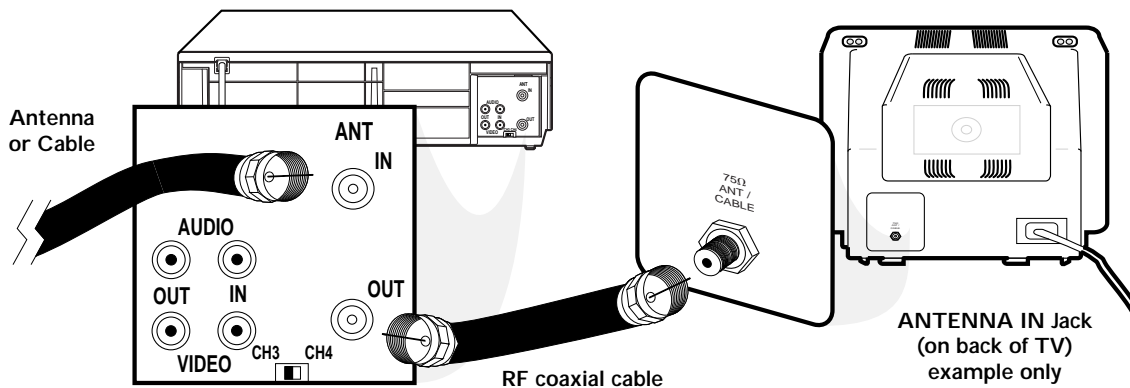


4

Plug in the TV and the VCR.

5

Set the **CH3/CH4** switch on the back of the VCR to **CH3** or **CH4**, whichever channel is not used or least used in your area. **Set the TV to the same channel.** For example, when playing a tape, if the CH3/CH4 switch is set to CH3, the TV should be on channel 03.

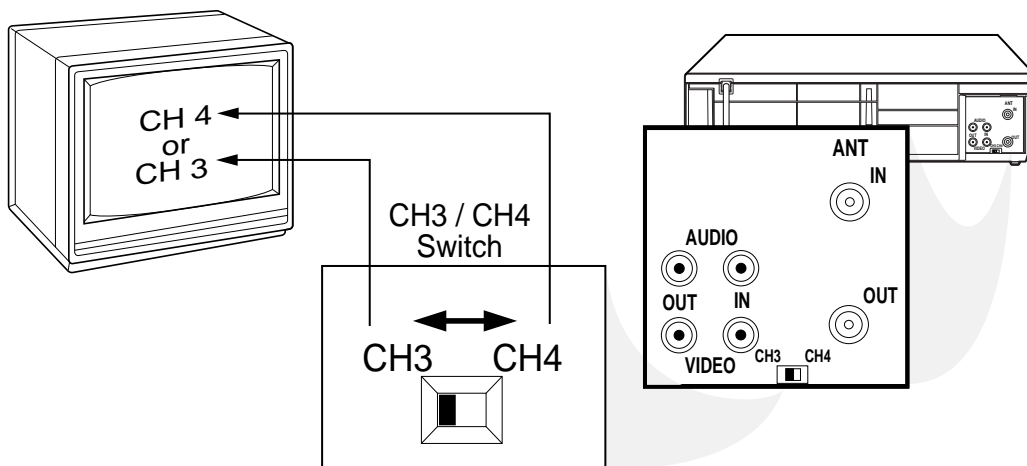


6

You are ready to turn on the VCR. Please go to page 11 before turning on the VCR.

8 Hookups With a Cable Box/Direct Broadcast System

There are two ways to connect your Cable Box/DBS to the VCR. With this connection:

- You may view any channel.
- You must select channels at the Cable Box/DBS. Channels cannot be changed at the VCR.
- You may not view a channel other than the one you are recording.
- You may not program channels at the VCR.
- You can only program a timer recording for one channel at a time. Set the TV and the VCR to the Cable Box/DBS output channel (channel 03 or 04), and set the CH3/CH4 switch to the same channel. Set your Cable Box/DBS to the channel you want to record. When you enter the channel you want to record in a timer recording, select channel 03 or 04 (the Cable Box/DBS output channel). (This is step 7 on page 28.) Leave the Cable Box/DBS on for a timer recording.

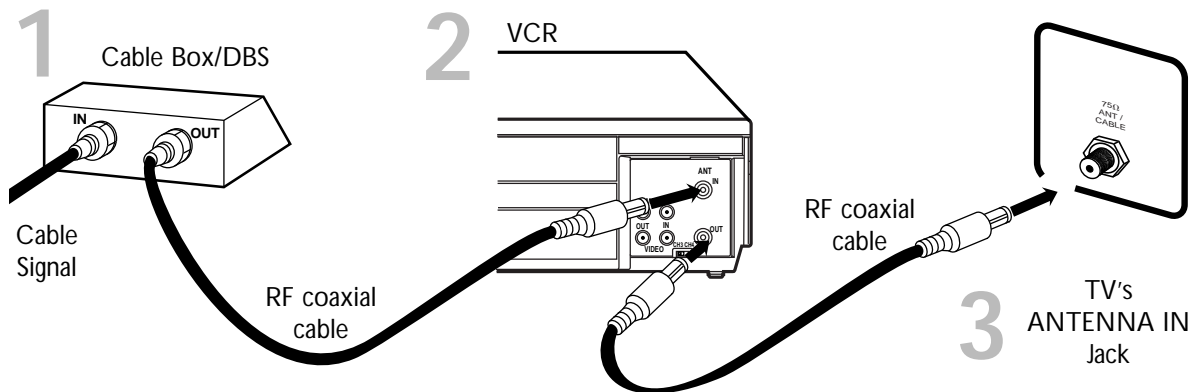

Connections

1

Connect a Cable signal to the IN Jack on the Cable Box/DBS.

2

Use an RF coaxial cable (supplied) to connect the OUT Jack on the Cable Box/DBS to the ANT(enna) IN Jack on the VCR.

3

Use a second RF coaxial cable to connect the OUT Jack on the VCR to the TV's ANTENNA IN Jack.

Recording/Viewing Any Channel

1

With the VCR on and in VCR position (the VCR/TV light will appear on the display panel), use the **CHANNEL ▲/▼** buttons to set the VCR to the Cable Box/DBS output channel (channel 03 or 04).

2

Set the TV to the same channel to which you set the VCR. Set the CH3/CH4 switch on the back of the VCR to the same channel.


3

Select the channel you want to view/record at the Cable Box/DBS.

Hookups With a Cable Box/Direct Broadcast System (cont'd) 9

With this connection:

- You may watch one channel while recording another.
- You may not record scrambled channels.

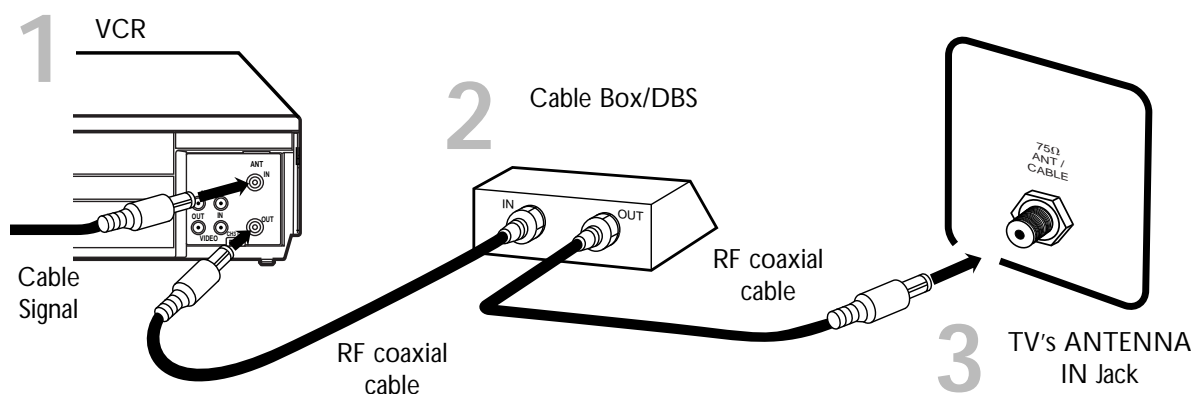

Connections

1

Connect a Cable signal to the VCR's ANT(enna) IN Jack.

2

Use an RF coaxial cable (supplied) to connect the OUT Jack on the VCR to the IN Jack on the Cable Box/DBS.

3

Use a second RF coaxial cable to connect the OUT Jack on the Cable Box/DBS to the ANTENNA IN Jack on the TV.

Recording One Channel/Watching Another

1

Put the Cable Box/DBS on the same channel as the VCR's CH3/CH4 switch. (Make sure the TV is on the Cable Box/DBS output channel, 03 or 04.) Then, with the VCR in VCR position (the VCR/TV light will appear on the display panel), use the CHANNEL ▲/▼ buttons to select the channel you want to record at the VCR. Start the recording.

2

Press the VCR/TV button once to put the VCR in TV position. (The VCR/TV light will disappear.)


3

Select the channel you want to watch at the Cable Box/DBS.

Helpful Hint

- When you play a tape, make sure the Cable Box/DBS is set to the same channel as the CH3/CH4 switch on the VCR. Set the TV to the Cable Box/DBS output channel (03 or 04).

10 Hookups With a Stereo TV

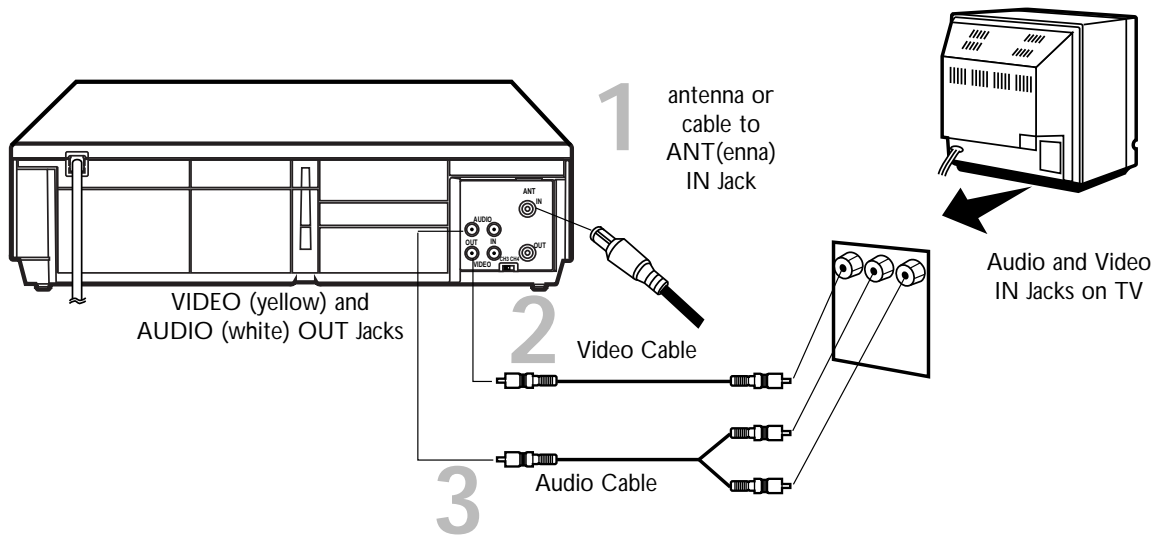

- Audio and Video cables are not supplied.

1

Connect the antenna or cable to the ANT(enna) IN Jack on the back of the VCR.

2

Connect a video cable to the yellow VIDEO OUT Jack on the back of the VCR. Then, connect the other end of the video cable to the VIDEO IN Jack on your TV.

3

Connect an audio cable to the white AUDIO OUT Jack on the back of the VCR. Then, connect the other end of the audio cable to the AUDIO IN Jack on your TV.

(If your TV has Right and Left AUDIO IN Jacks, you must use a "Y" splitter audio cable as illustrated to deliver audio to the TV's right and left channels.)

4

Turn on your TV, making sure it is in Line Input mode. Please refer to your TV owner's manual for details.

Helpful Hint

- This hookup will not give you stereo sound. To get stereo sound, use the connections on pages six-seven and select the channel to be viewed at the TV (with the VCR turned off).

Turning on Your VCR 11


- Before turning on your VCR, make sure there are batteries in the remote control and the VCR and TV are connected (see pages five-10).
- You can not set up channels if you are using a Cable Box/DBS.
- The instructions on this page only work when you turn on the VCR for the first time. If there is a power failure or if the VCR is unplugged for more than one minute, you may need to repeat the instructions on this page.

1

Press the **POWER** button. The POWER light and the VCR/TV light will appear.

2

Turn on the TV. Set it to the same channel as the **CH3/CH4** switch on the back of the VCR. The menu shown below will appear.

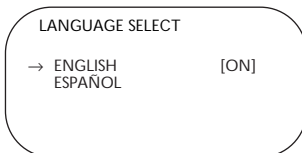


3

Press the **PLAY** button or the **STOP** button to select **ENGLISH** or **ESPAÑOL**. [ON] will appear beside your choice.

4


Press the **F.FWD** button or the **MENU** button. TUNER SET UP will appear on the screen.

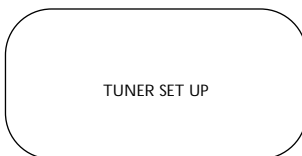

5

Press the **MENU** button, the **F.FWD** button, or the **REWIND** button to begin automatic channel setup. TUNER SET UP will flash on the screen. When channels are set up, the TV will go to the lowest channel available. The VCR will memorize all available channels, so when you use the **CHANNEL ▲/▼** buttons, you'll only scan through channels that you receive.

2

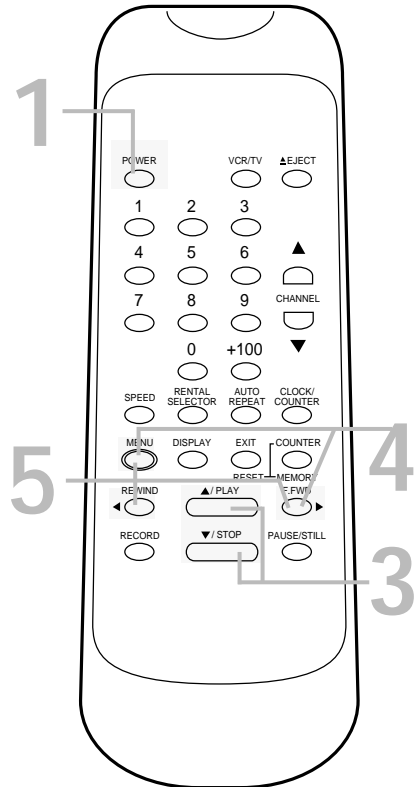 Turn on the TV.


Helpful Hints

- If you do not see any on-screen displays when you turn on the VCR, check your hookups, then try again. If you still do not see any on-screen displays, follow the steps under "Automatic Channel Setup" on page 12 and "Language Selection" on page 16.
- If you try to set up channels when there is no antenna or cable connected to the VCR, programming will appear to take place. Eventually, TUNER SET UP will appear on the screen steadily, and channel programming will stop. Connect an antenna or cable to the ANT(enna) IN jack of the VCR, then press the MENU button, the F.FWD button, or the REWIND button again. Channel programming will begin again.


12 Automatic Channel Setup

Although your VCR may automatically set up the channels you receive when you turn it on for the first time, this function lets you set up channels again. Make sure:

- The VCR is on and is in VCR position. (The VCR/TV light will appear on the display panel. If it does not, press the VCR/TV button once.)


1

Press the **MENU** button repeatedly until the **INITIALIZE** menu appears.

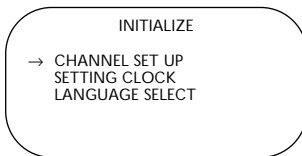

2

Press the **PLAY** button or the **STOP** button repeatedly to select **CHANNEL SET UP**. Then, press the **F.FWD** but-

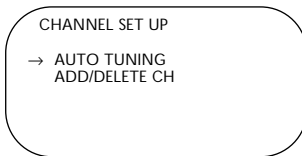


3

Press the **PLAY** button or the **STOP** button repeatedly to select **AUTO TUNING**.

4

Press the **F.FWD** button. The VCR will memorize all available channels. When setup is complete, the lowest channel you receive will appear on the screen.

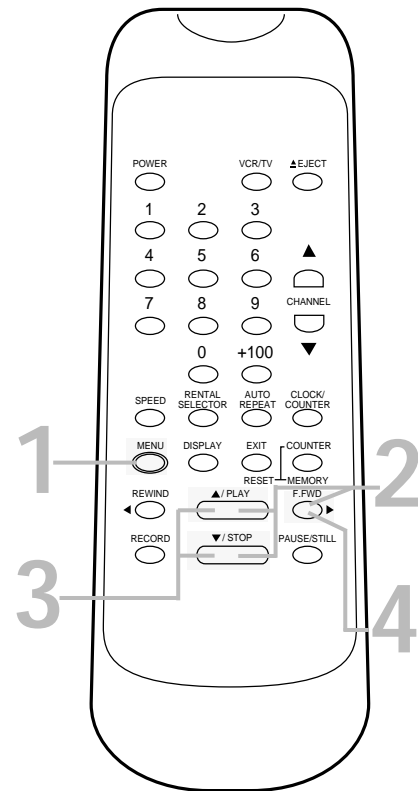

Helpful Hints

- Line Input mode will always be stored in the VCR's memory as channel 00. When you select channel 00 with the CHANNEL ▲/▼ buttons or the Number buttons, AUX will appear on the screen.
- You can not program channels if you are using a Cable Box/DBS. Details are on pages eight-nine.

Automatic Channel Setup (cont'd) 13

Adding/Deleting Channels

The channels you no longer receive or seldom watch can be deleted from the memory. You also may add new channels into the memory. Make sure:


- The VCR is on and in VCR position. (The VCR/TV light will appear. If it does not, press the VCR/TV button once.)

1

Press the **MENU** button repeatedly until the **INITIALIZE** menu appears.


2

Press the **PLAY** button or the **STOP** button repeatedly to select **CHANNEL SET UP**. Then, press the **F.FWD** but-

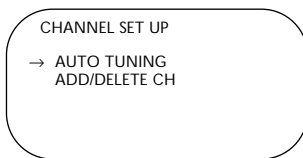

3

Press the **PLAY** button or the **STOP** button repeatedly to select **ADD/DELETE CH**. Then, press the **F.FWD** button.

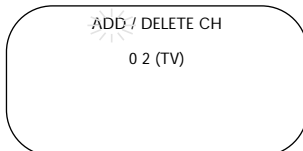

4


Press the **Number** buttons or press the **PLAY** button or the **STOP** button repeatedly until your desired channel number appears.

5

Press the **F.FWD** button or the **REWIND** button so that **ADD** or **DELETE** flashes on the screen.

6

While your choice is flashing, press the **COUNTER RESET/EXIT** button. The channel you added or deleted will appear. The channel will be added or deleted, whichever was flashing on the screen when you exited the menu.

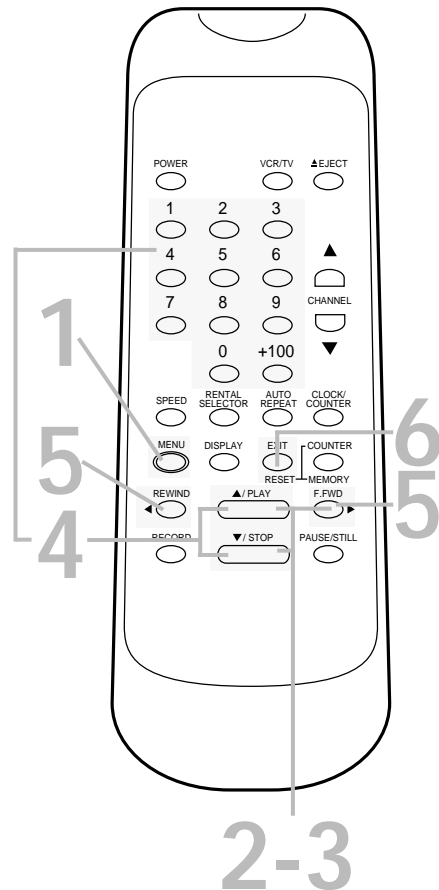

14 Setting the Clock

Follow the steps below to set your VCR's clock. Make sure:


- The VCR is on and in VCR position. (The VCR/TV light will appear. If it does not, press the VCR/TV button once.)

1

Press the **MENU** button repeatedly until the **INITIALIZE** menu appears.


2

Press the **PLAY** button or the **STOP** button repeatedly to select **SETTING CLOCK**. Then, press the **F.FWD** button.

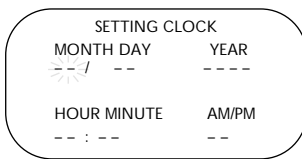


3

While the **MONTH** space is flashing, press the **PLAY** button or the **STOP** button repeatedly until the desired month appears. Then, press the **F.FWD** button.

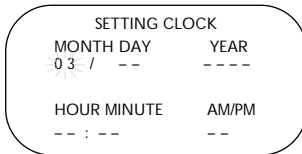



4

While the **DAY** space is flashing, press the **PLAY** button or the **STOP** button repeatedly until the desired day appears. Then, press the **F.FWD** button.

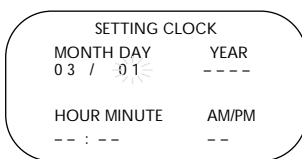

5

While the **YEAR** space is flashing, press the **PLAY** button or the **STOP** button repeatedly until the desired year appears. Press the **F.FWD** button. The day of the week will appear automatically.

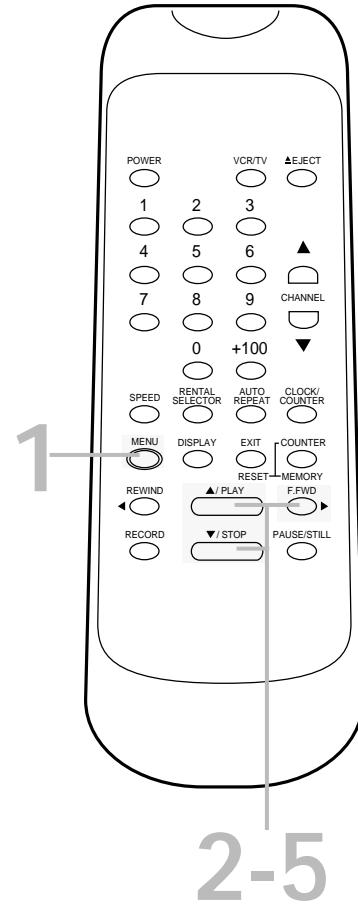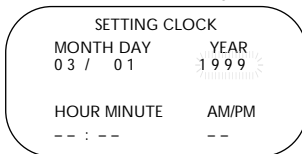


Helpful Hints

- If the clock has never been set, the **SETTING CLOCK** menu may appear immediately when you press the **MENU** button. If this happens, follow the instructions from step 3 above.
- To display the time, press the **DISPLAY** button repeatedly until the time appears on the screen.
- Power failures that last for more than one minute can cause you to lose your clock setting.
- Press the **REWIND** button to go back one step from the current step during steps 4-8.

Setting the Clock (cont'd) 15


6

While the HOUR space is flashing, press the PLAY button or the STOP button repeatedly until the desired hour appears. Then, press the F.FWD button.

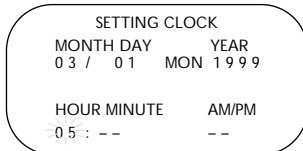


7

While the MINUTE space is flashing, press the PLAY button or the STOP button repeatedly until the desired minute appears. Then, press the F.FWD button.

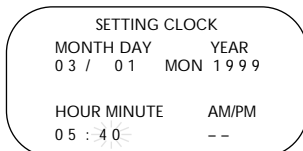


8

While the AM or PM space is flashing, press the PLAY button or the STOP button repeatedly to point to AM or PM. Your selection will flash on the screen in the AM/PM space.

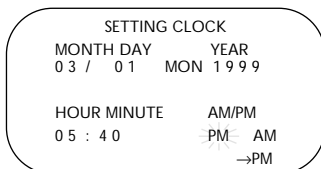

9

Press the COUNTER RESET/EXIT button or the F.FWD button to start the clock.

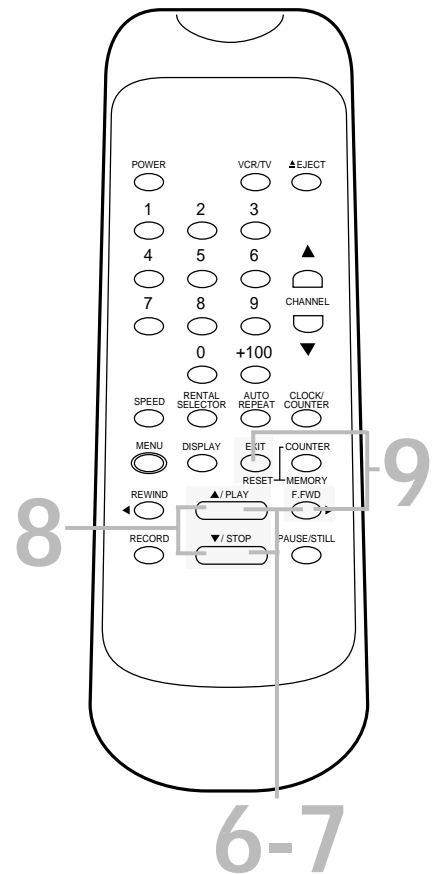

Helpful Hints

- To reset the clock, follow steps 1-2 on page 14. Select the information you want to change using the F.FWD button or the REWIND button. When the desired information is flashing, use the PLAY button or the STOP button to enter the correct information. Press the COUNTER RESET/EXIT button to exit.
- This VCR is ready for the year 2000 and the years beyond. To set a date in the year 2000, enter 2000 for the year in step 5 on page 14.


16 Language Selection

Follow the steps below to change the language of the on-screen menus and displays. Make sure:

- The VCR is on and in VCR position. (The VCR/TV light will appear. If it does not, press the VCR/TV button once.)


1

Press the **MENU** button repeatedly until the **INITIALIZE** menu appears.

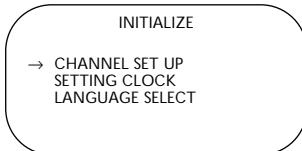


2

Press the **PLAY** button or the **STOP** button repeatedly to select **LANGUAGE SELECT**. Then, press the **F.FWD** button.

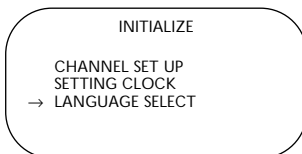


3

Press the **PLAY** button or the **STOP** button to select **ENGLISH** or **ESPAÑOL**. [ON] will appear beside your choice.

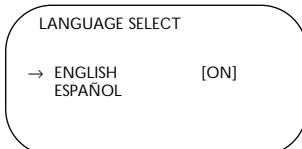

4

Press the **COUNTER RESET/EXIT** button.

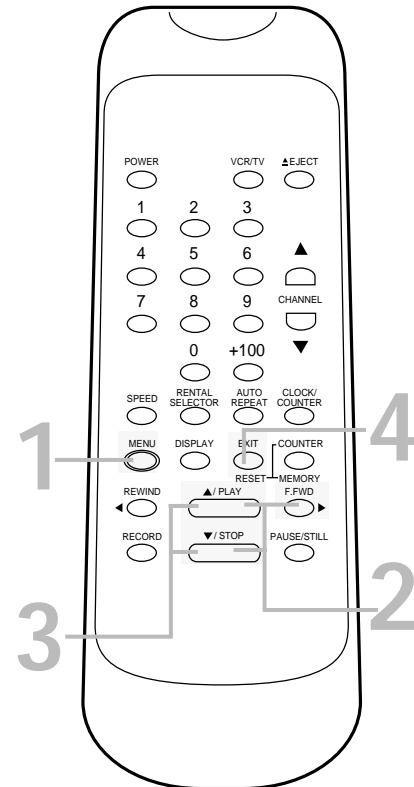


Helpful Hint

- If you accidentally select Spanish on-screen displays and need English on-screen displays:
 - 1) Press the **MENU** button repeatedly until the **PARA INICIAR** menu appears.
 - 2) Press the **PLAY** button or the **STOP** button repeatedly to choose **SELEC. IDIOMA**, then press the **F.FWD** button.
 - 3) Press the **PLAY** button or the **STOP** button to select **ENGLISH**.
 - 4) Press the **COUNTER RESET/EXIT** button.

On-Screen Status Displays 17

You may access on-screen status displays by pressing the DISPLAY button repeatedly. On-screen status displays may include the current time, channel, and other information.

- Press the DISPLAY button once. The COUNT on-screen status display will appear for five seconds. After five seconds, only the real-time counter will appear on the screen. This counter shows you the elapsed playing time of the tape (from the point at which the real-time counter was set to zero).
- Press the DISPLAY button once again. The CLOCK on-screen status display will appear for five seconds. After five seconds, only the current time will appear on the screen (the clock must be set). (If you are watching TV, the current channel number will also appear on the screen.)
- Press the DISPLAY button once again. The on-screen status display will disappear.

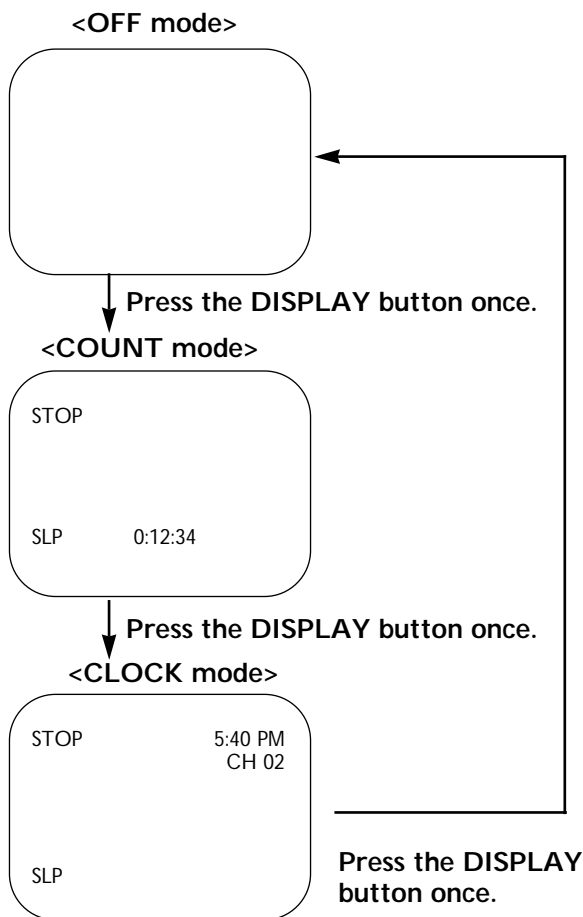

Helpful Hints

- If the channel you select has no broadcast, the screen will be solid blue.
- You may bring up a status display at any time by pressing the DISPLAY button. The exceptions are during Still mode and forward and reverse searching.
- Channel numbers (when tuned) appear on the screen for a few seconds.
- To display the current time or the real-time counter, press the CLOCK/COUNTER button. Each time you press the CLOCK/COUNTER button, you alternate between a display of the clock or the real-time counter. The clock or the real-time counter will disappear after five seconds.

18 Remote Control Buttons

POWER Button
Press to turn the VCR on or off.

Number Buttons
Use to select channels.

Channels 1-9 ●
To select, press 0, then press the channel number you want. For example, to select channel 7, press 0, 7.

Channels 100 and above ●
To select, press the +100 button, then press the last two digits of the channel you want. For example, to select channel 117, press the +100 button, 1, 7.

RENTAL SELECTOR Button
Press to set the Rental mode to ON or OFF during tape playback. *Details are on page 35.*

SPEED Button
Press to select the recording speed (SP or SLP). *Details are on pages 24 and 40.*

MENU Button
Press repeatedly to access menus or to remove menus.

DISPLAY Button
Press repeatedly to view the on-screen status displays. *Details are on page 17.*


REWIND Button
When tape playback is stopped, press to rewind the tape at high speed. During tape playback, press to rewind the tape while the picture stays on the screen. *Details are on page 34.*
Press to erase a timer recording. *Details are on page 29.*
Press to add or delete channel numbers. *Details are on page 13.*
Press to go back one step when setting the clock or a timer recording.

RECORD Button
Press to start a recording. *Details are on page 24.*

PLAY Button
Press to play a tape. Also, press to release Search or Still mode and to return to normal playback. *Details are on page 34.* Use to enter digits and information when programming a function in the on-screen menu (setting the clock, for example). Press to select an item in the on-screen menu.

The diagram shows a remote control with the following buttons and labels: POWER, VCR/TV, ▲EJECT, 1, 2, 3, 4, 5, 6, 7, 8, 9, CHANNEL (▲ and ▼), 0, +100, SPEED, RENTAL SELECTOR, AUTO REPEAT, CLOCK/COUNTER, MENU, DISPLAY, EXIT, COUNTER, REWIND, ▲/PLAY, RESET, MEMORY, F.FWD, RECORD, ▼/STOP, PAUSE/STILL.


Remote Control Buttons (cont'd) 19

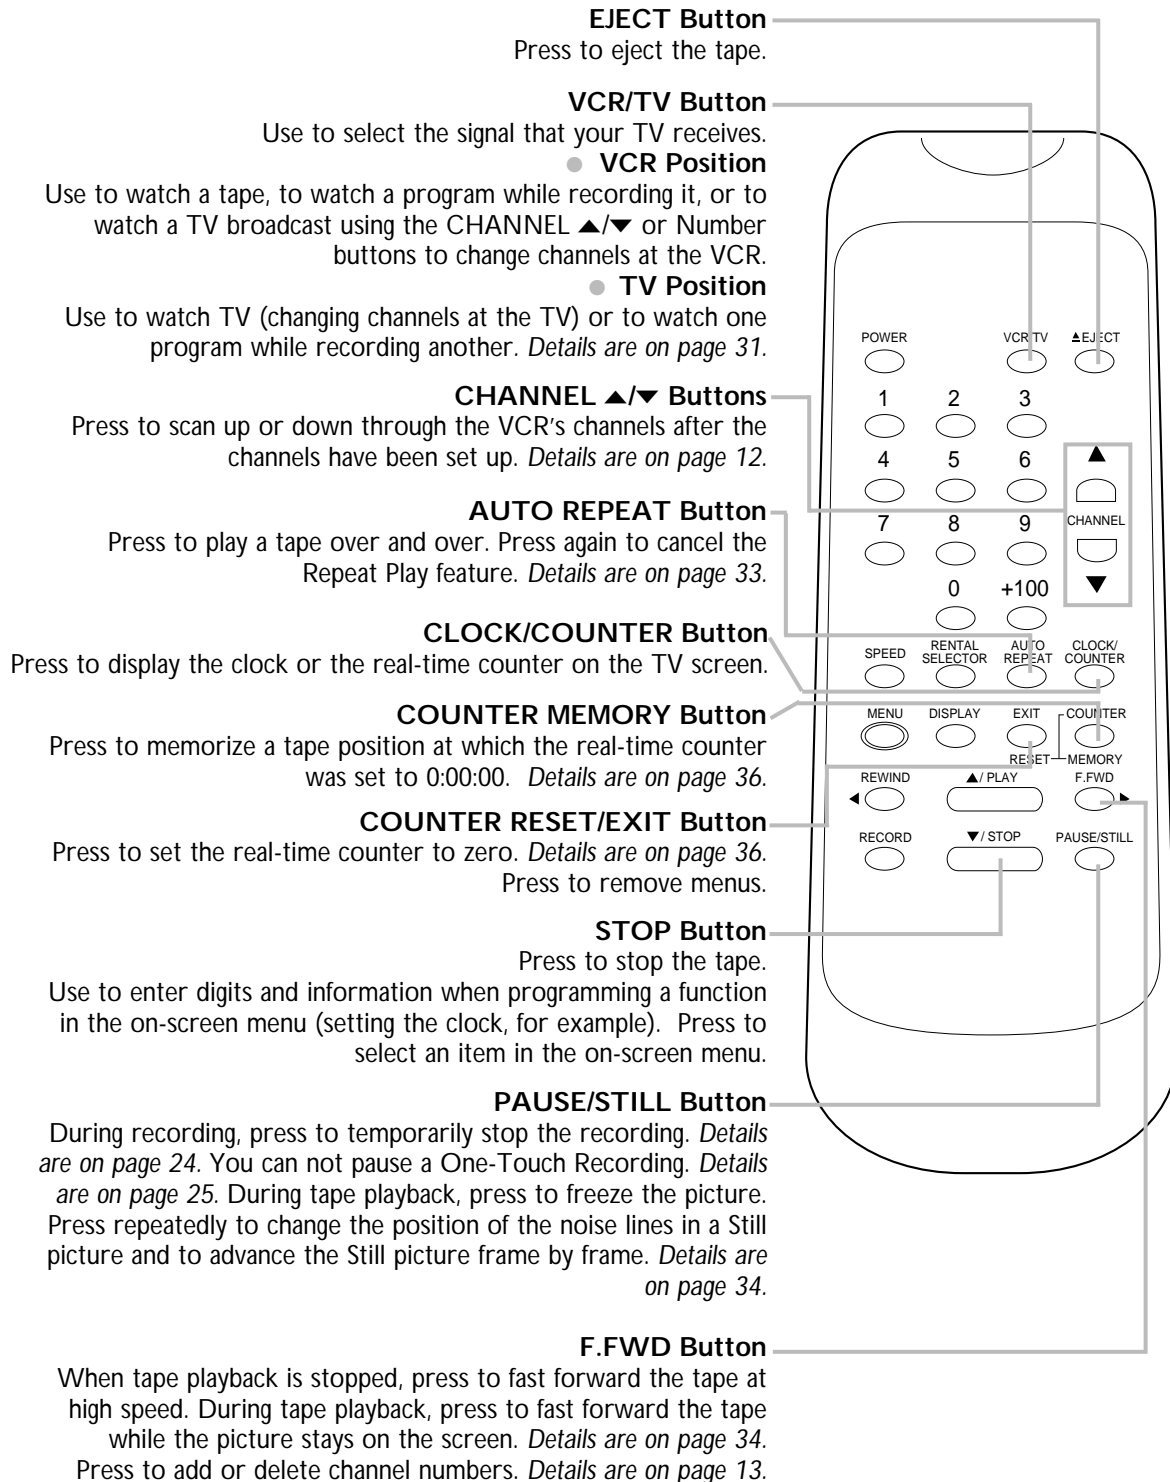

20 VCR Display Panel

Cassette Compartment
Insert a video cassette tape here.

VCR Display Panel
Information about VCR operations is displayed here.

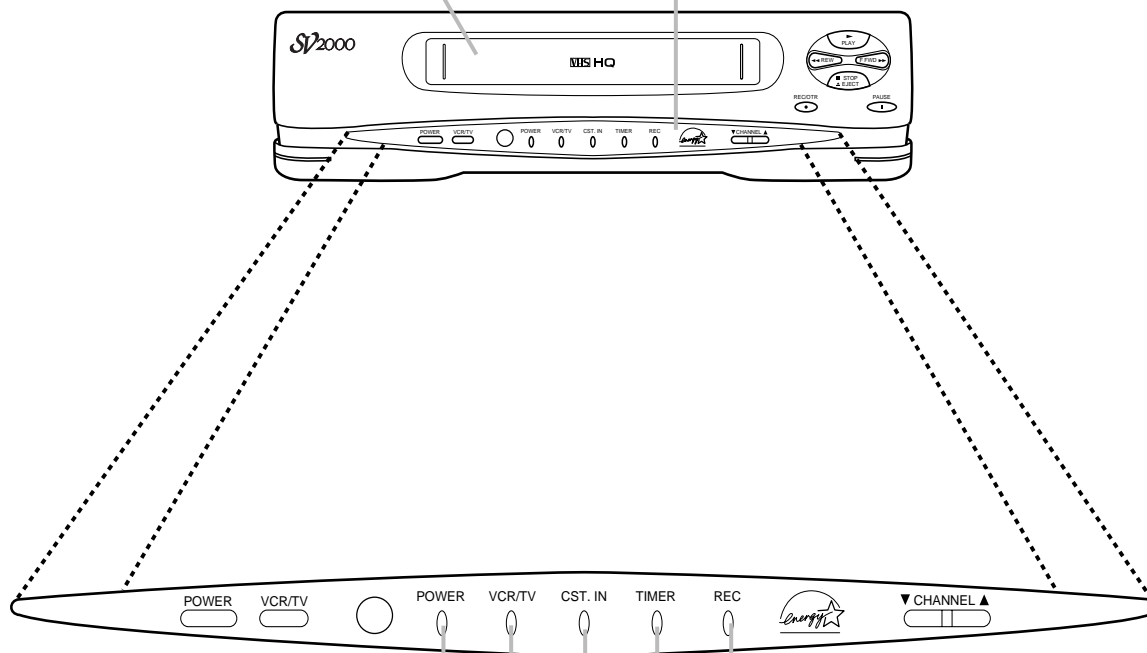

POWER Light
This light indicates that the power is on.

VCR/TV Light
This light appears when the VCR is in VCR position.

REC(ord) Light
This light appears during a recording. It flashes when a recording is paused.

TIMER Light
This light glows when you turn off the power to set a timer recording. It also glows during a One-Touch Recording. It flashes when you turn off the power to set a timer recording if a tape has not been placed in the VCR. It flashes when all timer recordings have finished.

CST.IN Light
This light appears when a tape is in the VCR.

Remote Sensor

Receives a signal from your remote control so you can operate your VCR from a distance.

POWER Button

Press to turn the VCR power on and off.

F.FWD (Fast Forward) Button

When tape playback is stopped, press to fast forward the tape at high speed. During tape playback, press to fast forward the tape while the picture stays on the screen. *Details are on page 34.*

PLAY Button


Press to play a tape. Also, press to release Search or Still mode and return to normal playback. *Details are on page 34.*

STOP/EJECT Button

Press once to stop the tape. When tape playback is stopped, press to eject the tape.

REW(ind) Button

When tape playback is stopped, press to rewind the tape at high speed. During tape playback, press to rewind the tape while the picture stays on the screen. *Details are on page 34.*

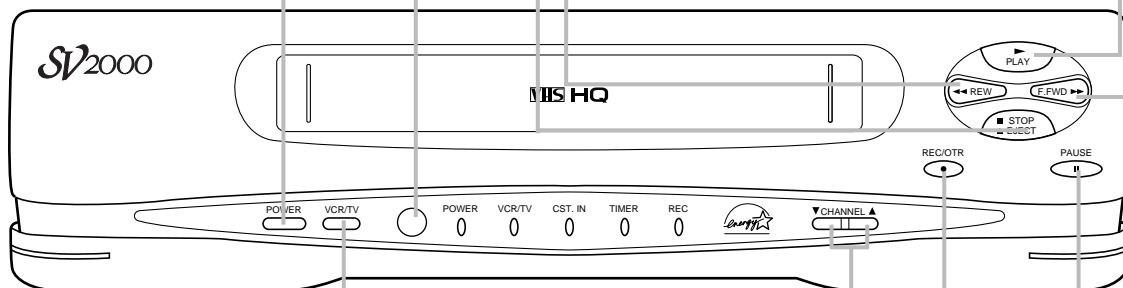

CHANNEL ▲/▼ Buttons

Press to scan up or down through the VCR's channels.

TRACKING Function

During normal tape playback, press the CHANNEL ▲/▼ buttons to adjust the tracking. *Details are on page 37.*

VCR/TV Button

Use to select the signal that your TV receives.

● VCR Position

Use to watch a tape, to watch a program while recording it, or to watch a TV broadcast using the CHANNEL ▲/▼ or Number buttons to change channels at the VCR. The VCR/TV light will appear when the VCR is in VCR position.

● TV Position

Use to watch TV (changing channels at the TV) or to watch one program while recording another. *Details are on page 31.*


REC(ord)/OTR Button

Press once to start a recording. *Details are on page 24.* Press repeatedly to start a One-Touch Recording (an immediate recording, 30 minutes to eight hours long) of the channel you are watching. *Details are on page 25.*

PAUSE Button

While recording, press to temporarily stop the recording. Press a second time to resume normal recording. *Details are on page 24.* You can not pause a One-Touch Recording. *Details are on page 25.* During tape playback, press to freeze the picture. Press repeatedly to change the position of the noise lines in a Still picture and to advance the picture frame by frame. *Details are on page 34.*

22 Rear Panel

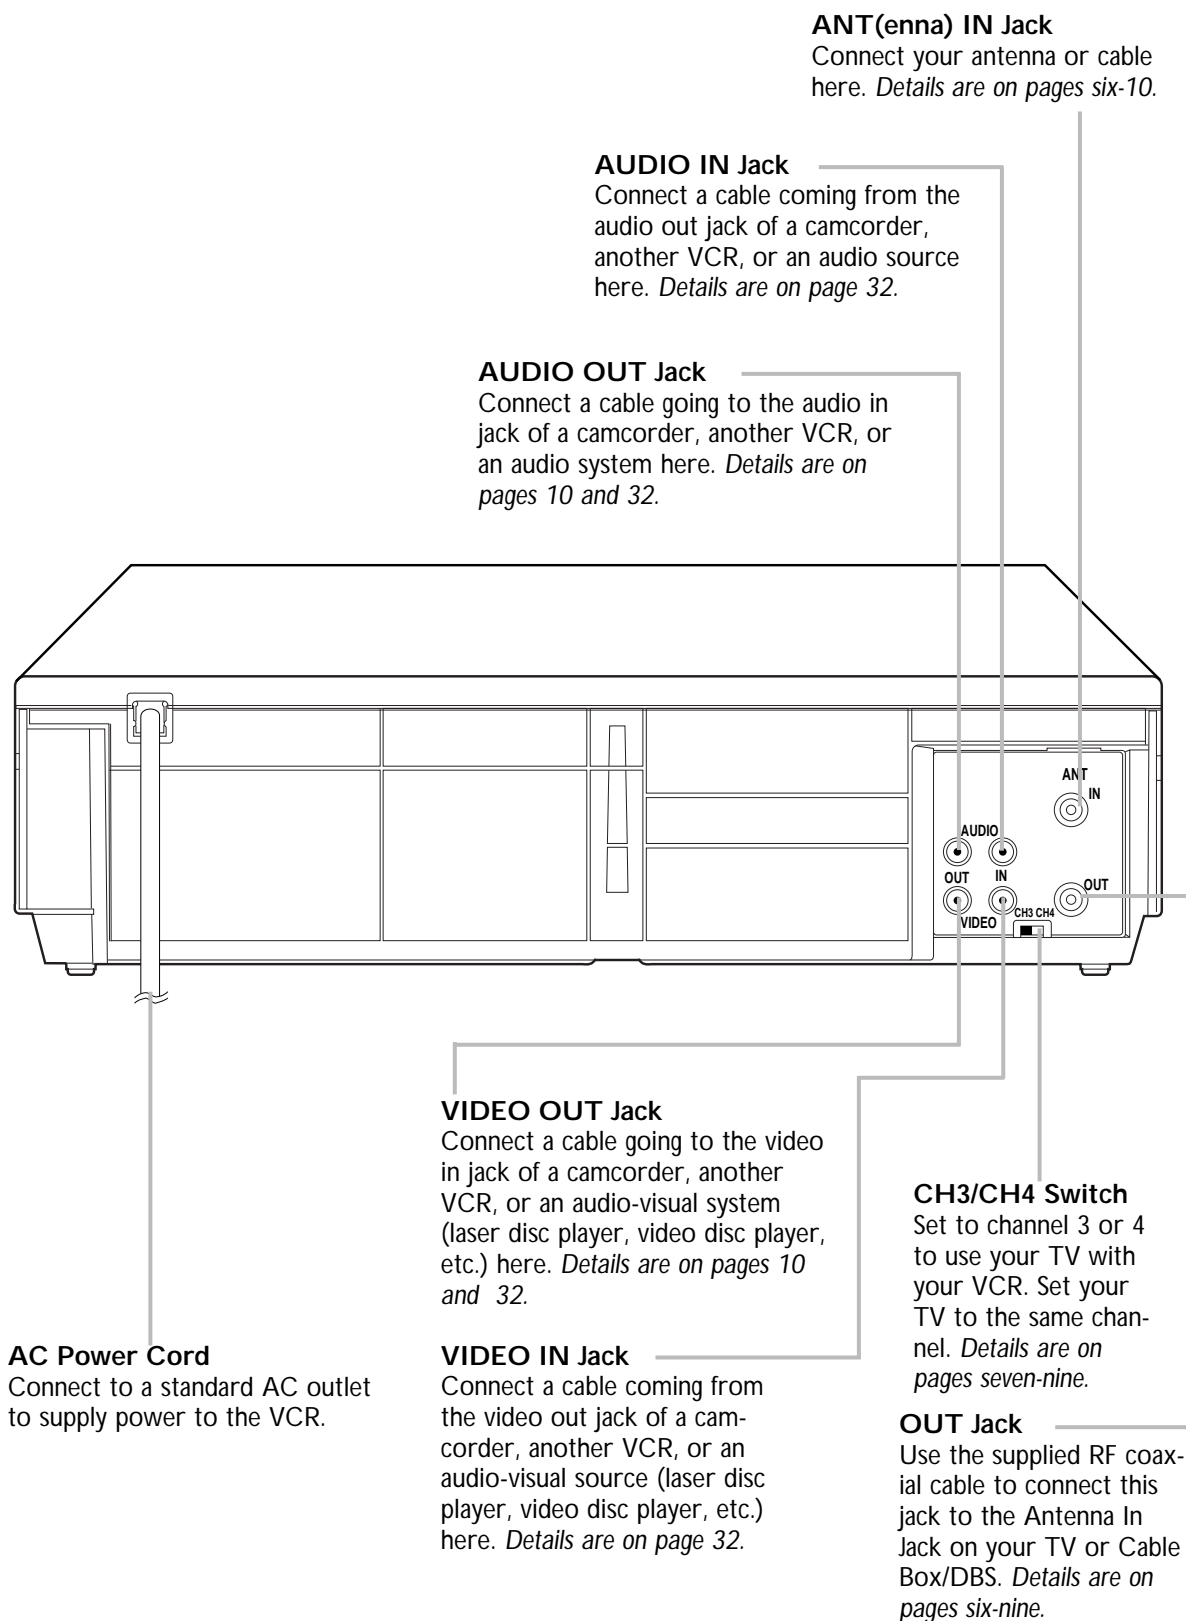

Playing 23

Read and follow the steps below to play a tape.

1

Turn on the TV and set it to channel 3 or 4, whichever channel the CH3/CH4 switch on the back of the VCR is set to.

2

Insert a tape in the VCR. The POWER, VCR/TV, and CST.IN lights will appear. If the tape's record tab has been removed, playback will begin automatically.

3

If playback does not start automatically, press the PLAY button.

4

Press the STOP button to stop playback.

5


Press the REWIND button to rewind the tape.

6

Press the EJECT button to remove the tape.

1 Turn on the TV.

2 Insert a tape.

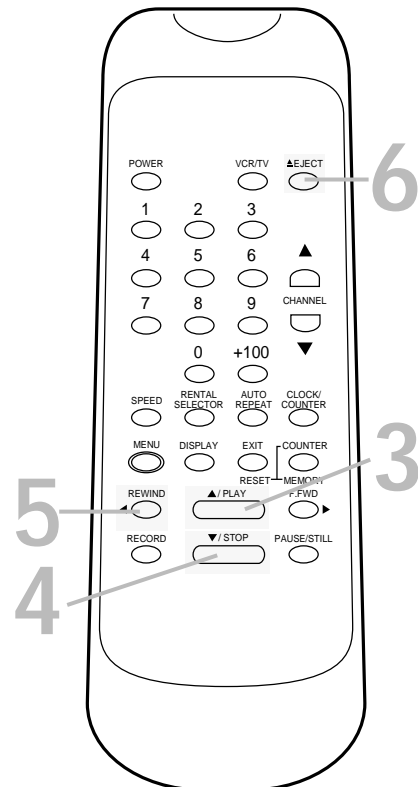

Helpful Hints

- If the tape you want to play is already in the VCR, make sure the VCR power is on and the VCR is in VCR position. (Press the VCR/TV button so that the VCR/TV light appears.) Then, press the PLAY button.
- Other playback options and features are on pages 33-37.

24 Recording

Read and follow the steps below to record a television program.

1

Turn on the TV; set it to channel 3 or 4, whichever channel the CH3/CH4 switch on the back of the VCR is set to.

2

Insert a tape with its record tab intact (see page five) in the VCR. The POWER, VCR/TV, and CST.IN lights will appear.

3

If the VCR/TV light does not appear, press the VCR/TV button so that the VCR/TV light appears.

4

Press the SPEED button until the desired tape speed (SP or SLP) appears on the screen. The tape speed will disappear after about five seconds.

You can change the tape speed while the VCR is recording, but some distortion may appear on the tape. *Details about tape speed are on page 40.*

5

Use the CHANNEL ▲/▼ buttons or the Number buttons to select the channel to be recorded.

6

Press the RECORD button once to start recording. The REC(ord) light will appear. If the tape is missing the record tab, the VCR will eject the tape.

7

To pause the recording (for example, during commercials), press the PAUSE/STILL button once. The REC(ord) light will flash.

To resume recording, press the RECORD button or the PAUSE/STILL button again. The REC(ord) light will appear.

8

Press the STOP button to stop recording.

1 Turn on the TV.


2 Insert a tape.

3

4

6

8

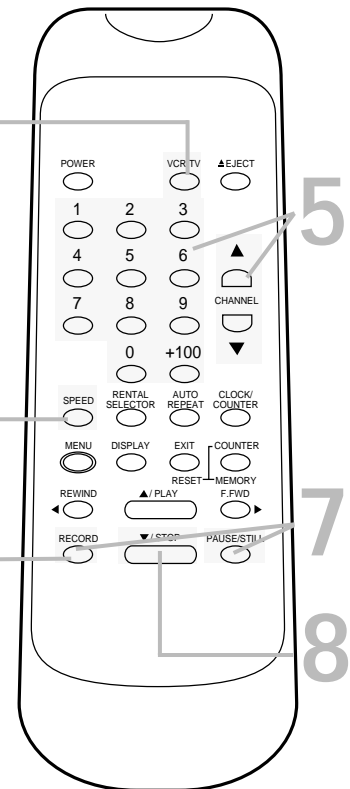

Helpful Hints

- Other recording options are on pages 25-32.
- The VCR will record in a preset volume.
- Pause mode will automatically switch to Stop mode after five minutes to protect the VCR and the tape from damage. When a recording is paused, you may review the pause time remaining with the ■ marks on the screen. Each ■ mark equals one minute remaining. During the last minute of paused recording, the ■ mark will flash.
- If any menu is activated on the TV screen, the RECORD button on the remote control does not function. Press the COUNTER RESET/EXIT button to remove the menu. Then, press the RECORD button.

One-Touch Recording 25

The One-Touch Recording function allows you to program an immediate timed recording 30 minutes to eight hours long. Before you begin, make sure:

- Channels are set up.
- The desired recording speed (SP, SLP) has been selected with the SPEED button.
- There is a tape in the VCR. Make sure the tape's record tab is intact and the tape is long enough to record the program(s).
- The VCR is in VCR position. (The VCR/TV light will appear. If it does not, press the VCR/TV button once.)


Starting an OTR

1

Use the CHANNEL (▲/▼) buttons or the Number buttons to select the channel you want to record.

2


Press the REC(ord)/OTR button on the VCR repeatedly until the desired recording length (30 minutes to eight hours) appears in the upper left corner of the screen. Recording will begin immediately.

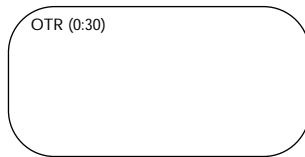

Stopping an OTR

To stop an OTR before recording is finished, press the STOP button on the remote control. To cancel the OTR but continue recording, press the REC(ord)/OTR button **on the VCR** repeatedly until REC appears in the upper left corner of the screen.

2 Press the REC(ord)/OTR button **on the VCR** repeatedly.

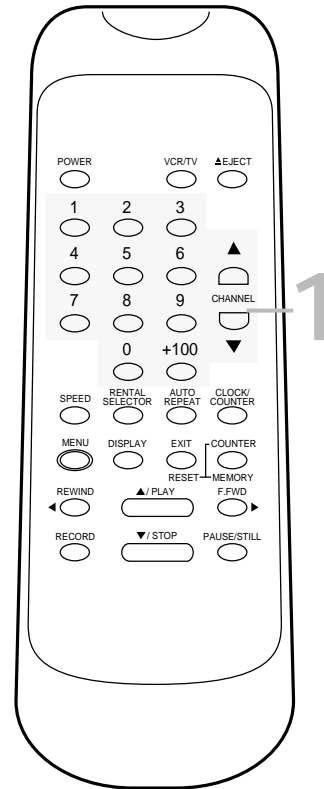

Helpful Hints

- To change the recording length while an OTR is in progress, press the REC(ord)/OTR button **on the VCR** repeatedly until the desired length appears on the screen.
- You can not pause recording during an OTR.
- If the preset time for a timer recording comes up during an OTR, the OTR has priority. The timer recording will not occur.
- To show the time remaining for an OTR, press the DISPLAY button repeatedly until OTR and the time remaining appear in the upper left corner of the screen.
- If the end of the tape is reached during an OTR, the VCR will stop recording, eject the tape, and turn itself off.


26 Timer Recording

Follow the steps below to program your VCR to record TV programs while you're away from home. You can program up to seven timer recordings. For each one, the VCR will turn itself on, record, and turn itself off automatically. Before you begin make sure:

- Channels are set up.
- The clock is set.
- There is a tape in the VCR. Make sure the tape's record tab is intact and the tape is long enough to record the program(s).
- The VCR is in VCR position. The VCR/TV light will appear. If it does not, press the VCR/TV button once.


1

Press the MENU button until the TIMER PROGRAMMING menu appears. Program numbers that do not have a timer recording stored will flash.

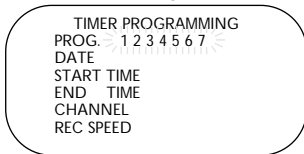

2



Press the PLAY button or the STOP button repeatedly to select a program number. Then, press the F.FWD button. (If you select a program number that already has a timer recording stored, information about that program will appear. Press the PLAY button or the STOP button to select another program number.)

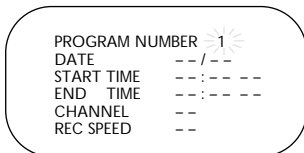

3

Press the PLAY button or the STOP button repeatedly to select a ONCE, DAILY, or WEEKLY recording. When the arrow is beside your choice, press the F.FWD button.

- ONCE - The VCR will record a TV program on any day you choose, up to 12 months away.
- DAILY - The VCR will record a TV program at the same time on the same channel every day, Monday through Friday.
- WEEKLY - The VCR will record a TV program at the same time on the same channel every week, for example, every Monday.

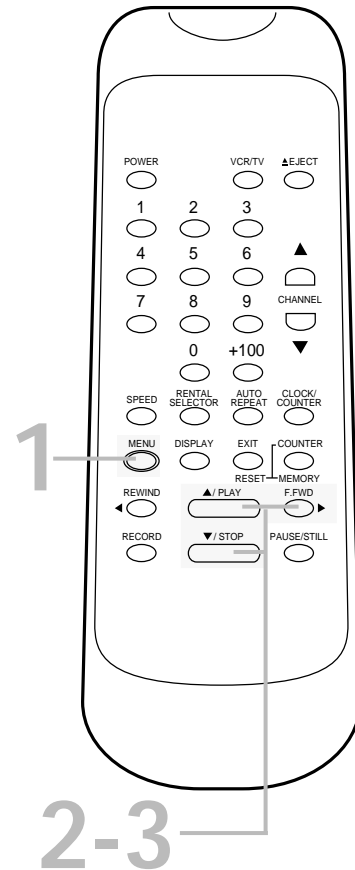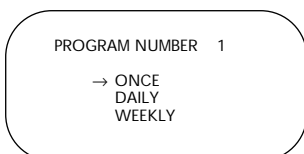

4

Press the **PLAY** button or the **STOP** button repeatedly until the desired month appears. Then, press the **F.FWD** button.

Next, press the **PLAY** button or the **STOP** button repeatedly until the desired day appears. Then, press the **F.FWD** button.

The day of the week will appear automatically. You can not program the VCR to record more than one year in advance.

```

ONE TIME PROGRAM
PROGRAM NUMBER 1
DATE          05/06 THU
START TIME    --:--:--
END TIME      --:--:--
CHANNEL       --
REC SPEED     --
    
```

5

Enter the recording's start time.

Press the **PLAY** button or the **STOP** button repeatedly until the desired hour appears. Press the **F.FWD** button.

Press the **PLAY** button or the **STOP** button repeatedly until the desired minute appears. Press the **F.FWD** button.

Finally, press the **PLAY** button or the **STOP** button to point to **AM** or **PM**. **AM** or **PM** will flash beside the time. Press the **F.FWD** button.

```

ONE TIME PROGRAM
PROGRAM NUMBER 1
DATE          05/06 THU
START TIME    07:30 P M
END TIME      --:--:--
CHANNEL       --
REC SPEED     --
                                     AM
                                     →PM
    
```


6

Repeat the procedure in step 5 to set the recording's end time.

```

ONE TIME PROGRAM
PROGRAM NUMBER 1
DATE          05/06 THU
START TIME    07:30 P M
END TIME      08:30 P M
CHANNEL       --
REC SPEED     --
                                     AM
                                     →PM
    
```

Instructions continue on page 28.

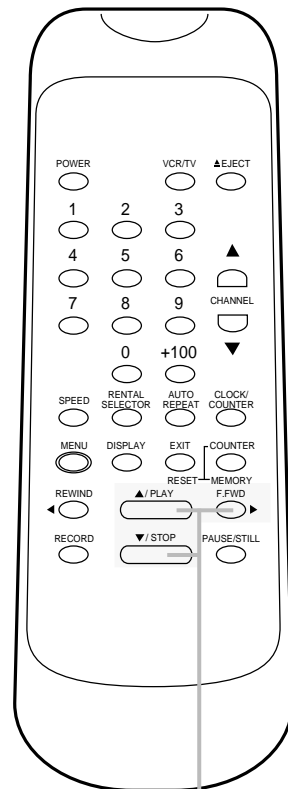

4-6

Helpful Hints

- The **TIMER PROGRAMMING** menu will not appear at step 1 if the clock is not set. Follow the steps on pages 14-15 to set the clock.
 - Enter the information while the space is flashing.
 - Press the **REWIND** button to go back one step from the current step during steps 2-8.
 - To stop a started timer recording, press the **STOP/EJECT** button on the VCR.
- More Helpful Hints are on page 38.**

28 Timer Recording (cont'd)

7

Press the **PLAY** button or the **STOP** button repeatedly until the desired channel number appears. Then, press the **F.FWD** button.

- If you are using a standard antenna/cable hookup (as shown on pages six-seven), select the channel of the TV program you want to record.
- If you are recording from line input, select AUX. (AUX is located at the channel 00.)
- If you are using a Cable Box/DBS, select the Cable Box/DBS output channel (03 or 04). Select the channel you want to record at the Cable Box/DBS. Leave the Cable Box/DBS on for the timer recording. *Details are on page eight.*

```

ONE TIME PROGRAM
PROGRAM NUMBER  1
DATE            05 / 06 THU
START TIME     07 : 30 P M
END TIME       08 : 30 P M
CHANNEL        16
REC SPEED      --
    
```

8

Press the **PLAY** button or the **STOP** button repeatedly to select a tape speed. The arrow will appear beside your choice. The selected tape speed will flash beside REC SPEED.

```

ONE TIME PROGRAM
PROGRAM NUMBER  1
DATE            05 / 06 THU
START TIME     07 : 30 P M
END TIME       08 : 30 P M
CHANNEL        16
REC SPEED      S P
                →
    
```

9


Press the **COUNTER RESET/EXIT** button.

10

Press the **POWER** button to turn off the VCR. The **TIMER** light will appear. (The **TIMER** light will flash if there is not a tape in the VCR.)

If a timer recording will take place several hours or days from now, you may use the VCR until time for the timer recording. Just make sure you turn off the VCR about five minutes before the scheduled start time.

**Turn off the VCR for the recording.
Insert a tape in the VCR.
Leave the Cable Box/DBS on
(if applicable).**

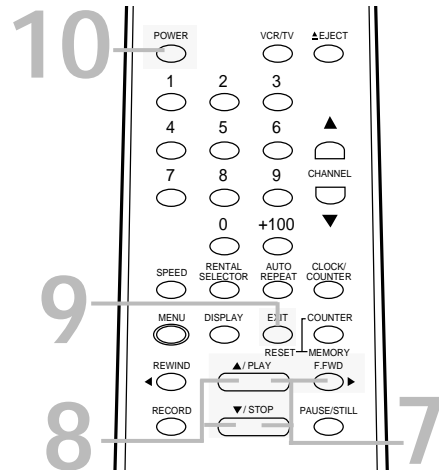

Helpful Hint

To adjust the **START** and **END** times of a one-time recording (**ONCE**), follow these steps.

1) With the VCR on and in VCR position, press the **MENU** button to access the **TIMER PROGRAMMING** menu.

2) Press the **PLAY** button or the **STOP** button to select the program you want to adjust.

3) While the program number is blinking, press the **RECORD** button on the remote control. Each repeated press of the **RECORD** button will advance the **START** and **END** times by 10 minutes. You may advance the times by up to 24 hours.

If the timer recording is in progress, each press of the **RECORD** button will advance only the **END** time by 10 minutes. The recording speed will change to **SLP** automatically. (To restore the original **START** and **END** times, press the **PAUSE/STILL** button.)

4) Press the **COUNTER RESET/EXIT** button to exit.

Timer Recording (cont'd) 29

..... Cancelling a Timer Recording

1

Press the MENU button so that the TIMER PROGRAMMING menu appears.

2

Press the PLAY button or the STOP button until the program number you want to cancel appears on the screen.


3

While the program number is flashing, press the REWIND button to cancel the timer recording.

4

Press the COUNTER RESET/EXIT button to exit.

To cancel a timer recording

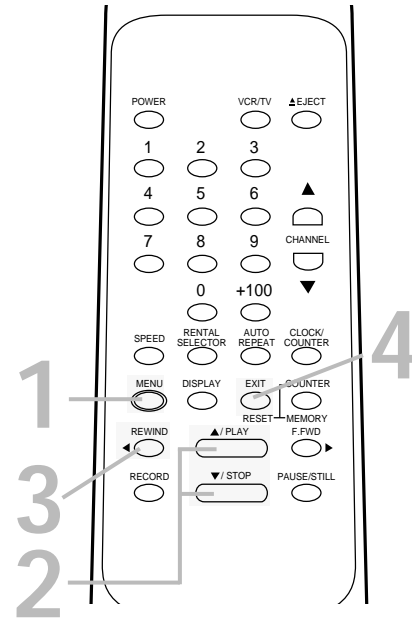

Correcting a Timer Recording

If you need to correct a timer recording after you have finished setting the program, follow these steps. Make sure the VCR is on and is in VCR position. (The VCR/TV light will appear. If it does not, press the VCR/TV button once.)

1

Press the MENU button so that the TIMER PROGRAMMING menu appears.

2

Press the PLAY button or the STOP button until the timer recording you want to correct appears on the screen.

3

Select the information you want to change using the F.FWD button. Press the REWIND button to go back one step. (There is an exception. Do not press the REWIND button while the program number is flashing. If you do, you will cancel the timer recording completely.)


4

While the information is flashing, enter the correct information by pressing the PLAY button or the STOP button.

5

When all the information is correct, press the COUNTER RESET/EXIT button to exit. Turn off the VCR before the timer recording.

To correct a timer recording

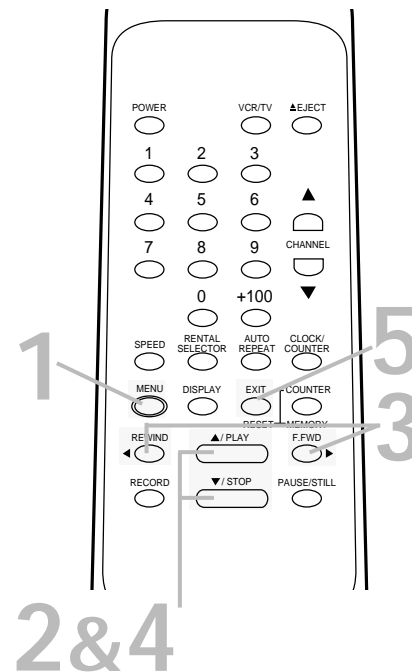


30 Auto Return

Follow the steps below to make the VCR rewind to the beginning of the programs after it has finished all timer recordings. Make sure:

- The VCR is on and is in VCR position. (The VCR/TV light will appear. If it does not, press the VCR/TV button once.)


1

Press the **MENU** button repeatedly until the **VCR SET UP** menu appears.

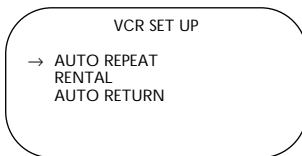


2

Press the **PLAY** button or the **STOP** button repeatedly to select **AUTO RETURN**.

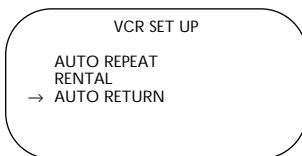

3


Press the **F.FWD** button so that **[AUTO]** appears next to **AUTO RETURN** on the screen.

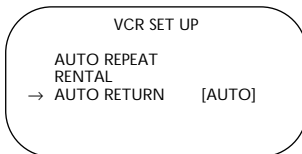

4

Press the **COUNTER RESET/EXIT** button.

Remember to turn off the VCR before the timer recording. When all the timer recordings are completed, the **TIMER** light will flash and the VCR will rewind the tape to the beginning of the recorded programs.

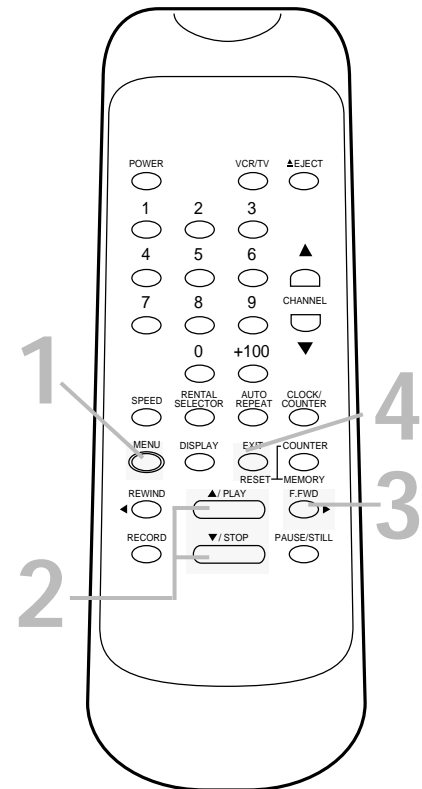

Helpful Hints

- If additional timer recordings are programmed to take place later, the Auto Return function will not operate until all the programs are recorded.
- To cancel this function, follow steps 1-2 above. At step 3, press the F.FWD button so that [AUTO] no longer appears beside AUTO RETURN. Press the COUNTER RESET/EXIT button.

Recording One Channel/Watching Another 31

1

Press the **RECORD** button to start a recording of the current channel. Details are on page 24.

2

Press the **VCR/TV** button to put the VCR in TV position. The VCR/TV light will disappear.

3

Use the TV remote control to select the channel you want to watch at the TV.

4

To return to the channel being recorded, use the TV remote control to select channel 3 or 4, whichever channel the CH3/CH4 switch on the back of the VCR is set to.

5

Press the **VCR/TV** button on the VCR remote control to put the VCR in VCR position. The VCR/TV light will appear. The channel being recorded will appear on the screen.

6


To stop recording, press the **STOP** button.

3

Select the channel you want to watch at the TV.

4

Set the TV to channel 3 or 4.

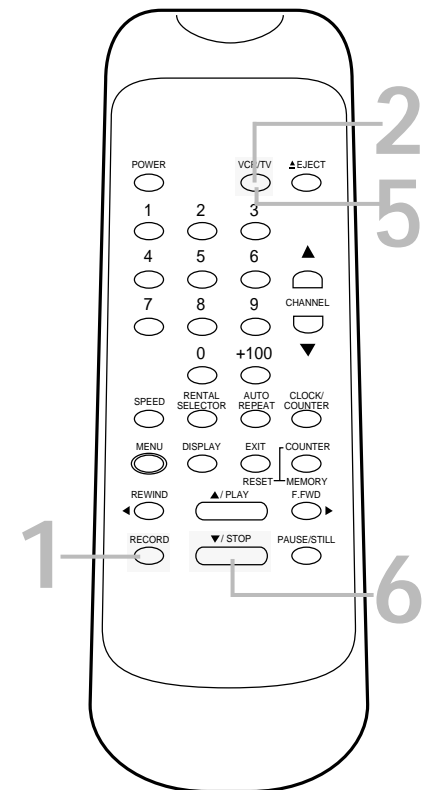


Helpful Hint

- If you use a Cable Box/DBS, you may not be able to watch one channel while recording another. Details are on pages eight-nine.

32 Rerecording (Tape Duplication)

1. Audio cable from AUDIO OUT Jack of VCR 1 to AUDIO IN Jack of VCR 2

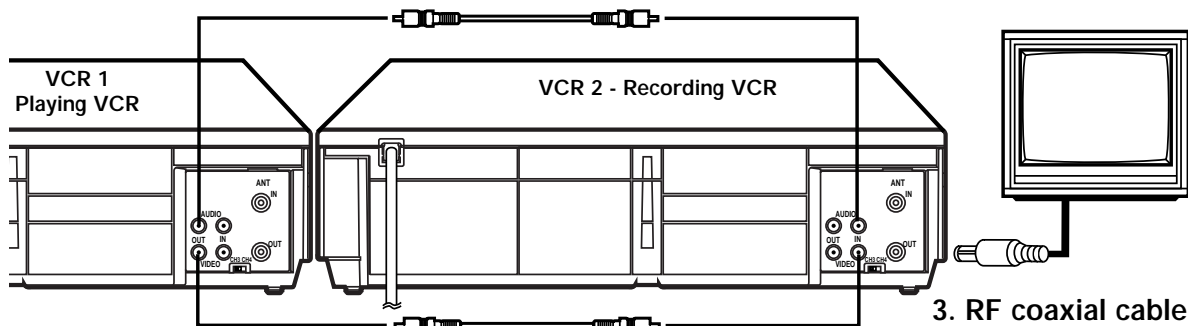

2. Video cable from VIDEO OUT Jack of VCR 1 to VIDEO IN Jack of VCR 2

3. RF coaxial cable from the OUT jack of VCR 2 to the TV's ANTENNA IN Jack

1

VCR 1 will play your tape. Insert a prerecorded tape in VCR 1. If the tape does not have a record tab, playback begins. If this happens, press the STOP/EJECT button on VCR 1 once.

2

VCR 2 will record your tape. Insert a blank tape in VCR 2. Make sure the record tab is intact (details are on page five). Make sure the VCR 2 power is on and VCR 2 is in VCR position. (The VCR/TV light will appear. If it does not, press the VCR/TV button once.)

3

Turn on the TV and set it to channel 3 or 4, whichever channel the CH3/CH4 switch on VCR 2 is set to.

4

Point the remote control at VCR 2. Press the Number buttons 0, 0. AUX will appear on the screen.

5

Point the remote control at VCR 2. Use the SPEED button to select SP or SLP.

6

Press the PLAY button on VCR 1 and the REC(ord)/OTR button on VCR 2 at the same time.

7

To stop recording, press the STOP/EJECT button on VCR 2 once, then stop the tape on VCR 1.

Helpful Hints

- Unauthorized recording of copyrighted television programs, video tapes, or other materials may infringe on the rights of copyright owners and violate copyright laws.
- If a program has copy guard protection, it may not record clearly.
- Audio and video cables are not supplied.
- The illustration uses two VCRs just like yours. Different VCRs may operate differently.


Repeat Play 33

Follow the steps below to program the VCR to play a tape over and over. Make sure:

- The VCR is on and is in VCR position. The VCR/TV light will appear on the front panel. If it does not, press the VCR/TV button once.
- There is a tape in the VCR.


1

Press the **MENU** button repeatedly until the **VCR SET UP** menu appears.

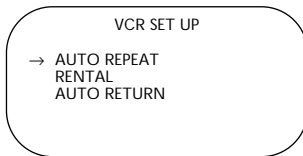

2

Press the **PLAY** button or the **STOP** button repeatedly to select **AUTO REPEAT**.

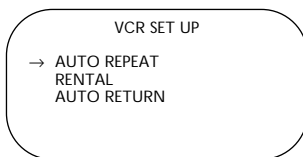


3

Press the **F.FWD** button so that **[ON]** appears next to **AUTO REPEAT**. Tape playback will begin immediately. **AUTO REPEAT ►** will appear on the screen briefly.

(If you are fast forwarding or rewinding the tape, you must first press the **COUNTER RESET/EXIT** button to exit, then press the **PLAY** button to begin tape playback.)

The VCR will play the tape to the end, rewind it, then play it again. (TV programming will appear on the screen while the tape is rewinding.)

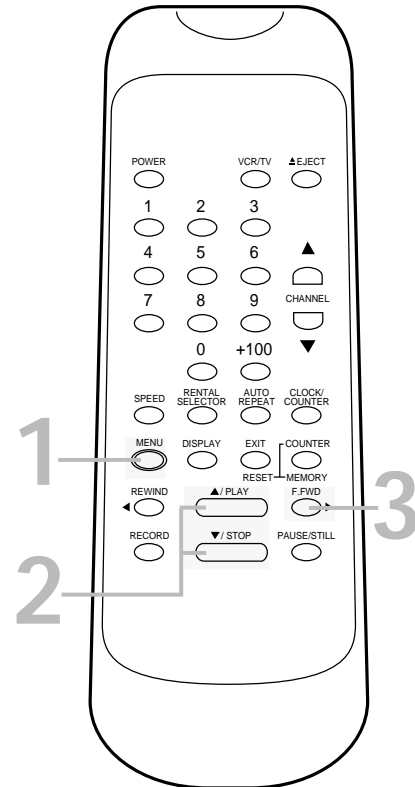

Helpful Hints

- You also may set **AUTO REPEAT** to **ON** or **OFF** by pressing the **AUTO REPEAT** button on the remote control. However, there may be no indication of your selection on the screen when you press the **AUTO REPEAT** button during tape playback. (You may press the **DISPLAY** button to confirm that **AUTO REPEAT** is active.)
- To cancel **AUTO REPEAT**, follow steps 1-2 above. At step 3, press the **F.FWD** button so that **[ON]** no longer appears beside **AUTO REPEAT**. Press the **COUNTER RESET/EXIT** button.
- The **COUNTER MEMORY** button does not function if **AUTO REPEAT** is set to **[ON]**.
- The real-time counter memory is cancelled if **AUTO REPEAT** is set to **[ON]**.

34 Special Effects Playback

Forward and Reverse Searching (SP/LP/SLP)

1

During tape playback, press and release the **F.FWD** button or the **REWIND** button. A fast forward or reverse picture search will begin.

2

To return to playback, press the **PLAY** button.

Super High Speed Searching (LP/SLP)

1

During tape playback, press the **F.FWD** button or the **REWIND** button, then press again. The VCR will now search in super high speed.

2

To return to playback, press the **PLAY** button.

Viewing a Still Picture


1

During tape playback, press the **PAUSE/STILL** button. A still picture will appear on the screen.

Press the **PAUSE/STILL** button repeatedly to advance the picture frame by frame. The noise lines will change position on the screen each time you press the **PAUSE/STILL** button.

2

To release the still picture and return to normal playback, press the **PLAY** button.

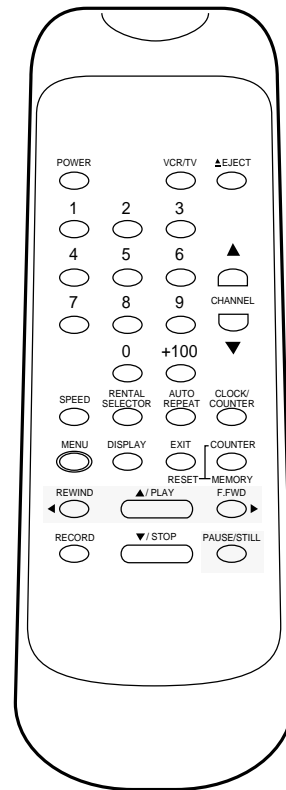

Helpful Hints

- Still mode will automatically switch to Stop mode after five minutes to protect the VCR and the tape from damage.
- SP/LP/SLP means this feature will work with tapes recorded in Standard Play, Long Play, or Super Long Play.
- LP/SLP means this feature will work with tapes recorded in Long Play or Super Long Play. For details about tape speed, see page 40.
- Tapes recorded in SLP will have a clearer picture in Still mode and during forward and reverse searching.


Rental Play 35

This function enables you to improve the picture quality when playing worn cassettes such as those rented from a video store. Make sure:

- The VCR is on and is in VCR position. The VCR/TV light will appear. If it does not, press the VCR/TV button once.
- There is a tape in the VCR.



1

During tape playback, press the MENU button repeatedly until the VCR SET UP menu appears.

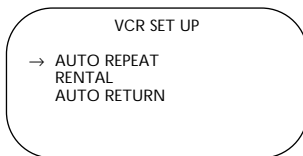

2

Press the PLAY button or the STOP button repeatedly to select RENTAL. Then, press the F.FWD button. The menu will disappear, and RENTAL ON or RENTAL OFF will appear on the screen for five seconds. Each press of the F.FWD button within five seconds will turn RENTAL to ON or OFF.

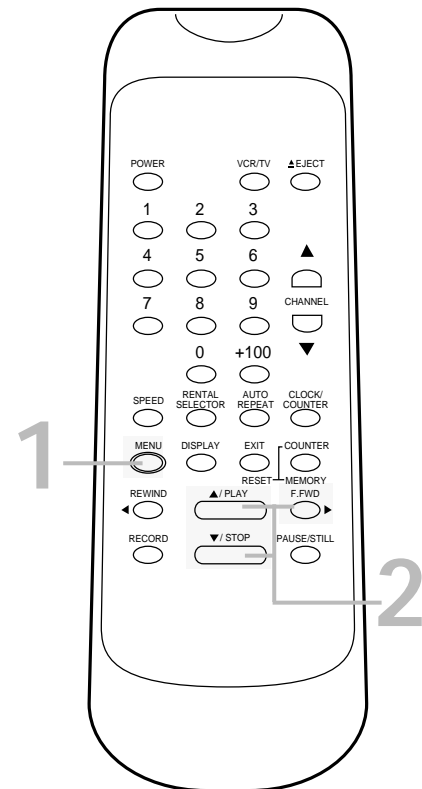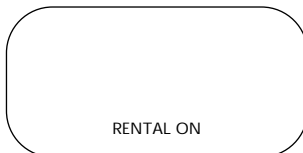

Helpful Hints

- You may only set RENTAL to ON or OFF during tape playback.
- You also may set RENTAL to ON or OFF by pressing the RENTAL SELECTOR button on the remote control during tape playback.

36 Real-Time Counter Memory

Follow the steps below to reset the real-time counter to zero at a tape location you want to refer to later. Make sure:


- The VCR is on and is in VCR position. The VCR/TV light will appear. If it does not, press the VCR/TV button once.
- There is a tape in the VCR.

1

Play, fast forward, or rewind a tape to the location that you would like to refer to later. **Press the STOP button to stop the tape.**


2

Press the **COUNTER RESET/EXIT** button repeatedly to reset the real-time counter to zero.

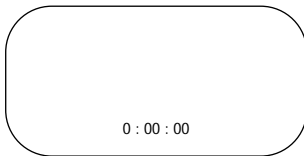

3

Press the **COUNTER MEMORY** button so that M appears on the screen beside the real-time counter.

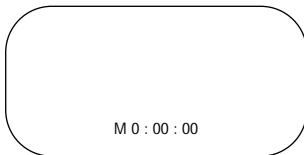


4

To go to a tape location where the real-time counter was reset to zero, press the **REWIND** button or the **F.FWD** button when playback is stopped.

When the tape reaches the point at which the real-time counter was reset to zero, the tape will stop.

Press the PLAY button to watch the tape.

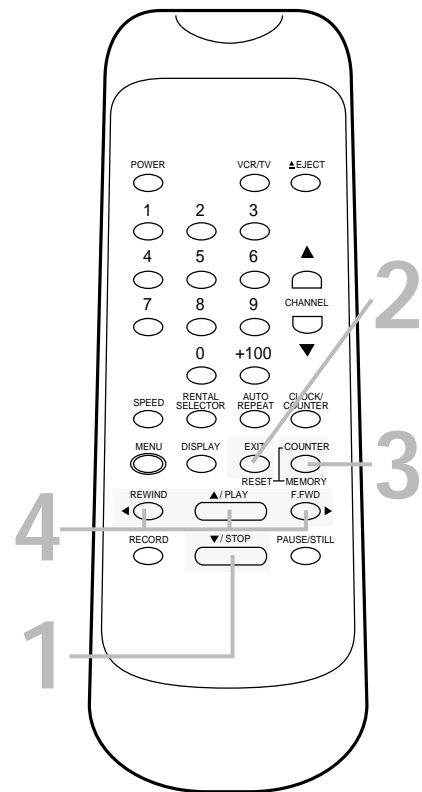

Helpful Hints

- You may only set the real-time counter memory at one location at a time. If you set the real-time counter to zero at a second location, the previous real-time counter to zero setting will be erased.
- To erase the real-time counter memory, press the **COUNTER MEMORY** button repeatedly so that the M disappears from the screen.
- The **COUNTER MEMORY** button does not function if **AUTO REPEAT** is set to [ON]. Details are on page 33.

Automatic Playback Features 37

Automatic Playback

When you put a tape in the VCR, the power will come on automatically. If the tape's record tab is missing, playback will begin. (If a timer recording is set, you may have to press the POWER button to turn on the VCR. Make sure you turn off the VCR for the timer recording later. If you insert a tape without a record tab when the power is off to set a timer recording, the VCR will eject the tape.)

Automatic Rewind, Eject, Off

When a tape is played, fast forwarded, or recorded to its end, the VCR will rewind the tape to the beginning, eject the tape, and turn itself off.

If the real-time counter memory is set, the VCR will only rewind the tape to the point at which the counter is set to zero, then stop. The VCR will not eject the tape or shut itself off.

Tape Eject

A tape can be ejected with the VCR power on or off (but the VCR must be plugged in). If a Timer Recording is programmed or has just finished, a tape can only be ejected with the power on. Be sure to insert a tape for the Timer Recording, then turn off the VCR power.

Automatic Tracking Adjustment


The VCR automatically adjusts tracking to give you the best possible picture quality. With some recordings, however, you may get a better picture using the manual tracking controls (see below).

Manual Tracking

To adjust the tracking manually, press the CHANNEL (▲/▼) buttons **on the VCR** during playback.

NOTES:

- Tracking is returned to automatic tracking adjustment when a tape is inserted or when the STOP button is pressed to halt playback.
- Manual tracking will not operate when the VCR is in Still mode.
- Use the CHANNEL (▲/▼) buttons on the VCR or on the remote control to remove vertical jitter in a Still picture.

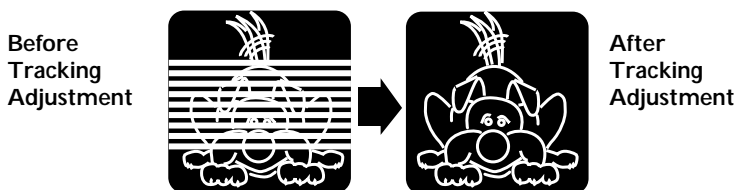

38 Helpful Hints

If you are having problems with your product, check this list of problems and possible solutions before requesting service. You may be able to solve the problem yourself.

If you need to call a customer service representative, please know the model number and serial number of your product before you call. This information is displayed on the back of the product. Also, please take a moment to identify the problem you are having, and be prepared to explain this to the representative. If you believe the representative will need to help you with operations, please stay near the product. Our representatives will be happy to assist you.

The VCR has no power.

- Make sure the power plug is completely connected to an AC (alternating current) outlet.
- Make sure the power is turned on.

A power failure occurred.

- Follow the steps on page 11 to select a language and set up channels, if necessary. Then, follow the steps on pages 14-15 to reset the clock.
- Timer recordings may be lost if the power fails for more than one minute. Reprogram the timer recordings. *Details are on pages 26-29.*

The remote control will not operate the VCR.

- Aim the remote control directly at the VCR's remote sensor. *Details are on page 21.*
- Remove all obstacles between the remote control and the VCR.
- Inspect and/or replace the batteries in the remote control. *Details are on page five.*

The VCR does not respond normally to the remote control. (For example, the VCR may change channels multiple times when you press the CHANNEL ▲ button once.)

- Install new batteries (preferably alkaline) in the remote control.

The motor (cylinder) rotates even when the VCR is in Stop mode.

- To enable the quick play mechanism, the cylinder will rotate for about five minutes. This is normal. The quick play mechanism switches the tape mechanism from Stop to Play in just one second.

A TV program cannot be recorded.

- Check the connections between the VCR, TV, antenna/cable, and Cable Box/DBS, if applicable. *Details are on pages six-10.*
- Make sure the tape has a record tab. *Details are on page five.*

The VCR will not perform a timer recording.

- Make sure the recording start and stop times are set correctly. *Details are on pages 26-29.*
- Make sure a tape is in the VCR and the tape has a record tab. *Details are on page five.*
- Make sure the VCR power is off.
- Make sure the clock is set. *Details are on pages 14-15.*
- The VCR may not perform or continue a timer recording if a power interruption of more than one minute occurs before or during the timer recording, even if the power comes back on afterward. Set up channels and reset the clock before re-programming the timer recording(s).
- Finish programming a timer recording at least five minutes before the recording is scheduled to begin.
- If, after programming a timer recording, you turn off the VCR without inserting a tape, the TIMER light will blink. Insert a tape with the record tab intact.
- Noon is 12 p.m. Midnight is 12 a.m.
- If the tape runs out before the recording ends, the VCR will stop, eject the tape, and turn itself off. The TIMER light will blink. (The Auto Return feature will not operate.)
- If a tape without a record tab is inserted (when the power is off for a timer recording), the VCR will eject the tape. The TIMER light will blink. Insert a tape that allows recording.
- If the preset time for a timer recording comes up during a One-Touch Recording, the OTR has priority.
- When two timer recordings overlap, the timer recording with the earliest start time will have priority. When the earliest program has finished recording, the next program number will begin recording.

Tape cannot be removed.

- Make sure the power plug is completely connected to an AC (alternating current) outlet.
- You have set a timer recording. Turn on the VCR power, then eject the tape. Be sure to insert a tape and turn off the VCR for your timer recording.

Tape cannot be inserted.

- Insert the tape, window side up, with the record tab facing you.
- Make sure a tape isn't already in the VCR by pressing the STOP/EJECT button on the VCR or the EJECT button on the remote control.
- Gently push on the center of the tape when putting it in the VCR. Never force the tape into the VCR.
- If a timer recording is set, the VCR will not accept a tape that does not have a record tab. You may only insert a tape with the record tab intact.

VCR ejects the tape when the RECORD button is pressed or when the VCR power is turned off to set a timer recording.

- Make sure the tape has a record tab. *Details are on page five.*

There is no playback picture, or the playback picture is noisy or contains streaks.

- Make sure the TV is on the same channel as the VCR's CH3/CH4 switch. *Details are on page seven.*
- Make sure the VCR is in VCR position. (The VCR/TV light will appear. If it does not, press the VCR/TV button once.)
- Make sure channel 3 or 4 is properly adjusted.
- Adjust the tracking. *Details are on page 37.*
- TVs placed too close to the VCR can cause interference during tape playback. Move the VCR away from the TV.

TV programs cannot be watched normally.

- Press the VCR/TV button to put the VCR in TV position. (The VCR/TV light will disappear.)
- Check the connections between the VCR, TV, antenna/cable, and Cable Box/DBS (if applicable). *Details are on pages six-10.*

The reception on all channels is poor.

- You may need to tune your TV again.

Line Input

- If you accidentally enter Line Input mode (AUX will appear on your TV screen briefly), press the CHANNEL (▲/▼) buttons or use the Number buttons to select another channel.

40 Glossary

AUDIO IN/OUT Jacks: jacks located on the back of the VCR which are used to record audio from another source (IN) or to send audio to another system (OUT).

Automatic Channel Setup: process in which the VCR scans all available channels and places the ones you receive in its memory. Then, when you push the CHANNEL (▲/▼) buttons, you only scan through channels you receive.

Bands: settings that allow you to tune channels.

- **Antenna** – VHF (very high frequency; channels 2-13) and UHF (ultra high frequency; channels 14-69).
- **Cable** – all standard channels can be received without a Cable Box/DBS.

Cable Box/DBS Output Channel: Channel 3 or 4.

Dubbing: copying a tape using a second VCR.

Frame: a single still picture.

HQ: high quality; a feature in the VCR circuitry which provides enhanced picture detail.

Line Input: The channel to which you set your VCR during dubbing. The line input channel is always channel 00.

If you accidentally enter Line Input mode (AUX will appear on your TV screen briefly), press the CHANNEL (▲/▼) buttons or use the Number buttons to select another channel.

Mode: a VCR operation.

OTR: One-Touch Recording; programming a timed recording that starts immediately and records for 30 minutes to eight hours, whichever you specify.

Remote Control: the small electronic unit that came with your VCR; allows you to operate your VCR from a distance.

RF coaxial cable: The cable supplied with your VCR. Use it to connect your VCR to your TV (or Cable Box/DBS, if applicable). The supplied cable is a snap-on type. However, you may also use a screw-on type if you prefer.

Special Effects: forward and reverse searching; a still picture.

Tape Speeds: how fast the tape travels during a recording or during playback.

- SP (standard play) – fastest tape speed (recording time for a T120 tape is approximately two hours); best picture quality.
- LP (long play) – average tape speed; playback only.
- SLP (super long play) – slowest tape speed (recording time for a T120 tape is approximately six hours).

VCR: video cassette recorder.

VIDEO IN/OUT Jacks: jacks located on the back of the VCR which are used to record video from another source (IN) or to send video to another system (OUT).

Specifications 41

Video Heads

Two heads

Video Signal

EIA standards; NTSC color

Antenna

VHF/UHF – 75 ohm external antenna terminal

VHF Output Signal

Channel 3 or 4 (switchable)

75 ohms unbalanced

Power Requirement

120V AC; 60Hz

Power Consumption

14W

Operating Temperature

41°F (5°C) to 104°F (40°C)

Relative Humidity

10% to 80%

Weight

5.5 lbs. (2.5 kg.)

Dimensions

14-3/16" (W) x 3-1/16" (H) x 9-3/16" (D)

(360mm x 92mm x 230mm)

Tuner Broadcast Channels

VHF 2-13, UHF 14-69

Cable TV Channels

2-13

Midband: A – 1

Superband: J – W

Hyperband: A-5 – A-1

Special Channel: 5A

Ultraband: 37 – 94, 100 – 125

NOTE: Designs and specifications are subject to change without notice.

42 Limited Warranty

VIDEO CASSETTE RECORDER

90 Days Free Labor/One Year Parts Exchange. This product must be carried in for repair.

WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For 90 days thereafter, all parts will be repaired or replaced, and labor is free. From 90 days to one year from the day of purchase, all parts will be repaired or replaced, but you pay for all labor charges. After one year from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- damage caused by the use of non-VHS tapes or tapes that have not been tested and labeled for use in two, four, six, and eight hour VHS recorders.
- a product that is used for commercial or institutional purposes (including but not limited to rental purposes).

WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service

organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Take the product to a Philips factory service center (see enclosed list) or authorized service center for repair. When the product has been repaired, you must pick up the unit at the center. Centers may keep defective parts.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. Because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

TO GET WARRANTY SERVICE IN CANADA...

Please contact Philips at:

1-800-661-6162 (French Speaking)

1-800-363-7278 (English Speaking)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental, or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

REMEMBER...

Please record below the model and serial numbers found on the product. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # _____

SERIAL # _____

This warranty gives you specific legal rights. You may have other rights which vary from state to state.



Philips Service Solutions Group, P.O. Box 2976, Longview, Texas 75606, (903) 242-4800

EL6235E003 / MAC6183 / 12-98

ac power cord	7, 22	long play	40	super long play.....	40
accessories.....	44	lp	40	table of contents	4
ant(enna) in jack	6-10, 22	menu button.....	18	tape	
audio in/out jacks.....	10, 22, 32, 40	number buttons.....	18	duplication	32
auto repeat button	19, 33	on-screen status displays.....	17	eject.....	37
auto return.....	30	one-touch recording	25	speed.....	40
automatic		out jack	7-9, 22, 32	time (setting).....	14-15
playback.....	37	pause button	21	timer	
rewind, eject, off	37	pause/still button.....	19, 24, 34	light.....	20
batteries.....	5	play button.....	18, 21, 23, 34	recording	
cassette compartment	20	playing.....	23	cancelling.....	29
ch3/ch4 switch.....	7-9, 22	power		correcting.....	29
channel		button	18, 21	setting.....	26-28
above 100	18	cord	7, 22	tracking.....	37
adding.....	13	light.....	20	tv	
deleting.....	13	rear panel.....	22	hookups.....	6-10, 32
setup.....	11, 12	rec(ord) light.....	20	position.....	19, 21, 31, 39
▲/▼ buttons.....	19, 37	rec/otr button.....	21	vcr position.....	19, 21
clock/counter button	19	record button	18	vcr/tv button	19, 21
clock on-screen display	17	record tab	5	vcr/tv light	20
clock (setting)	14-15	recording		video in/out jacks.....	10, 22, 32, 40
connections.....	6-10, 32	basic.....	24	warranty	42
contents, table of	4	one channel/watching another ..	31		
controls		timer	26-29		
remote	5, 18-19	remote			
vcr.....	20-22	control			
count on-screen display	17	buttons.....	18-19		
counter memory button	19, 36	using.....	5		
counter reset/exit button.....	19, 36	sensor.....	5, 21		
cst. in light.....	20	rental			
display button	17-18	play	35		
display panel	20	selector button.....	18, 35		
duplication	32	repeat play.....	33		
eject button.....	19	rerecording.....	32		
erasure prevention	5	rew(ind) button.....	21		
f.fwd button.....	19, 21	rewind button.....	18		
front panel	21	rf coaxial cable	6-9, 32, 40		
glossary.....	40	safety precautions	3		
helpful hints	38-39	searching forward/reverse.....	34		
hookups		sensor (remote).....	5, 21		
for tape duplication	32	slp.....	40		
with a cable box/dbs.....	8-9	sp.....	40		
with a stereo tv.....	10	speed button	18		
without a cable box/dbs	6-7	standard play	40		
language selection	11, 16	status display	17		
line input mode.....	32, 40	still picture.....	34		
		stop button.....	19		
		stop/eject button.....	21		

SUPPLIED ACCESSORIES



The following items are supplied with your VCR; they are provided to help you use or set up your VCR.

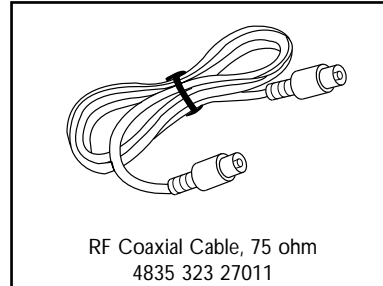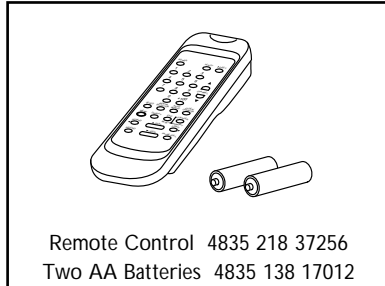

OPTIONAL ACCESSORIES

The following additional items are not provided with your VCR, but they are designed for use with your new VCR. To order these optional accessories, contact us at:

**Parts & Accessories Marketing Department
401 East Old Andrew Johnson Highway
P.O. Box 555
Jefferson City, TN 37760
1-800-851-8885.**

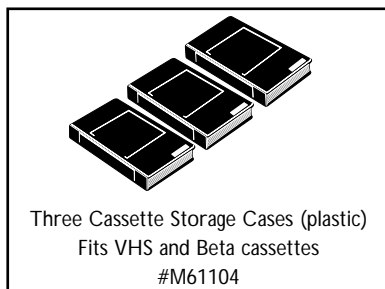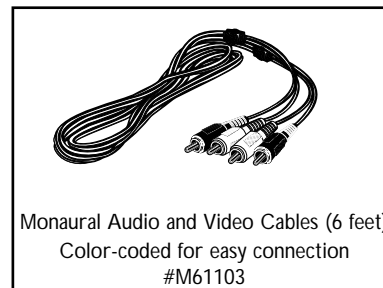

This owner's manual is made of recyclable materials.
Remember to recycle!



As an ENERGY STAR® Partner, Philips Consumer Electronics Company has determined that this product meets the ENERGY STAR® guidelines for energy efficiency. ENERGY STAR® is a U.S. registered mark.



IB8143E003
Printed In China
OVMN02333 / H3781UD *****

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>