 



S20.7945-010

Adapter cable to connect a Pioneer radio, models **DEH:** 534R/535R/635R/W - P443R - P544R - P545R - P625UC - P645R/W - P725UC - P725R - P735R - P735UC - P813ES - P815R - P825R - P820RDS - P835R - P875R - P945R - P8000R - P8100R - P8400MP - P9000R - P9100R - P9300R - P9400MP - **DEXP:** 77R - 88R - 99R - 820R - FH-P4000/6600R - **KEHP:** 6400R - 6800R - 6900R - 7400R - 7600R - 7900R - 8200RDS - 8400R - 8600R-W - 8600RDS - 8800R-V - 8900RW - 9200RDS - 9700R-W - **KEXP:** 8200RDS - **MEHP:** 7100R - 7300R - 9000R - 9100R.

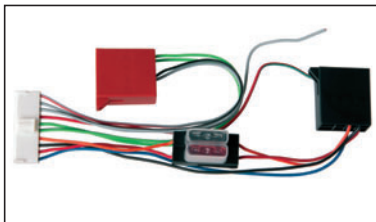


S20.7945-005

 Adapter cable to connect a Pioneer radio, models **DEH:** 670SDK - **KEH:** 2000 - 2500 - 5300(SDK) - 5400RDS - M2000 - M2500 - M3500 - M4000 - M4500 - M6500 - M7200 - M7250 - M7300 - M7400RDS.

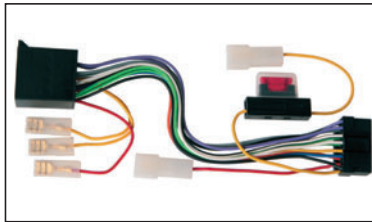


S20.7945-015

 
Adapter cable to connect a Pioneer radio, models **DEH:** 2000/30R - 2100/30R - 3100/30R - P3000R - P3100/10 - 4000R-B - 4100R - **DEX:** 2000R - **KEHP:** 8010R - 8015.

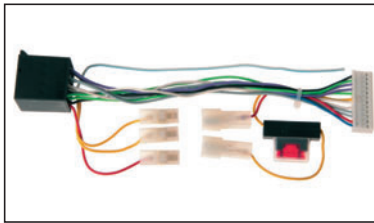

 
S20.7945-020
 Adapter cable to connect a Pioneer radio, models **KEH**: 1100/50 - 1200 - 1300(K/SDK) - 1311 - 1400 - 1450 - 1500/30 - 1700/30 - 1800R - 1900/30R - 1940R - 2100R - 2300R - 2400R - 2700/30R - 5700/30R - **KEHP**: 2800R - 3400 - 3700/30R - 4300R - 4400R - 4500R - 4530R - 4700R - 4730R - 5700R.

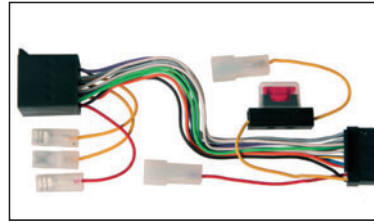

 
S20.7945-025
 Adapter cable to connect a Pioneer radio, models **KEHP**: 6020R/RB - 7020R - 7025R - **DEH**: 1300/10R - 1330 - 1400R - 1430RB - 2300/30R - 2330R-B - 2430/60R - 3300/30R - 3400R - **DEHP**: 3300/30R - 4300R-B - 4400R/RB - 6300R - 6400R - 7300R - 7400MP.

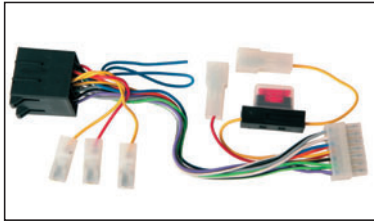

 
S20.7945-035
 Adapter cable to connect a Pioneer radio, models **DEH**: 5200 - 5202 - 5800 - 8000 - 8300 - 8500RDS - **DEHM**: RDS - DSP - 77 - 940 - 970 - 980 - **KEHM**: RDS.

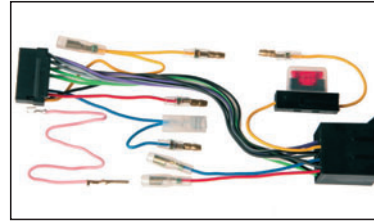

 
S20.7945-040
 Adapter cable to connect a Pioneer radio, models **DEH**: 2000 - 2030 - 2100 - 2130 - 1310 - 3100 - 3130 - 2330RB - **DEHP**: 3000 - 3110 - 4100R - 4300RB - **KEHP**: 80210 - 8015R.

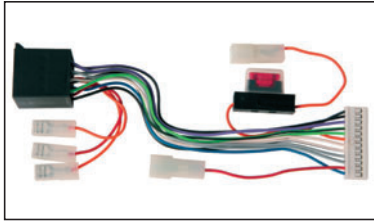

 
S20.7945-045
 Adapter cable to connect a Pioneer radio, models **KEH**: 2500R - 2530R - **KEHP**: 3600R - 3630R - 4010 - 4011 - 4600R - 4610R - 4630R - 5010R - 6010R.

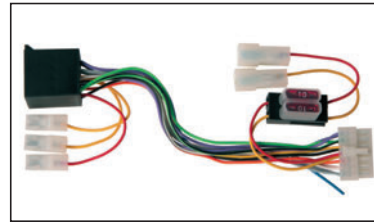

 
S20.7945-050
 Adapter cable to connect a Pioneer radio, models **DEHP**: 5100R/RB - 6000R - 6100R - 7000R(-W) - 7100R-W.

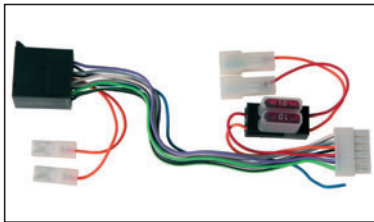

 
S20.7945-055
 Adapter cable to connect a Pioneer radio, models **DEH**: 344R - 345R - 425R - 435R - 524R - 525R - 624R - 625R.

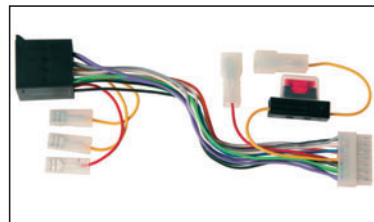

 
S20.7945-060
 Adapter cable to connect a Pioneer radio, models **DEHM**: 77 - 940 - 970 - 980(RDS/DSP) - 990RDS/DSP - **DEHP**: 705RDS - 715RDS - **KEH**: 5200RDS - 5202RDS - 5800RDS - **KEHM**: 8000 - 8300 - 8500 - 9100 - 9300 - 9500 - 9300RDS - 9500RDS - **KEHP**: 6000RDS - 7000RDS.

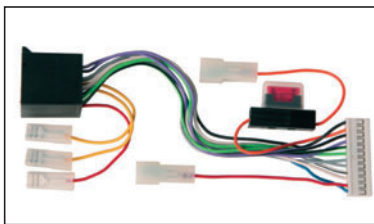

 
S20.7945-065
 Adapter cable to connect a Pioneer radio, models **KEH**: 415 - 2600(SDK) - 3600(SDK) - **KEHP**: 11R - 4000 - 5000.

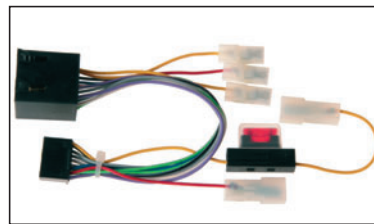

 
S20.7945-070
 Adapter cable to connect a Pioneer radio, models **KEHP**: 1010/13R - 1032/33 - 2030/33R - 4020/23R.

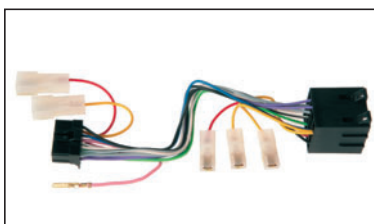

 S20.7945-075
 Adapter cable to connect a Pioneer radio, models **DEHP**: 1590R - 2500R/RB - 2530R - 2600R - 3500/90MP - 3600MPB - 3600/30MP - 4500MP - 5500/30MP - 5600/30MP - 5700MP - 5800MP - 6500MP - 6700MP - 7500MP - 7700MP - **DEH**: 1500/30R - 1600R/RB - 1630R - 1700/30R - 2700R - 3700/30MP - 4700MP/B.

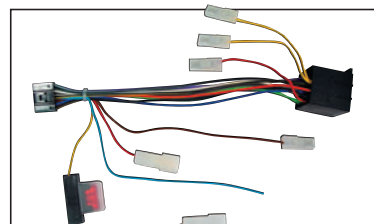


 S20.7945-080
 Adapter cable to connect a Pioneer radio, models ANH-P9R/BK/10MP.

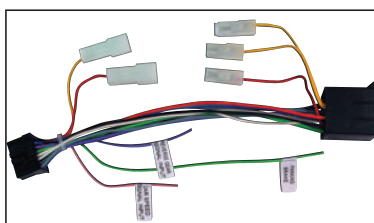

S20.7945-085
 Adapter cable to connect a Pioneer radio, model AVIC-D3.

 
CD CHANGER ADAPTER CABLES

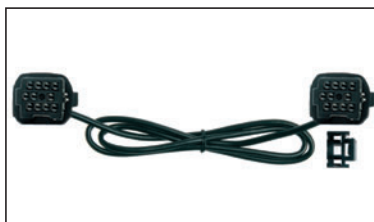

S24.7945-005
 CD-changer cable 4,5m for all Pioneer P-series devices.

INTERFACES

 PIONEER

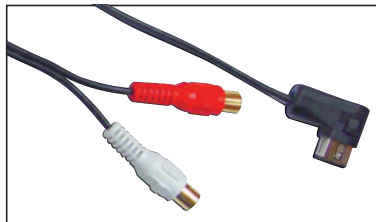

S22.7945-005

Aux-input interface with stereo RCA connectors for Pioneer units.



S22.7945-010

Aux-input interface with a stereo 3,5mm mini-jack connector for Pioneer units.

 


S857923

iPod cable to Pioneer radios with P-bus connection. With battery charging function.


RADIO FRAMES - RELEASE KEYS

PIONEER

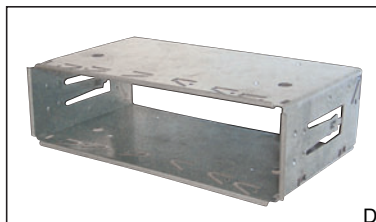

S26.7945-005

 Radio mounting frame for Pioneer radios.

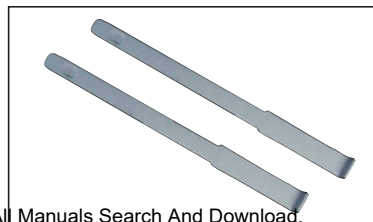

S27.7950-005

Release keys for Pioneer radios.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>