



Questions?
Need some help?
This manual will help you
enjoy your new product



If you still have questions,
call our help line:
1-877-768-8483



or email us at:
[polaroidsupport@
southern telecom.com](mailto:polaroidsupport@southern telecom.com)

 
Included




HD Player




User Manual



Kickstand bracket

 

Headphones

 

USB Cable

Location of controls



1. "Power" button
2. LCD screen
3. Headphone jack
4. Micro SD card slot
5. "TV out" jack

6. Mini USB port
7. Speaker
8. Kickstand bracket
9. "Reset" hole

Charging:

1. Connect the player to your computer using the included USB cable.
2. Charge the battery between 3-5 hours (do not charge for more than 8 hours).



PC



USB cable



Player

Turning on/off:

Make sure the player is fully charged before turning it on.

- To turn the player on/off, press and hold the "Power" button until the display turns on or off.

Power button



 
Resetting the player:

If the player malfunctions or freezes, you can use the reset function to restart it.

- To reset the player, take a metal pin (such as the end of a paperclip), and gently push it into the "Reset" hole on the back of the player.

To insert the Micro SD card:


1. Pull back the protective card cover with your finger.
2. Insert the Micro SD card (up to 8GB) into the card slot with the metal contacts facing towards the back of the player and gently push it in until it clicks. Do not apply excessive force as this may damage the player and/or Micro SD card.
2. To view files on your Micro SD card, select "browser", from the main menu, then select "SD Card".
3. To view certian types of files on the Micro SD card, select the function icon from the home screen and select "SD Card".
4. To remove the Micro SD card, gently push it in until it pops out.
5. When the player is connected to a computer with a card inserted, the card will be listed as a second drive titled "Removable Disk".

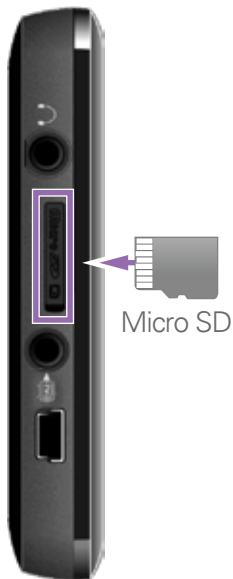

- Turn the player off before inserting or removing the card.
- Do not use force while inserting or removing the card.
- Do not remove the card during file transfers.

Transferring media files to the player

 1. Find music, picture, or video files on your computer.

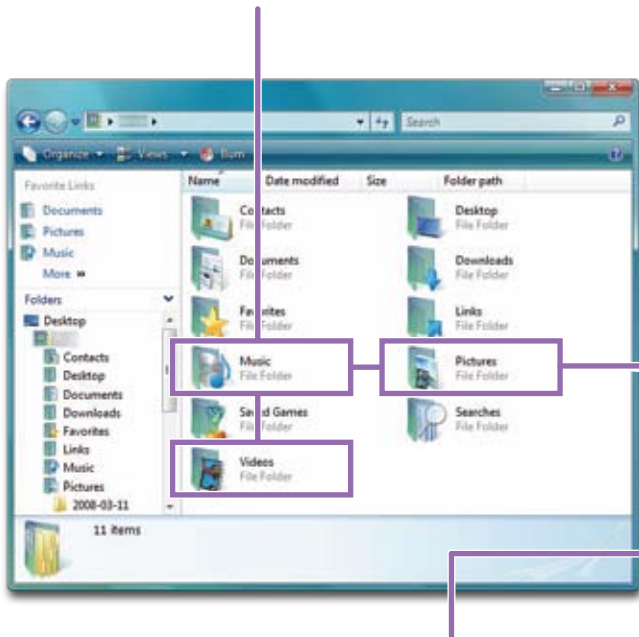


Locate "MP3"

i

It is also possible to delete files on the player while connected to the computer. Select the file and press the delete key of the computer's keyboard.

 2. Connect the player to the computer, and locate "MP3".
3. "Drag and drop" or "copy and paste" the files as shown below.

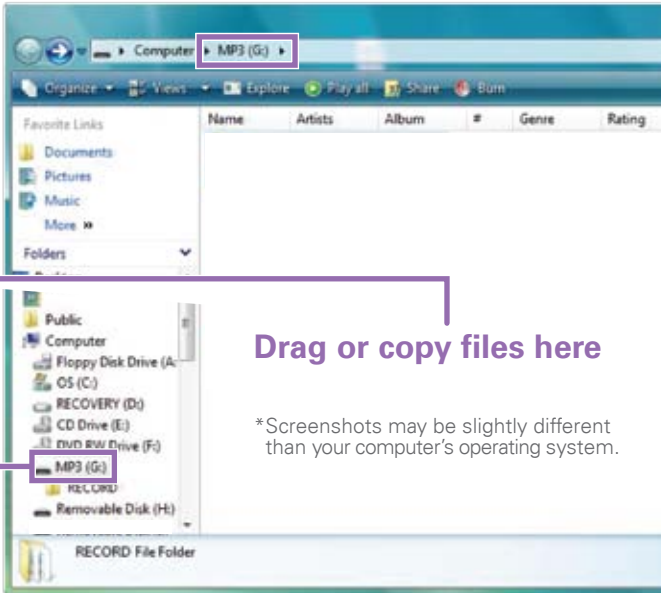



To avoid data loss or damage to the player, always perform a safe USB extraction before disconnecting the player from the computer.

Homescreen

1. After turning on the player, the Homescreen appears. Use the touch button icons to control the player and make selections.

Homescreen



2. There are 9 touch button icons to choose from.
3. Touch  to show all buttons.
4. Touch  to hide buttons. For a better view of your Homescreen wallpaper.

 


When in sub menus, touch  to return to the homescreen





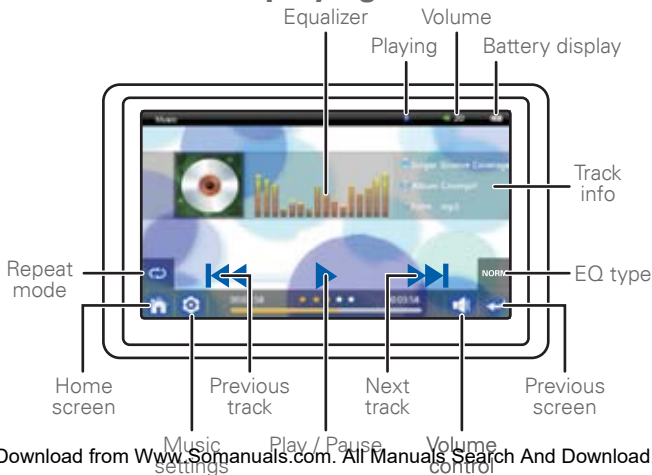

Or, touch  to return to the previous menu.

1. To listen to music, select "music" from the homescreen. The music menu will appear.
2. Select from the following music menu options:
 - All Music - search all music files
 - Last Played - play most recent track
 - Update - update all tracks to the "All Music" list
 - Internal memory - search all music on the player
 - SD card - search all music on the Micro SD card
3. Select the track you would like to hear. The music playing screen will appear and the track starts playing.


Music playing screen



Music controls




1. Touch the  button to pause the track.
2. Touch the  button to play the track.
3. Touch the  button to skip to the next track.
4. Press and hold the  button to fast forward.
5. Touch the  button to skip to the previous track.
6. Press and hold the  button to rewind.

Music settings

Touch the  button to access the music settings menu where you can choose from the following options:

- EQ mode - adjust audio settings
- Playmode - choose different repeat modes
- Favorites - add current track to a favorites list
- Lyric color - change text color

Volume


1. While music is playing touch the  button to open the volume control bar.
2. Touch the  button to raise the volume.
3. Touch the  button to lower the volume.



Volume control bar


























Saving to favorites

You can add your favorite tracks to 1 of 5 playlists.

1. While your track is playing touch the  button. The music settings menu will open.
2. Select "Favorites". The playlist menu will open.
3. Choose from 1 of the 5 playlists to save your track to.

Playing Favorites

1. To access your favorites playlists, select "music" from the homescreen.
2. Select "All Music".
3. Select "Favorites"
4. Choose from 1 of the 5 playlists.
5. Choose the track you would like to play.
6. You can see which playlists the currently playing track is saved to by looking just above the track timer at the bottom of the screen.

Playlist 1	    
Playlist 2	    
Playlist 3	    
Playlist 4	    
Playlist 5	    



Video

This player supports high definition video up to 720p.







1. To watch videos, select "video" from the homescreen. The video menu will appear.
2. Select from the following video menu options:
 - Internal memory - search all videos on the player
 - SD card - search all videos on the Micro SD card
3. Select the video you would like to watch. The video playing screen will appear:

Video playing screen




Video controls

While a video is playing swipe your finger from the bottom to the top of the screen to access the video controls.

1. Touch the  button to pause the video.
2. Touch the  button to play the video.
3. Touch the  button to skip to the next video.
4. Press and hold the  button to fast forward.
5. Touch the  button to skip to the previous video.
6. Press and hold the  button to rewind.

Video settings




Touch the  button to access the video settings menu where you can choose from the following options:

- Aspect ratio - choose from Default, 4:3, and 16:9
- Resume Video - restart or resume video
- Subtitle - turn subtitles on or off
- Subtitle size - choose small or large subtitles
- Subtitle color - choose color of subtitle
- Audio - choose stereo, left or right



This player supports subtitles which must be downloaded with the video file and stored in the same folder as the video. Not all videos support subtitles.

Volume

 
1. While video is playing touch the  button to open the volume control bar.
2. Touch the  button to raise the volume.
3. Touch the  button to lower the volume.



Volume control bar

Resuming video


1. When you play a video that you have viewed earlier but not finished, you will get a message asking if you would like to resume the video.
2. To play the video from the point where it was stopped, select "Resume Playing".
3. To play the video from the beginning select "Start Over"

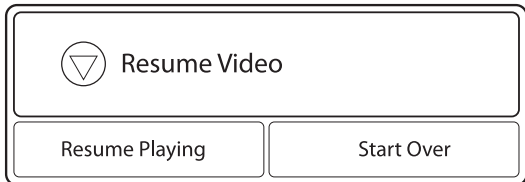

TV out

It is possible to watch videos on your TV by using a TV out cable (not included). If you would like to purchase a TV out cable, please contact our customer service department at: 1-877-768-8483 (Toll Free) or by email at cs@southerntelecom.com



1. Connect the pin of the TV out cable (not included) to the "TV out" jack on the player.
2. Connect the 3 A/V cables to the corresponding colors of an available input on your TV.
3. Be sure to match the input source on your TV.
4. Press the  button. The player's screen will go dark and the video will play on your TV.
5. While in TV out mode, quickpress the "power" button on the player to return the video to the player's screen.



To access the video controls in TV out mode, quickpress the power button to return the video to the player where you can access the control buttons.


Photos

1. To view photos, select "photos" from the homescreen. The photo menu will appear.
2. Select from the following photo menu options:
 - Internal memory - search all photos on the player
 - SD card - search all photos on the Micro SD card
3. Select the photo you would like to view. The photo viewing screen will appear.
4. Slide your finger up on the screen to open the photo control bar.

Photo control screen




Photo settings

Touch the  button to access the photos settings menu where you can choose from the following options:

- Slide interval - turn on and set slideshow playback
- View - pan, rotate and zoom the picture
- Thumbnails - show picture thumbnails on screen
- Slideshow - Set slideshow viewing mode
- Wallpaper - Set current picture as background

Thumbnails

1. While viewing photos, slide your finger on the screen to open the photo controls bar.
2. Press the  button.
3. Select "Thumbnails". Your picture thumbnails will appear on the right of the screen.
4. Slide the thumbnails up and down with your finger to scroll through them.
5. Touch a thumbnail to open a picture.



To set a picture as one of the player's background wallpapers, open the picture's "settings" menu and select "wallpaper". You can scroll through wallpapers at any time by selecting "theme" from the Homescreen.

Photo controls










1. While viewing photos, slide your finger on the screen to open the photo controls bar.
2. Press the  button.
3. Press the "View" button. The photo viewing screen will appear.


Photo viewing screen

 


-  Rotate picture left
-  Rotate picture right
-  Zoom in
-  Zoom out
-  Pan up
-  Pan down
-  Pan left
-  Pan right



Slideshow


1. While viewing photos, slide your finger on the screen to open the photo controls bar.
2. Press the  button.
3. Press the "Slideshow" button. The slideshow option menu will appear.
4. Choose the type of slideshow you would like to view your pictures with.
4. Tap the picture to close the slideshow option menu and return to the photo settings menu.
5. If you would like to change the slideshow interval time, press "Slide interval" and choose a interval option.
6. Quickpress the "Power" button to start or pause the slideshow.

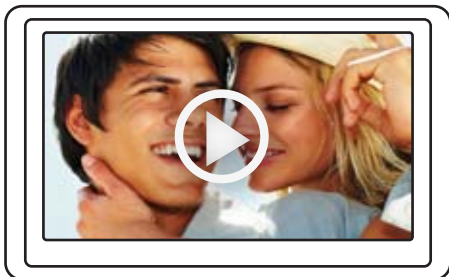


This player supports ebooks in .TXT and .LRC formats.

1. To view ebooks, select "ebook" from the homescreen. The ebook menu will appear.
2. Select from the following ebook menu options:
 - Internal memory - search all ebooks on the player
 - SD card - search all ebooks on the Micro SD card
3. Select the ebook you would like to view. The ebook playback screen will appear.
4. Slide your finger on the screen to turn ebook pages.

 ebook playback screen

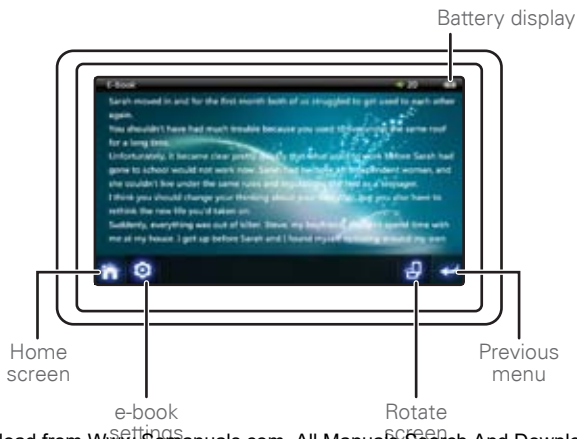


ebook settings

Touch the  button to access the ebook settings menu where you can choose from the following options:

- Auto pageturn - turn on and set interval time of automatic page turning
- Rotate - rotate screen 90 degrees
- Add bookmark - bookmark the current page
- Open bookmark - revert to bookmarked page
- Font size - set screen font size
- Font color - set color of font
- Background - change reading background

 
ebook control bar

1. While reading an ebook, slide your finger on the screen to open the ebook control bar.
2. Press the  button to rotate the screen 90 degrees.
3. When rotating the screen the ebook control bar will always stay at the bottom of the text.





Record

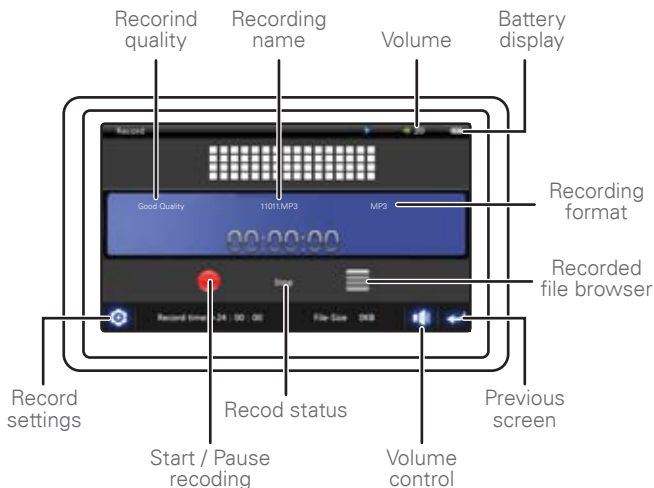1. To record audio files, select "record" from the homescreen. The recording screen will appear.


Recording screen





Record controls

2. Press  to start a voice recording.
3. Press  to pause a voice recording.
4. Press  to stop and save a recording.
4. Press  to open the recorded file browser.

Record settings

1. While on the recording screen, press  to open the record settings menu.
2. Select "Quality" to change the quality of the recording.
3. Choose from the following record quality options:
 - Good quality - high bitrate
 - Normal quality - medium bitrate
 - Poor quality - low bitrate

Recorded file browser


1. To listen to recorded voice files, press the  button to open the recorded file browser.
2. Select the file you would like to hear. The recording will start playing.
3. Press the  button to adjust audio levels.

 


When listening to recorded audio files, use the same buttons and functions as the "music playing screen" to control the audio.

1. To view files or delete files on the player or micro SD card (if inserted), select "browser" from the homescreen.
2. Select from the following browser menu options:
 - Internal memory - search all files on the player
 - SD card - search all files on the Micro SD card
3. Select the file you would like to open.
4. Please refer to the instructions of the media's file type in this manual for proper media controls.

Deleting files

1. While browsing files, press the  button on a highlighted file to open the file menu.
2. Select "Delete".
3. Choose "Yes" or "No".

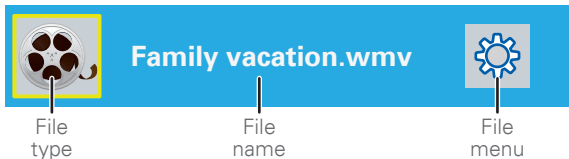

When the delete menu is open you may also choose from "Copy" and "Paste." Use this function to move files from one folder to another. Folders must be created and imported by your computer.

Settings

1. To change various settings and customize the player, select "Settings" from the homescreen.
2. Run your finger up or down on the screen to scroll through various settings options.
3. Select from the following settings options:



System information - view player information



Output - change TV output



Language - choose player language



Auto power off - set auto shutoff time



Sleep timer - set sleep timer



Close screen - set time for screen shutdown



Key tone - turn button noise on or off



Brightness - adjust level of screen brightness




Screen calibration - recalibrate the touch screen



Restore default - restore player to factory settings

Theme

1. To change the wallpaper on the homescreen, select "theme" from the homescreen. The wallpaper will automatically change to the next available option.
2. There are 2 preset wallpapers to choose from.
3. To set your own photo as wallpaper, open the desired photo file, press the  button and select "Wallpaper". Your photo will now be saved as the current wallpaper and one of the available "theme" options.

Brightness

1. To change the level of brightness select "display" from the homescreen.
2. Keep selecting "display" to adjust the brightness between 5 different levels.
3. Lower display settings will extend battery life.
4. Higher display settings allow for easier viewing in high, ambient light settings.



Brightness levels can also be adjusted from the settings menu. From the homescreen select "settings" then "Brightness" and choose your level.

Kickstand bracket

This player comes equipped with a removable bracket which can function as a kickstand. This can be very useful for viewing media on a level surface.

1. Snap the bracket into place by sliding its teeth into the grooves located on the top and bottom of the player.



2. Use your thumb or forefinger to pull out the kickstand.



WARNING

to prevent fire or shock hazard, do not use the plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

to reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

to prevent electrical shock, match wide blade plug to wide slot, fully insert.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

warning: to reduce the risk of electric shock, do not remove cover (or back). no user serviceable parts inside. refer servicing to qualified service personnel.



The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Legal information

FCC Part 15:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

"This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation."

Shielded USB cables must be used with this unit to ensure

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to [HYPERLINK "http://www.polaroid.com"](http://www.polaroid.com) www.polaroid.com and reference About / Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Limited Warranty

This Product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty"). In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale)
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product. Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

AIT, Inc.

ATTN: Customer Service (2nd Floor)
14-C 53rd Street
Brooklyn, NY 11232

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:

☎ 1-877-768-8483 (Toll Free)

✉ polaroidsupport@southerntelecom.com

Monday - Thursday: 9AM - 5PM (EST)

Friday: 9AM - 3PM (EST)



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>