

8.5" Swivel Screen Portable DVD Player PDM-8553M





User's Manual



Important Safety Instructions



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USE-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



Caution: Laser radiation when open. Do not stare into beam.

CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

Power Supply:

Connect the supplied power adapter to the side of the DVD player in the slot marked “Power In”. Plug the two-prong end of the power cord to an AC100-240V outlet. If you have difficulty inserting the plug, turn it over and reinsert it; if the unit will not be used for a long time, disconnect the power from the outlet.

Note: before plugging in the power cord to an AC outlet, make sure that all the connections have been made.

Important Safety Instructions

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Refer to service manual for servicing instructions.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Maintain well-ventilated conditions around the product. Do not place on bed, sofa, or anything that blocks ventilation. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit in your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and at the point where they exit the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the car/apparatus to avoid injury from tip-over.
13. Unplug this apparatus during lightening storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, which as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids such as vases, shall be placed on the apparatus.



Note: Do not touch the color TFT LCD screen by hand directly.

Important Safety Instructions

Copyright Protection

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

IMPORTANT FOR LASER PRODUCTS

- 1. CLASS 1 LASER PRODUCT**
- 2. DANGER:** Visible laser radiation when open and interlock failed or defected. Avoid direct exposure to beam.
- 3. CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit. Leave all servicing to qualified personnel.

Region Code Information

DVD players and discs are coded by region. If the region number described on the DVD disc does not correspond to the region number of this product, this product cannot play the disc.

The region code of this unit is 4.

WEEE

This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, please go to **www.polaroid.com** and click on “**Company**” or call the customer service number for your country listed in the instruction manual.



Features

High-quality Audio and Video

- **Excellent Sound:** Dolby Digital Decoder delivers great sound.
- **AV Input:** External audio, video can be connected to most external AV sources.
- **AV Output:** Analog audio output can be connected to external amplifier.









Advanced Playing Functions

- **Compatibility:** Compatible with DVD, CD, and JPEG discs, etc.
- **On-Screen Display:** You can choose English, French, Spanish, etc. for the on-screen display language.
- **Particular Performance:** Multi-speed, fast forward, fast backward, slow playback, and repeated playback.
- **Search by Time:** Search for a certain track of a disc by selected time.
- **Last Memory Playback:** Memorizes the stopped playback track and continues playing the disc from this spot when the power remains on. (Only available for DVD and CD discs.)
- **Special Functions:** Supports screen multi-angle viewing and zooming functions.

Other Special Functions

- **High Resolution:** MPEG-2 decoding format achieves more than 500 lines of horizontal resolution.
- **Power Adapter Switch:** Automatically adapts to voltage requirements in US and other countries.

Accessories

ITEM	NAME	QTY
	Remote Control (with battery)	1
	Power Supply Cord with AC Adaptor	1
	Rechargeable Battery Pack	1
	DC Adapter (Car Adapter)	1
	Audio/Video Cord	1
	Headphone	1
	Bag	1
	Operation Manual	1

Note: Accessories and their parts numbers are subject to change without prior notice.

Contents

Important Safety Instructions	2
Features	5
Accessories	6
View of Front Panel	8
View of Side Panels	9
View of Bottom Panel	10
Revolving LCD Screen	11
Remote Control	12
System Connections	14
Power Supply	15
Rechargeable Battery	16
Notes on Discs	18
Playback Operation	19
DVD Playback	20
CD Playback	21
JPEG Playback	22
System Setup	24
Carrying Case	27
Definitions	39
Troubleshooting	30
Specifications	31

View of Front Panel

 


1. **LCD screen**
2. **▲/||/+ button:** press ▲ to select different items; press || to pause the playback; press the mode button and then the + button to increase the level of brightness, contrast, and color.
3. **▼/■/- button:** press ▼ to select different items; press ■ to stop playback or press it twice to stop completely, then press the ► (PLAY) button to resume playback from the stopped spot; press the MODE button and then press the - button to decrease the level of brightness, color, and contrast.
4. **◀/⏮/⏪ button:** press ◀ to select different items; press and hold ⏮ to search backward fast; press ⏪ to return to previous list/track/chapter.
5. **▶/⏭/⏩ button:** press ▶ to select different items; press and hold ⏭ to search forward fast; press ⏩ to go to next list/track/chapter.
6. **ENT/► (PLAY) button:** press ENT to confirm selection; press ► (PLAY) to start playback
7. **Speaker**
8. **Disc tray:** when the disc tray is loaded, gently press the cover to close it
9. **MENU button:** press to access the DVD disc menu during playback
10. **SETUP button:** press to access or exit the system setup menu
11. **MODE button:** press to enter the brightness, contrast, or color adjusting mode. Press and hold for several seconds to change the aspect ratio among 16:9, 4:3, 16:9 overturn, and 4:3 overturn. (This button is invalid when the unit is connecting to the docking station.)
12. **ZOOM button:** press to realize various zoom functions
13. **OPEN switch:** push to open the disc tray cover
14. **SLOW button:** press to activate slow playback function
15. **A-B REPEAT button:** press to play a section of the disc from point A to point B
16. **Remote sensor**
17. **Charge indicator:** light is red when the battery is being charged; green when battery is fully charged.

View of Side Panels


Ride Side View

1. **Volume Control Knob:** Used to adjust the volume of headphones and speaker
2. **Headphone Jack:** Used to connect to headphones for private listening. When headphone is plugged in, the speakers will automatically turnoff.
3. **Audio Input/Output Jack:** For connecting to an external amplifier or audio source
4. **Video Input/Output Jack:** For connecting to an external monitor or video source
5. **AV IN/OUT Switch:** Switch to “IN” to input external Audio/Video signal. Switch to “OUT” to play disc or output AV signal
6. **DC 9.5/12V Input Jack:** Used to connect the DC 9.5/12V adaptor

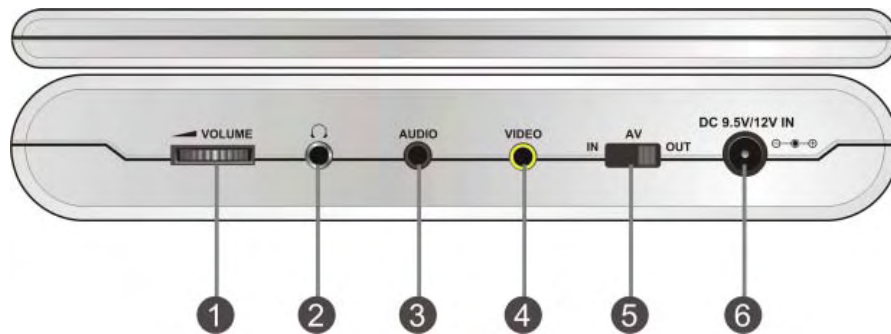


Left Side View

 1. **HOLD button:** Push the HOLD switch to lock the function of all the buttons on the front panel (except the POWER and ON switches)
2. **Power ON/OFF Switch:** Switch the power on or off

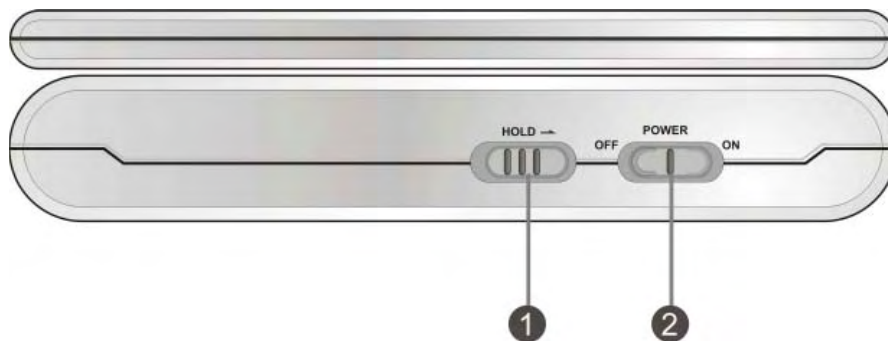

View of Bottom Panel

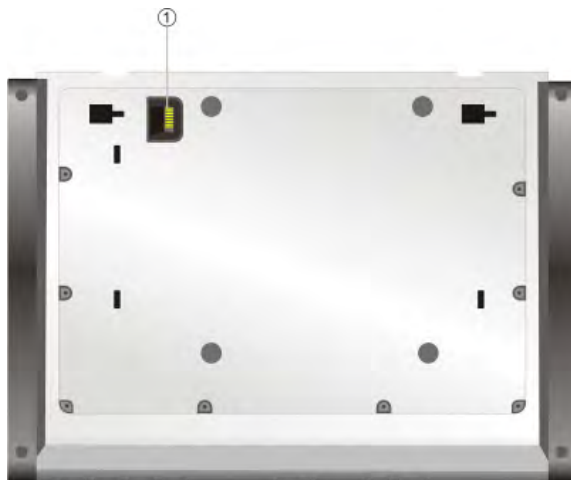 





1. **Rechargeable** Battery Contacts: For connecting the rechargeable battery pack


Revolving LCD Screen

Revolving Steps

The revolving LCD screen is one of the outstanding features about this product. Here are some suggested steps for proper operation:

<p>A</p> 	<p>Open the screen cover to position (A) as shown at left, where the screen is vertical to the operation panel.</p>
<p>B</p> 	<p>Revolving the screen horizontally about its axis in the clockwise only. The maximum revolving degree is 180 (position C). If you want to return to initial position (A), please revolve the screen counterclockwise until it clicks.</p>
<p>C</p> 	<p>You can rotate the screen vertically from position (C) to the operation panel as shown at left.</p>
<p>D</p> 	<p>The final position (position D) is when the screen faces upwards and back to operation panel.</p>

 Remote Control

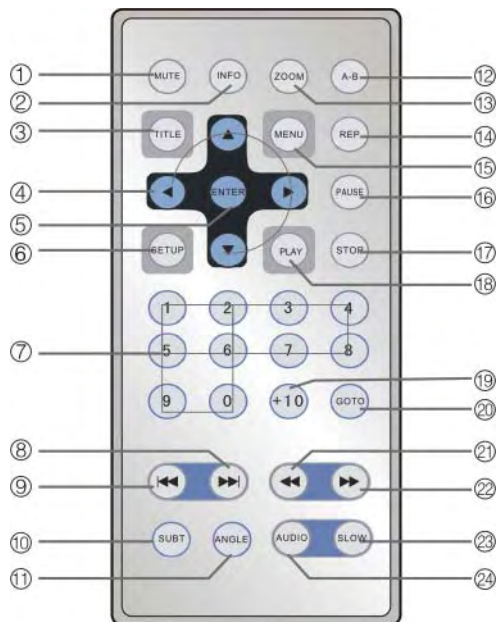


1. **MUTE button:** press to turn speakers on or off
2. **INFO button:** press repeatedly to display or cancel the detailed information of the disc during playback
3. **TITLE button:** press to display the title menu if it exists on the disc
4. **Direction button:** press to select different options
5. **ENTER button:** press to access playback or confirm your selection
6. **SETUP button:** press to enter the unit's setup menu
7. **0-9 number buttons:** press to select numbers
8. **» NEXT button:** press to skip to the next list, track, or chapter
9. **« PREV button:** press to return to the previous list, track, or chapter
10. **SUBT button:** press to select a subtitle language or to turn the subtitles on or off (when playing a disc coded with subtitles)
11. **ANGLE button:** press to access various camera angles if the DVD disc contains multiple camera angles
12. **A-B button:** press to play a section of the disc from point A to point B. Press once to select the starting point A, press again to select the end point B. During A-B repeat playback, press this button to stop the repeat
13. **ZOOM button:** press to realize different zoom functions
14. **REP button:** press to repeat a chapter, title, or entire disc
15. **MENU button:** press to access the DVD disc menu during playback
16. **PAUSE button:** press to pause playback, press the PLAY button to resume normal playback
17. **STOP button:** press stop to stop playback, press twice to stop completely. Press the PLAY button to resume playback.
18. **PLAY button:** press to start playback
19. **+10 button:** press the 10+ button followed by another number to select a number greater than 9
20. **GOTO button:** press to select the desired disc starting time, title, or chapter
21. **« REV SCAN button:** press to search backward during playback
22. **» FWD SCAN button:** press to search forward during playback
23. **SLOW button:** press to activate slow playback function
24. **AUDIO button:** press to select different languages when a DVD disc with multiple audio languages is being played; press to select different audio tracks when a CD disc is being played

Remote Control

Installing the Remote Control Battery

 1. Pull the battery holder out from the remote control as shown below.
2. Load a new battery properly with the (+) side up.
3. Insert the battery holder back into the remote control.

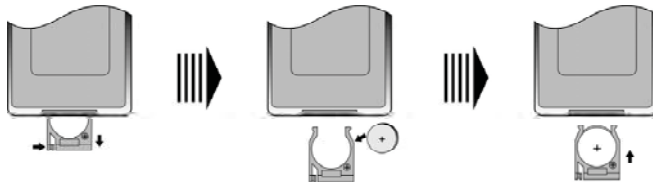

Battery Type: CR2025 3V

Battery service life: approximately 1 year under normal use (at room temperature)

Using the Remote Control

Point the remote control to the remote sensor on the unit within a 5-meter range and 60-degree angles, without obstacles between the remote control and remote sensor.



Notes:

- Improper use of the battery may cause overheating, explosion or ignition, which can result in an injury or fire. Battery leakage may damage the remote control.
- Do not expose the remote control to direct sunlight.
- Do not recharge, disassemble, deform, or heat the battery.
- Immediately replace the exhausted battery.
- Take out battery when the remote is not being used for a long period of time.

System Connections

- Always ensure that the DVD player, TV, and any other electrical equipment to be connected are switched off and unplugged from the power supply.
- Ensure that you observe the color coding when connecting audio and video cables.

 
Connecting to a TV

Follow the drawing below to connect the DVD player to the TV's audio/video input with the audio/video cables.




Connecting to an Amplifier

Refer to your audio equipment's manual before connecting. Follow the drawing below to connect the DVD player to an AV amplifier.

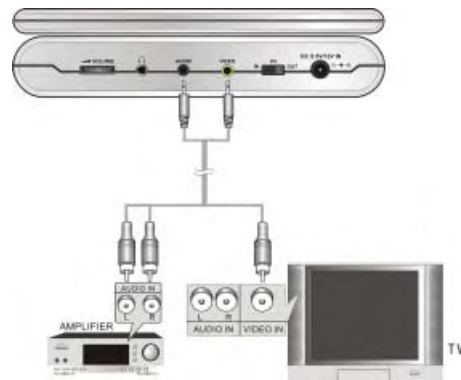

Connecting to an External AV Source

 
The player supports an AV signal input function. Use the AV cables to connect the unit to an external AV signal source such as a DVD, VCR, etc. After connecting, switch the DVD/AV IN to AV IN.

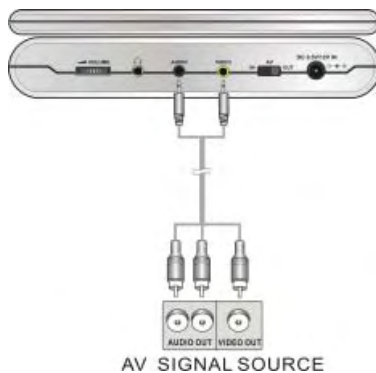

Note: Noise may occur in speakers when there is an external audio signal input while playing a DVD disc. Unplug the audio cord to clear the noise.

Connecting to the Headphones

 Connect the headphones to the headphone jack on either side of the player. When headphones are connected, the speakers will automatically turn off.

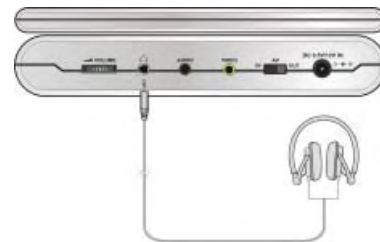

Power Supply

Using the AC Adapter

The player is supplied with an AC adapter for powering the unit and charging the batter.

1. Connect the AC adapter to the left side of the DVD player in the pack marked DC 9.5/12V IN.
2. Plug the two-prong end of the power cord into a grounded electrical outlet. The power indicator lights red when charging the battery and green when complete.



 
Notes:

- Turn the player's power off before unplugging.
- When using the adapter, the LCD screen will be brighter than using the rechargeable battery.

Using the Car Adapter

The player is supplied with a car adapter for powering the unit and charging the battery in a vehicle.

Connect the car adapter power plug to the unit's power jack and the other end to the vehicle's 12V accessory/cigarette lighter socket.

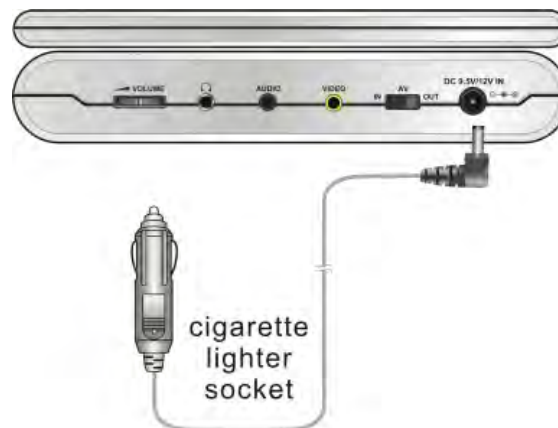

Attention:

- Do not operate the unit or view video software while driving a vehicle.
- Place the unit in a proper viewing position.
- Detach the battery pack when using the AC or car adapter as a power source.
- Disconnect the player from the car adapter when starting the vehicle.

Rechargeable Battery

About Your Rechargeable Battery Pack

Your portable DVD player comes with a lithium ion polymer rechargeable battery that attaches to the bottom of the DVD player. Charge the battery fully before initial use. Charging time is normally about 5 hours. A fully-charged battery delivers about 3 hours of use, but playing time varies disc to disc. If the battery will not be used for a long period of time, charge the battery fully before storing.

Working conditions and precautions for the rechargeable battery

1. New battery should be fully charged before initial use
2. Battery should only be used and charged when temperature is between 32-100F
3. Never put the battery in fire or water
4. Do not expose the battery to high temperatures or store in a hot, sunny place
5. Maintain well-ventilated conditions around the product to avoid overheating. Do not put the product on a bed, sofa, or anything that may block ventilation to the product
6. Do not short the battery terminals
7. Do not open the battery
8. Detach the battery after charging is complete. When charging the battery pack, the charge light will turn red; when the charging is complete, the light will turn green
9. Detach the battery when it is not in use
10. When the charge of the battery is wear, low power indicator will appear on the LCD screen. The player will turn off automatically about five minutes later.

Warning: Do not touch any metal object to the battery connectors as it will put the battery in standby mode. To exit standby mode, connect the battery and DVD player to AC or DC power.

Rechargeable Battery

Attaching the Battery Pack

1. With one hand on the DVD player to prevent it from moving, take the battery and align the plastic tabs on the battery pack with the holds on the player, and push the battery pack into the DVD player.
2. Slide the battery pack until you hear it click and lock in place.



Charging the Battery Pack

The battery pack must be attached to the DVD player to charge it by using the supplied AC power adapter.

1. Attach the battery pack to the DVD player.
2. Plug the supplied AC power adapter into the player's jack marked "DC 9.5V/12V IN", which is located on the right side of the DVD player.
3. Plug the other end of the AC power adapter cord into a household AC outlet as shown below:



Detaching the Battery Pack

When being turned off, the DVD player still consumes some power in standby mode. This will eventually discharge the battery. If the DVD player is not going to be used for long periods of time, the battery pack should be detached.



Make sure the power is turned off before detaching the battery pack.

1. Press and hold the battery release tab in the direction of arrow 1 as shown in figure 1 below.
2. Slide the battery pack gently towards the direction of arrow 2 as shown in figure 1 below.
3. Carefully remove the battery pack from your player.



Notes on Discs

Compatible Disc Formats

	DISC LOGO	DIAMETER	PLAYBACK TIME / PLAYABLE SIDES
DVD		12 cm	133 min (SS-SL) 242 min (SS-DL) 266 min (DS-SL) 484 min (DS-DL)
		8 cm	41 min (SS-SL) 75 min (SS-DL) 82 min (DS-SL) 150 min (DS-DL)
CD		12 cm	74 min
		8 cm	20 min
JPEG		12 cm	

Operation methods of some DVD discs are specified by the software manufacturer. Please follow the instructions of the disc.

Care of Discs

Holding Discs

- When loading or removing discs, try not to touch their play surfaces.



Cleaning Discs

- Fingerprints or stain on the disc may affect the quality of sound and picture. To clean your discs, use a soft clean cloth to wipe them. If necessary, moisten a soft cloth with neutral detergent to remove heavy dirty or fingerprints.
- Do not wipe in a circular direction (concentric scratches on the disc groove tend to cause noise). Gently wipe from center of the disc to the outer edge.

Playback Operation

Please read the following instructions carefully before using your DVD player for the first time.

Warning: To avoid damaging the lens, do not play poor quality discs.


Pre-Operation

1. Connect the unit to power supply through the provided AC adaptor.
2. Switch POWER ON/OFF to ON to turn the DVD player on.
3. Push the OPEN switch on the unit to open the disc tray cover. Put a disc in the disc tray with printed side up. Close the disc cover.
4. The player will search the disc and play it automatically.
5. Adjust the volume with the VOLUME control on the right panel to the desired level.
6. To turn the player off, switch the POWER ON/OFF to off.



Basic Operation

MODE button: press the MODE button and then press the $\text{||}/+$ or $\text{■}/-$ button to adjust brightness, contrast, and color of the screen. Press and hold several seconds to change the aspect ratio among 16:9, 4:3, 16:9 overturn, and 4:3 overturn.

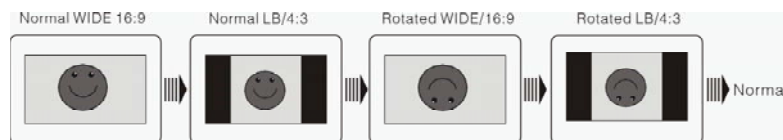 

Playback Operation

Features are available on both the DVD player and remote control unless otherwise noted.

DVD Playback

ENTER/ENT button	When you load a disc in, the player will search the disc and play it automatically. Press the direction buttons (▲▼◀▶) to highlight the item you want to play and press the ENTER/ENT button to confirm.
PAUSE/ button	Press the PAUSE/ button to pause during playback and the PLAY ► button to resume normal playback.
STOP/ ■ button	Press the STOP/ ■ button once to stop playback. Then press the PLAY ► button to resume normal playback from the place where the STOP button was pressed. Press the STOP/ ■ button twice to stop playback completely.
MENU button	Press the MENU button during playback. The root menu will appear on the screen. Press the direction buttons (▲▼◀▶) to select the item you want to play and press the ENTER/ENT button to confirm. You can also press the 0-9 and +10 buttons to select the item you prefer.
TITLE button	In general, the content of a DVD disc can be divided into several titles. There are also several menus in a title. Press the TITLE button during playback. The title menu will appear on the screen. Press the direction buttons (▲▼◀▶) to select the title or disc menu item you want to watch and then press the ENTER/ENT button to confirm. You can also press the 0-9 and +10 buttons to select the item you prefer. (remote only)
ZOOM button	Press the ZOOM button repeatedly to shift among 1x - 2x - 3x - 4x zooming effect and normal playback.
◀◀ & ▶▶ buttons	Press the ◀◀ button to go to the previous chapter. Press the ▶▶ button to go to the next chapter.
◀◀ & ▶▶ buttons	Press the ◀◀/▶▶ button (and hold it for several seconds) to start fast forward/rewind playback. Press it (and hold it for several seconds) repeatedly to fast forward/rewind at the speed of 2x, 4x, 8x, 16x, and normal playback. Press PLAY to return to normal playback.
SLOW button	Press the SLOW button repeatedly and slow playback will at the speed of 1/2, 1/4, 1/8, 1/16, and normal playback. During slow playback, press the PLAY button to resume normal playback.
REP button	Press the REP button to repeat a Chapter, All, or cancel repeat in sequence. (remote only)
A-B button	In normal playback, press the A-B button to select the segment you want to play repeatedly. Press once to select the starting point A, press again to select the end point B; the player will play the segment between A and B continuously. Press the A-B button a third time to cancel the preset segment.
GOTO button	During playback, press the GOTO button repeatedly to enter the menu to select desired TITLE, CHAPTER, or TIME. Use the ◀▶ direction buttons to select the item you want to set. Use the 0-9 and +10 buttons to select directly and then press the ENTER/ENT button to confirm. Press the GOTO button again to exit. (remote only)

Playback Operation

DVD Playback (continued)

INFO button	Press to display or cancel the detailed information of the disc during playback. (remote only)
AUDIO button	DVD discs can contain up to 8 audio bit streams. For example: English, French, etc. To select the audio bit stream you prefer, press the AUDIO button during playback. The DVD player will play the next audio bit stream every time you press the AUDIO button in succession. (remote only)
SUBT button	When a DVD is playing, press the SUBT button to select a subtitle language or to turn subtitles off. A DVD disc can be recorded with at most 32 subtitles. Note: this function is only available for discs recorded with multi-subtitles. (remote only)
ANGLE button	Press the ANGLE button to play the disc in multi-angle. Multi-angle means that a scene is shot from different angles so the audience can watch from any angle. If there are multiple angles in a scene, you can use the ANGLE button to select the angle you enjoy. Press the ANGLE button repeatedly to view different angle options. Note: this function is only available for DVD discs coded with multi-angle.

CD Playback

PAUSE/ button	Press the PAUSE/ button to pause during playback. Press the PLAY/ ► button to resume normal playback.
STOP/ ■ button	During playback, press the STOP/ ■ button once to stop and then press the PLAY/ ► button to resume normal playback from the place where the STOP/ ■ button is pressed. Press the STOP/ ■ button twice repeatedly to stop playback completely.
▶▶ & ◀◀ buttons	Press the ▶▶/◀◀ (and hold it for several seconds) to play fast forward/rewind. Press it (and hold it several seconds) repeatedly, the fast forward/rewind playback will be undergoing at the speed of 2x, 4x, 8x, 16x, in sequence. Press the PLAY/ ► button to return to normal playback.
◀◀ & ▶▶ buttons	Press the ◀◀ button to play the previous chapter. Press the ▶▶ button to play the next chapter.
GOTO button	During playback, press the GOTO button repeatedly to enter the menu to select desired track, time track, or disc time. Use the ◀▶ direction buttons to select the item you want to set. Use the 0-9 and +10 buttons to select directly and then press the ENTER/ENT button to confirm. Press the GOTO button again to exit. (remote only)
INFO button	Press the INFO button repeatedly to display or cancel detailed information during playback. (remote only)
REP button	Press the REP button repeatedly to repeat a Track, All, or cancel repeat in sequence. (remote only)
AUDIO button	Press the AUDIO button to select the desired sound effect. Press it repeatedly and the display will be as follows: Left →Right → Stereo. (remote only)

Playback Operation

JPEG Playback

Pre-Operation

1. Load a JPEG in the disc tray and the player will search and play the disc automatically.
2. The screen displays the root folder with several subdirectories/subfolders. Use the ▲▼ buttons to select desired folder. Then press the ENTER/ENT button or PLAY/▶ button to confirm your selection.
3. The screen enters the subfolder with several files. Use the ▲▼ buttons to select desired file. Then press the ENTER/ENT button or PLAY/▶ button to confirm your selection.
4. Press the ◀ button to return to the previous folder or directory.

Note: many discs have other items besides pictures.

Buttons Operation

STOP/ ■ button	Press the STOP / ■ button to return to the previous folder. Press the direction buttons (▲▼◀▶) to select the picture you prefer and then press the ENTER/ENT button to resume normal playback.
PAUSE/ button	Press the PAUSE/ button to pause during playback. Press the PLAY/ ▶ button to resume normal playback.
MENU button	Press the STOP / ■ button to return to the previous folder. Press the direction buttons (▲▼◀▶) to select the picture you prefer and then press the ENTER/ENT button to resume normal playback.
⏮ & ⏭ buttons	Press the ⏮ button to play the previous chapter. Press the ⏭ button to play the next chapter.
ZOOM button	Press the ZOOM button repeatedly to shift among 4/3, 3/2, 7/4, 2, 1/4, and 1/2 zooming in and out effect and normal playback.
GOTO button	During playback, press the GOTO button to select the desired file. Press the 0-9 buttons directly to select according to your preference. (remote only)
REPEAT function	Under folder status, press the ▶ button to enter REPEAT setup. Then press the ENTER/ENT button repeatedly to set the repeat mode and the screen will display as follows in sequence: DISC NORMAL → DISC REPEAT SHUFFLE → SINGLE TRACK → REPEAT TRACK → FOLDER NORMAL → FOLDER REPEAT. Press the ◀ button to exit. (remote only)

Playback Operation

JPEG Playback (continued)

Rotating Pictures

While viewing a picture, use the direction buttons to rotate the picture.

Press the ◀ button to rotate the current picture clockwise:



Press the ▶ button to rotate the current picture counterclockwise:



System Setup

 
You can change the default settings of this unit to customize its performance to your own preferences.

Note: Program the system while playback is stopped completely or there is no disc in the payer.

To Set up your system:

1. Press the **SETUP** button and the setup menu will appear on the screen. It includes **VIDEO SETUP**, **LANGUAGE SETUP**, and **PREFERENCES**.
2. Press the direction buttons to select a sub-menu to program and press the **ENT/ENTER** button to access. In the sub-menu, use the **▼** button to highlight the “**MAIN PAGE**” and press the **ENT/ENTER** button to exit.
3. Press the **SETUP** button again to exit the setup menu at any time during setting.

Language Setup

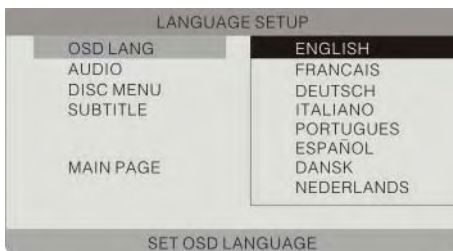


OSD LANGUAGE

- This item is used to set the OSD (on-screen display) language.
- Press the **▲▼** buttons to highlight this item.
- Press the **▶** button to access.
- There are several languages for you to choose.
- Press the **▲▼** buttons to choose the desired language.
- Press the **ENT/ENTER** button to confirm your selection.
- Press the **◀** button to exit.



AUDIO

 - This item is used to set the audio output language.
- Press the **▲▼** buttons to highlight this item.
- Press the **▶** button to access.
- There are several languages for you to choose.
- Press the **▲▼** buttons to choose the desired language.
- Press the **ENT/ENTER** button to confirm your selection.
- Press the **◀** button to exit.

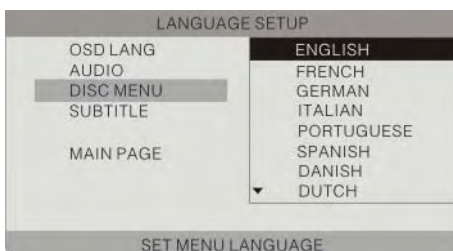


DISC MENU

- This item is used to set the menu language
- Press the **▲▼** buttons to highlight this item.
- Press the **▶** button to access.
- There are several languages for you to choose.
- Press the **▲▼** buttons to choose the desired language.
- Press the **ENT/ENTER** button to confirm your selection.
- Press the **◀** button to exit.

System Setup

 
Language Setup (continued)

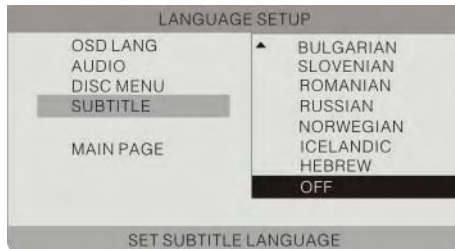

SUBTITLE

- This item is used to set the subtitle language.
- Press the ▲▼ buttons to highlight this item.
- Press the ► button to access.
- There are several languages for you to choose.
- Press the ▲▼ buttons to choose the desired language.
- Press the ENT/ENTER button to confirm your selection.
- Press the ◀ button to exit.

 
Preferences Setup

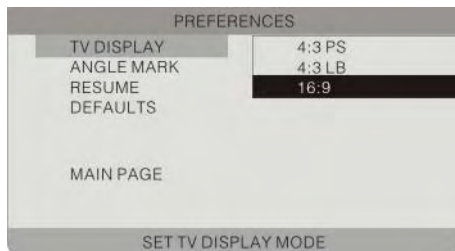

TV DISPLAY

- This item is used to set the TV display mode.
- Press the ▲▼ buttons to highlight this item.
- Press the ► button to access.
- It includes 4:3 PS, 4:3 LB, and 16:9.
- Press the ▲▼ buttons to choose the desired language.
- Press the ENT/ENTER button to confirm your selection.
- Press the ◀ button to exit.

 Note: Select 4:3 PS or 4:3 LB when a 4:3 TV is connected. Select 16:9 when a 16:9 wide screen TV is connected.

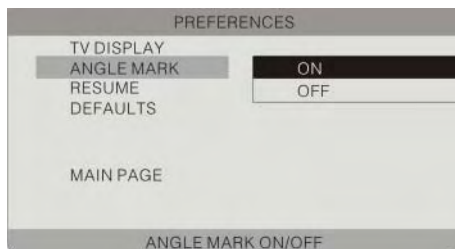


ANGLE MARK

- This item is used to set the angle mark on or off.
- Press the ▲▼ buttons to highlight this item.
- Press the ► button to access.
- Press the ▲▼ buttons to select ON or OFF.
- Press the ENT/ENTER button to confirm your selection.
- Press the ◀ button to exit.


System Setup

 Preferences Setup (continued)

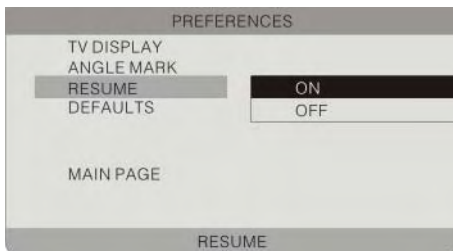

RESUME

 - This item is used to set the last memory state.
- Press the ▲▼ buttons to highlight this item.
- Press the ► button to access.
- Press the ▲▼ buttons to select ON or OFF.
- Press the ENT/ENTER button to confirm your selection.
- Press the ◀ button to exit.

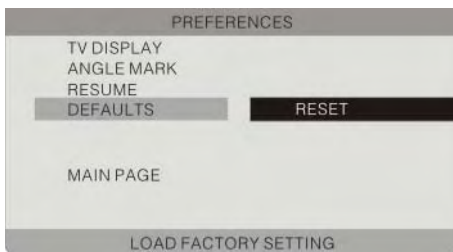

DEFAULTS

- This item is used to reset the unit.
- Press the ▲▼ buttons to highlight this item.
- Press the ► button to access.
- Press the ENT/ENTER button to reset. All settings to your unit are now set back to its original state.
- Press the ◀ button to exit.

Carrying Case

INSTRUCTIONS FOR ATTACHING YOUR PORTABLE DVD PLAYER CASE IN A VEHICLE

Please read and follow these instructions carefully when attaching this case inside your vehicle. For easy installation, do not place the DVD player in the case until the case is attached inside the vehicle.

Caution

1. Do not use this DVD player case as a swing, car seat, or for any other purpose than to hold a DVD player and accessories.
2. The DVD player case is intended for viewing only from the rear seats. Do not install or use this product in the front seat of a vehicle.
3. In case of collision or a sudden stop, to reduce the chance of injury, always keep the DVD player strapped securely while the vehicle is moving.

Your DVD player can be securely attached in one of the following ways to view movies from the rear seats:

- Directly behind either the driver or passenger seat
- Between two front bucket seats

Caution

Always position the plastic hooks and strap adjustment slider so they do not contact the back of the head of the person in the front seat.

Carrying Case

To attach the DVD player case to a seat back (figures 1 and 2)

1. Unzip the main compartment that holds the player; locate the set of rings tucked inside the top edge of the case (A).
2. Locate the two straps with hooks on each end.
3. Hook one end of each strap to the rings at the top of the case (A).
4. Criss-cross the straps around the front of the headrest (B) and hook the straps to a second set of rings on the lower part of the case (C).
5. Tighten up the straps until secure.



To suspend the DVD player case between two bucket seats (figure 3):

1. Unzip the main compartment that holds the player; locate the set of rings tucked inside the top edge of the case (A).
2. Locate the two straps with hooks on each end.
3. Hook one end of each strap to the rings at the top of the case (A).
4. Wrap each strap around the headrest of seat; hook the straps to a second set of rings on the lower part of the case (C); in some vehicles, the middle rings in the gusset might work best (D).
5. Tighten up the straps until secure.



Definitions

Letterbox screen

This refers to a screen on which the playback picture of wide-screen DVDs appears with black bands running along the top and bottom.

Pan & Scan screen

This refers to a screen on which the playback picture of wide-screen DVDs is cut off at the left and right sides.

Title, Chapter (DVD)

DVDs are divided into some large sections (titles) and some small sections (chapters). Each section is numbered as chapter or title numbers

Title 1	Title 2
Chapter 1	Chapter 1
Chapter 2	
.....


Track (CD)

CDs are divided into some sections (tracks). Each section is numbered as tracks.

Track 1	Track 2	Track 3
---------	---------	---------	-------

JPEG

JPEG is a common picture format that has small file size and low quality-loss rate of picture. Hundreds of pictures can be stored in a disc in this format. In order to utilize the real digital album, use film to make a picture CD in JPEG format.

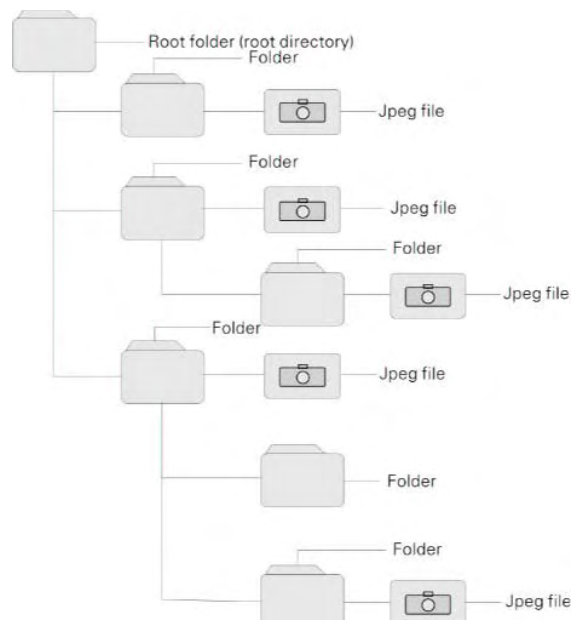 

Troubleshooting

If you suspect there is something wrong with the DVD player, immediately turn off the power. Disconnect the power connector and check that there is no smoke or excessive heat coming from the unit.

Never open or try to repair the unit yourself. There are no user serviceable parts inside.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The player cannot play	<ul style="list-style-type: none"> The disc cover may not be closed. There may be no disc in the DVD drive. The disc may not be put in the right way. The disc may be dirty or warped. The player's region code may not be the same as the disc's region code. There may be water on the lens. 	<ul style="list-style-type: none"> Close the disc cover. Put a disc in to the DVD drive. Put the disc in with the label side up. Clean or change the disc. Make sure the player's region code is the same as the DVD's region code. Remove the disc and keep the player turned off for at least two hours.
There is no sound	<ul style="list-style-type: none"> The system connection may be incorrect. The speakers may be turned down. The sound setup of the DVD may be incorrect. The disc may be dirty or warped. 	<ul style="list-style-type: none"> Connect the system correctly. Turn on the speakers. Setup the sound of the DVD correctly. Clean or change the disc.
There is no picture	<ul style="list-style-type: none"> The LCD may not be in correct video mode. The system connectivity may be incorrect. The unit may not be in AV OUT mode. 	<ul style="list-style-type: none"> Choose the correct video mode. Connect the system correctly. Switch the AV IN/OUT on the right panel to OUT.
Poor AV performance	<ul style="list-style-type: none"> The disc may be dirty or warped. 	<ul style="list-style-type: none"> Clean or change the disc.
The remote control does not work	<ul style="list-style-type: none"> There may be some obstructions between the remote control and the player. The remote control may not be pointed at the player. The remote control battery may be inserted incorrectly. The remote control batteries may be out of power or weak. 	<ul style="list-style-type: none"> Remove the obstruction between the remote control and the player. Point the remote control directly at the player. Make sure the polarity of each battery is correct. Replace the batteries.

Other possibilities: Static or external interference may cause the player to function abnormally. In order to recover normal status, please unplug the power-supply cord and then plug it into the outlet again to reset the player. If the problems still exist, please cut off the power supply and consult your service center or qualified technician.

Specifications

TFT Screen Size	8.5 inches (16:9)
Screen Resolution	480 x 234
Laser Wavelength	780/650nm
Video System	NTSC
Frequency Response	20Hz-20kHz \pm 2.5dB
Audio Signal-to-Noise Ratio	\geq 85dB
Audio Distortion+Noise	\leq -70dB (1kHz)
Channel Separation	\geq 70dB (1kHz)
Dynamic Range	\geq 80dB (1kHz)
Audio Out	Out Level $2V \pm 0.2$ 1.0, Load $10k\Omega$
Video Out	Out Level $1V_{p-p} \pm 0.2$, Load 75Ω Unbalanced Negative
Power	AC 100~240V (50/60Hz)
Dimensions	199mm x 199mm x 5.8mm
Weight	Approximately 1.12kg

DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Manufactured under license from Dolby Laboratories.
“Dolby” and the double-D symbol are trademarks of Dolby Laboratories.
Confidential unpublished works. © 1992-1997 Dolby Laboratories, Inc.
All rights reserved.

For service, support and warranty information, visit www.polaroid.com.

“Polaroid” and “Polaroid and Pixel” are trademarks of Polaroid Corporation, Waltham, MA, USA.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>