

ESPAÑOL: PÁGINA 15
FRANÇAISE : PAGE 29

Instruction manual

Power Tool-Triggered Wet/Dry Vac



MODEL 7812/7814

IMPORTANT

Please make certain that the person who is to use this equipment carefully reads and understands these instructions before starting operations.

The Model and Serial No. plate is located on the main housing of the tool. Record these numbers in the spaces below and retain for future reference.

Model No. _____

Type _____

Serial No. _____

To learn more about Porter-Cable
visit our website at:

<http://www.porter-cable.com>

PORTER-CABLE
PROFESSIONAL POWER TOOLS

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	.2
SAFETY GUIDELINES	.3
GENERAL SAFETY RULES	.4
CARTON CONTENTS	.6
FUNCTIONAL DESCRIPTION	.7
ASSEMBLY	.7
OPERATION	.9
TROUBLESHOOTING	.12
MAINTENANCE	.12
SERVICE	.13
ACCESSORIES	.13
WARRANTY	.14
ESPAÑOL	.15
FRANÇAISE	.29
SERVICE CENTER LOCATIONS	.back cover

IMPORTANT SAFETY INSTRUCTIONS

WARNING

Read and understand all warnings and operating instructions before using any tool or equipment. When using appliances, tools or equipment, basic safety precautions should always be followed to reduce the risk of personal injury. Improper operation, maintenance or modification of tools or equipment could result in serious injury and property damage. There are certain applications for which appliances, tools and equipment are designed. Porter-Cable strongly recommends that this product NOT be modified and/or used for any application other than for which it was designed.

If you have any questions relative to its application DO NOT use the product until you have written Porter-Cable and we have advised you.

Online contact form at www.porter-cable.com

Postal Mail: Technical Service Manager
Porter-Cable Corporation
4825 Highway 45 North
Jackson, TN 38305

Information regarding the safe and proper operation of this tool is available from the following sources:

Power Tool Institute
1300 Sumner Avenue, Cleveland, OH 44115-2851
www.powertoolinstitute.org

National Safety Council
1121 Spring Lake Drive, Itasca, IL 60143-3201

American National Standards Institute, 25 West 43rd Street, 4 floor, New York, NY 10036 www.ansi.org ANSI 01.1 Safety Requirements for Woodworking Machines, and the U.S. Department of Labor regulations www.osha.gov

SAVE THESE INSTRUCTIONS!

SAFETY GUIDELINES - DEFINITIONS

It is important for you to read and understand this manual. The information it contains relates to protecting YOUR SAFETY and PREVENTING PROBLEMS. The symbols below are used to help you recognize this information.



⚠ DANGER

indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION

indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION

used without the safety alert symbol indicates potentially hazardous situation which, if not avoided, may result in property damage.

⚠ WARNING

- **Wear eye and hearing protection. Always use safety glasses.** Everyday eyeglasses are NOT safety glasses. USE CERTIFIED SAFETY EQUIPMENT. Eye protection equipment should comply with ANSI Z87.1 standards. Hearing equipment should comply with ANSI S3.19 standards.
- **Take precautions against dust inhalation.** The dust generated by certain woods and wood products can be injurious to your health. Always operate machinery in well-ventilated areas, and provide for proper dust removal. Use wood dust collection systems whenever possible. Also, use face or dust mask if cutting operation is dusty. Dust mask protection should comply with MSHA/NIOSH certified respirator standards. Splinters, air-borne debris, and dust can cause irritation, injury, and/or illness.
- **Do not pick up anything that is burning, smoldering, or smoking** such as matches, cigarettes, or hot ashes.
- **Do not use to vacuum combustible explosive materials**, such as coal, grain, or other finely divided combustible material.
- **Do not use to vacuum hazardous, toxic, or carcinogenic materials**, such as asbestos, pesticide or lead-based paint debris.
- **Never pick-up explosive liquids** (e.g. gasoline, diesel fuel, heating oil, paint thinner, etc.), acids or solvents.

SAVE THESE INSTRUCTIONS!

GENERAL SAFETY RULES

⚠ WARNING

Read all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.



NOTE: This vacuum is intended for commercial use.

SAFETY INSTRUCTIONS

GROUNDING INSTRUCTIONS

This Appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

⚠ WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120-volt circuit, and has a grounded plug that looks like the plug illustrated in Figure A. A temporary adapter that looks like the adapter illustrated in Fig. B may be used to connect this plug to a 1-pole receptacle as shown in Fig. B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (Fig. A) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

Note: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

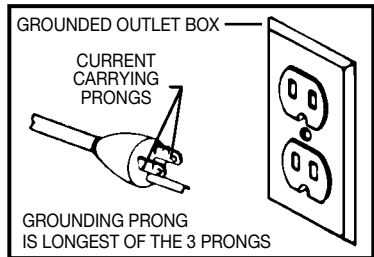 


Fig. A

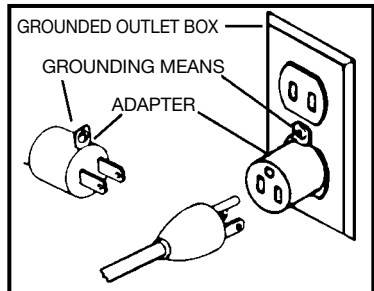 


Fig. B

SAVE THESE INSTRUCTIONS!

GENERAL SAFETY RULES continued

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

⚠ WARNING

When using electric appliances, always follow basic safety precautions to reduce the risk of fire, electric shock and personal injury, including the following:

BEFORE USING THIS APPLIANCE, READ AND FOLLOW ALL INSTRUCTIONS.

1. Connect to a properly grounded outlet only (See Grounding Instructions).
2. Do not leave the appliance when it is connected to a power source. Unplug it from outlet when not in use and before servicing.
3. Do not expose the appliance to rain. Store it indoors. This action will reduce the risk of electric shock.
4. Do not allow the appliance to be used as a toy. Pay close attention when the appliance is used by children, or when children are nearby.
5. Use this appliance **ONLY** as described in the manual. Use only recommended attachments from Porter-Cable.
6. Do not use this appliance with a damaged cord or plug. If the appliance is not working correctly, or if it has been dropped, damaged, left outdoors, or dropped in water, return it to a service center.
7. Do not pull or carry this appliance by the cord. Do not use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
8. Do not unplug this appliance by pulling on the cord. To unplug, grasp the plug, not the cord.
9. Do not handle the plug or appliance with wet hands.
10. Do not put any objects into the openings of the appliance. Do not use the appliance with any opening blocked. Keep all openings free of dust, lint, hair, or anything else that may reduce air flow.
11. Keep hair, loose clothing, fingers, and all body parts away from the openings and moving parts.
12. Turn off all controls before unplugging appliance.
13. Use extra care when using the appliance on stairs.
14. Do not use the appliance to pick up flammable or combustible liquids, such as gasoline, or use the appliance in areas where flammable or combustible liquids are present.
15. Do not pick up anything that is burning or smoking (cigarettes, matches, or hot ashes).
16. Do not pick up anything that contains lead-based paint debris.
17. Do not use this appliance without a dust bag and/or filters in place.
18. Some wood contains preservatives which can be toxic. Take extra care to prevent inhalation and skin contact when working with these materials. Request and follow any safety information available from your material supplier.

SAVE THESE INSTRUCTIONS!

MOTOR

Many Porter-Cable tools will operate on either D.C., or single phase 25 to 60 cycle A.C. current and voltage within plus or minus 5 percent of that shown on the specification plate on the tool. Several models, however, are designed for A.C. current only. Refer to the specification plate on your tool for proper voltage and current rating.

CAUTION

Do not operate your tool on a current on which the voltage is not within correct limits. Do not operate tools rated A.C. only on D.C. current. To do so may seriously damage the tool.

EXTENSION CORD SELECTION

If an extension cord is used, make sure the conductor size is large enough to prevent excessive voltage drop which will cause loss of power and possible motor damage. A table of recommended extension cord sizes will be found in this section. This table is based on limiting line voltage drop to 5 volts (10 volts for 230 volts) at 150% of rated amperes.

If an extension cord is to be used outdoors it must be marked with the suffix W-A or W following the cord type designation. For example – SJTW-A to indicate it is acceptable for outdoor use.

RECOMMENDED EXTENSION CORD SIZES FOR USE WITH PORTABLE ELECTRIC TOOLS

		Length of Cord in Feet									
		115V	25 Ft.	50 Ft.	100 Ft.	150 Ft.	200 Ft.	250 Ft.	300 Ft.	400 Ft.	500 Ft.
		230V	50 Ft.	100 Ft.	200 Ft.	300 Ft.	400 Ft.	500 Ft.	600 Ft.	800 Ft.	1000 Ft.
Nameplate Ampere Rating	0-2	18	18	18	16	16	14	14	12	12	
	2-3	18	18	16	14	14	12	12	10	10	
	3-4	18	18	16	14	12	12	10	10	8	
	4-5	18	18	14	12	12	10	10	8	8	
	5-6	18	16	14	12	10	10	8	8	6	
	6-8	18	16	12	10	10	8	6	6	6	
	8-10	18	14	12	10	8	8	6	6	4	
	10-12	16	14	10	8	8	6	6	4	4	
	12-14	16	12	10	8	6	6	6	4	2	
	14-16	16	12	10	8	6	6	4	4	2	
	16-18	14	12	8	8	6	4	4	2	2	
18-20	14	12	8	6	6	4	4	2	2		

CARTON CONTENTS

- 1) Vacuum
- 2) Hose & Connectors
- 3) Wheels & Wheel Parts
- 4) Bag Filter
- 5) Instruction Manual
- 6) Replacement Parts List

FUNCTIONAL DESCRIPTION

FOREWORD

Porter-Cable Model 7812/7814 Wet/Dry Vacuum delivers 99.85% filtration efficiency which is great for fine particulate pick-up, like drywall or surface dust. These units come equipped with a powerful 9 amp motor, built in outlet for use with power tools providing automatic vacuum start-up when tool is turned on and a 6 - 10 second vacuum overrun to clear hose when tool is turned off, dual filtration system, corrosion resistant tank, large wheels for easy maneuvering and a convenient flat top surface tray for holding tools while working.

UNPACKING

Carefully remove the Vacuum Cleaner from the carton. Retain all packing materials until you have inspected and satisfactorily operated the Vacuum Cleaner.

⚠ WARNING Do not connect the appliance to the power source until you read and understand this entire instruction manual.

Release the two container locks (A) Fig. 1, (one on each side of Vacuum Cleaner), by pulling outward on the bottom of each lock.

Lift the Motor Unit from the container and carefully set aside.

Remove the wheels and accessories from the container.



Fig. 1

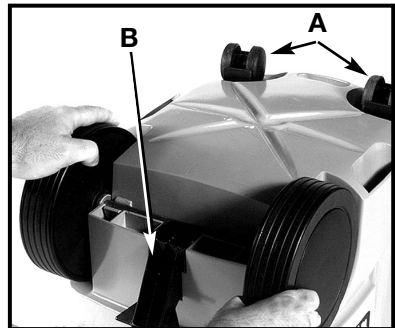 


Fig. 2

ASSEMBLY

ASSEMBLY TOOLS REQUIRED - Adjustable Wrench, Rubber Mallet.

ASSEMBLY TIME ESTIMATE - 30 minutes or less.

⚠ WARNING DISCONNECT APPLIANCE FROM POWER SOURCE.

NOTE: For **Model 7814**, begin with instruction #5.

1. Invert the container on a solid, flat surface (like a workbench or floor).
2. Install the two Steering Rollers (A) Fig. 2 into the holes provided in the bottom of the container. Seat firmly.
3. Insert the wand rest, (B) Fig. 2 into its position and seat firmly.
4. The wheel and axle assembly consists of two wheels on an axle. Place this assembly in the slot provided in the bottom of the container, and press into place. Seat firmly. (See Figure 2)

5. Set container upright, on its wheels.

NOTE: If the Vacuum Cleaner is to be used to pick-up liquid or wet material, **skip step 6.**

6. Install the paper filter bag. Please note that the mounting hole is offset in the bag. The hole is closest to the top side of the bag. Position the bag (into the container), with its top side up, and seat mounting hole onto the container's intake port. **NOTE:** Press only on the bag's protective card. Be careful to not tear the bag.
7. Place the motor unit onto the container and secure it by closing the two container Locks.
8. Attach the vacuum hose to the machine (Fig. 3). The Hose is equipped with a bayonet style connector. Align the projection on the side of the Hose connector with the slot in the Container intake port. Slide connector into intake port and rotate one-quarter turn clockwise to lock.



Fig. 3

NOTE: Models 7812 and 7814 Vacuum Cleaners are equipped with a Static Dissipating System that can help dissipate static electrical charges (sometimes experienced when recovering very dry, powdered materials), when used with a Static Dissipating type vacuum hose. **The hose that comes with your unit is NOT a static dissipating hose.** To install a Static Dissipating type hose will require removal of the bayonet connector from the standard hose, and installation (of the bayonet connector), onto the Static Dissipating hose, as follows:

- A. Depress locking tab (A) Fig. 4A and pull collar (B) out of the bayonet connector slightly.
 - B. Rotate the assembly 180° and depress the second locking tab, allowing the bayonet connector to be separated from the hose assembly.
 - C. Grasp hose in one hand and mounting hub (C) Fig. 4B in the other. Rotate the mounting hub clockwise (left-hand thread) to remove it from the hose.
 - D. Slide the collar (B) off the standard hose and position it onto the Static Dissipating hose.
 - E. Thread the mounting hub (C) onto the Static Dissipating hose (by turning it counterclockwise).
 - F. Place the bayonet connector onto the mounting hub and position the collar (B), so that its locking tabs align with the holes in the bayonet connector.
 - G. Press the collar into the bayonet connector until the two locking tabs engage the holes in the bayonet connector.
9. Attach the Vacuum Hose to the appropriate accessory nozzle, or to the dust port of a power tool.

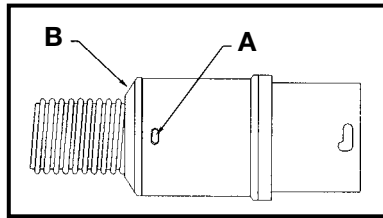 


Fig. 4A

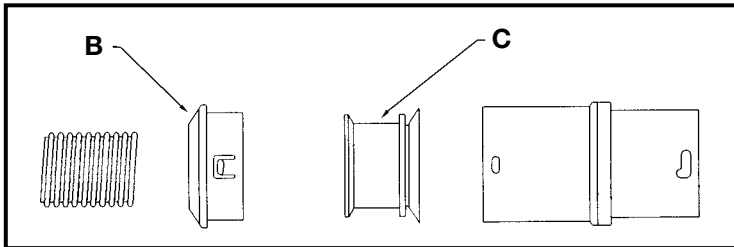 


Fig. 4B

OPERATION

The Porter-Cable Power Tool-Triggered Wet/Dry Vac is designed for use as a general purpose shop vacuum, or for use connected to various power tools. With the dust bag removed, it can be used to pick up water and other wet materials.

A power outlet is provided that allows a power tool to be connected to the Vacuum Cleaner. The Vacuum Cleaner will automatically switch "ON" when the power tool is started, and it will automatically switch "OFF" approximately 6 to 10 seconds after the power tool is turned "OFF".

POWER SWITCH

The power switch (A) Fig. 5 on both the 7812 and 7814 models is used for the Vacuum Cleaner as a stand alone unit. When not using a power tool, depress power switch (A) Fig. 5 to begin vacuuming.

These vacuums can be used to provide a dust-free environment when attached to a power tool. An accessory outlet is located under a hinged cover (B) Fig. 5 on the front of the vacuum cleaner. Lift this cover to expose the outlet.

Connect the power cord of the power tool to outlet (B) Fig. 5, then depress power switch (A) Fig. 5 on the vacuum cleaner. A green light, located next to the outlet, will glow. This light indicates that the vacuum will start automatically when the power tool is activated.

When the power tool is turned off, the vacuum motor will continue to run for 6 to 10 seconds to finish collecting the dust, and then it will stop.

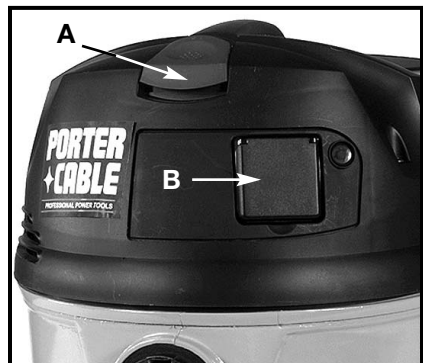 


Fig. 5

PARKING BRAKE

Both models are equipped with a Parking Brake. The parking brake will lock one wheel to prevent the vacuum from rolling.

To engage parking brake, use your toe to depress the brake button. The brake will snap into the locked position.

To disengage parking brake, use your toe to pull up on the brake button until it snaps into the unlocked position.

TOP FILTER

Both models are equipped with a top filter. If vacuum efficiency is reduced (indicating a clogged filter), proceed as follows:

1. Turn the Vacuum Cleaner "OFF." Grasp handle (C) Fig. 6 and pull out (approximately one and one-half inches), then release. Repeat several times. This action "shakes" the filter to remove loose dirt.
2. Turn the Vacuum Cleaner "ON" and check performance. If still unsatisfactory, turn the Vacuum Cleaner "OFF" and continue to step 3.

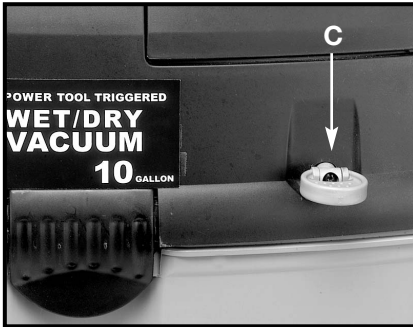 


Fig. 6



Fig. 7

3. **⚠ WARNING** DISCONNECT APPLIANCE FROM POWER CIRCUIT.

4. Pull upward on the filter cover lock, located on rear of the motor unit (see Fig. 7) to expose the filter.
5. Remove the filter (see Fig. 8) and tap it to remove any loose dirt.
6. If the filter is still dirty, clean it under running water (see Fig. 9). If this does not adequately clean the filter, replace it.

NOTE: Allow wet filter to dry before re-installing it in the appliance.



Fig. 8

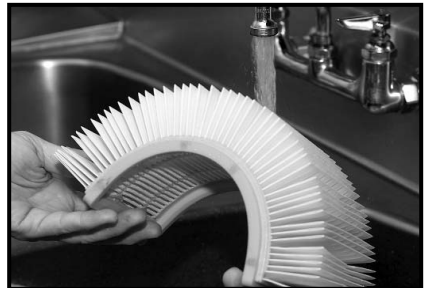 


Fig. 9

NOTE: A small sponge filter is located next to the top filter. This filter helps to cool the motor. Check the filter on a regular basis. If it is dirty, clean it by blowing dry compressed air through it.

DRY PICK-UP

⚠ WARNING Do not pick up anything that is burning, smoldering, or smoking such as matches, cigarettes, or hot ashes. Do not use to vacuum combustible explosive materials, such as coal, grain, or other finely divided combustible material. Do not use to vacuum hazardous, toxic, or carcinogenic materials, such as asbestos, pesticide or lead-based paint debris.

The vacuum cleaner may be used to pick up dry material with or without a dust bag installed. The dust bag provides a convenient method for disposing of the material that is collected.

Always use a dust bag when collecting fine dust. The bag will reduce clogging of the flat filter, and increase dust holding capacity.

WET PICK-UP

⚠ WARNING Never pick-up explosive liquids (e.g. gasoline, diesel fuel, heating oil, paint thinner, etc.), acids or solvents.

Always remove paper bag before picking up liquids or wet material. The vacuum motor will shut off automatically when the container is full. Turn the Vacuum Cleaner "OFF" before emptying container.

⚠ WARNING DISCONNECT APPLIANCE FROM POWER CIRCUIT BEFORE REMOVING POWER UNIT FROM CONTAINER.



Fig. 10

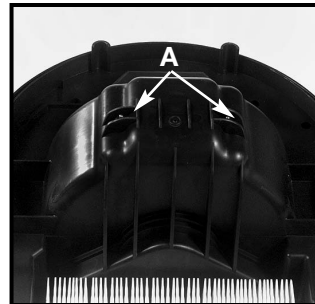 


Fig. 11

The Model 7814 has a drain hose located at the rear of the container. Remove the hose from its holder and point it downward to drain the container (see Fig. 10).

Always clean and dry the interior of the container after using the machine for wet pick-up. Also clean the two brass colored electrodes (see Fig. 11), on the bottom of the motor unit. These electrodes are part of the low-voltage system that stops the vacuum motor when the container is full of liquid or wet material.

TROUBLESHOOTING

For assistance with your tool, visit our website at www.porter-cable.com for a list of service centers or call the Porter-Cable help line at 1-800-487-8665.

MAINTENANCE

KEEP TOOL CLEAN

Periodically blow out all air passages with dry compressed air. All plastic parts should be cleaned with a soft damp cloth. NEVER use solvents to clean plastic parts. They could possibly dissolve or otherwise damage the material.

WARNING

Wear ANSI Z87.1 safety glasses while using compressed air.

FAILURE TO START

Should your tool fail to start, check to make sure the prongs on the cord plug are making good contact in the outlet. Also, check for blown fuses or open circuit breakers in the line.

LUBRICATION

This tool has been lubricated with a sufficient amount of high grade lubricant for the life of the unit under normal operating conditions. No further lubrication is necessary.

BRUSH INSPECTION (If applicable)

For your continued safety and electrical protection, brush inspection and replacement on this tool should ONLY be performed by an AUTHORIZED PORTER-CABLE SERVICE STATION or a PORTER-CABLE•DELTA FACTORY SERVICE CENTER.

At approximately 100 hours of use, take or send your tool to your nearest authorized Porter-Cable Service Station to be thoroughly cleaned and inspected. Have worn parts replaced and lubricated with fresh lubricant. Have new brushes installed, and test the tool for performance.

Any loss of power before the above maintenance check may indicate the need for immediate servicing of your tool. DO NOT CONTINUE TO OPERATE TOOL UNDER THIS CONDITION. If proper operating voltage is present, return your tool to the service station for immediate service.

SERVICE

REPLACEMENT PARTS

When servicing use only identical replacement parts. For a service parts list or to learn more about Porter-Cable visit our website at www.porter-cable.com

SERVICE AND REPAIRS

All quality tools will eventually require servicing or replacement of parts due to wear from normal use. For assistance with your tool, visit our website at www.porter-cable.com for a list of service centers or call the Customer Care Department at **1-800-487-8665**. All repairs made by our service centers are fully guaranteed against defective material and workmanship. We cannot guarantee repairs made or attempted by others.

Should you have any questions about your tool, feel free to write us at any time. In any communications, please give all information shown on the nameplate of your tool (model number, type, serial number, etc.).

ACCESSORIES

A complete line of accessories is available from your Porter-Cable•Delta Supplier, Porter-Cable•Delta Factory Service Centers, and Porter-Cable Authorized Service Stations. Please visit our Web Site www.porter-cable.com for a catalog or for the name of your nearest supplier.

⚠ WARNING Since accessories other than those offered by Porter-Cable•Delta have not been tested with this product, use of such accessories could be hazardous. For safest operation, only Porter-Cable•Delta recommended accessories should be used with this product.

WARRANTY

PORTER-CABLE LIMITED ONE YEAR WARRANTY

Porter-Cable warrants its Professional Power Tools for a period of one year from the date of original purchase. We will repair or replace at our option, any part or parts of the product and accessories covered under this warranty which, after examination, proves to be defective in workmanship or material during the warranty period. For repair or replacement return the complete tool or accessory, transportation prepaid, to your nearest Porter-Cable Service Center or Authorized Service Station. Proof of purchase may be required. This warranty does not apply to repair or replacement required due to misuse, abuse, normal wear and tear or repairs attempted or made by other than our Service Centers or Authorized Service Stations.

ANY IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WILL LAST ONLY FOR ONE (1) YEAR FROM THE DATE OF PURCHASE.

To obtain information on warranty performance please write to: PORTER-CABLE CORPORATION, 4825 Highway 45 North, Jackson, Tennessee 38305; Attention: Product Service. THE FOREGOING OBLIGATION IS PORTER-CABLE'S SOLE LIABILITY UNDER THIS OR ANY IMPLIED WARRANTY AND UNDER NO CIRCUMSTANCES SHALL PORTER-CABLE BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

PORTER-CABLE • DELTA SERVICE CENTERS (CENTROS DE SERVICIO DE PORTER-CABLE • DELTA) (CENTRE DE SERVICE PORTER-CABLE • DELTA)

**Parts and Repair Service for Porter-Cable • Delta Power Tools are Available at These Locations
(Obtenga Refaccion de Partes o Servicio para su Herramienta en los Siguietes Centros de Porter-Cable • Delta)
(Locations où vous trouverez les pièces de rechange nécessaires ainsi qu'un service d'entretien)**

ARIZONA

Tempe 85282 (Phoenix)
2400 West Southern Avenue
Suite 105
Phone: (602) 437-1200
Fax: (602) 437-2200

CALIFORNIA

Ontario 91761 (Los Angeles)
3949A East Guasti Road
Phone: (909) 390-5555
Fax: (909) 390-5554

San Diego 92111

7638 Clairemont Blvd.
Phone: (858) 277-9595
Fax: (858) 277-9696

San Leandro 94577 (Oakland)

3039 Teagarden Street
Phone: (510) 357-9762
Fax: (510) 357-7939

COLORADO

Arvada 80003 (Denver)
8175 Sheridan Blvd., Unit S
Phone: (303) 487-1809
Fax: (303) 487-1868

FLORIDA

Davie 33314 (Miami)
4343 South State Rd. 7 (441)
Unit #107
Phone: (954) 321-6635
Fax: (954) 321-6638

Tampa 33609

4538 W. Kennedy Boulevard
Phone: (813) 877-9585
Fax: (813) 289-7948

GEORGIA

Forest Park 30297 (Atlanta)
5442 Frontage Road,
Suite 112
Phone: (404) 608-0006
Fax: (404) 608-1123

ILLINOIS

Addison 60101 (Chicago)
400 South Rohlfing Rd.
Phone: (630) 424-8805
Fax: (630) 424-8895

Woodridge 60517 (Chicago)

2033 West 75th Street
Phone: (630) 910-9200
Fax: (630) 910-0360

MARYLAND

Elkridge 21075 (Baltimore)
7397-102 Washington Blvd.
Phone: (410) 799-9394
Fax: (410) 799-9398

MASSACHUSETTS

Franklin 02038 (Boston)
Franklin Industrial Park
101E Constitution Blvd.
Phone: (608) 520-8802
Fax: (608) 528-8089

MICHIGAN

Madison Heights 48071 (Detroit)
30475 Stephenson Highway
Phone: (248) 597-5000
Fax: (248) 597-5004

MINNESOTA

Minneapolis 55429
5522 Lakeland Avenue North
Phone: (763) 561-9080
Fax: (763) 561-0653

MISSOURI

North Kansas City 64116
1141 Swift Avenue
Phone: (816) 221-2070
Fax: (816) 221-2897

St. Louis 63119

7574 Watson Road
Phone: (314) 968-9950
Fax: (314) 968-2790

NEW YORK

Flushing 11365-1595 (N.Y.C.)
175-25 Horace Harding Expwy.
Phone: (718) 225-2040
Fax: (718) 423-9619

NORTH CAROLINA

Charlotte 28270
9129 Monroe Road, Suite 115
Phone: (704) 841-1176
Fax: (704) 708-4625

OHIO

Columbus 43214
4560 Indianola Avenue
Phone: (614) 263-0929
Fax: (614) 263-1238

Cleveland 44125

8001 Sweet Valley Drive
Unit #19
Phone: (216) 447-9030
Fax: (216) 447-3097

OREGON

Portland 97230
4916 NE 122 nd Ave.
Phone: (503) 252-0107
Fax: (503) 252-2123

PENNSYLVANIA

Willow Grove 19090 (Philadelphia)
520 North York Road
Phone: (215) 658-1430
Fax: (215) 658-1433

TEXAS

Carrollton 75006 (Dallas)
1300 Interstate 35 N, Suite 112
Phone: (972) 446-2996
Fax: (972) 446-8157

Houston 77043

4321 Sam Houston Parkway, West
Suite 180
Phone: (713) 983-9910
Fax: (713) 983-6645

WASHINGTON

Auburn 98001 (Seattle)
3320 West Valley HWY, North
Building D, Suite 111
Phone: (253) 333-8353
Fax: (253) 333-9613

Authorized Service Stations are located in many large cities. Telephone **800-487-8665** or **731-541-6042** for assistance locating one. Parts and accessories for Porter-Cable • Delta products should be obtained by contacting any Porter-Cable • Delta Distributor, Authorized Service Center, or Porter-Cable • Delta Factory Service Center. If you do not have access to any of these, call **888-848-5175** and you will be directed to the nearest Porter-Cable • Delta Factory Service Center. Las Estaciones de Servicio Autorizadas están ubicadas en muchas grandes ciudades. Llame al **800-487-8665** ó al **731-541-6042** para obtener asistencia a fin de localizar una. Las piezas y los accesorios para los productos Porter-Cable • Delta deben obtenerse poniéndose en contacto con cualquier distribuidor Porter-Cable • Delta, Centro de Servicio Autorizado o Centro de Servicio de Fábrica Porter-Cable • Delta. Si no tiene acceso a ninguna de estas opciones, llame al **888-848-5175** y le dirigrán al Centro de Servicio de Fábrica Porter-Cable • Delta más cercano. Des centres de service agréés sont situés dans beaucoup de grandes villes. Appelez au **800-487-8665** ou au **731-541-6042** pour obtenir de l'aide pour en repérer un. Pour obtenir des pièces et accessoires pour les produits Porter-Cable • Delta, s'adresser à tout distributeur Porter-Cable • Delta, centre de service agréé ou centre de service d'usine Porter-Cable • Delta. Si vous n'avez accès à aucun de ces centres, appeler le **888-848-5175** et on vous dirigera vers le centre de service d'usine Porter-Cable • Delta le plus proche.

CANADIAN PORTER-CABLE • DELTA SERVICE CENTERS

ALBERTA

Bay 6, 2520-23rd St. N.E.
Calgary, Alberta
T2E 8L2
Phone: (403) 735-6166
Fax: (403) 735-6144

BRITISH COLUMBIA

8520 Baxter Place
Burnaby, B.C.
V5A 4T8
Phone: (604) 420-0102
Fax: (604) 420-3522

MANITOBA

1699 Dublin Avenue
Winnipeg, Manitoba
R3H 0H2
Phone: (204) 633-9259
Fax: (204) 632-1976

ONTARIO

505 Southgate Drive
Guelph, Ontario
N1H 6M7
Phone: (519) 767-4132
Fax: (519) 767-4131

QUÉBEC

1515 Ave.
St-Jean Baptiste, Suite 160
Québec, P.Q.
G2E 5E2
Phone: (418) 877-7112
Fax: (418) 877-7123

1447, Begin
St-Laurent, (Mtl), P.Q.
H4R 1V8
Phone: (514) 336-8772
Fax: (514) 336-3505

The following are trademarks of PORTER-CABLE • DELTA (Las siguientes son marcas registradas de PORTER-CABLE • DELTA S.A.) (Les marques suivantes sont des marques de fabricant de la PORTER-CABLE • DELTA): Auto-Set®, BAMMER®, B.O.S.S.®, Builder's Saw®, Contractor's Saw II™, Delta®, DELTACRAFT®, DELTAGRAM™, Delta Series 2000™, DURATRONIC™, Emc2™, FLEX®, Flying Chips™, FRAME SAW®, Grip Vac™, Homecraft®, INNOVATION THAT WORKS®, Jet-Loak®, JETSTREAM®, 'kickstand', LASERLOC®, MICRO-SET®, Micro-Set®, MIDI LATHE®, MORTEN™, NETWORK™, OMNIJIG®, POCKET CUTTER®, PORTA-BAND®, PORTA-PLANE®, PORTER-CABLE®(design), PORTER-CABLE® PROFESSIONAL POWER TOOLS, PORTER-CABLE REDEFINING PERFORMANCE™, Posi-Matic®, Q-3®(design), QUICKSAND®(design), QUICKSET™, QUICKSET II®, QUICKSET PLUS™, RIPTIDE™(design), SAFE GUARD II®, SAFE-LOC®, Sanding Center®, SANDTRAP®(design), SAW BOSS®, Sawback™, Sidekick®, SPEED-BLOC®, SPEEDMATIC®, SPEEDTRONIC®, STAIR EASE®, The American Woodshop®(design), The Lumber Company®(design), THE PROFESSIONAL EDGE®, THE PROFESSIONAL SELECT®, THIN-LINE™, TIGER®, TIGER CUB®, TIGER SAW®, TORQBUSTER®, TORQ-BUSTER™, TRU-MATCH™, TWIN-LITE®, UNIGUARD®, Unifence®, UNIFEEDER™, Unihand®, Uniplane™, Unirip®, Unisaw®, Univise®, Versa-Feeder®, VERSA-PLANE®, WHISPER SERIES®, WOODWORKER'S CHOICE™.

Trademarks noted with ™ and ® are registered in the United States Patent and Trademark Office and may also be registered in other countries. Las Marcas Registradas con el signo de ™ y ® son registradas por la Oficina de Registros y Patentes de los Estados Unidos y también pueden estar registradas en otros países. Marques déposées, indiquées par la lettre ™ et ®, sont déposées au Bureau des brevets d'invention et marques déposées. Download from www.cometools.com All Manuals Search And Download. 7.2-PTG-F-1

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>