


PRESTO®

Cool Touch Electric Foldaway™ Griddle


- Exclusive Foldaway™ feature. Legs fold up for compact storage. Saves valuable cabinet space.
- Efficient “square” shape holds more pancakes, eggs, and sandwiches than ordinary rectangular griddles.
- Premium nonstick surface for stick-free cooking and easy cleaning.

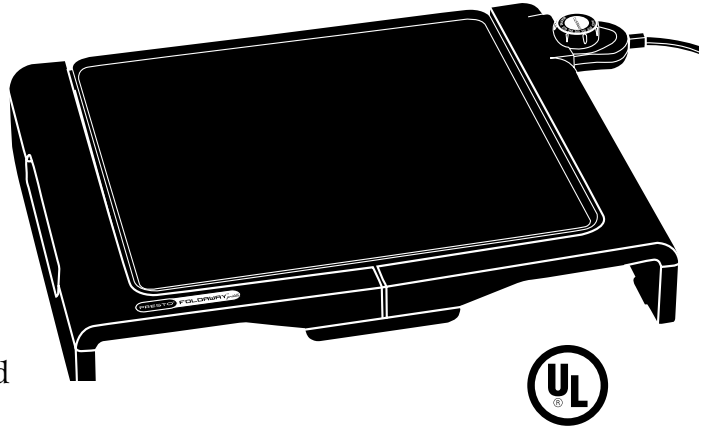

INSTRUCTIONS

Visit us on the web at www.GoPresto.com

©2006 by National Presto Industries, Inc.

This is a  Listed appliance. The following important safeguards are recommended by most portable appliance manufacturers.

IMPORTANT SAFEGUARDS

To reduce the risk of personal injury or property damage, when using electrical appliances basic safety precautions should always be followed, including the following:

1. **Read all instructions.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse control, cord, or plug in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or in the event the appliance malfunctions or has been damaged in any manner. Do not operate if the legs and/or cool touch base become cracked or damaged. Return the appliance to the Presto Factory Service Department (see page 3) or to the nearest Presto Authorized Service Station for examination, repair, or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. It is recommended that this appliance not be moved when it contains hot oil or other hot liquid.
12. Always attach heat control to appliance first, then plug cord into wall outlet. To disconnect, turn control to OFF then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS
THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.

Important Cord Information

Connect the power supply cord to a polarized outlet only. As a safety feature, this appliance has a polarized plug (one blade is wider than the other). This plug will only fit in a polarized outlet one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

A short power supply cord (or cord set) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is properly exercised in their use.

If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

How To Use

Before using for the first time, become familiar with the griddle features (Fig. A and Fig. B). Wash griddle in warm, sudsy water, rinse, and dry. Do not immerse Control Master® heat control or let the heat control come in contact with any liquid. “Season” the nonstick cooking surface by rubbing with a small amount of cooking oil. Remove excess oil with paper towel.

1. The griddle legs will be in the storage position under the base when you remove the griddle from the carton. Before using the griddle, the legs must be unfolded to the position shown in Fig. B. To unfold the legs, lift the griddle by grasping both sides of the base (Fig. A1). Then using your fingers, reach under the griddle and pull the legs away from the griddle until they lock into place (Fig. A2 and Fig. A3). Place the griddle on a dry, level, heat resistant surface.
2. Slide the drip tray into place. Insert the Control Master® heat control into the griddle so the two electrical pins on the griddle are fully inserted into the heat control. Connect cord to outlet.
3. Turn Control Master® heat control to desired temperature (see page 3 for cooking temperatures). Preheat griddle. Pilot light goes off when selected temperature is reached (this takes approximately 5 to 10 minutes).
4. Prepare food for cooking. Because the griddle features a nonstick finish, food may be prepared with little or no oil.
5. Place food on griddle and cook according to temperature-timetable (page 3). Heat should be adjusted according to personal preference and particular food being cooked. During cooking, pilot light will go on and off indicating desired temperature is being maintained.
6. Turn heat control to OFF when cooking is completed. Unplug heat control from wall outlet then from appliance. Allow unit to cool before removing grease tray and before cleaning.

Note: This griddle is not intended to be used as a warming tray. It is also not intended to be operated with the legs folded.

Care and Cleaning

Before initial use and after each subsequent use, wash griddle in warm sudsy water, rinse, and dry. **Do not immerse Control Master® heat control in water or let it come in contact with any liquid.**

For best results use nylon, plastic, wood, or rubber utensils. Do not use metal utensils as they may scratch the nonstick surface. Do not cut foods on the cooking surface.

After each use, clean the nonstick surface with a non-metal cleaning pad, such as Scotch-Brite® Multi-Purpose Scrub Sponge® or Scotch-Brite® Dobie® Cleaning Pad. Firm pressure can be applied, if necessary. **Do not use steel wool or abrasive kitchen cleaners.**

In time, the nonstick finish may darken over the heating element. To remove this discoloration, use a commercial cleaner designed for cleaning surfaces, such as dip-it® destainer. These cleaners are available at most grocery and hardware stores. Slide drip tray into place. Preheat griddle to 225°. Combine 1 cup of hot water and 1 tablespoon of commercial cleaner. Wearing rubber gloves, dip cleaning pad into cleaning solution and rub over cooking surface. Continue cleaning until solution is gone. Turn griddle off and allow to cool. Wash griddle in hot, soapy water and dry.


After treating the griddle with a commercial cleaner, it is recommended that the cooking surface be wiped with a small amount of cooking oil before using.

Some discoloration may occur inside the griddle drip tray. This is normal. The amount of discoloration will vary depending on the foods cooked and the temperature setting used. This discoloration is only visible from the inside of the drip tray and will not affect the performance of the griddle.

The cool touch base on the griddle is easy to keep attractive and looking new. Simply wipe away spills and drips as they occur. Any food residue remaining can be removed with warm, sudsy water and a cleaning pad. Rinse and wipe dry.

For compact storage, remove grease tray and fold legs inward, in the reverse order as shown in Fig. A. Note: The Control Master® heat control must be removed before folding the legs in.

IMPORTANT: To ensure continued accuracy of the Control Master® heat control, avoid rough handling in use and storage.

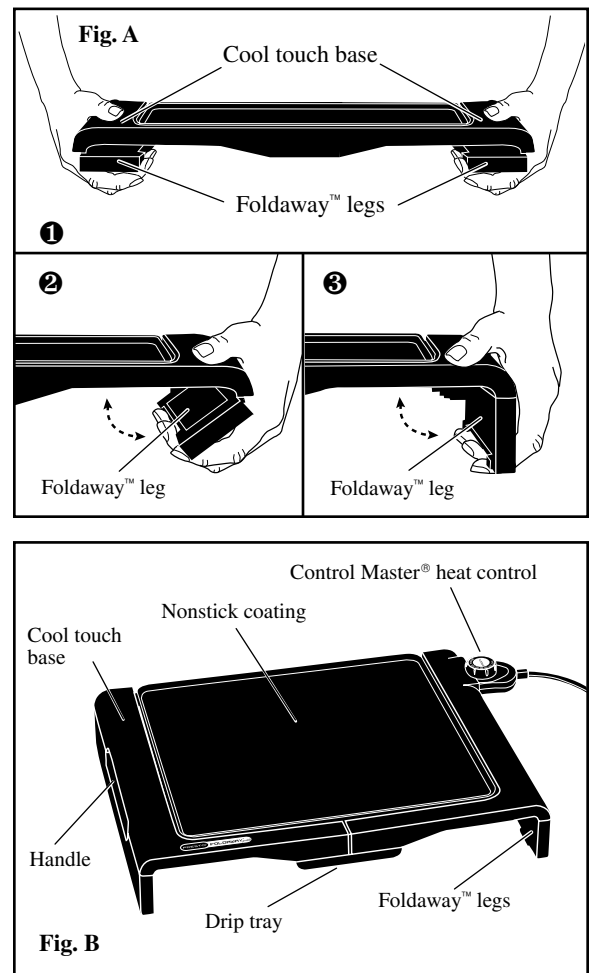

*Scotch Brite is a trademark of 3M. ** Dobie is a trademark of Pechiney Plastic Packaging, Inc. †dip-it is a registered trademark of Ecolab, Inc.

TEMPERATURE-TIMETABLE

Food	Temperature	Approximate Cooking Time in Minutes	Food	Temperature	Approximate Cooking Time in Minutes
Bacon	325° – 350°	5–8	Pork Chops		
Canadian Bacon	325° – 350°	3–4	½" thick	325° – 375°	15–20
Eggs, Fried	275° – 300°	3–5	¾" thick	325° – 375°	20–25
Fish	325° – 375°	5–10	Potatoes, cottage fried	300° – 350°	10–12
French Toast	325° – 350°	4–6	Sausage		
Ham			link	325° – 350°	20–30
½" thick	325° – 350°	10–12	precooked	325° – 350°	10–12
¾" thick	325° – 350°	14–16	Sandwiches, grilled	325° – 350°	5–10
Hamburgers			Steak, Beef, 1" thick		
½" thick	325° – 375°	8–12	Rare	350° – 400°	6–7
Liver	325° – 350°	5–10	Medium	350° – 400°	10–12
Minute Steak	375° – 400°	4–5	Steak, Beef, 1½" thick		
Pancakes	350° – 400°	2–3	Rare	350° – 400°	8–10
			Medium	350° – 400°	18–20

Service Information

If you have any questions regarding the operation of your Presto® appliance or need parts for your appliance, contact us by any of these methods:

- **Call 1-800-877-0441** weekdays 8:00 AM to 4:30 PM (Central Time)
- **Email us at our web site www.GoPresto.com**
- **Write: NATIONAL PRESTO INDUSTRIES, INC.**
Consumer Service Department
3925 North Hastings Way, Eau Claire, WI 54703-3703

When contacting the consumer service department, please indicate the model number for the griddle and the 4 digit date code. These numbers can be found on the bottom of the griddle.

Inquiries will be answered promptly by telephone, letter, or email. When writing, please include a phone number and a time when you can be reached during weekdays if possible.

Any maintenance required for this product, other than normal household care and cleaning should be performed by our Factory Service Department or any Presto Authorized Service Station. Be sure to indicate date of purchase and a description of defect when sending an appliance for repair. **Send appliances for repair to:**

CANTON SALES AND STORAGE COMPANY
Presto Factory Service Department
555 Matthews Drive, Canton, MS 39046-0529

Appliances may also be repaired at any Presto Authorized Service Station. Check you yellow pages for Service Stations near you. The Presto Factory Service Department and Presto Authorized Service Stations are equipped to service all PRESTO® appliances and supply genuine PRESTO® parts. Genuine PRESTO® replacement parts are manufactured to the same exacting quality standards as PRESTO® appliances and are engineered specifically to function properly with its appliances. Presto can only guarantee the quality and performance of genuine Presto® parts. "Look-alikes" might not be of the same quality or function in the same manner. To ensure that you are buying genuine PRESTO® replacement parts, look for the PRESTO® trademark.

PRESTO® Limited Warranty

This quality PRESTO® appliance is designed and built to provide many years of satisfactory performance under normal household use. Presto pledges to the original owner that should there be any defects in material or workmanship during the first year after purchase, we will repair or replace it at our option. Our pledge does not apply to damage caused by shipping. To obtain service under the warranty, return this PRESTO® appliance, shipping prepaid, to the nearest Presto Authorized Service Station, or to the Factory Service Department. When returning a product, please include a description of the defect and indicate the date the appliance was purchased.

We want you to obtain maximum enjoyment from using this PRESTO® appliance and ask that you read and follow the instructions enclosed. Failure to follow instructions, damage caused by improper replacement parts, abuse or misuse will void this pledge. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is Presto's personal pledge to you and is being made in place of all other express warranties.

NATIONAL PRESTO INDUSTRIES, INC.
Eau Claire, WI 54703-3703

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>