

PVA2

60 WATTS HI-FI MINI STEREO AMPLIFIER



Owner's Manual

WWW.PYLEAUDIO.COM

WARNING

TO PREVENT THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE THE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

PRECAUTIONS IN THE USE

SAFETY

- * This amplifier is only use power of 110V/60Hz or 220V/50Hz switch
- * If some foreign objects into the set, unplug the power cord and have it to a qualified service personnel for checking.
- * If this set will not be use for a long time, unplug the power cord from outlet. Hold the plug when unplugging the cord.

PLACEMENT

- * To avoid overheat, keep space around this amplifier.
- * To avoid the blocking of ventilation holes, do not place this unit on a carpet or close to a curtain.
- * Do not place the amplifier in direct sunlight or near a heat emitting object, and keep the set free from dust and vibration.
- * Place the unit in a horizontal position.
- * Do not place anything heavy on the set.

OPERATION

 
Unplug the power cord if the amplifier not used for a long time. So that can save the outlay of electric energy and extend the life of amplifier.

CLEANING

Use the soft cloth with a bit of neutral detergent to clean the cover, panel and controls. To avoid defacement, never use solvent such as alcohol or gas.


CONTROLS AND COMPONENTS

FRONT PANEL

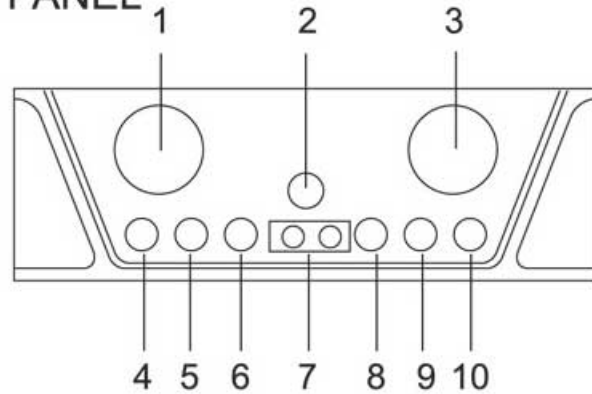

- | | |
|-------------------------------------|-------------------------|
| 1. Master volume control | 6. Mic 2 volume control |
| 2. Power switch and power indicator | 7. Microphone jack |
| 3. CD/VCD,DVD,tape,karaoke selector | 8. Balance control |
| 4. Karaoke echo control | 9. Treble control |
| 5. Mic 1 volume control | 10. Bass control |

 
REAR PANEL

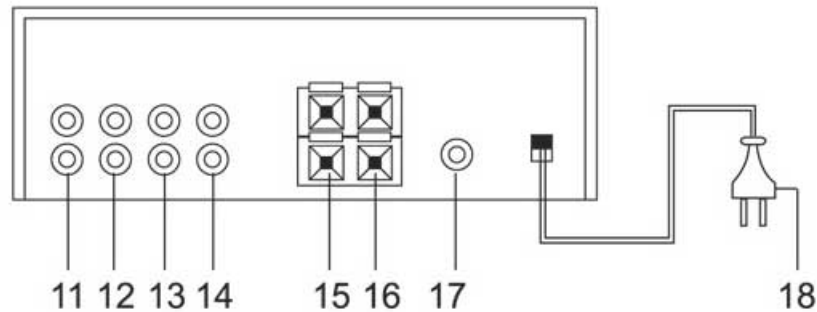

- | | |
|--------------------------|--------------------------|
| 11. CD/VCD input socket | 15. Right channel output |
| 12. TAPE input socket | 16. Left channel output |
| 13. DVD input socket | 17. Fuse tube |
| 14. Karaoke input socket | 18. Power cord |

CONNECTION

 Do not plug the power cord until all connection have been completed.

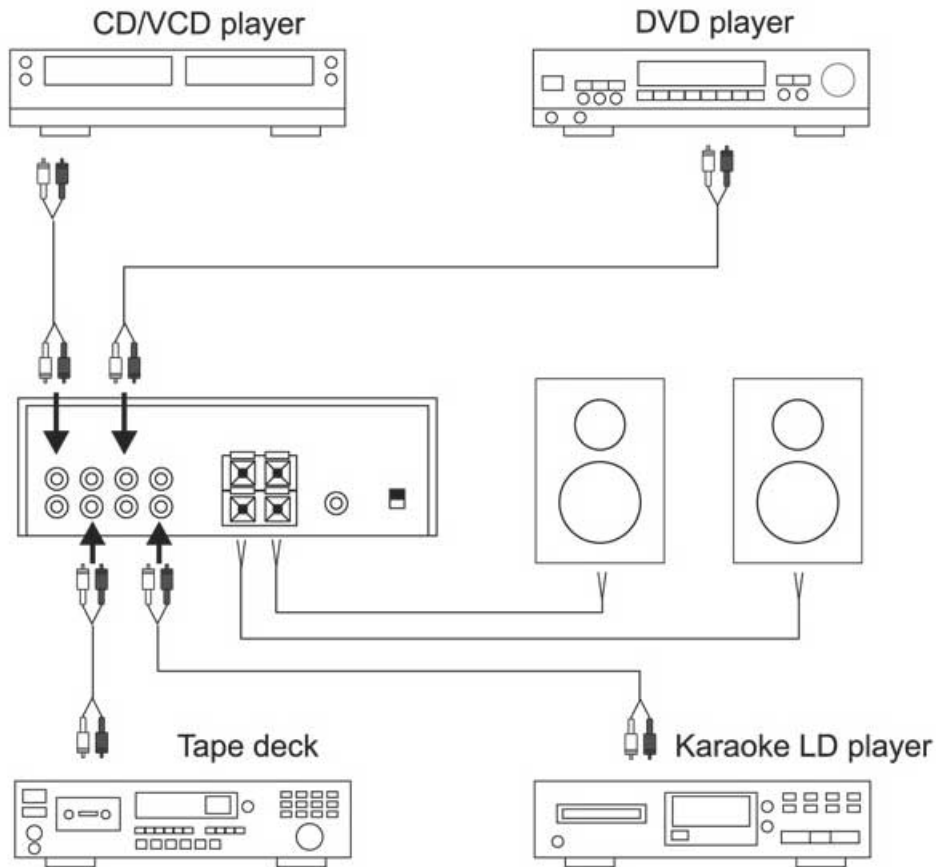

KARAOKE OPERATION

When playback karaoke program

1. Set the source selector (3) to karaoke position.
2. Connect LD player output socket to karaoke input socket.
3. Insert the plug of microphone into microphone socket (7), set the switch of microphone to ON position.
4. Adjust the microphone volume (5&6), set the Karaoke echo control to a proper position, it is ready for karaoke.

 
Note: Keep microphone long distance from the speaker to avoid generation of shrill sound.

SAFETY PRECAUTIONS

To prevent the risk of electric shock, Never Disassemble or modify the set in any way.



The AC outlets on rear panel only for audio equipment. Never use the AC outlets for hair driers, electric iron or other electrical appliance.

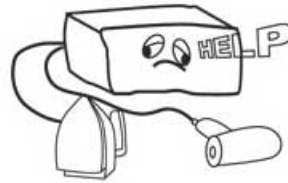

*(For sets with ventilation holes)
Do not obstruct the ventilation holes.



Do not let foreign objects in the set.



Keep the set away from sunlight, moisture, water, and dust.



Do not clean the cover with the chemical substance.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>