

SYSTEM INCLUDES

- | | |
|--------------------------|-----|
| 1. Main unit | X 1 |
| 2. Headset MIC | X 1 |
| 3. User's manual | X 1 |
| 4. Belt | X 1 |
| 5. 3.5/3.5mm audio cable | X 1 |

SPECIFICATIONS

- | | |
|------------------------------|------------------------|
| 1. Max. Power | 5W |
| 2. Total harmonic distortion | 5% Max |
| 3. Frequency response | 100Hz-10KHz
+/- 3db |
| 4. Operation temperature | -10°C ~45°C |
| 5. Power voltage | DC 9V |
| 6. Output impedance | 4Ω |

www.pyleaudio.com



PWMA30
Waistband Amplifier

USER'S MANUAL


Thank you for choosing our waistband amplifier which will bring you inconceivable, endless of comfort and convenience in your future work and life.

This waistband amplifier is perfect to be used in indoor and outdoor activities such as small meetings, parties, teaching, karaoke, sales propogandas and auctions etc.

NOTE

1. When using rechargeable batteries, you can connect power adaptor(optional) to DC in jack of the amplifier to charge the battery.
2. Power adaptor can also supply power to amplifier while charging the battery.
3. When connecting power adapter, do not use normal non-rechargeable batteries.
4. If you are not going to use the machine for a long time, please take out the batteries to avoid possible damage to the main unit by battery leakage.

PARTS DESCRIPTION

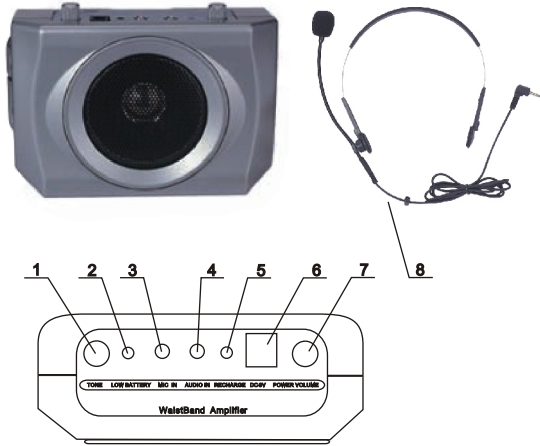

1. Tone control
2. Power/low battery indicator
3. MIC input jack
4. Audio input jack
5. Recharging indicator
6. DC input jack
7. Power switch/volume control
8. Headset MIC

OPERATION

1. Open the battery cover, install 6 pcs 1.5V AA batteries or 1.2V rechargeable batteries with same specification as per correct polarity. Then close the battery cover.
2. Put the amplifier on waist. Adjust the attached belt to suitable length. Then clip and fasten it on the back side.
3. Insert the 3.5mm plug of headset MIC to 3.5mm MIC in jack of amplifier.
4. Wear the headset MIC around your head. Keep MIC head close to your mouth.
5. Rotate the power switch clockwise. Power indicator will light green. Further rotate the switch to increase the volume to suitable level.
6. Adjust the tone control to get perfect sound quality.
7. AUDIO IN jack can be connected to portable radio, CD,VCD, MP3 and other audio equipment.
8. If the low battery indicator turns red, this indicates battery power is low. Please change new batteries or connect power adapter to charge them if rechargeable batteries are used.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>