

Instruction Manual

12-inch TFT LCD monitor

PYRAMID
WWW.PYRAMIDCARAUDIO.COM

MV1240IR



HAZARD WARNING:
PLEASE DO NOT OPERATE THIS
UNIT UNLESS VEHICLE IS PARKED
IN SAFE AND LEGAL AREA

Control panel



1. Power on/off
2. Menu
3. AV1/AV2
4. Adjust -
5. Adjust +
6. IR transmitter
7. Light

Performance parameter

Type: TFT LCD

Display size: 12"

IR transmitter

Two video inputs


Resolution: 800X600

System: NTSC/PAL

Remote control

Power supply: DC 12V

Remote control

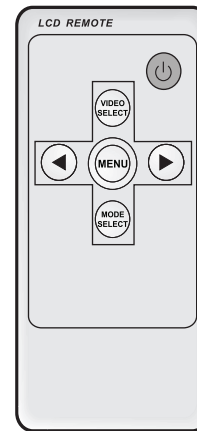


-  Power switch
-  V1/V2
-  Decrease
-  Increase
-  Menu
-  Mode select

Method of wiring



 Insert to LCD terminal



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>