
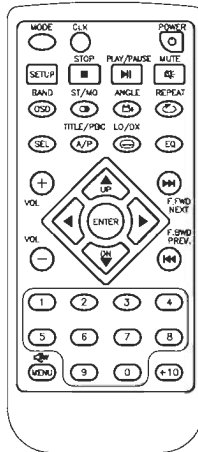


PYRAMID

PDVD79

OWNER'S MANUAL Mobile Video System

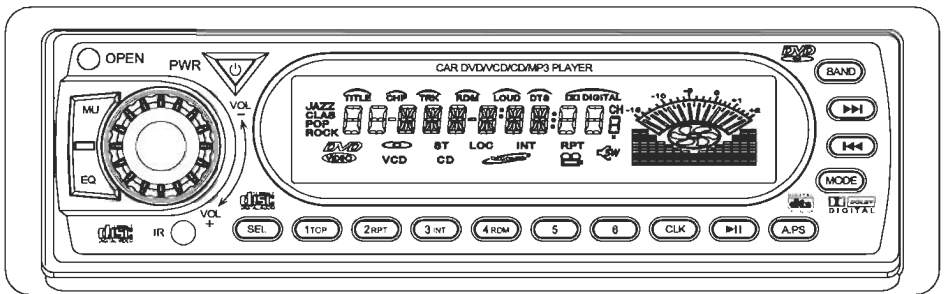

DVD/VCD/CD/MP3 PLAYER WITH
AM/FM-STEREO DIGITAL PLL TUNING RADIO
WITH ANTI THEFT FLIP DOWN DETACHABLE PANEL

Pyramidcaraudio.com

Download from www.Somanuals.com. All Manuals Search And Download.

CONTENTS

SAFETY INFORMATION	2
DISC NOTES	3
INSTALLATION	4
ELECTRIC CONNECTION	7
REMOTE CONTROL	8
BASIC OPERATION	10
MP3 DISC PLAY	13
ON-SCREEN DISPLAY FUNCTION	14
MULTI-AUDIOLANGUAGE FUNCTION	15
TITLE MENU FUNCTION	15
MULTI-SUBTITLELANGUAGE FUNCTION	15
MULTI-ANGLE FUNCTION	15
SETUP	16
INITIAL SETUP	16
GENERAL SETUP	16
SPEAKER SETUP	18
AUDIO SETUP	18
PREFERENCES SETUP	19
DEFAULTS TABLE	21
SPECIFICATIONS	22
TROUBLE SHOOTING	23

SAFETY INFORMATION

CAUTION:

THIS DVD PLAYER IS A CLASS I LASER PRODUCT. HOWEVER THIS DVD PLAYER USES A VISIBLE/INVISIBLE LASER BEAM WHICH COULD CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE THE DVD PLAYER CORRECTLY AS INSTRUCTED.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE ONLY THE RECOMMENDED ACCESSORIES.

THIS DEVICE IS INTENDED FOR CONTINUOUS OPERATION.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

REGION MANAGEMENT INFORMATION:

This DVD Player is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD Player, this DVD Player cannot play this disc.

DISC NOTES

Disc formats supported by this player



DVD
12 cm disc
(Single-sided disc only)



Video CD
12 cm disc



CD
12 cm disc



MP3
12 cm disc

Discs which cannot be played with this player

- DVD-ROM
- DVD-R/DVD-RAM
- CDV
- CD-G

Handling and Cleaning

- Dirt, dust, scratches and warping disc will cause misoperation.
- Do not place stickers or make scratches on discs.
- Do not warp discs.
- A disc should always be kept in its case when not in use to prevent from damaging.
- Do not place discs in the following places:
 1. Direct sunlight
 2. Dirty, dusty and damp areas
 3. Near car heaters
 4. On the seats or dashboard

Disc Cleaning

Use a dry soft cloth to wipe the surface. If the disc is quite dirty, use a soft cloth slightly moistured with isopropyl (rubbing) alcohol. Never use solvents such as benzine, thinner or conventional record cleaners as they may mar the surface of the disc.

Note:

A disc may become somewhat scratched (although not enough to make it unusable) depending on your handle it and conditions in the usage environment. Note these scratches are not an indication of any problem with the player.

Label side up



Do not touch the underside of the disc

Do not bend




Wipe the disc from center toward the outside edge

Preparing New Discs with Rough Spots

A new disc may have rough edges on its inside and outside edges. If a disc with rough edges is used, the proper setting will not be performed and the player will not play the disc. Therefore, remove the rough edges in advance by using a ball point pen or pencil as shown on the right. To remove the rough edges, press the side of the pen or pencil against the inside and outside edges of the disc.

Rough spots on outside edge

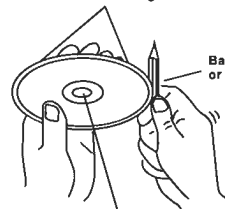

Ball point pen or pencil

Rough spots on inside edge

INSTALLATION

NOTES:

Choose the mounting location where the unit will not interfere with the normal driving function of the driver.


Before finally installing the unit, connect the wiring temporarily and make sure it is all connected up properly and the unit and the system work properly.

Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.

Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.

Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop, like an emergency stop.

If installation angle exceeds 30 from horizontal, the unit might not give its optimum performance.

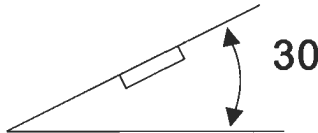


Avoid installing the unit where it would be subject to high temperature, such as from direct sunlight, or from hot air, from the heater, or where it would be subject to dust, dirt or excessive vibration.

DIN FRONT/REAR-MOUNT

This unit can be properly installed either from "Front" (conventional DIN Front-mount) or "Rear" (DIN Rear-mount installation, utilizing threaded screw holes at the sides of the unit chassis). For details, refer to the following illustrated installation methods.


INSTALLATION

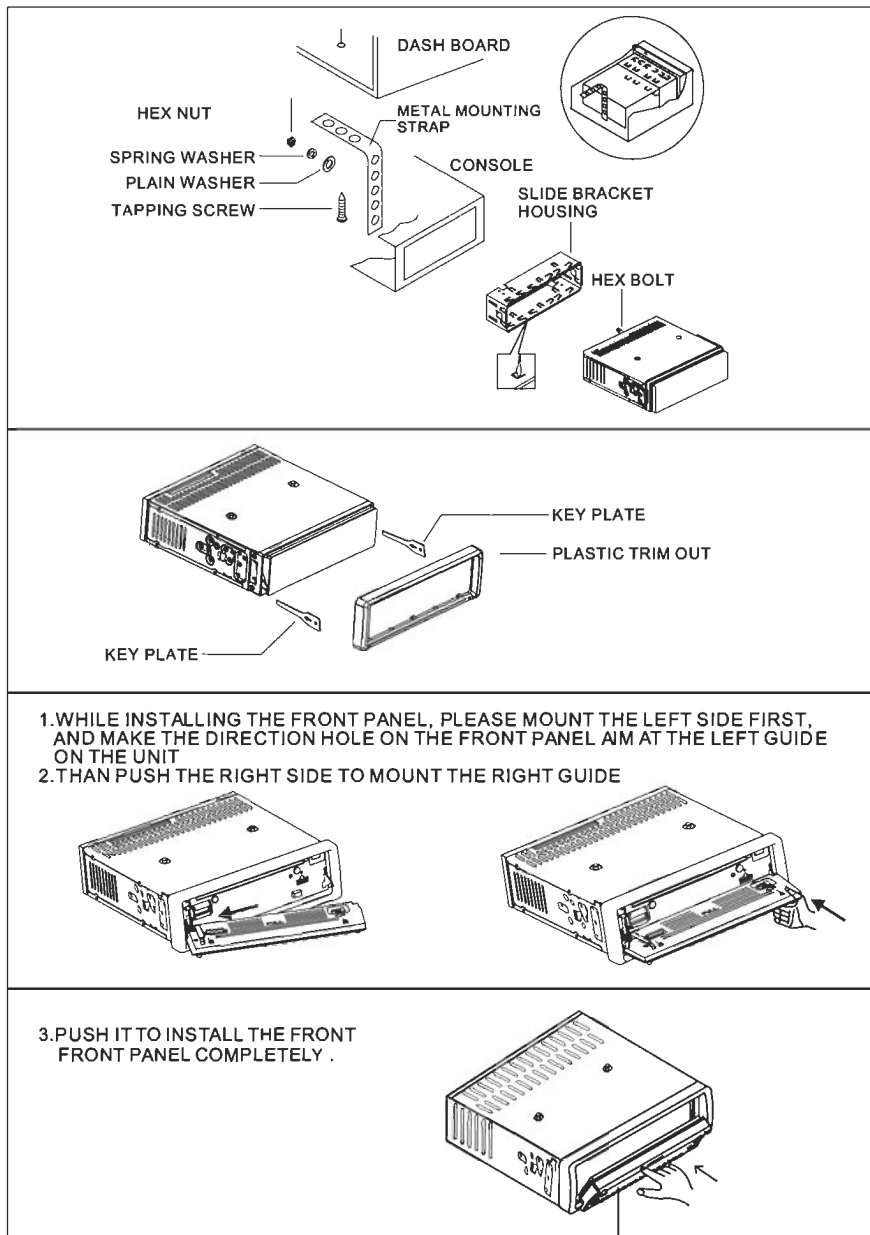


INSTALLATION

CAUTION: DO NOT INSTALL THE DETACHABLE PANEL BEFORE CONNECTING THE WIRE.


1. The unit is designed for negative terminal of the battery which is connected to the vehicle metal. Please confirm it before installation.
2. If the car interior is extremely hot, as after being parked in the sun, do not use the player until the car has been driven for a while to cool off the interior.
3. Press the OPEN button to flip down the front panel (see fig.1), Slide the guide knob to remove the right side first, then take away the front panel. (see fig.2) and put it in the protective case (see fig.3) for safe keeping.
4. Install the front panel back into its bracket and then push it back to the position for playing (see fig.4).

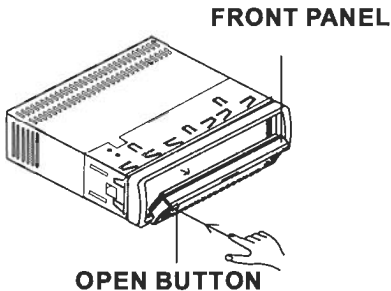


(FIG.1)

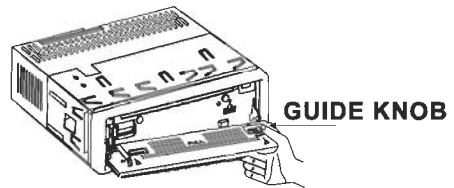

(FIG.2)

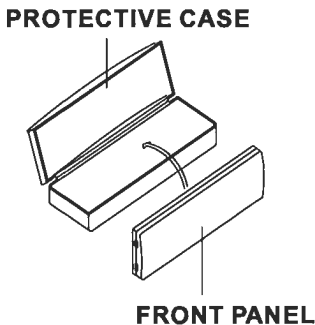


(FIG.3)

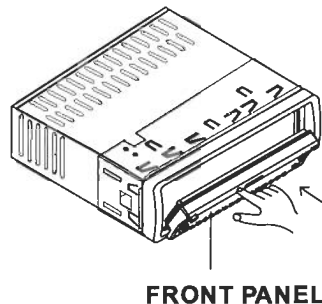


(FIG.4)

ELECTRIC CONNECTION

WIRING CONNECTION

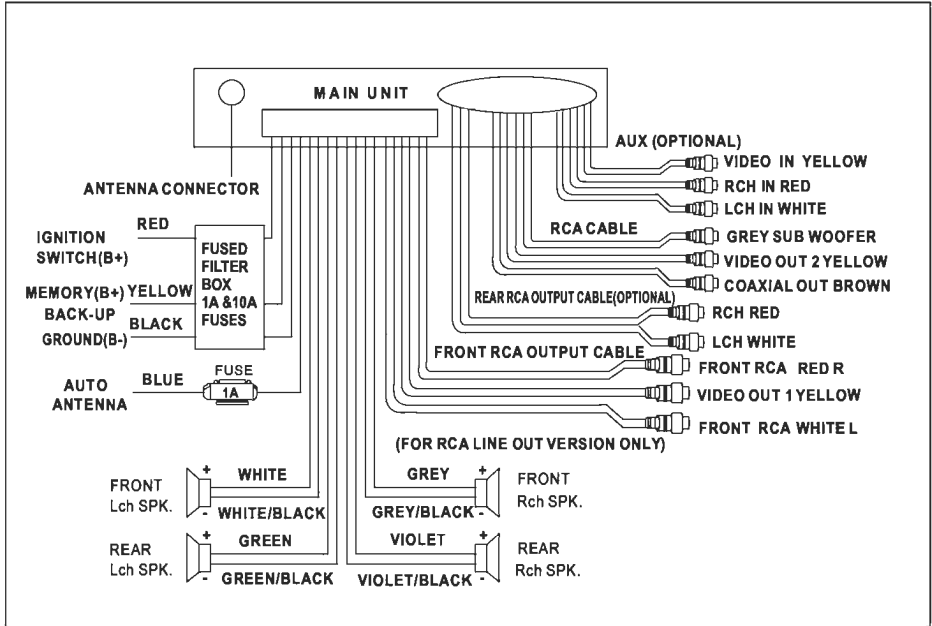

REMOTE CONTROL

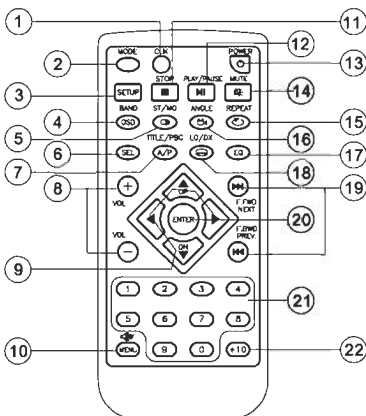

1. **CLK** Press it to change the display to clock display.
2. **MODE** Press it to change between radio or disc mode.
3. **SETUP** Display the SETUP menu.
4. **OSD(BAND)** Display statistical disc information during playback (To change the band in radio stations)
5. **ST/MO(AUDIO)** Press it to select STEREO or MONO (IN disc stations, press it to changing of the AUDIO soundtrack on multi-audio soundtrack DVD disc. Changing of the sound mode of the vcd/cd disc)
6. **SEL** Press it to change audio mode through volume, bass, treble balance and fader modes.
7. **TITLE/PBC (A/P)** Display the TITLE menu that is stored in DVD disc changing between PBC ON and PBC OFF on the VCD disc. (Auto store and preset scan function in radiostations .)
8. **VOL+ /VOL-** Press it to adjust volume level
9. **▲ /▼ /▶ /◀** Cursor buttons in MENU mode.
10. **MENU/ SUB WOOFER** Press it to display the root menu of the DVD disc/Press and hold for more than 2 seconds can have sub woofer
11. **STOP** Press it to stop playback.
12. **PLAY/PAUSE** Press once to pause a play, press again to resume playback.
13. **POWER** Press it to turn on the unit, press it again to turn off
14. **MUTE** Press it to mute down sound
15. **REPEAT** Switch the Repeat mode of DVD/VCD/CD disc.
16. **ANGLE** Changing of the view angle on multi-angle DVD disc
17. **EQ** Press it to turn to equalization function
18. **SUBTITLE (LO/DX)** Changing of the SUBTITLE language on multi-subtitle language DVD disc. In radio mode, Press this button for distance reception when you are located at weak signal location, depress it for stronger signal.
19. **◀▶ /▶▶** Press ▶▶ to skip to the next track & press ◀◀ to skip back one track.
20. **ENTER** Confirm the Track/Chapter selected with the number key or selected with the cursor buttons on TV screen.
21. **0 - 9** Numeric buttons.
22. **+10** Press it to select 10th digits.

REMOTE CONTROL

Preparing the Remote Control

Inserting the Batteries


1. Open the battery compartment cover.
2. Insert the new batteries. Make sure that the positive and negative terminals of the batteries are oriented indicated.
3. Close the cover

Using the Remote Control



Face the remote control towards the player front face IR mark (remote control signal receiver).

Operation angle: About ± 30 degree in each the direction of the front of the IR mark.

To prevent damage to the unit, be sure to follow the connection diagram (page 7).

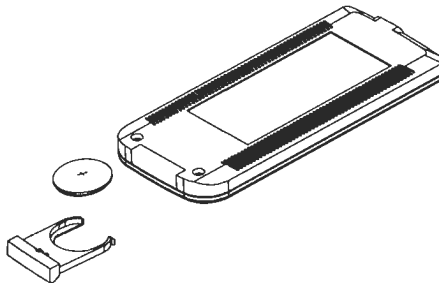

BASIC OPERATION

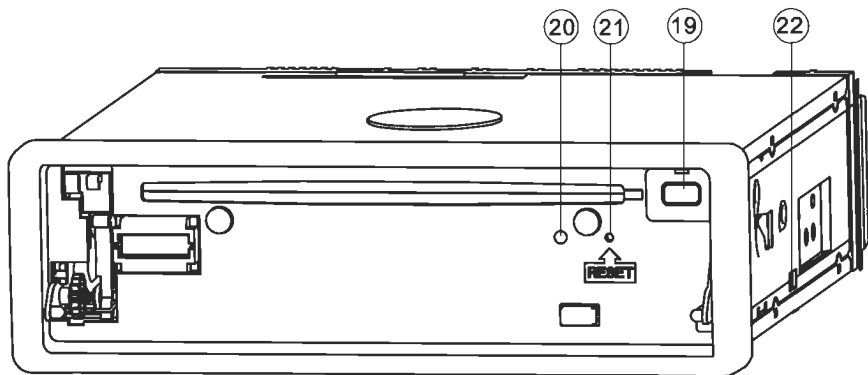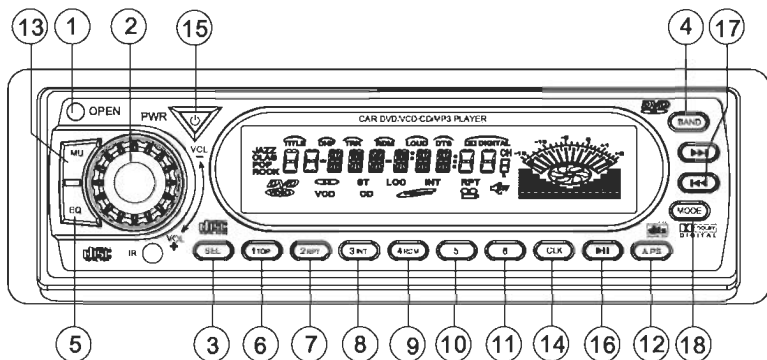

1.OPEN BUTTON

Press it to flip down the front panel then you can insert the cd disc into the cd compartment. And you can find the (EJECT)button .Press it to eject the disc.

2-3.VOL+/VOL- & SEL BUTTON

Press it to change audio mode through volume, bass, treble, balance, and fader modes. Rotate VOL +/VOL- knob to adjust the selected mode. When mode has not been adjusted for several seconds, display returns to normal radio or CD display.



A.Volume:Adjust volume level by using VOL+ / VOL- knob..

Note: The unit is initially set to volume mode.

B.Bass:Press SELbutton one time. Adjust bass level by usingVOL +/ VOL - knob.

C.Treble:Press SELbutton two times. Adjust treble level by using VOL +/ VOL - knob.

D.Balance:Press SELbutton three times. Adjust sound balance between left and right speakers by using VOL +/ VOL - knob.

E.Fader:Press SELbutton four times. Adjust sound balance between front and rear speakers by using VOL +/ VOL - knob.

BASIC OPERATION

 
4. BAND BUTTON

In RADIO mode, press the BAND button on the front panel or on the remote controller to select your desired radio band and word which band is selected will be displayed on LCD. Press it to change the bands as below :



5. EQ BUTTON

Press it to turn to equalization function and to select desired audio mode. There are four kinds of mode as below:



6-7-8-9-10-11. PRESET STATION

- A. To memorize the current frequency, press any one of the six preset buttons [1-6] on the front panel or on the remote controller hold for more than 2 seconds.
- B. To recall the preset memory, press one of the preset buttons [1-6].
- C. Press **1/TOP** button to select the first track/chapter to play.
 - a. In the state of VCD/CD/MP3 disc playing, press the button on the front panel to select the first track/chapter to play. (depend on the disc used for VCD)
 - b. In the state of DVD disc playing, the 1/TOP button is not available.
- D. Press **2/RPT** button to select repeat mode as follow.



- a. Continuously repeat at the current chapter/track, when selected REP-ONE mode.
- b. Select REP-ALL mode to continuously repeat all chapter/track on the current disc.
- c. REPEAT feature does not support VCD2.0 (with PBCON).
- E. Press **3/INT** button to scan disc.
 - a. In the state of VCD/CD disc playing, press the 3/INT button on the front panel to play the previous 10 seconds part of each track/chapter on disc. (depend on the disc used for VCD)
 - b. In the state of DVD/MP3 disc playing, the 3/INT button is not available.
- F. Press **4/RDM** to play disc in random.
 - A. In the VCD/CD/MP3 disc playing, press the 4/RDM button on the front panel to play in random or select DISC REP. (depend on the disc used for VCD).
 - b. In the DVD disc playing, the 4/RDM button is not available.

BASIC OPERATION

12. AS/PS BUTTON

When shortly pressing the APS button on the front panel or the A/P button on the remote controller, the radio searches for each preset station. When the field strength level is more than the threshold level of stop level, the radio is holding at that preset number for few seconds with releasing mute, and then searches again. In FM band, FM 1, FM 2 and FM 3 is checked one at a time. When long pressing the APS or A/P button (more than 1 second), the radio searches from the current frequency and checks the signal strength level until 1 cycle search is finished. And then 6 strongest stations are preset to the corresponding preset number. The AS operation is implemented in the each band of selected band. When the AS operation is finished, the radio executes the preset scan.

13. MU BUTTON

Press it to mute down sound. Press it again to release this mode and recover previous volume level.

14. CLK BUTTON

Press it to change the display to clock display. Press it again to return to previous display. In clock display, press and hold for about 2 seconds until the hour display flashes. Press ►► / ◀◀ button to adjust hours, press CLK button to flash minute than press ►► / ◀◀ button to adjust minutes.

15. PWR BUTTON



Press it to turn on the unit. Press it again to turn off.

16. ►| BUTTON

Pressing ►| during playback will stop play temporary. Return to normal playback, press ►| once again.

17. ►► / ◀◀ BUTTONS

  A. When long Pressing the ►► / ◀◀ button (more than 2 seconds) during play. The speed of rapid forward/reverse changes according to the disc as follow.

DVD:  VCD/CD: 

MP3: 

B. Shortly press the ►► / ◀◀ button during playback to skip to next track or back one track.

Note: For some VCD 2.0 discs (PBC-playback control), ►► and ◀◀ buttons may be unavailable.

C. Press UP or DN button on the remote controller or ►► / ◀◀ on the front panel to manually tune up or down for your desired station. Press them hold for more than 2 seconds to automatically tune up or down for the stronger station.

BASIC OPERATION

18.MOD BUTTON

Press it repeatedly select DISC ,AUX IN , RADIO mode.

19.EJECT BUTTON

Press the eject button to eject the disc from the disc slot.

20.FLASHING LED

If the front panel is not on the main unit, LED will be flashing.

21.RESET BUTTON

RESET button is placed on the housing and must be activated with either a ballpoint pen or thin metal object. The RESET button is to be activated for the following reasons:

- A.Initial installation of the unit when all wiring is completed.
- B.All the function buttons do not operate.
- C.Error symbol on the display.

Note:If press RESET button , the unit can't work yet, please use a cotton swab soaked in isopropyl alcohol to clean the socket on the back of the front panel.


22.THE CHANGE-OVER SWITCH OF FREQUENCY(OPTION)

Slide it you can select the USA or EUROPE radio frequency .

Mp3 DISC PLAY

1.MP3 disc is playing as the format of FOLDER by FOLDER.

For example:

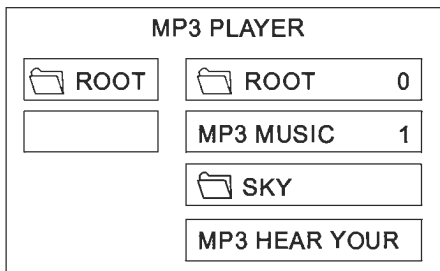

Use ▲/▼/▶/◀ to select the item or folder, then press ENTER button.

Pressing REPEAT button repeatedly can select three kinds of repeat play mode.

2.REP-ONE:

Play the same song over and over again.

3.FOLDER REPEAT:

Play all songs in the current directory in sequence, over and over again.

4.DISC REPEAT:

Play all songs in the disc over and over again.

In the playback, use ◀◀ or ▶▶ to skip an item ahead or back.

When long pressing the ▶▶ / ◀◀ to fast rapid forward/reverse.

Note: The FOLDER cannot be selected during playing. It can be selected after ■ (Stop) button pressed.

BASIC OPERATION

ON-SCREEN DISPLAY FUNCTION

Press the OSD button during playback to display the contents of the current disc on the screen.

A.Example for DVD:

a.Press OSD for the first time:

```
TITLE 01/03 CHAPTER002/025 P: 00:00:25  
TITLE ELAPSED
```

Title Number, Total Title Number, Chapter Number, Total Chapter Number of this Title of the disc currently being played will be shown on the screen, along with the elapsed time.

b.Press OSD for the second time:

```
TITLE 01/03 CHAPTER002/025 P: 00:00:25  
TITLE REMAIN
```

c.Press OSD for the third time:

```
TITLE 01/03 CHAPTER002/025 P: 00:00:25  
CHAPTER ELAPSED
```

d.Press OSD for the fourth time:

```
TITLE 01/03 CHAPTER002/025 P: 00:00:25  
CHAPTER REMAIN
```

e.Press OSD for the fifth time:
The message on the screen will be cleared.

B.Example for VCD/SVCD/CD:

a.Press OSD for the first time:

```
T:01/18 P: 00:00:25 LR DISC  
SINGLE ELAPSED
```

b.Press OSD for the second time:

```
T:01/18 P: 00:00:25 LR DISC  
SINGLE REMAIN
```

c.Press OSD for the third time:

```
T:01/18 P: 00:00:25 LR DISC  
TOTALELAPSED
```

d.Press OSD for the fourth time:

```
T:01/18 P: 00:00:25 LR DISC  
TOTALREMAIN
```

e.Press OSD for the fifth time:
The message on the screen will be cleared for SVCD and VCD.

NOTE:For CD and Mp3, the message will always display on the screen.

C.Example for MP3:

Each time OSD is pressed, the message displayed on screen changes as follows:


```
SINGLE ELAPSED → SINGLE REMAIN  
←
```

BASIC OPERATION

MULTI-AUDIO LANGUAGE FUNCTION

A.DVD:Press AUDIO during playback.

Each time the button is pressed, number of the audio soundtrack language changes on sequential order.

NOTES:The language number is different according to the disc.Some disc only contain one language soundtrack.When no different language soundtrack are recorded  will be display at screen left top corner.

 
B.VCD:Press AUDIO during playback.

It is possible to switch the sound between monaural and stereo sound.



C.CD:Press AUDIO during playback.

It is possible to switch the sound between monaural and stereo sound



TITLE MENU FUNCTION

A.DVD:If the DVD has multiple titles recorded on the disc. It can select preferred title from the title menu to start playback.

a.Press TITLE during playback.

The title menu is display.


b.Press the cursor button shown in TV screen, select preferred title by the cursor button and confirmed by ENTER key.

B.VCD:Press MENU button while the disc is playing, you can switch between "PBC on" and "PBC off" mode.

MULTI-SUBTITLE LANGUAGE FUNCTION (For DVD only)


Press SUBTITLE during playback.

Each time the button is pressed, number of the subtitle language changes in sequential order.

Notes:The language number is different according to the disc.Some discs only contain one subtitle language.When no different subtitle language are recorded,  will be displayed at screen left top corner.

MULTI-ANGLE FUNCTION(For DVD only)


Press ANGLE during playback.Each time the button is pressed, number of the angle changes in sequential order.

Notes:The angle number is different according to the disc.The function only work for disc having scenes recorded at different angles.When no different angle are recorded,  will be displayed at screen left top corner.

SETUP

INITIAL SETUP

--- MAIN PAGE---

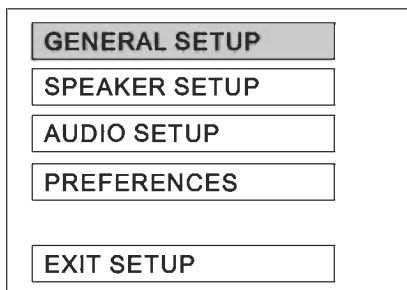

1. Press SETUP in the stop mode. (Press the stop button twice to ensure the player under STOP mode.)
2. The initial SETUP menu is displayed.
3. Select the preferred item by using the ▲ / ▼ buttons.

4. Press ENTER buttons.

A. GENERAL SETUP

This setup page includes all the item of TV display & audio output feature. The detail please refer to GENERAL SETUP MENU.

B. SPEAKER SETUP

This is to activate the audio output from DOLBY AC3 5.1 DOWNMIX to 2 channel mode. Please refer to SPEAKER SETUP MENU.

C. AUDIO SETUP


This setup page includes all the items for AUDIO. Please refer to AUDIO SETUP MENU.

D. PREFERENCE SETUP

This setup page includes all the configuration of support feature. The detail please refer to PREFERENCES SETUP MENU.

GENERAL SETUP

--- GENERAL PAGE ---

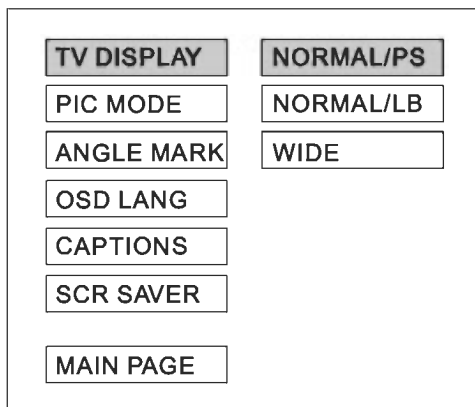

Video Material	TV Screen			
	Normal	Pan Scan	Letter-box	Wide(16:9)
4:3				

1. TV DISPLAY SETUP

This is to select the appropriate TV aspect (4:3 or 16:9) according to the connected TV set.

Normal/PS (For 4:3 TV)

Played back in the PAN & SCAN style. (If connected to wide-screen TV, the left and right edges are cutoff.)

Normal/LB (For 4:3 TV)

Played back in letterbox style. (If connected to wide-screen TV, black bands appear at top and bottom of the screen.)

Wide (For 16:9 TV)

Select when a wide-screen TV set is connected.

SETUP

--- GENERAL PAGE ---

TV DISPLAY	
PIC MODE	AUTO
ANGLE MARK	HI-RES
OSD LANG	N-FLICKER
CAPTIONS	
SCR SAVER	
MAIN PAGE	

2. PIC MODE SETUP

Select AUTO, the player PIC mode will depend on DVD disc.

Select HI-RES format for best image resolution.

Select N-FLICKER format on format on image or picture under noise affect.

--- GENERAL PAGE ---

TV DISPLAY	
PIC MODE	
ANGLE MARK	
OSD LANG	ENGLISH
CAPTIONS	
SCR SAVER	
MAIN PAGE	


4. OSD LANG TYPE SETUP

Select the preferred OSD language by using the ▲ / ▼ buttons.

--- GENERAL PAGE ---

TV DISPLAY	
PIC MODE	
ANGLE MARK	ON
OSD LANG	OFF
CAPTIONS	
SCR SAVER	
MAIN PAGE	

3. ANGLE MARK DISPLAY SETUP

If it is set to ON, when the multi-angle DVD disc is playing,  (the angle mark) will appears on the screen; if is set to OFF, the mark will not appear.

--- GENERAL PAGE ---

TV DISPLAY	
PIC MODE	
ANGLE MARK	
OSD LANG	
CAPTIONS	ON
SCR SAVER	OFF
MAIN PAGE	

5. CAPTIONS SETUP

Activate the CAPTIONS feature by selecting ON. And release this feature by selecting OFF.

SETUP

--- GENERALPAGE ---

TV DISPLAY	
PIC MODE	
ANGLE MARK	
OSD LANG	
CAPTIONS	
SCR SAVER	ON
	OFF
MAIN PAGE	

6.SCR SAVER SETUP

Select the SCRSAVER output ON/OFF.

SPEAKER SETUP

--- SPEAKER SETUP PAGE ---

DOWNMIX	LT/RT
	STEREO
MAIN PAGE	

This is to activate the audio output from DOLBY AC3 5.1 DOWNMIX to 2 channel mode. Select the preferred SPEAKER connection by using the cursor buttons. Select the LT/RT to activate the Dolby surround compatible output. Select the STEREO to activate simple stereo mode.

AUDIO SETUP

--- AUDIO SETUP ---

AUDIO OUT	ANALOG
OP MODE	SPDIF/RAW
LPCM OUTPUT	SPDIF/PCM
DYNAMIC	
MAIN PAGE	

1.AUDIO OUT

This is to activate the audio output from ANALOG mode to SPDIF/RAW mode to SPDIF/PCM mode.

--- AUDIO SETUP ---

AUDIO OUT	
OP MODE	LINE OUT
LPCM OUTPUT	RF REMOD
DYNAMIC	
MAIN PAGE	

2.OP MODE

There are two operating modes for the Dolby Digital decoder: LINE OUT and Therefore REMOD.

SETUP

--- AUDIO SETUP ---

AUDIO OUT	
OP MODE	
LPCM OUTPUT	LPCM 48K
DYNAMIC	LPCM 96K
MAIN PAGE	

3. LPCM OUTPUT

Select the LPCM OUTPUT between LPCM 48K and LPCM 96K.

--- AUDIO SETUP ---

AUDIO OUT	
OP MODE	
LPCM OUTPUT	
DYNAMIC	
MAIN PAGE	

FULL
6/8
4/8
2/8
OFF

4. DYNAMIC RANGE CONTROL

Select DRC and adjust the dynamic range of a Doby Digital encoded program. There are 8 steps between full compression and off compression.

PREFERENCES SETUP

--- PREFERENCES PAGE ---

TV TYPE	MULTI
AUDIO	NTSC
SUBTITLE	PAL
DISC MENU	
PARENTAL	
PASSWORD	
DEFAULTS	
SMART NAV	
MAIN PAGE	

1. TV TYPE SETUP

This player can play discs recorded in either PAL or NTSC format. Select NTSC format, when you connected to NTSC TV. Select PAL format, when you connected to PAL TV. Select AUTO format, the player TV output format will according to the DVD disc format..

--- PREFERENCES PAGE ---

TV TYPE	
AUDIO	ENGLISH
SUBTITLE	FRENCH
DISC MENU	SPANISH
PARENTAL	CHINESE
PASSWORD	JAPANESE
DEFAULTS	
SMART NAV	
MAIN PAGE	

2. AUDIO LANGUAGE SETUP

Select the preferred AUDIO sound-track by using the cursor buttons.

SETUP

--- PREFERENCES PAGE ---

TV TYPE	
AUDIO	
SUBTITLE	ENGLISH
DISC MENU	FRENCH
PARENTAL	SPANISH
PASSWORD	CHINESE
DEFAULTS	JAPANESE
SMART NAV	OFF
MAIN PAGE	

3.SUBTITLE LANGUAGE SETUP

Select the preferred SUBTITLE language by using the cursor buttons.

--- PREFERENCES PAGE ---

TV TYPE	
AUDIO	
SUBTITLE	
DISC MENU	ENGLISH
PARENTAL	FRENCH
PASSWORD	SPANISH
DEFAULTS	CHINESE
SMART NAV	JAPANESE
MAIN PAGE	

4.DISC MENU LANGUAGE SETUP

Select the preferred DISC MENU language by using the cursor buttons.

--- PREFERENCES PAGE ---

TV TYPE	1G
AUDIO	2
SUBTITLE	3PG
DISC MENU	4PG13
PARENTAL	5
PASSWORD	6PG-R
DEFAULTS	7NC-17
SMART NAV	8 ADULT
MAIN PAGE	NO PARENTAL

5.PARENTAL

Select suitable parental guidance by the cursor buttons and conformed by pressing ENTER button.

--- PREFERENCES PAGE ---

TV TYPE	
AUDIO	
SUBTITLE	
DISC MENU	
PARENTAL	
PASSWORD	CHANGE
DEFAULTS	
SMART NAV	
MAIN PAGE	

6.PASSWORD

Select the change and press ENTER button. Type the old password (The initial factory code is **3308**) and key in 4 characters password now you want to use, and retype again to confirm key in correctly.

SETUP

--- PREFERENCES PAGE ---

TV TYPE
AUDIO
SUBTITLE
DISC MENU
PARENTAL
PASSWORD
DEFAULTS
SMART NAV
MAIN PAGE

RESET

7. DEFAULTS

Select reset to become factory initial setting.

--- PREFERENCES PAGE ---

TV TYPE
AUDIO
SUBTITLE
DISC MENU
PARENTAL
PASSWORD
DEFAULTS
SMART NAV
MAIN PAGE

NO MENU
WITH MENU

8. SMART NAV

In this item, you can select NO MENU mode or WITH MENU mode.

DEFAULTS TABLE

GENERAL SETUP	TV DISPLAY	NORMAL/PS
	PIC MODE	AUTO
	ANGLE MARK	ON
	OSD LANGUAGE	ENGLISH
	CAPTIONS	OFF
	SCR SAVER	OFF
SPEAKER SETUP	DOWNMIX	STEREO
AUDIO SETUP	AUDIO OUT	ANALOG
	OP MODE	LINE OUT
	DYNAMIC	
	LPCM OUT	LPCM 96K
PREFERENCES	TV TYPE	AUTO
	AUDIO	ENGLISH
	SUBTITLE	ENGLISH
	DISC MENU	ENGLISH
	PARENTAL	NO PARENTAL
	PASSWORD	3308
	MP3 PLAY	WITH MENU

SPECIFICATION

SUPPLY VOLTAGE: 12V DC (11V-15V)
CURRENT CONSUMPTION: Less than 10 A
SIGNAL SYSTEM: Compositive video 1.0Vp-p 75Ω
DISCS PLAYED: (1)DVD-VIDEO Disc
 5"(12 cm) single-sided, single-layer
 5"(12 cm) single-sided, double-layer
 (2)Compact Disc (CD-DA, VIDEO CD)
 5"(12cm) disc
AUDIO SIGNAL OUTPUT: 2ch&4ch line out
CHARACTERISTICS: (1)Frequency Response 20 Hz - 20 KHz
 (2)S/N Ratio 90 dB (JIS)
 (3)Wow and Flutter Below measurable limits

	For 3 Bands (Europe) FM	For 2 Bands (Europe) FM	For 2 Bands (U.S.A.) FM
FREQUENCY COVERAGE:	87.5 to 108 MHz	87.5 to 108 MHz	87.5 to 107.9 MHz
IF:	10.7 MHz	10.7 MHz	10.7 MHz
SENSITIVITY (S/N = 30 dB):	15 dBu	15 dBu	15 dBu

	MW	MW	AM
FREQUENCY COVERAGE:	522 to 1620 KHz	522 to 1620 KHz	530 to 1710 KHz
IF:	450 KHz	450 KHz	450 KHz
SENSITIVITY (S/N = 20 dB):	40 dBu	40 dBu	40 dBu

	LW
FREQUENCY COVERAGE:	144 to 290 KHz
IF:	450 KHz
SENSITIVITY (S/N = 20 dB):	45 dBu

NOTE: Specifications and design are subject to modification, without notice, due to improvements in technology.

TROUBLE SHOOTING

Before going through the check list, check wiring connection. If any of the problems persist after check list has been made, consult your nearest service dealer.

SYMPTOM	CAUSE	SOLUTION
NO POWER	The car ignition switch is not on	If the power supply is properly connected to the car accessory terminal, switch the ignition key to "ACC"
	The fuse is blown	Replace the fuse
DISC CANNOT BE LOADED OR EJECTED	Presence of disc inside the player.	Remove the disc in the player, then put a new one
	Inserting the disc in reverse direction	Insert the compact disc with the label facing upward
	The disc is extremely dirty or defective	Clean the disc or try to play a new one
	Temperature inside the car is too high	Cool off or until the ambient temperature return to normal
	Condensation	Leave the player off for an hour then try again
NO SOUND	Volume is in minimum	Adjust volume to a desired level
	Wiring is not properly connected	Check wiring connection
SOUND SKIPS	The installation angle is more than 30 degrees	Adjust the installation angle less than 30 degrees
	The disc is extremely dirty or defective disc	Clean the compact disc, then try to play a new one
THE OPERATION KEYS DO NOT WORK	The built-in microcomputer is not operating properly due to noise	Press the RESET button. Front panel is not properly fixed into its place
THE RADIO DOES NOT WORK	The antenna cable is not connected	Insert the antenna cable firmly
	The signals are too weak	Select a station manually

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>