




REGISTERING FINGERPRINTS MODEL QSB180

1.1 TO REGISTER FINGERPRINTS FOLLOW THESE STEPS:

1. HOLD DOWN NUMBER 2 BUTTON FOR ABOUT 3 SECONDS.
2. WHEN YOU HEAR A SHORT BEEP, PLEASE ENTER THE FOLLOWING NUMBERS 1,3,2,1,3,2,1,3,2,1 (ENTER ALL THE DIGITS AS GIVEN).
3. WHEN YOU HEAR A BEEP, PUT YOUR CHOSEN FINGER ON THE SENSOR AND DO NOT REMOVE IT UNTIL INDICATED. (AS SHOWN ON DIAGRAM A.1). WE RECOMMEND TO USE THE THUMB FINGER.
4. WHEN YOU HEAR 2 BEEPS, INDICATES THAT YOUR FINGERPRINT HAS BEEN ACCEPTED.
5. NOW IT IS SAFE TO REMOVE FINGER.

A.1

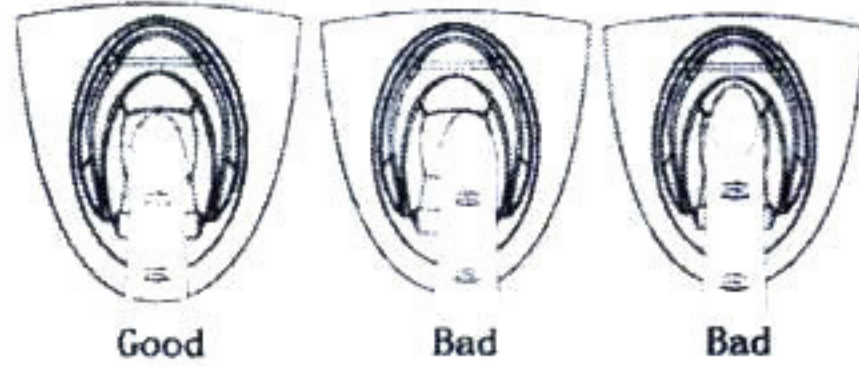

Put the finger center on the center of the scanner window.

1.2 TO OPEN THE LOCK PLEASE DO THE FOLLOWING:

1. ENTER THE NUMBERS 0 TO ACTIVATE LOCK, (or 0,1,2,3 for some older model)
2. AFTER YOU HEAR A BEEP PLACE THE NEW REGISTERED FINGERPRINT ON SENSOR
3. IF SUCCESSFUL, YOU WILL HEAR THE LOCK MECHANISM AND ONE BEEP.
4. YOU WILL ALSO SEE A GREEN LIGHT.
5. NOW IT IS SAFE TO ROTATE THE HANDLE TO OPEN THE DOOR.
6. AFTER 5 SECONDS LATER THE DOOR WILL BE LOCKED AUTOMATICALLY.

B.1



Raise the finger then leave scanning window after fingerprint scanning. Don't drag the finger on the surface of the scanning window.


WARNING!!

IF THERE ARE 2 BEEPS AND RED LIGHT, THE FINGERPRINT WAS REJECTED. THIS MEANS THE FINGER WAS POSITIONED AND/OR PRESSED IN A WAY THAT DID NOT MATCH THE REGISTRATION. TRY AGAIN!

1.3 TO CHANGE THE ACTIVATION CODE ENTER THE FOLLOWING:

1. HOLD DOWN NUMBER 3 BUTTON FOR ABOUT 8 SECONDS.
2. WHEN YOU HEAR A SHORT BEEP, ENTER THE DEFAULT ACTIVATION CODE (0,1,2,3) ALL 4 DIGITS
3. WHEN YOUR HEAR A BEEP, ENTER THE NEW WAKE UP CODE 2 TIMES. FOR EXAMPLE ENTER 0,2,2,2 AND AGAIN 0,2,2,2.
4. PLEASE BE ADVISE THAT THE FIRST NUMBER OF THE ACTIVATION CODE MUST BE "0"
5. AFTER YOU HAVE ENTERED THE NEW ACTIVATION CODE 2 TIMES YOU WILL HEAR ONE LAST BEEP WHICH INDICATES THAT YOU HAVE SUCCESSFULLY CHANGED THE ACTIVATION CODE.
6. NOW YOU MAY ENTER THE NEW ACTIVATION CODE FOLLOWED BY THE NEW REGISTERED FINGERPRINT.

C.1

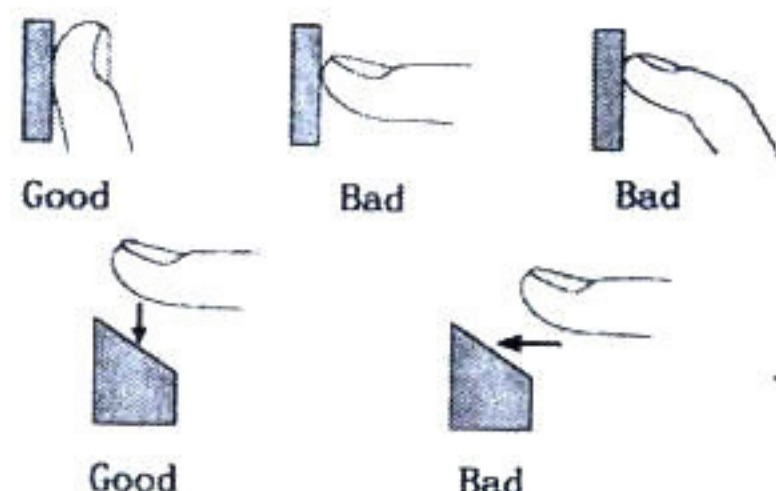

Place finger flat on the window.

Don't put finger on the edge, and then move to the center.

If you have any question do not hesitate to call technical support at the following number: 877-998-3440 please email us with your comment at: Ts@dpsi-usa.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>