


Quasar®

VHS

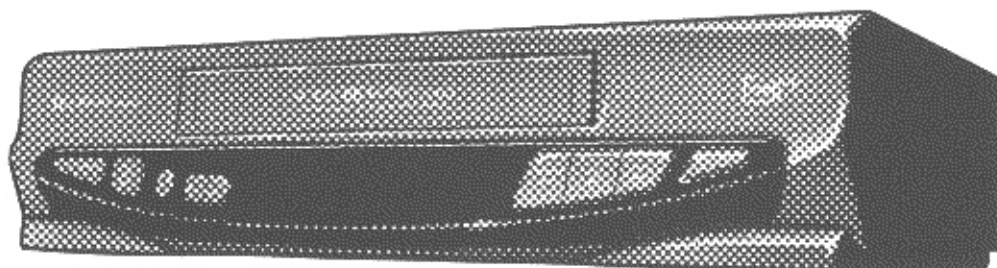

Video Cassette Recorder MODEL VHQ820

OWNER'S MANUAL

Please read these instructions carefully before attempting to connect, operate or adjust this product. Please save this manual.

Spanish Quick Use Guide is included. (Guía para rápida consulta en español está incluido.)

Quick Use Guide is on the back cover.

P6 ~ P9
Connections

P10 ~ P14
Getting Started

P15 ~ P19
Basic Operation

P20 ~ P26
More You Can Do

P27 ~ Back Cover
Other Information

Things You Should Know

Congratulations

on your purchase of one of the most sophisticated and reliable products on the market today. Used properly, it will bring you and your family years of enjoyment. Please fill in the information at right. The serial number is on the tag located on the back of your VCR.

Date of Purchase _____
Dealer Purchased From _____
Dealer Address _____
Dealer Phone No. _____
Model No. **VHQ820** _____
Serial No. _____

Safety Precautions

Warning: To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

This video recorder, equipped with the HQ (High Quality) System, is compatible with existing VHS equipment. Only use those tapes with the **VHS** mark. It is recommended that only cassette tapes that have been tested and inspected for use in 2, 4, 6, and 8 hour VCR machines be used.

FCC Warning: Any unauthorized changes or modifications to this equipment would void the user's authority to operate.



This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.



This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

Table of Contents

| | |
|--|---|
| Important Safeguards and Precautions | 3 |
| Unpacking Your VCR • Product Features | 4 |
| VCR and Cassette Information (Record Tab, Tape Speeds, Head Cleaning, DST, Specifications) | 5 |

Connections

| | |
|--|------|
| Basic Connection (Antenna and VCR, VCR and TV) | 6, 7 |
| Other Connections (CABLE, Audio/Video) | 8, 9 |

Getting Started

| | |
|---|--------|
| Location of Controls (Remote Control, VCR) | 10, 11 |
| One Time VCR Setup (On-Screen Language, Channel Memory, Clock Set) | 12, 13 |
| On-Screen Displays (OSD) (Function, Channel, Menu, VCR Status & Clock, Warning) | 14 |

Basic Operation

| | |
|---|--------|
| Playback a Tape (Main Operation, Special Effects, Quality Picture Features) | 15 |
| Record On a Tape (Main Operation, One Touch Record, Select Input Mode, Channel Selection) | 16, 17 |
| Timer Recording (Main Operation, Cancel, Clear or Replace Program Contents) | 18, 19 |

More You Can Do

| | |
|--|---------|
| Tape Operation (Index Search, Auto Functions, Repeat Play, One Minute Skip, Zero Search) | 20 ~ 22 |
| Copying Your Tapes (Dubbing) (Connection, Main Operation, Monitoring) | 23 |
| Multi-Brand Control Feature | 24, 25 |
| Special VCR Features (VCR Lock, Warning Beeper, Blue Back ON/OFF) | 26 |

Other Information

| | |
|--|------------|
| Before Requesting Service (Self-check items) | 27 |
| Service Center List | 28 |
| Warranty | 29 |
| Spanish Quick Use Guide | 30, 31 |
| Quick Use Guide | Back Cover |



Important Safeguards and Precautions

FOR YOUR SAFETY, READ AND RETAIN ALL SAFETY AND OPERATING INSTRUCTIONS. HEED ALL WARNINGS IN THE MANUAL AND ON THE UNIT

INSTALLATION

1 POWER SOURCE CAUTION

Operate only from a power source indicated on the unit or in this manual. If necessary, have your Electric Utility Service Company or Video Products Dealer verify the power source in your home.

2 POLARIZED OR GROUNDING PLUG

As a safety feature, this Video product comes with either a polarized power cord plug (one blade is wider than the other), or a three-wire grounding type plug.

POLARIZED PLUG CAUTION:

This plug will only fit into an outlet one way. If you cannot fully insert the plug, try reversing it. If it still will not fit, have an electrician install the proper wall outlet. Do not defeat the safety feature by tampering with the plug.

GROUNDING PLUG CAUTION:

This plug will only fit into a three-hole grounding outlet. If necessary, have an electrician install the proper outlet. Do not defeat the safety feature by tampering with the plug.

3 POWER CORD

Make sure power cords are routed so that they are not likely to have anything rest on them, roll over them, or be in the way of walking traffic.

If an extension cord is used, make sure it also has either a polarized or grounded plug and that the cords can be securely connected.

Frayed cords, damaged plugs, and damaged or cracked wire insulation are hazardous and should be replaced by a qualified service technician.

Overloaded outlets and extension cords are fire hazards and should be avoided.

4 DO NOT BLOCK VENTILATION HOLES

Ventilation openings in the cabinet release heat generated during operation. If they are blocked, heat build-up inside the unit can cause failures that may result in a fire hazard or heat damage to cassettes.

For protection, follow these rules:

- Never cover ventilation slots or the unit while in use, or operate the unit when placed on a bed, sofa, rug, or other soft surface.
- Avoid built-in installation, such as a book case or rack, unless proper ventilation is provided.

5 AVOID EXTREMELY HOT LOCATIONS OR SUDDEN TEMPERATURE CHANGES

Do not place the unit over or near any kind of heater or regulator, in direct sunlight, inside a closed vehicle, etc..

Do not move the unit suddenly between areas of extreme temperature variation. If the unit is suddenly moved from a cold place to a warm place, moisture may condense in the unit and on the tape.

6 TO AVOID PERSONAL INJURY

- Do not place unsecured equipment on a sloping surface.
- Do not place this unit on any support that is not firm, level, and adequately strong. The unit could fall causing serious injury to a child or adult and damage to the unit.
- An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- Carefully follow all operating instructions and use the manufacturer's recommended accessories when operating this unit or connecting it to any other equipment.




OUTDOOR ANTENNA INSTALLATION

1 SAFE ANTENNA AND CABLE CONNECTION

If an outside antenna or cable system is connected to the equipment, be sure the antenna or cable system is grounded so as to provide some protection against built up static charges and voltage surges.

Section 810 of the National Electrical Code, ANSI/NFPA 70 (In Canada, part 1 of the Canadian Electrical Code) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode.

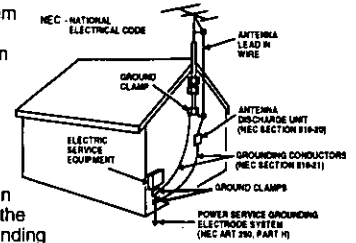

2 KEEP ANTENNA CLEAR OF HIGH VOLTAGE POWER LINES OR CIRCUITS

An outside antenna system should be located well away from power lines, electric light or power circuits and where it will never come into contact with these power sources if it should happen to fall. When installing an outside antenna, extreme care should be taken to avoid touching power lines, circuits or other power sources as this could be fatal. Because of the hazards involved, antenna installation should be left to a professional.

USING THE VIDEO UNIT

If the unit has been in storage or moved to a new location, refer first to the INSTALLATION section of these safeguards.

1 KEEP THIS VIDEO UNIT AWAY FROM WATER OR MOISTURE OF ANY KIND.

2 IF EQUIPMENT IS EXPOSED TO RAIN, MOISTURE, OR STRONG IMPACT, unplug the unit and have it inspected by a qualified service technician before use.

3 DURING AN ELECTRICAL STORM

During a lightning storm, whether indoors or outdoors, or before leaving the unit unused for extended periods of time, disconnect all equipment from the power source as well as the antenna and cable system.

4 WHEN THE UNIT IS PLUGGED IN

- Never expose the unit to rain or water. DO NOT OPERATE if liquid has been spilled into the unit. Immediately unplug the unit, and have it inspected by a service technician. Fire and shock hazards can result from electrical shorts caused by liquid contact inside.
- Never drop or push any object through openings in the unit. Some internal parts carry hazardous voltages and contact can cause electric shock or fire hazard.
- Avoid placing the unit directly above or below your TV set as this may cause electrical interference. Keep all magnets away from electronic equipment.

5 USING ACCESSORIES

Use only accessories recommended by the manufacturer to avoid risk of fire, shock, or other hazards.

6 CLEANING THE UNIT

Unplug the unit. Then, use a clean, dry, chemically untreated cloth to gently remove dust or debris. DO NOT USE cleaning fluids, aerosols, or forced air that could over-spray, or seep into the unit and cause electrical shock. Any substance such as wax, adhesive tape, etc. may mar the cabinet surface. Exposure to greasy, humid, or dusty areas may adversely affect internal parts.

SERVICE

1 DO NOT SERVICE THIS PRODUCT YOURSELF

If, after carefully following the detailed operating instructions, this Video product does not operate properly, do not attempt to open or remove covers, or make any adjustments not described in the manual. Unplug the unit and contact a qualified service technician.

2 IF REPLACEMENT PARTS ARE REQUIRED

Make sure the service technician uses only parts specified by the manufacturer, or those having the same safety characteristics as the original parts. The use of unauthorized substitutes may result in fire, electric shock, or other hazards.

3 HAVE THE SERVICE TECHNICIAN PERFORM A SAFETY CHECK


After any service or repairs to the unit, request the service technician to conduct a thorough safety check as described in the manufacturer's service literature to insure that the video unit is in safe operating condition.

Unpacking Your VCR • Product Features


Unpacking Your VCR

The accessories below are provided to help you use or set up your VCR.


Accessories

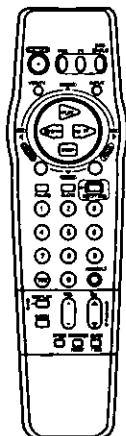

Remote Control
VSQS1562

 


2 "AA"
Batteries

 


RF Coaxial
Cable
VJAS0196

Loading the Batteries


1 Press in and up on the latch with your thumb nail and lift off the lid.

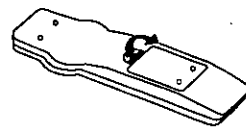

2 Install two batteries as indicated inside the Battery Compartment.

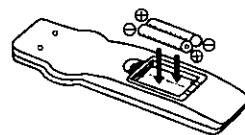

3 Fit the lid's hinge piece into the indent on the case, and snap the lid into place.

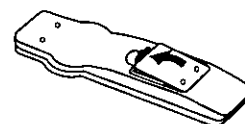


Battery replacement caution

- Do not mix old and new batteries.
- Do not mix alkaline with manganese batteries.

To order accessories,
call toll free 1-800-211-PANA (7262).

Product Features

| | |
|---|----------------|
| All Channel Auto Set/ 181-CH TV/ CABLE Tuner | 12, 13 |
| Auto Daylight Saving Time | 5 |
| Auto Features for a Quality Picture | 15 |
| Auto Operation Functions (Auto Playback, Rewind, Tape Eject, Power off) | 21 |
| Auto Repeat Function | 22 |
| Easy-to-Read English/ Spanish/ French On-Screen Displays | 12, 13, 18, 19 |
| Multi Brand TV/ Cable Box/ DSS Remote Control | 24, 25 |
| One Minute Skip | 22 |
| One Month, 8 Program Timer Recording | 18, 19 |
| One Touch Recording (OTR) | 16 |
| Program Director Remote Control | 18, 19 |
| Special Effects Playback | 15 |
| Special VCR Features (VCR Lock, Warning Beeper, Blue Back ON/OFF) | 26 |
| Timer Recording Using VCR Buttons | 19 |
| VHS Index Search System (Direct Access Search, Index Scan Search) | 20, 21 |
| Zero Search | 22 |

 

VCR and Cassette Information

Erase Protection (Record Tab)

Cassettes have a record tab to ensure that recordings are not accidentally erased.

To prevent accidental erasure, break off the tab with a screwdriver.



To record again, cover the hole with cellophane tape.



Maximum Record/Playback Time

Only use tapes with the **VHS** mark in this unit.

| Tape Speed Setting | Type of Video Cassette | | |
|--------------------------|------------------------|---------|-----------------------|
| | T60 | T120 | T160 |
| SP (Standard Play) | 1 Hour | 2 Hours | 2 Hours 40 Minutes |
| LP (Long Play) | 2 Hours | 4 Hours | 5 Hours 20 Minutes |
| SLP (Super Long Play) | 3 Hours | 6 Hours | 8 Hours |

Head Cleaning

Your VCR will not normally require head cleaning, however the heads may become clogged when playing an old or damaged tape.

Video Heads Sensor System

If head cleaning becomes necessary, the VCR will display the screen at right while playing back a recorded signal. To exit this screen, push PLAY on the remote control or VCR.

- Use "dry" type head cleaning cassette* only.
- Be sure to follow the cleaning tape instructions carefully. Excessive use of a cleaning cassette can shorten head life.
- If using a head cleaning cassette does not solve the problem, contact your nearest Factory Service Center or authorized Service Center. (See page 36.)

* Cleaning cassette part No. NV-TCL30PT is recommended.

VIDEO HEADS MAY
NEED CLEANING
PLEASE INSERT HEAD
CLEANING CASSETTE
OR REFER TO MANUAL

END:PLAY KEY

Reset all VCR Memory Functions

Use when moving the VCR to a new location, or if a mistake was made in the One Time VCR Setup section.

- Make sure a tape is not inserted in the VCR.
- 1) Turn VCR Power on.
 - 2) Press and hold both PLAY and CHANNEL ▲ on the VCR for more than 5 seconds.
 - The power will shut off.
 - 3) Perform the One Time VCR Setup section on page 12.

D.S.T. (Daylight Saving Time)

Your VCR can be set to automatically adjust the clock for Daylight Saving Time. (Page 13.)

Spring (First Sunday in April)

When set to DST:ON, the VCR will automatically set the clock ahead one hour.

Autumn (Last Sunday in October)

When set to DST:ON, the VCR will automatically set the clock back one hour.

- If your area does not observe Daylight Saving Time, select DST:OFF.
- Keep these time changes in mind when programming the VCR for timer recordings.

Specifications


| | |
|--------------------------------|--|
| Power Source: | 120V AC, 60 Hz |
| Power Consumption: | Approx. 18 watts (Power On) Approx. 3.2 watts (Power Off) |
| Video Signal: | EIA Standard NTSC color |
| Video Recording System: | 2 rotary heads helical scanning system |
| Audio Track: | 1 track (Normal) |
| Tuner: | |
| Broadcast Channels: | VHF 2-13, UHF 14-69 |
| CABLE Channels: | Midband A through I (14-22) Superband J through W (23-36) Hyperband AA-EEE (37-64) Lowband A-5-A-1 (95-99) Special CABLE channel 5A (01) Ultraband 65-94, 100-125 |
| Operating Temperature: | 41°F-104°F (5°C-40°C) |
| Operating Humidity: | 10%-75% |
| Weight: | 7.5 lbs. (3.4 kg) |
| Dimensions: | 14-15/16" (W) x 3-2/3" (H) x 12-3/16" (D) 380 (W) x 93 (H) x 310 (D) mm |

Note: Designs and specifications are subject to change without notice.




Basic Connection

ANTENNA

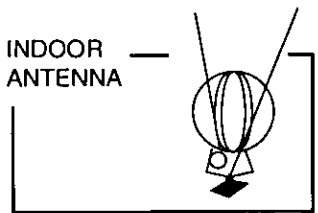


INDOOR ANTENNA

or

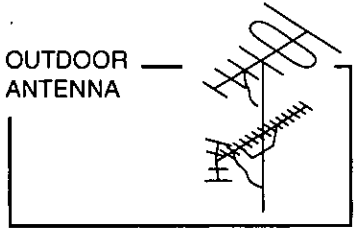

OUTDOOR ANTENNA


or

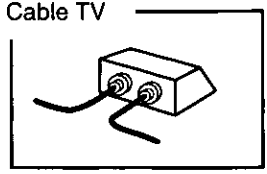

Cable TV


1 Disconnect the antenna or cable from your TV and connect it to the VCR (IN FROM ANT.)

VCR

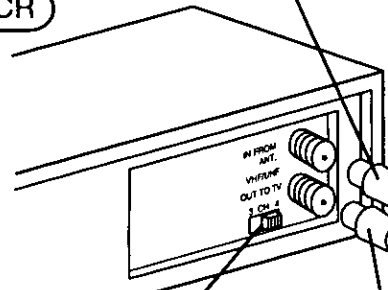

Antenna Cable

TV

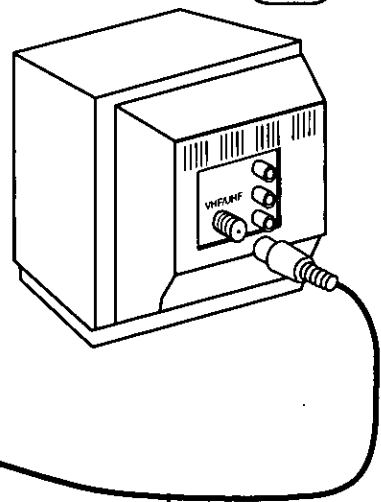

RF Coaxial Cable (VCR-TV Connection Cable) (supplied)


3 Set the Output Channel of your VCR to channel 3 or 4 (whichever is not being transmitted on by a Local TV broadcast).

2 Connect the VCR to your TV with the RF Coaxial Cable (OUT TO TV).


WARNING
When using "Nut type" RF coaxial cables, tighten with fingers only. Overtightening may damage terminals.

Between Antenna and VCR


Case 1: Twin Lead Cable Only

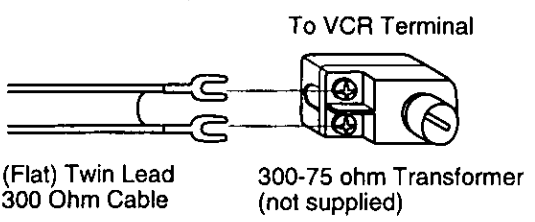

Case 2: Twin Lead & Coaxial Cables

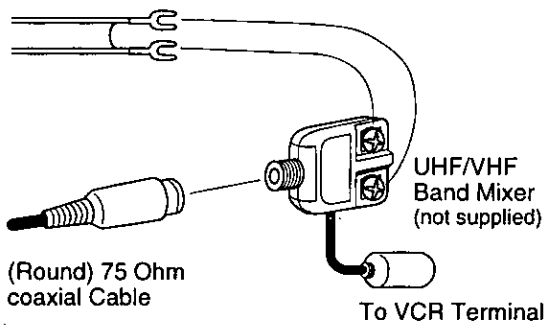


Case 3: Two Twin Lead Cables

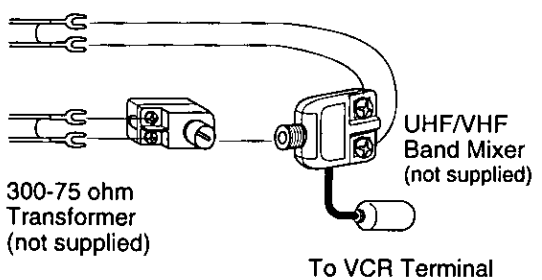


- If your TV has both post and plug-type VHF terminals, the post connection is recommended to minimize signal loss.

Between VCR and TV


Case 1: Screw & Plug Type Terminal

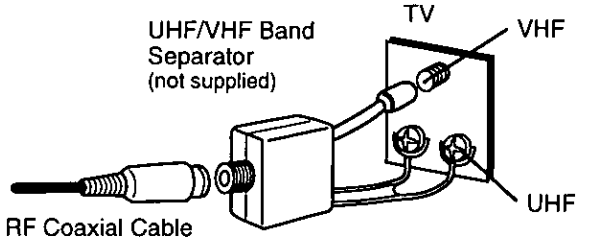

Case 2: Screw Type Terminal

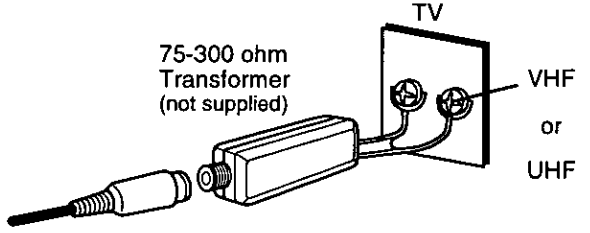


Case 3: Double Screw Type Terminal

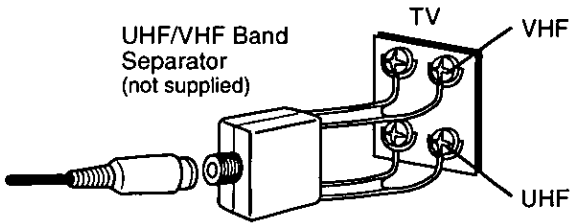

Case 4: Complex TV Terminal

TERMINALS ON BACK OF TV SET

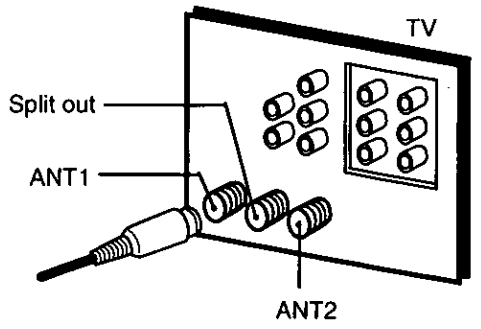

- Connect to one of the ANT terminals and select the same antenna number on the TV.



Other Connections

CABLE Connections

All connections on these pages are made with 75 Ohm coaxial cables.


Without a Converter/Descrambler Box

You can:

- 1) Use your VCR Remote Control to select channels.
- 2) Program one or more unscrambled channels for unattended recording.

You cannot:

record or view scrambled channels with this connection.

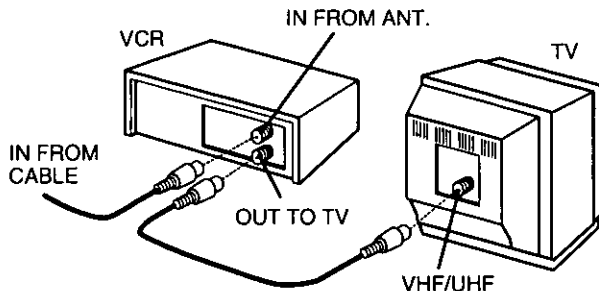

With a (CABLE to VCR) Converter/Descrambler Box

You can:


- 1) Record and view any channel including scrambled channels; channel selection must be made at the Cable TV Converter Box.
- 2) Program one channel for unattended recording.

You cannot:

select channels from VCR or TV.

watch one station while recording another.

place channels in memory (pg. 12) other than the Cable box output channel.

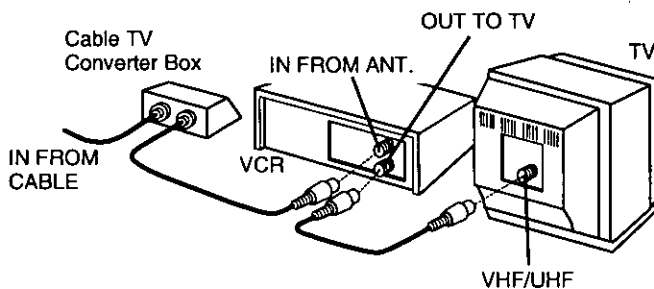


With a (VCR to TV) Converter/Descrambler Box

You can:

- 1) Use your VCR Remote Control to select channels.
- 2) Program unattended recordings of more than one unscrambled channel.

You cannot:


record scrambled channels with this connection.

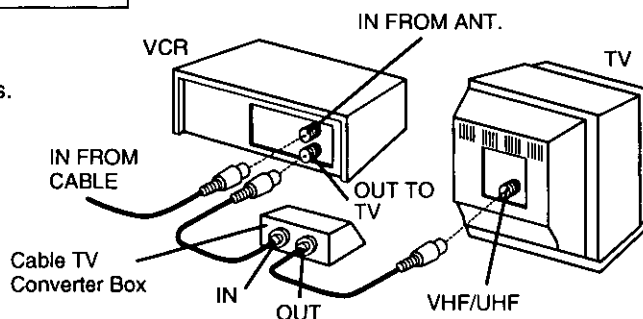

With Two Converter/Descrambler Boxes

If you want to record and view a combination of scrambled and unscrambled channels, you will need additional equipment. This connection requires two converter boxes, an A/B switch, and a 2-way splitter as shown here.


This connection requires two converter boxes, an A/B switch, and a 2-way splitter as shown here.

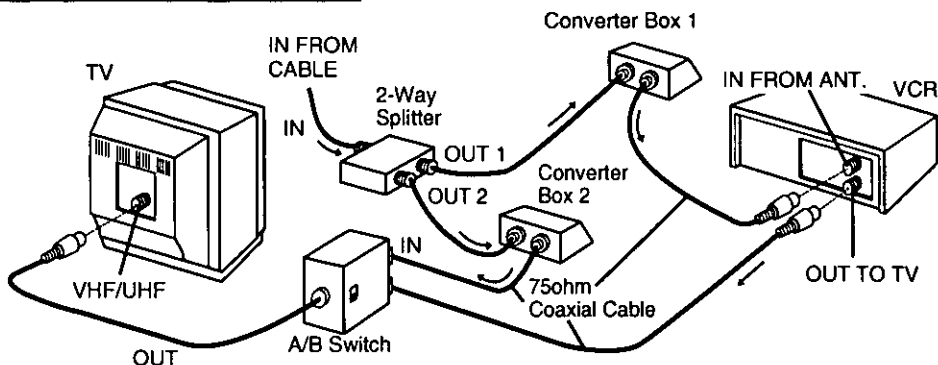

Audio/Video Connections

If your TV has AUDIO IN and VIDEO IN terminals, you can connect your VCR to them to receive a higher quality picture and sound. If your TV is not stereo, you can connect a stereo amplifier to the VCR to enjoy stereo sound.

Audio/Video Connections

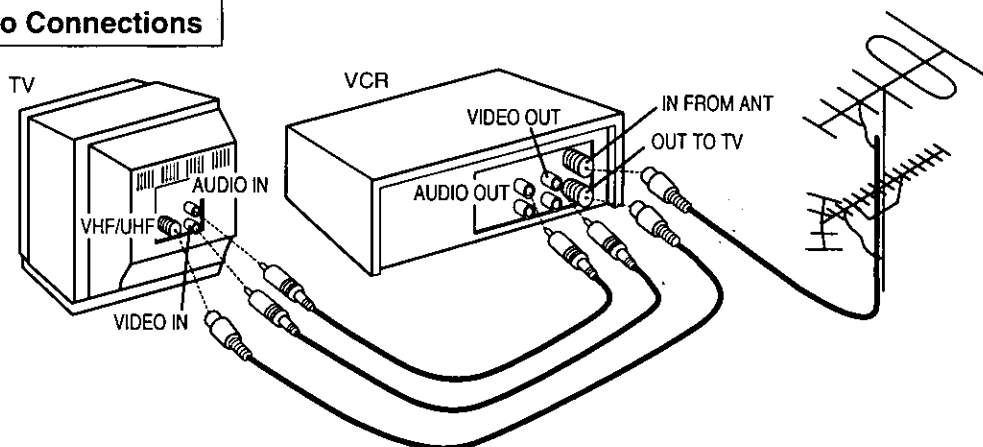


- 1** Connect the VIDEO OUT terminal on the VCR to the VIDEO IN terminal of your TV.
- 2** Connect the AUDIO OUT terminal on the VCR to the AUDIO IN terminal of your TV.
- 3** Set the VIDEO/TV selector of your TV (Monitor/Receiver) to "VIDEO."

NOTE: To use your TV as a VCR monitor, set the VIDEO/TV selector on the TV (Monitor/Receiver) to "VIDEO."


Note to CABLE system installer:

This reminder is provided to call the CABLE system installer's attention to Article 820-40 of the NEC in USA (and to the Canadian Electrical Code in Canada) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

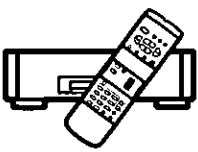


Location of Controls


Remote Control Buttons

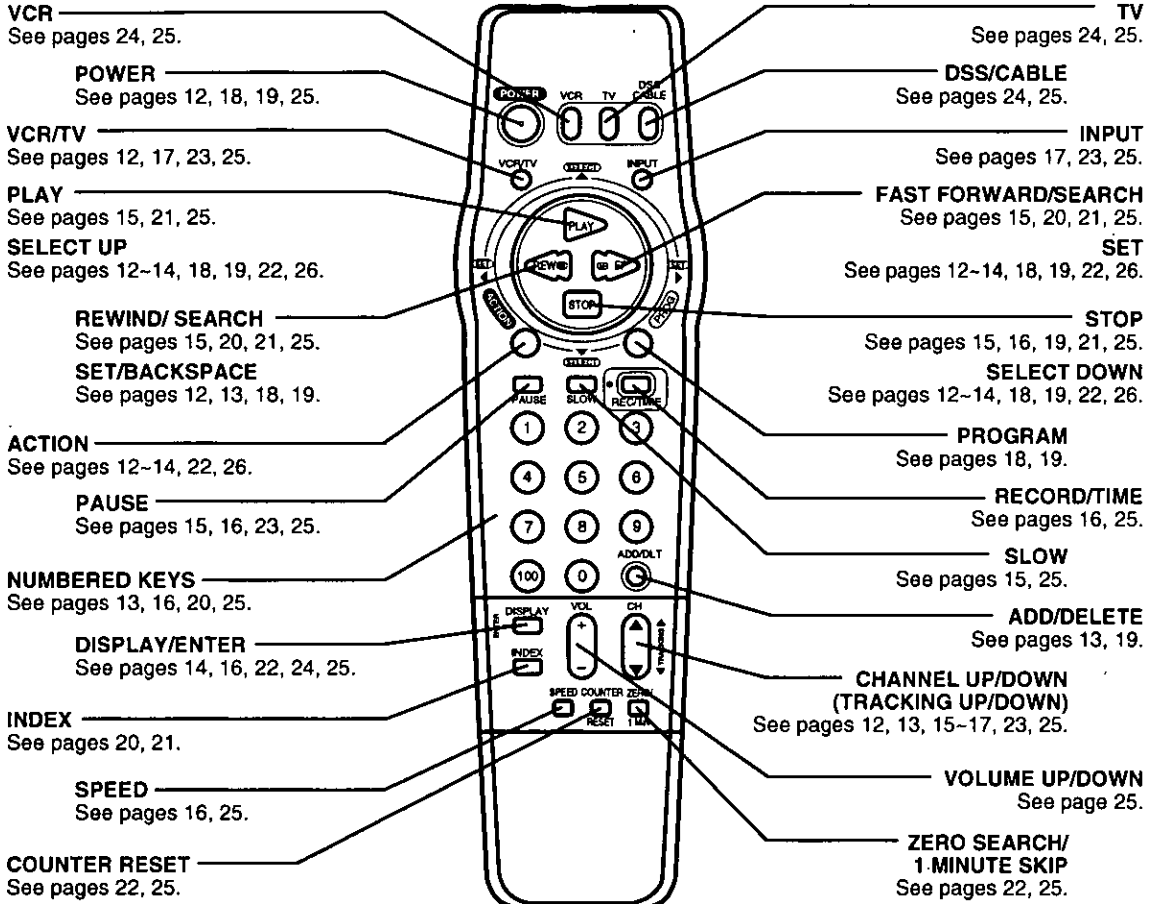


Front View of the VCR

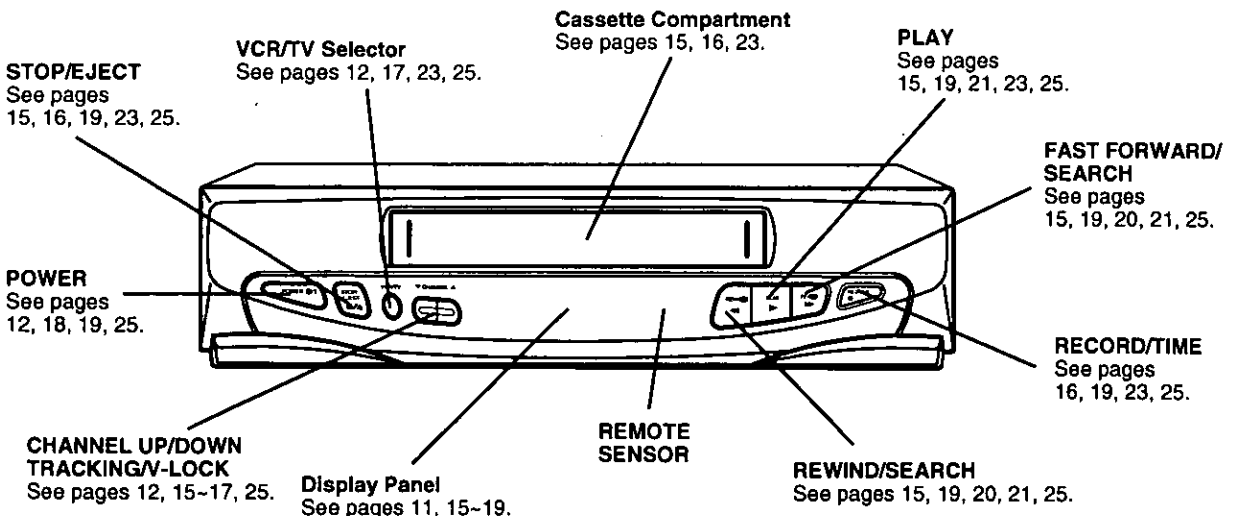

Display Panel

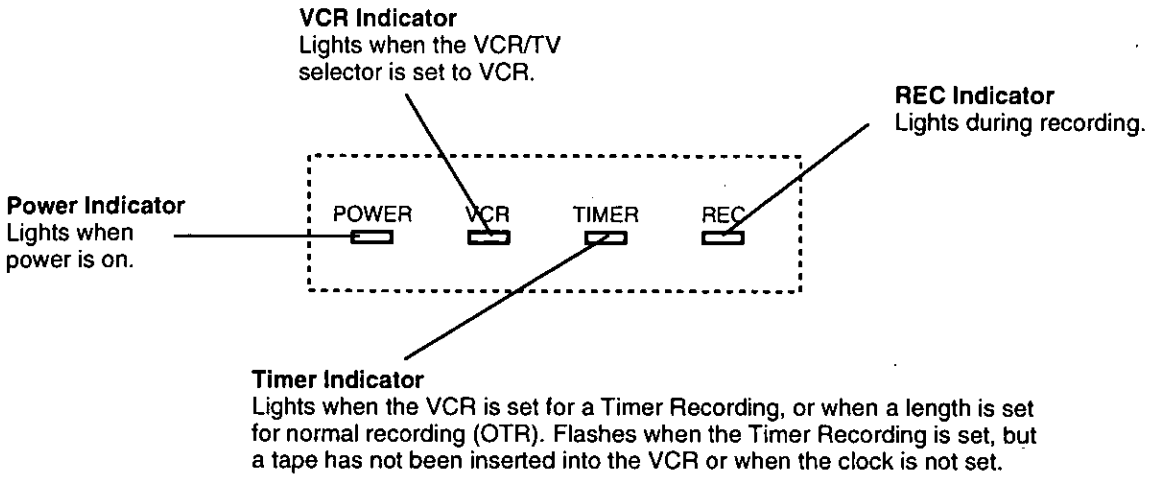

Rear View of the VCR

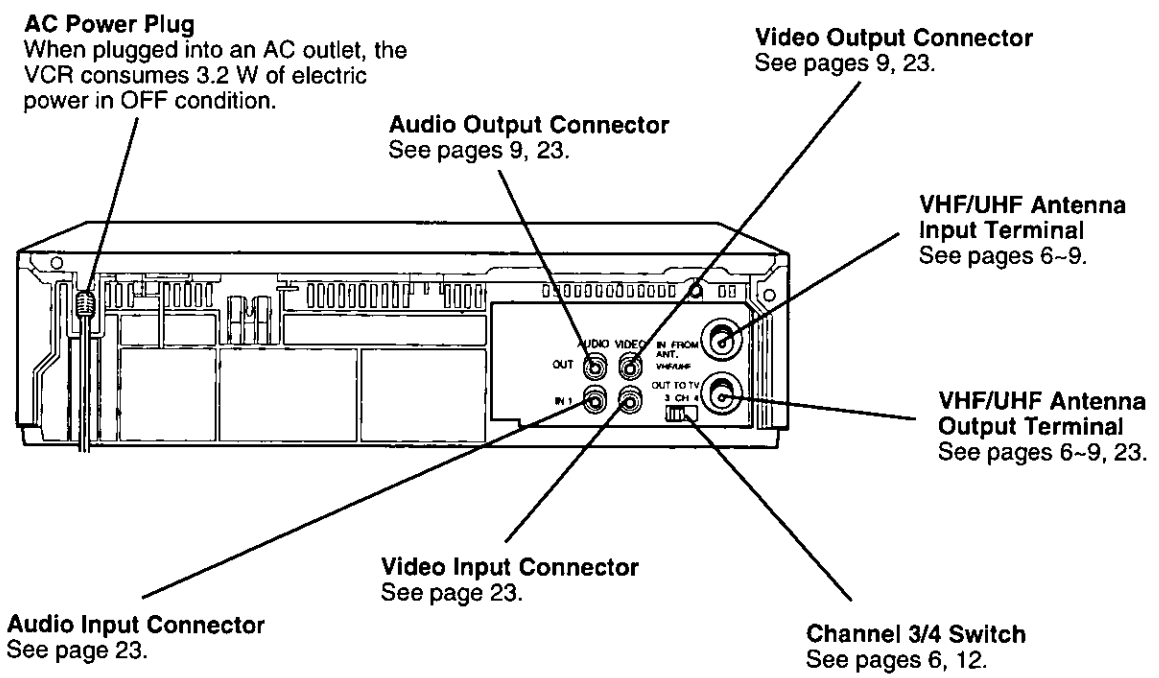





One Time VCR Setup

When the VCR is turned on for the first time, it automatically enters the setup mode.

Setup includes the following:

- Choose the language for on-screen menus and messages.
- Tell the VCR how your equipment is hookup (pages 6-9) so the VCR can correctly place channels into memory.
- Get the VCR ready for clock set.

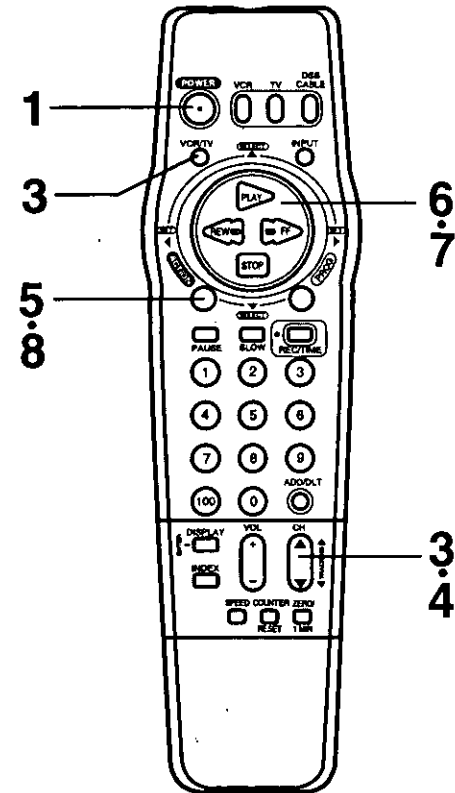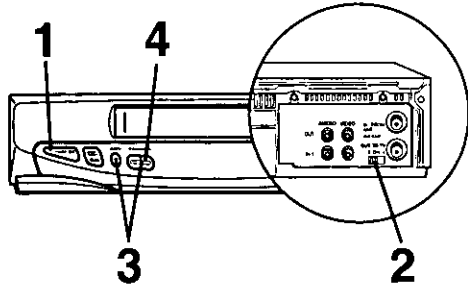

***Important:** If the remote control POWER, ACTION, PROG, CH▲▼, INDEX or ADD/HLT button does not work when pressed, press the VCR button on the remote and try the button again.

To Set the Language, Channels and Clock

1 Turn TV and VCR on.*


2 Tune TV to VCR output channel (the same one you set on the back of the VCR: CH3 or CH4).

3 Press CH ▲ for English on-screen displays.

Or, press CH ▼ for Spanish on-screen displays.

Or, press VCR/TV for French on-screen displays.


- You can also set the language using the buttons on the VCR.
- If **wrong language is set**, see the "Reset all VCR Memory Functions" section on page 5.
- The VCR should be connected to an antenna or cable box (page 6-9).

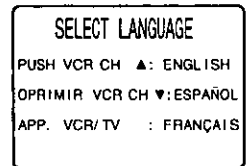

4 Press CH ▲ to start Channel Auto Set.

- "PLEASE SET CLOCK BY PUSHING ACTION KEY" appears.

5 Press ACTION to display the SET CLOCK screen.

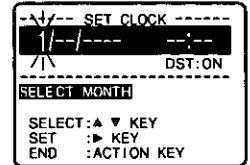

6 Press ▲▼ to select the MONTH, and then press ► to enter.

- Make each entry within 5 minutes, or the VCR exits the Set Clock screen.


7 Press ▲▼ and ◀▶ to select and set remaining items at right.

- Pressing ◀ will move back to an item for correction.

Remaining Items to be set:

- Date • Year
- Time
- DST. (Daylight Saving Time see page 5.)


8 Press ACTION twice to start the clock and exit this mode.

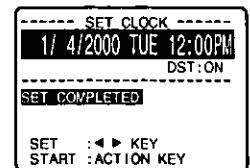

Using ▲▼◀▶ keys

Whenever a menu or program screen is displayed, the PLAY, STOP, REWIND, and FF buttons on the remote control function as ▲▼◀▶ only. For play, stop, rewind, and fast forward functions, use the buttons on the VCR.



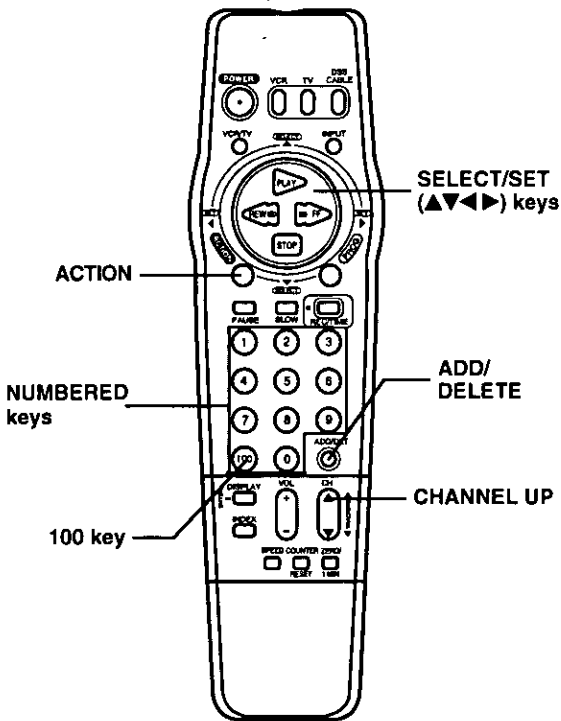

To Change On-Screen Display Language

- 1 Press ACTION to display the menu.
- 2 Press ▲▼ to select the language.
English: LANGUAGE
Spanish: IDIOMA
French: LANGUE
- 3 Press ▶ repeatedly to change the language.

```

----- MENU -----
SET UP VCR
SET CLOCK
SET UP CHANNEL
IDIOMA/LANGUE: ENGLISH
SELECT: ▲ ▼ KEY
SET : ▶ KEY
END : ACTION KEY
  
```

```

----- MENU -----
SET UP VCR
SET CLOCK
SET UP CHANNEL
IDIOMA/LANGUE: ENGLISH
SELECT: ▲ ▼ KEY
SET : ▶ KEY
END : ACTION KE

----- MENU -----
PREPARAR VCR
FIJAR RELOJ
FIJAR CANAL
LANGUE/LANGUAGE: E
ELEGIR: ▲ ▼
FIJAR : ▶
TERMINAR: ACTION

----- MENU -----
REGLAGE MAGNETOSCOPE
REGLAGE HORLOGE
REGLAGE CANAL
LANGUAGE/IDIOMA: FRANÇAIS
SEL. : ▲ ▼
REGLER: ▶
FIN : ACTION
  
```

- 4 Press ACTION to exit this mode.

When Using the 100 key

When selecting CABLE channels 100 to 125 with the NUMBERED keys, first press the 100 key and then enter the remaining two digits. For example, to select channel 125: Press NUMBERED keys 100, then 2, then 5.

To Replace Channels in Memory

In case you have cable installed, etc.

- 1 Press ACTION to display the menu.
- 2 Press ▲▼ to select "SET UP CHANNEL," and then press ▶ to display the "SET UP CHANNEL" screen.
- 3 Press ▲▼ to select "ANTENNA," and then press ▶ to set your antenna system (TV or CABLE).
- 4 Press ▲▼ to select "AUTO SET," and then press ▶ to display the "CHANNEL AUTO SET" screen.
 - If you use a cable box, it must be left on for auto channel set.
- 5 Press CH ▲ to start Channel Auto Set.
 - To exit this mode, press ACTION twice.

```

----- MENU -----
SET UP VCR
SET CLOCK
SET UP CHANNEL
IDIOMA/LANGUE: ENGLISH
SELECT: ▲ ▼ KEY
SET : ▶ KEY
END : ACTION KEY
  
```

```

----- SET UP CHANNEL -----
ANTENNA : CABLE
AUTO SET
SELECT: ▲ ▼ KEY
SET : ▶ KEY
END : ACTION KEY
  
```

To Set or Reset the Clock

In case the clock is wrong, or a power failure occurred.

- 1 Press ACTION to display the menu.
- 2 Press ▲▼ to select "SET CLOCK," and then press ▶ to display the SET CLOCK screen.
- 3 Press ▲▼ and ◀▶ to select and set the date, time and DST. (Daylight Saving Time).
- 4 Press ACTION twice to start the clock and exit this mode.

```

----- MENU -----
SET UP VCR
SET CLOCK
SET UP CHANNEL
IDIOMA/LANGUE: ENGLISH
SELECT: ▲ ▼ KEY
SET : ▶ KEY
END : ACTION KEY
  
```

```

----- SET CLOCK -----
1/ 4/2000 TUE 12:00PM
DST: ON
SELECT HOUR
SELECT: ▲ ▼ KEY
SET : ▶ KEY
END : ACTION KEY
  
```

To Add or Delete a Channel

- 1 Select a channel using the NUMBERED keys to add or CH ▲/▼ to delete.
- 2 Press ADD/DEL to add or delete the channel.
 - To select a channel once it's deleted, use the NUMBERED keys on the remote control.

 
```

CHANNEL 08 ADDED

CHANNEL 08 DELETED
  
```



- This VCR will accurately maintain its calendar up to Dec. 31, 2096, 11:59PM.
- Normal TV or Cable channels are automatically selected and placed in memory depending on how your VCR is hooked up.




On-Screen Displays (OSD)

***Important:** If the remote control POWER, ACTION, PROG, CH▲▼, INDEX or ADD/HLT button does not work when pressed, press the VCR button on the remote and try the button again.


Function & Channel Display

When a function button is pressed, e.g. PLAY, or you change channels, a 4 second display appears first in large and then small characters.

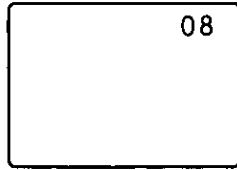

Menu Screen


- 1 Press ACTION* to display the menu.
- 2 Press ▲▼ and ► to make your selection.

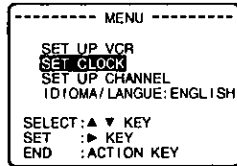

• To get the most from each feature, please read the Operating Manual before attempting any operation.

VCR Status & Clock Display

Press DISPLAY to display or remove the overlay shown below.

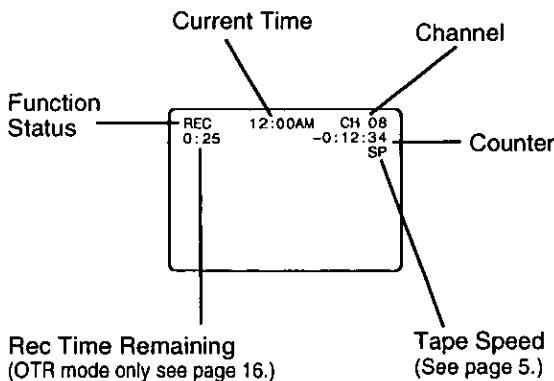


Blank Tape/ No Video Signal Indication

Whenever a blank section of a tape comes up in Play mode, or when the selected channel has no broadcast signal with the Blue Back ON/OFF Feature (page 26) set to ON, the TV screen will turn solid blue.


Warning and Instruction Displays

These displays will alert you of a missed operation or provide further instructions.


If no active channels are found for CHANNEL MEMORY... (See page 12.)

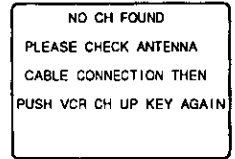


If you attempt to set or review a Timer Recording and the Clock is not set... (See page 18.)

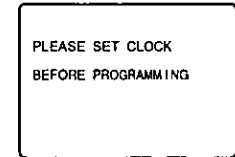


After a Timer Program has been set... (See page 18.)

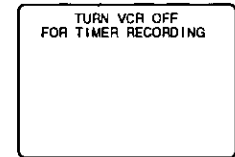


If you press REC on the remote control or VCR, and a cassette is inserted with no record tab... (See page 16.)

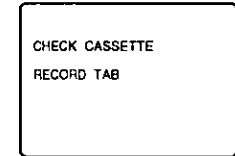


If you press PLAY, FF, REW, or REC on the remote control or VCR without a cassette inserted... (See pages 15, 16.)

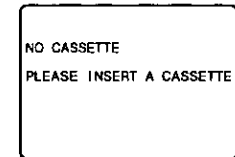


If you press POWER or STOP during a Timer Recording... (visible in VCR mode only) (See page 19.)

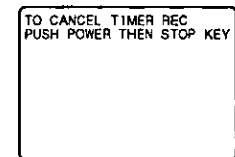


If head cleaning becomes necessary while playing back a tape... (See page 5.)

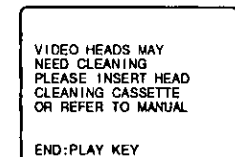

If you press a function button other than STOP/EJECT or POWER while the VCR is in VCR Lock mode... (See page 26.)

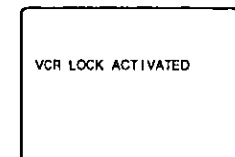

If you press POWER, ACTION, or PROG on the remote while in TV or CABLE/DSS mode... (See pages 24, 25.)

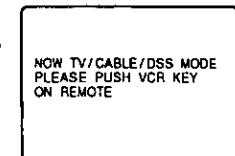




Playback a Tape

✓ Check list before you begin.

- All connections are made. (See pages 6-9.)
- TV and VCR are plugged in.
- TV is turned on and set to the VCR channel (CH 3 or 4).

1 Insert a cassette.

 - VCR power comes on automatically.
- "VCR" lights in the Display Panel.



2 Press PLAY on the remote or VCR to start playback.


- Playback begins automatically if cassette has no record tab.

3 Press STOP on the remote or VCR to stop playback.

- To rewind the tape, press REW.

4 Press STOP/EJECT on the VCR to eject the cassette.

- You may eject a cassette with power on or off.

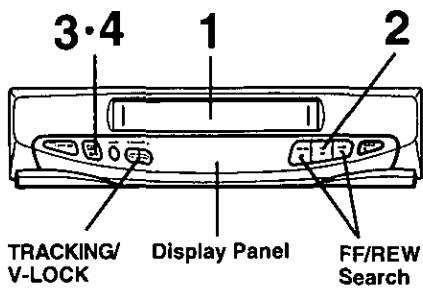

To Find a Particular Scene During Playback

Press REW or FF during playback to search for a scene.

- Search speed for SLP mode tapes is 21 times the normal speed.
- Some noise bars will appear during search.

Special Effects During Playback

These features work best in SLP mode. The sound will be muted.

Slow Motion Playback

Press SLOW to start slow motion playback during playback. Press PLAY or SLOW to release.

Still (Freeze) Frame Picture

Press PAUSE to freeze and release the picture.

- To reduce picture noise, first press SLOW. Then, use CH (TRACKING) ▲/▼ to clear up the picture. Now, press PAUSE.

Frame by Frame Advance

In Still mode, hold down SLOW to advance the still picture one frame at a time. Press PAUSE to release.

Features for a Quality Picture

Digital Auto Tracking


This feature continuously analyzes the signal and adjusts for optimum picture quality.

Manual Tracking Control (to reduce picture noise)

Use during Playback and Slow Motion mode to reduce picture noise. Press CH (TRACKING) ▲/▼ during playback until the picture clears up. To return to Auto Tracking mode, press POWER off and then on again.




- After the VCR is in Still or Slow mode for 3 minutes, it will switch to the Stop mode automatically to protect the tape and the video head.

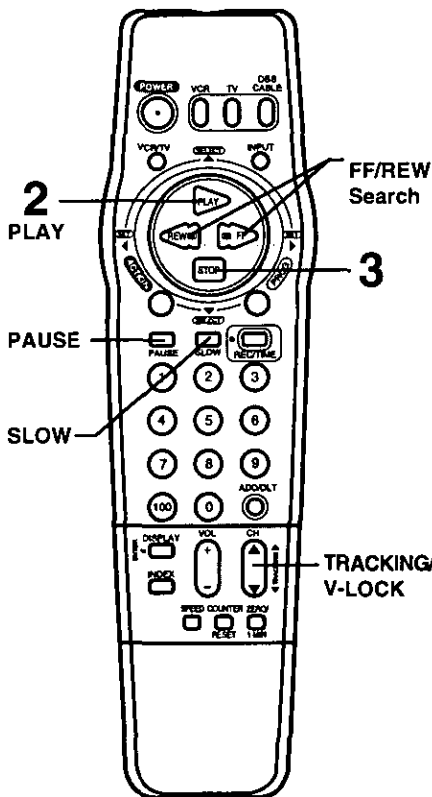

Caution:

Please inspect your cassette tapes and remove any loose or peeling labels to prevent them from becoming jammed in your unit.

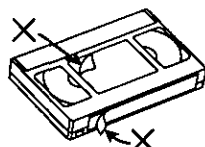


Basic Operation

Record On a Tape

Important: If the remote control POWER, ACTION, PROG, CH▲▼, INDEX or ADD/DLT button does not work when pressed, press the VCR button on the remote and try the button again.


✓ Check list before you begin.

- All connections are made. (See pages 6-9.)
- VCR is plugged in.
- TV is turned on and set to the VCR channel (CH 3 or 4).

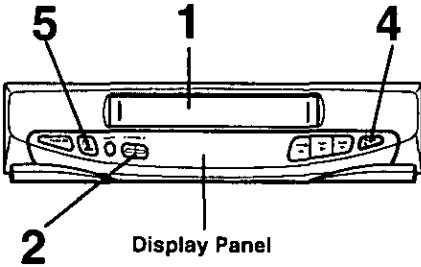


1 Insert a cassette with record tab.

- VCR power comes on automatically.

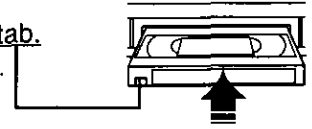


2 Press CH ▲▼* or NUMBERED keys to select a channel.

- Or, press CHANNEL ▲▼ on the VCR.
- Holding down CH ▲▼ will increase the channel search speed.
- To record from an outside source, press CH ▲▼ or INPUT to select "LINE" (see page 17).

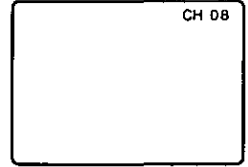


3 Press SPEED to change the recording speed.

- SP = Standard Play ,
- LP = Long Play
- SLP = Super Long Play (See page 5.)

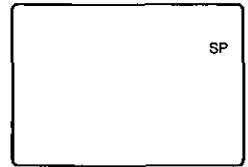


4 Press REC/TIME on the remote control or VCR to start recording.

- To edit out unwanted portions, press PAUSE to pause the recording in progress. To release, press PAUSE again. (After the VCR has been in Pause mode for 5 minutes, it will stop automatically to protect the tape and video head.)

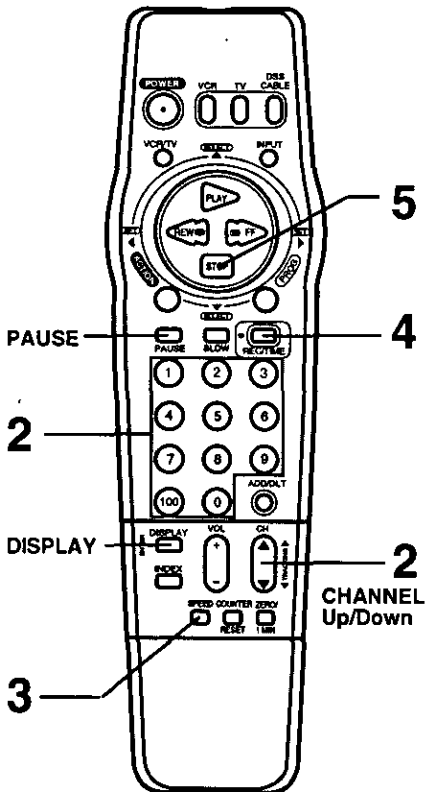

One Touch Timer Recording (OTR)

 
The VCR starts recording and turns itself off at a preset time. In step 4, **press REC/TIME** repeatedly to set the length of the recording. Each press will change the stop time as shown.



- "TIMER" lights in the Multi Function Display.
- The remaining recording time can be displayed by pressing DISPLAY in OTR mode.


5 Press STOP to stop recording.

- Or, press STOP/EJECT on the VCR.


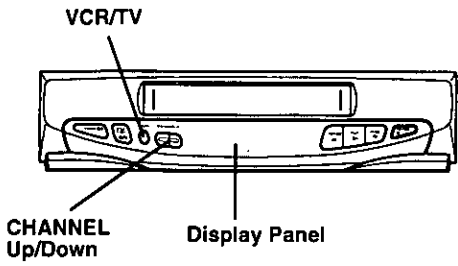


Selecting the Input Mode

 Press INPUT.
The display will change in the order below.



 Press CH ▲/▼.
The display will change in the order below.

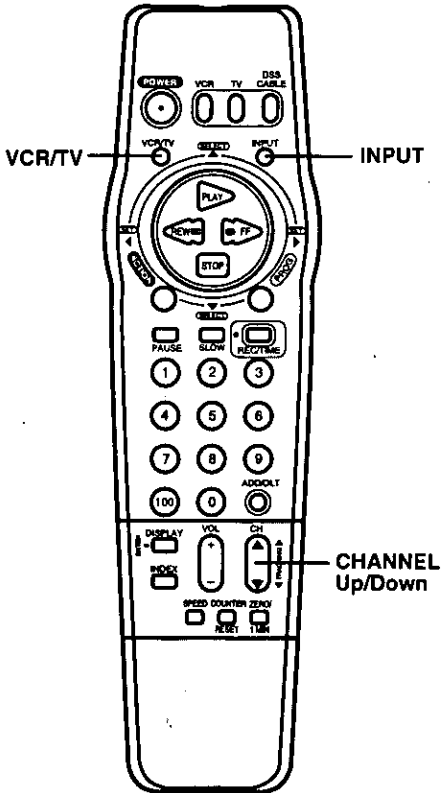

Record One Program While Watching Another

- 1 Press VCR/TV while recording is in progress to turn off the VCR indicator in the Multi Function Display.
- 2 Use the TV channel controls to select a program. The VCR will continue to record your program while you watch any channel you choose.
 - To switch back and forth between the recording and viewing channel, press VCR/TV.

Selecting Channels at the VCR

- 1 Turn your TV and VCR on.
 - VCR Indicator lights on the Multi Function Display. If indicator doesn't light, press VCR/TV to turn it on.
- 2 Use CH ▲/▼ on the remote control or VCR to select channels.
 - To switch back to TV channel selection, press VCR/TV to turn VCR indicator off, or simply turn the VCR power off.



Timer Recording

Important: If the remote control POWER, ACTION, PROG, CH▲/▼, INDEX or ADD/HLT button does not work when pressed, press the VCR button on the remote and try the button again.


You can set up the VCR to record a one time, daily, or weekly program while you are away or otherwise occupied. Up to 8 programs can be stored in memory.

✓ Check list before you begin.

- All connections are made. (See pages 6-9.)
- TV and VCR are plugged in and turned on.
- VCR/TV selector is set to "VCR."
- Clock is set to correct time.
- Record tab in place. (See page 5.)




6 Display Panel

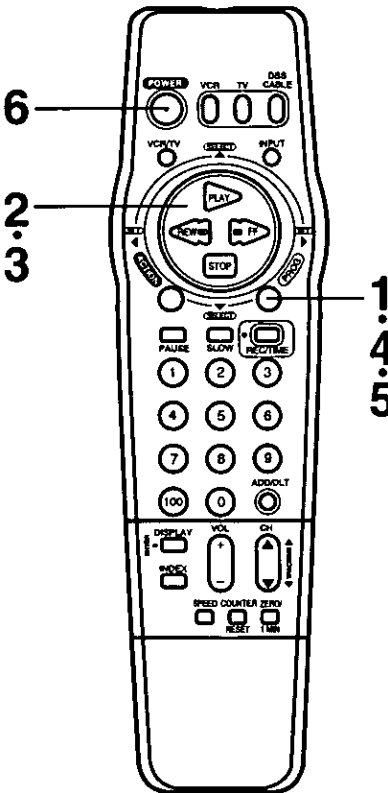

1 Press PROG* to display the program screen.


- If a program is already in memory, press ▲▼ and ► to select an unused program number.

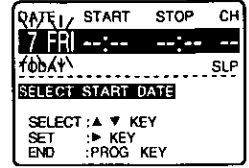

2 Press ▲▼ and ► to select and set one of the following as the DATE:

- 1-31 = One time recording
- DAILY = Same time MON-FRI
- WEEKLY (SUN-SAT) = Same time once a week

Example

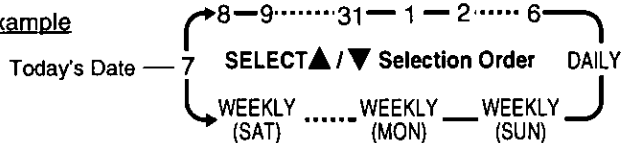

3 Press ▲▼ and ◀▶ to select and set each of the remaining items at right.


- Remaining Items to be set:**
- START time
 - STOP time
 - CH(annel) number, or LINE for outside source recording
 - Speed (SP, LP, SLP)

To Make Corrections

Repeatedly press ► to move the cursor to the right, or ◀ to move to the left to the incorrect entry and make the correction.

4 Press PROG to end the program.

- This screen appears for confirmation.

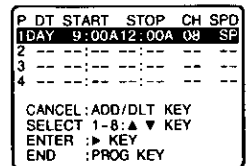

To Enter More Programs

Press ▲▼ and ► to select and set a blank program number, and then repeat steps 2 and 3.

5 Press PROG to exit this mode.

6 Press POWER off to set the timer.


- When recording programs via a cable box, make sure the cable box is left ON and tuned to the desired channel.



"TIMER" indicator lights in the Display Panel.




- A cassette with no record tab is ejected and "TIMER" flashes when the power is turned off to set the timer.
- If the start times of two programs overlap, the lower numbered program will have priority.
- If the start time for a timer recording comes up during a normal recording or One Touch Recording (page 17), the timer recording will not be performed.
- If there is a power interruption of more than one minute, the recording will not be performed or continue.

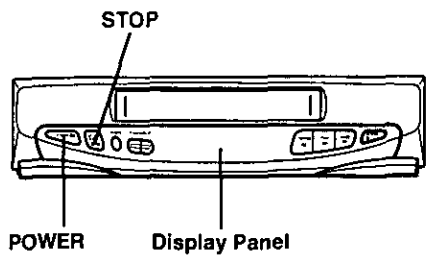

Cancel a Timer Recording: (Recording is in progress)

Press POWER and then STOP within 10 seconds to cancel the timer recording.

- The TIMER indicator goes out in the Display Panel.

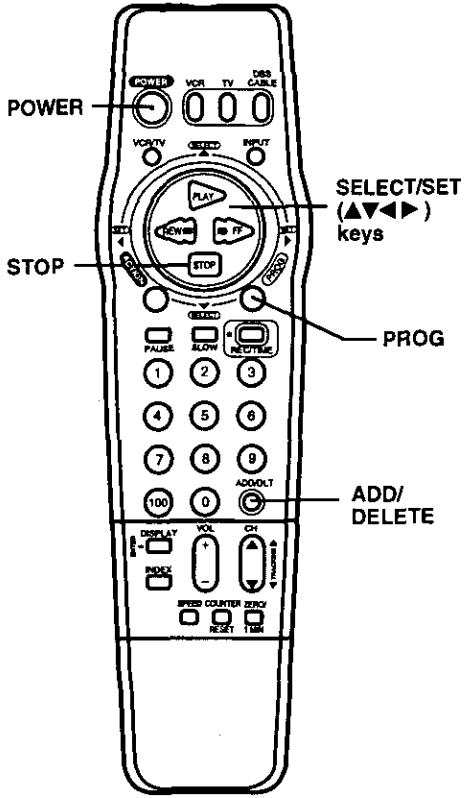

Replace Program Contents: (Recording is not in progress)

- Press PROG to display all currently set programs.
- Press ▲▼ and ▶ to select and set a program number. (See page 18.)
- Press ▲▼ and ◀▶ to select and set replacement timer information.
- Press PROG twice to exit this mode.

| P | DT | START | STOP | CH | SPD |
|---|----|--------|--------|-----|-----|
| 1 | -- | -- | -- | -- | -- |
| 2 | 8 | 10:00P | 12:00P | 125 | SP |
| 3 | 10 | 8:00P | 9:00P | 10 | SP |
| 4 | SU | 9:00P | 10:00P | L | LP |

SELECT 1-8: ▲▼ KEY
ENTER :▶ KEY
END :PROG KEY

| DATE | START | STOP | CH |
|-------------------|----------|--------|-----|
| 8 SAT | 10:00P | 12:00P | 125 |
| ----- SLP | | | |
| SELECT START DATE | | | |
| SELECT: | ▲▼ KEY | | |
| SET : | ▶ KEY | | |
| END : | PROG KEY | | |

Review or Clear Program Contents: (Recording is not in progress)

- Press PROG to display all currently set programs.
- Press ▲▼ to select "TIMER PROGRAM," and then press ▶ to display all currently set programs.
- Press ▲▼ to select a program number.
- Press ADD/HLT if you want to clear the program.
- Press PROG to exit this mode.

| P | DT | START | STOP | CH | SPD |
|---|-----|--------|--------|-----|-----|
| 1 | DAY | 8:00A | 12:00A | 08 | SP |
| 2 | 8 | 10:00P | 12:00P | 125 | SP |
| 3 | 10 | 8:00P | 9:00P | 10 | SP |
| 4 | SU | 9:00P | 10:00P | L | LP |

CANCEL: ADD/HLT KEY
SELECT 1-8: ▲▼ KEY
ENTER :▶ KEY
END :PROG KEY


| P | DT | START | STOP | CH | SPD |
|---|----|--------|--------|-----|-----|
| 1 | -- | -- | -- | -- | -- |
| 2 | 8 | 10:00P | 12:00P | 125 | SP |
| 3 | 10 | 8:00P | 9:00P | 10 | SP |
| 4 | SU | 9:00P | 10:00P | L | LP |

SELECT 1-8: ▲▼ KEY
ENTER :▶ KEY
END :PROG KEY

Timer Recording Using VCR Buttons

(Make sure a cassette tape is not inserted in the VCR.)

- Hold down STOP/EJECT and press REW to enter the Program mode.
- Press FF or REC/TIME repeatedly or hold down to make selections.
- Press PLAY to set the item and move on.
 - To make corrections, repeatedly press PLAY to move the cursor to the right, or REW to move to the left to the incorrect entry and make the correction.
- Press STOP/EJECT and REW together to display program contents after all items have been entered.
 - You cannot clear programs with the VCR buttons.
- Hold down STOP/EJECT and press REW, (release REW first, and then release STOP/EJECT) to exit this mode.
- Insert a cassette with record tab and press POWER off to set the timer.

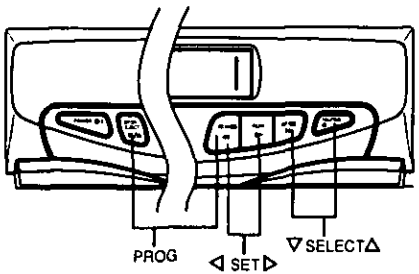





Tape Operation

***Important:** If the remote control POWER, ACTION, PROG, CH▲▼, INDEX or ADD/HLT button does not work when pressed, press the VCR button on the remote and try the button again.

VHS Index Search System

Each time you start a recording, an invisible index mark is automatically placed on the tape. You can then use these index marks to access or scan your recordings.

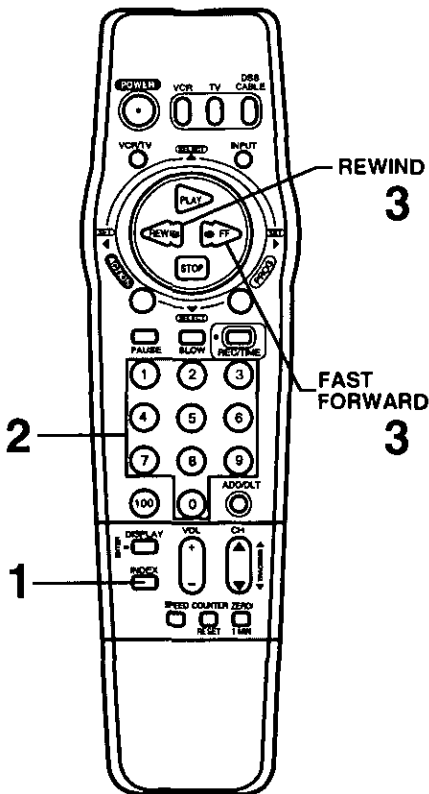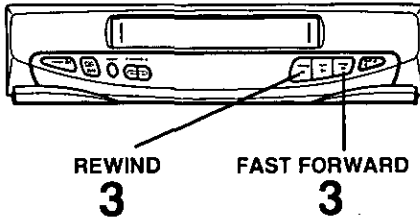


Direct Access

This feature allows you to go directly to the recording you want from anywhere on the tape by entering the appropriate index number.

1 Press **INDEX*** in Playback or Stop mode.


2 Press a **NUMBERED** key to select the desired recording.

- To calculate the number, see below.

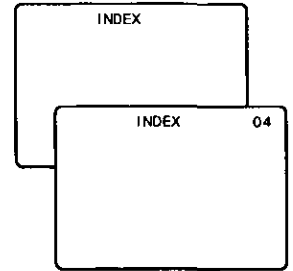

3 Press **REW** or **FF** to start a reverse or forward search.

- When the designated location is reached, the VCR goes into Playback mode.

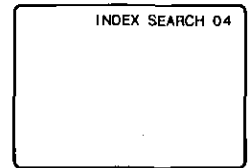


To calculate an Index Number

Count forward or backward each recording start point, including the recording you want to see, from wherever you are on the tape.

Example 1:

 If you are watching recording 4 and you want to watch recording 2, count the start points to number 2. The total is 3. Enter 3 in step "2" and press REW.



Example 2:

If you are watching recording 2 and you want to watch recording 6, count the start points to number 6. The total is 4. Enter 4 in step "2" and press FF.




NOTE: ↓ indicates start points of each recording.



- Make each entry within 10 seconds, or the Index Search mode will be canceled.
- Index marks will be placed for Timer recordings as well.
- If any of the VHS Index Search System are initiated extremely close to an index mark, there is a possibility that the index mark will not be counted in the search.

Index Scan

This feature allows you to scan (forward or reverse) each recording for 10 seconds in Playback mode.

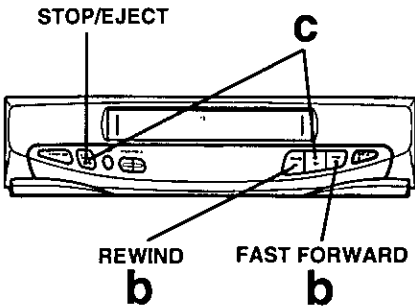




a Press **INDEX** in Playback or Stop mode.

b Press **REW** or **FF** to begin the scan.

- As each index mark is reached, a short playback will be performed after which FF or REW resumes.

c Press **PLAY** to cancel the scan and begin playback.

- You may also press **STOP** to stop the tape.

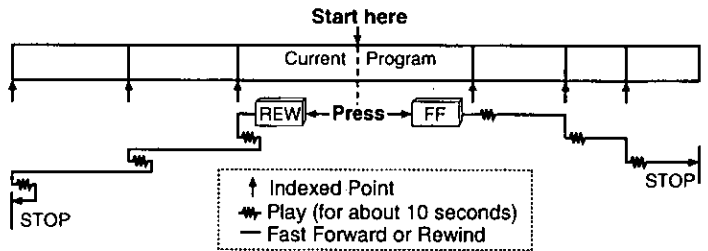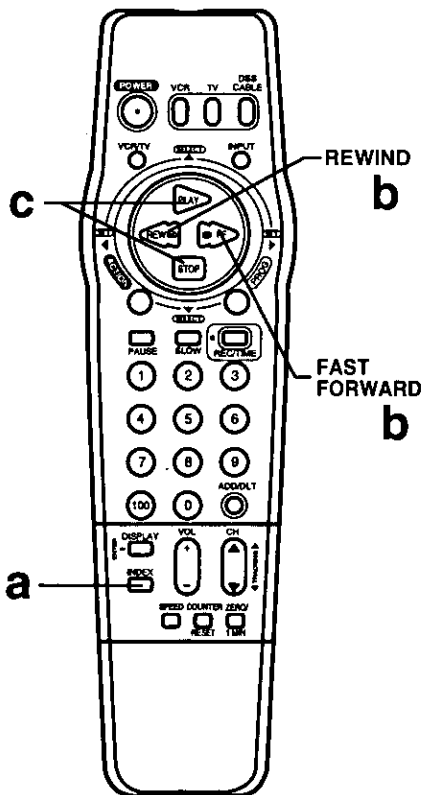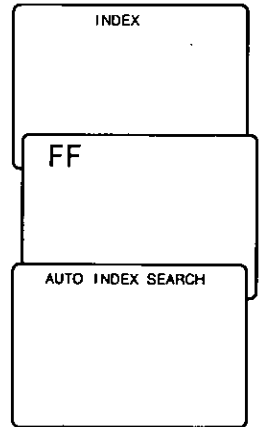

Auto Operation Functions

Auto Playback

When a tape is inserted, the power turns on (Auto). If the record tab* is removed, playback begins (Auto).

Auto Rewind

When a tape reaches its end during playback, fast forward or manual record, the VCR will rewind and go into Stop mode.

Playback Auto Eject (Repeat Play is "OFF.")

When a tape without a record tab* is played to its end, the VCR will rewind and then eject the tape.

Memory Rewind Off


When the **POWER** button is pressed during rewind, the VCR will turn off after rewind is complete.

* For record tab information, see page 5.

Tape Operation (continued)

***Important:** If the remote control POWER, ACTION, PROG, CH▲/▼, INDEX or ADD/HLT button does not work when pressed, press the VCR button on the remote and try the button again.


Your VCR is equipped with several time saving features as well as convenient automatic functions making tape operation easier than ever.

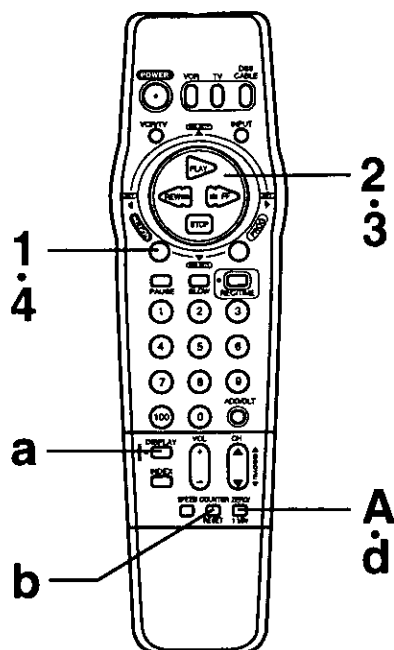


Repeat Play

The VCR will play your recording over and over.

- 1 Press **ACTION*** to display the menu.
- 2 Press **▲▼** to select "SET UP VCR," and then press **►** to display the "SET UP VCR" screen.

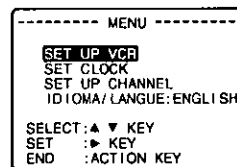

- 3 Press **▲▼** to select "REPEAT PLAY," and then press **►** to select "ON" or "OFF."
 - When "ON" is selected the VCR plays the tape to its end or until a blank portion of over 30 seconds is detected (erased portions are not considered blank). The tape is then rewound and played again and again until Repeat Play is turned off.

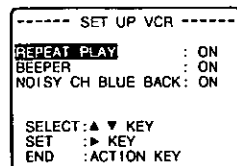


- 4 Press **ACTION** twice to return to the normal screen.


Zero Search

To quickly return to a specific tape location.

- a Press **DISPLAY** to display the Time Counter overlay during playback.
- b Press **COUNTER RESET** to reset the Time Counter to "0:00:00" at the desired position.

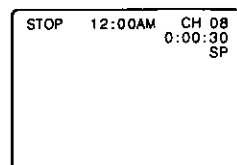

- c Continue playback, rewind, or fast forward.

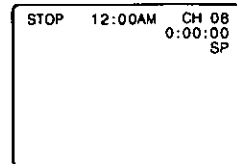

- d Press **ZERO/1MIN** in Stop mode when you want to return to "0:00:00."
 - The VCR will go into FF or REW mode and stop at the last point the Time Counter was set to 0:00:00.

One Minute Skip


The VCR rapidly skips over one minute of tape.

- A Press **ZERO/1 MIN** in Play mode.
 - The VCR will go into FF search mode and skip over 60 seconds of recorded time. Normal playback will then resume.



Copying Your Tapes (Dubbing)


Connections you'll need to make.

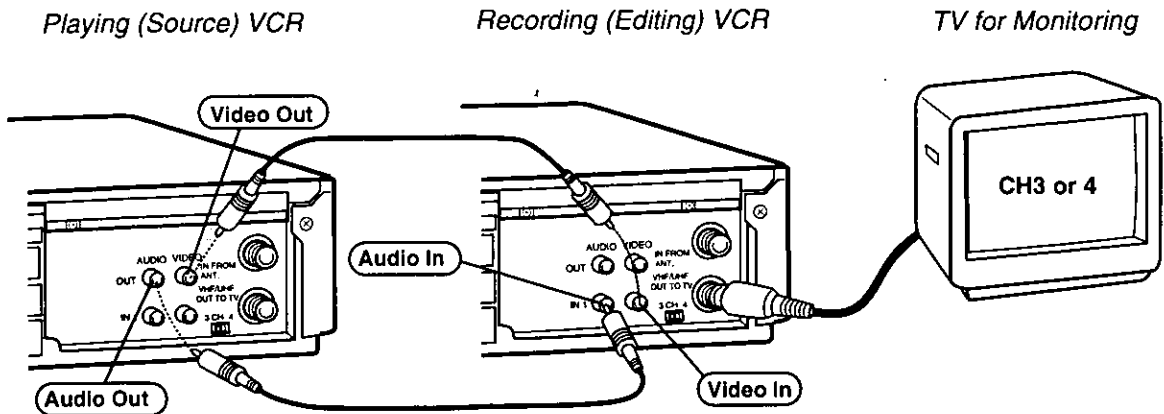

1 Insert a pre-recorded tape into the Playing (Source) VCR.



 2 Insert a blank tape with record tab into the Recording (Editing) VCR.



3 Select "LINE" input mode on the Recording (Editing) VCR. (See "Selecting the Input Mode" on page 17.)

4 Press **PLAY** on the Playing VCR. Press **PAUSE** at the desired starting point.

5 Press **REC** on the Recording VCR, and then press **PAUSE** immediately thereafter.

6 Press **PAUSE** on both VCRs at the same time, to begin copying.

To Edit Out Unwanted Parts
Press **PAUSE** on the recording VCR while copying is in progress. Press **PAUSE** again to resume copying.

7 Press **STOP** on both VCRs to stop copying.

To Monitor Dubbing on Your TV


1 Turn your TV on and tune to the Recording VCR channel (CH3 or CH4).

2 Set the VCR/TV Selector on the Recording VCR to "VCR."

Caution:

Unauthorized exchanging and/or copying of copyrighted recordings may be copyright infringement.

More You Can Do

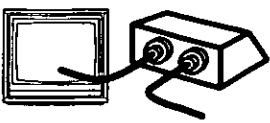

Multi-Brand Control Feature

The Remote Control may be set up to control some of the functions on your TV or Cable Box.

TV Brand Code Numbers


| | | | |
|-----------------|--------|------------------|------------|
| Panasonic | 01, 02 | Toshiba | 09 |
| Quasar | 01, 02 | Sanyo | 10 |
| RCA | 03 | Fisher | 10 |
| GE | 03 | JVC | 11 |
| Zenith | 04 | Hitachi | 12 |
| Magnavox | 05 | Mitsubishi | 07, 13 |
| Sylvania | 05 | Samsung | 14 |
| Sharp | 06, 07 | Gold Star | 15, 16, 17 |
| Sony | 08 | | |

DSS Brand Code Numbers

| | |
|--------------------------|-----|
| Toshiba | 103 |
| Hitachi/ Hughes | 104 |
| Magnavox/ Uniden 1 | 105 |
| Magnavox/ Uniden 2 | 106 |
| Sony | 107 |
| RCA | 108 |
| Panasonic | 109 |

Cable Box Brand Code Numbers

| | |
|---------------------------|--|
| Archer | 01, 29, 44, 88, 91 |
| Cableview | 04, 30, 42, 44, 52, 63, 85, 88 |
| Citizen | 04, 30, 42, 44, 52, 63, 85, 88 |
| Curtis | 08, 09, 56, 61, 87, 90 |
| Diamond | 01, 29, 44, 88, 91 |
| Drake | 37, 67, 71 |
| Eagle | 13, 20, 22, 26, 40, 58, 62, 98 |
| Eastern | 28 |
| GC Brand | 04, 30, 42, 44, 52, 63, 85, 88 |
| Gemini | 04, 85 |
| General Electric | 57 |
| General Instruments | 01, 02, 03, 04, 34, 55, 83, 85, 91, 93, 95 |
| Hamlin | 14, 15, 28, 41, 97, 100, 102 |
| Hitachi | 31, 79 |
| Jerrold | 01, 02, 03, 04, 34, 55, 83, 85, 91, 93, 95 |
| Macom | 31, 79 |
| Magnavox | 25, 26 |
| Matsushita | 16, 17, 101 |
| Movietime | 29, 32, 38, 39, 40, 42, 44, 88 |
| NSC | 32, 38, 40 |
| Oak | 10, 11, 46, 99 |
| Panasonic | 16, 17, 101 |
| Philips | 13, 20, 23, 24, 96 |
| Pioneer | 05, 06, 78 |
| Pulsar | 04, 30, 42, 44, 52, 63, 85, 88 |
| Radio Shack | 44 |
| RCA | 16, 17, 101 |
| Realistic | 44, 51, 88 |
| Regal | 14, 41 |
| Regency | 28 |
| Rembran | 29, 32, 39, 42, 44, 88 |
| Salora | 68, 72 |
| Samsung | 32, 40, 42, 78, 94 |
| Scientific Atlanta | 08, 09, 56, 61, 87, 90 |
| Sheritech | 27 |
| SL Marx | 32, 40, 42, 78, 94 |
| Spucer | 16, 17, 101 |
| Stargate | 04, 30, 32, 40, 42, 44, 52, 63, 78, 85, 88, 94 |
| Sylvania | 19 |
| Teknika | 74 |
| Telecaption | 77, 92 |
| Televue | 32, 40, 42, 78, 94 |
| Texscan | 18, 19 |
| Tocom | 01, 33, 34, 42, 48, 49, 91 |
| Toshiba | 36 |
| Uniden Satellite | 65, 69 |
| Unika | 01, 29, 44, 88, 91 |
| Universal | 42, 43, 44, 52, 63, 88 |
| Viewstar | 13, 20, 22, 26, 40, 58, 62, 98 |
| Videoway | 07, 23, 50 |
| Vid Tech | 64 |
| Vidter | 64 |
| Zenith | 07, 23, 50 |

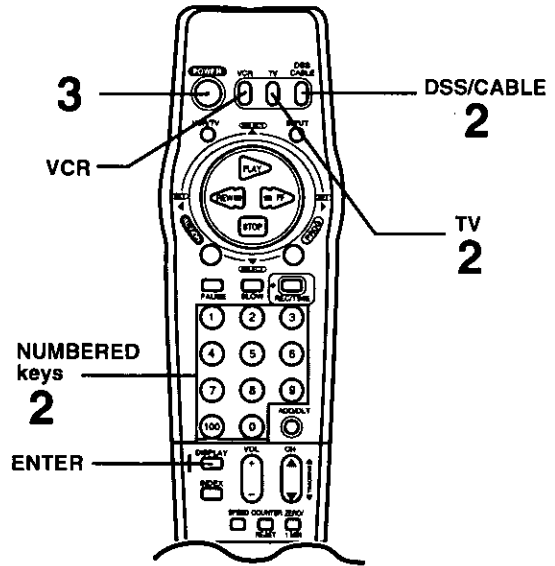

Multi-Brand Control Setup

- 1 Find your TV or Cable Box or DSS Box Brand Code Number** from one of the charts on this page.
- 2 Hold down TV or DSS/CABLE. Use the NUMBERED keys** to enter your TV or Cable Box Brand code number.
 - For code numbers 100 or greater, first press the 100 key. Then, enter the remaining digit. E.g. for 102, press 100, then press 2.
- 3 To confirm that the correct code was entered, press POWER** to turn your TV or Cable Box or DSS Box On/Off.
- 4 Try each of the functions listed on page 25.**
 - Due to changes in infra-red commands used by some manufacturers, more than one code may be listed for some TV or Cable Box brands. If your TV or Cable Box does not respond to the first code, please try entering the next code.



- Please repeat the TV/Cable Box Set Up procedure when you replace the remote's batteries.
- The remote control is designed to control the brands listed. However, it will not operate all TVs, Cable Boxes or DSS Boxes made by these manufacturers. If you get no results, your particular product brand cannot be controlled by this remote control.

Using the Multi-Brand Control

Once the remote control has been properly set up, you can select VCR, TV, or DSS/CABLE mode depending on which functions you wish to control.

Press **VCR** or **TV** or **DSS/CABLE** on the remote control to select the desired mode. (See below for the controllable functions of each mode.)

NOTE:

In TV or DSS/CABLE mode, it may be necessary to press ENTER after pressing NUMBERED keys for channel selection.

VCR Mode

In VCR mode, the following buttons are available.

VCR

All function buttons.

TV

VOL UP/DOWN

TV Mode

In TV mode, the following buttons are available.

TV

POWER, INPUT, NUMBERED keys, ENTER, CH UP/DOWN, VOL UP/DOWN

VCR

VCR/TV, PLAY, STOP, FF, REW, PAUSE, SLOW, REC, SPEED, COUNTER RESET, ZERO/1 MIN

DSS/CABLE Mode

In DSS/CABLE mode, the following buttons are available.

DSS/CABLE




POWER, NUMBERED keys, ENTER, CH UP/DOWN

TV

VOL UP/DOWN

VCR

VCR/TV, PLAY, STOP, FF, REW, PAUSE, SLOW, REC, SPEED, COUNTER RESET, ZERO/1 MIN.

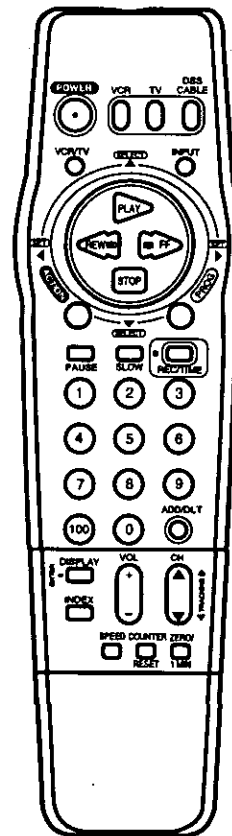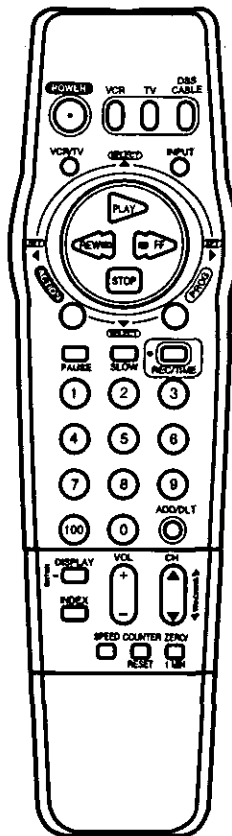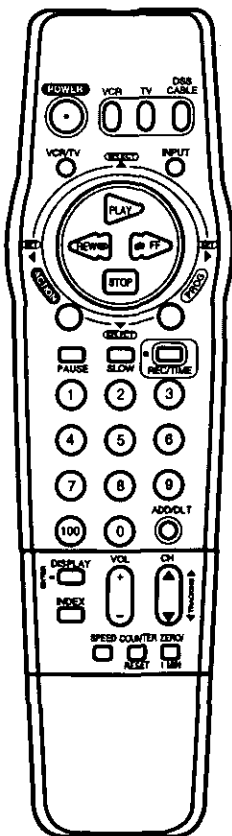

More You Can Do



- Some TV, Cable Box and DSS Box brands require you to turn on the power manually.
- Not all functions listed may be controlled by this remote control.



Special VCR Features

*Important:

If the remote control POWER, ACTION, PROG, CH▲▼, INDEX or ADD/HLT button does not work when pressed, press the VCR button on the remote and try the button again.

Check list before you begin.

- All connections are made. (See pages 6-9.)
- VCR is plugged in.
- TV is turned on and set to the VCR channel (CH 3 or 4).

VCR Lock Feature



When activated, this feature prohibits all operations except for timer recording and tape eject. This feature may be used to keep young children from operating the VCR.

Hold down REC/TIME on the VCR without a cassette inserted for 7 seconds during Power On mode.

- "NO CASSETTE PLEASE INSERT A CASSETTE" is displayed when REC/TIME is pressed. Please disregard this warning and continue to hold down REC/TIME for 7 seconds.

To Cancel the VCR Lock feature, with or without a cassette inserted, hold down REC/TIME on the VCR for 7 seconds again while in Stop mode.

- VCR Lock mode is cancelled automatically after about 24 hours as long as the clock is set.

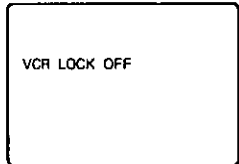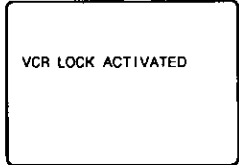

Blue Back ON/OFF Feature

You may choose whether or not you want the VCR to display a solid blue back screen when the broadcast signal is very weak.

1 Press ACTION* to display the menu.

2 Press ▲▼ to select "SET UP VCR," and then press ► to display the "SET UP VCR" screen.





3 Press ▲▼ to select "NOISY CH BLUE BACK," and then press ► to select "ON" or "OFF."

- When "ON" is selected, a solid blue screen appears whenever the signal is weak or nonexistent. When "OFF" is selected, the picture is displayed regardless of the signal condition.
- The picture can not always be seen clearly when "OFF" is selected.

4 Press ACTION twice to exit.



- When the VCR is connected to a Combination VCR which has a Blue Back feature, even if the VCR Blue Back is set to "OFF" on the VCR, the screen will go to blue back.

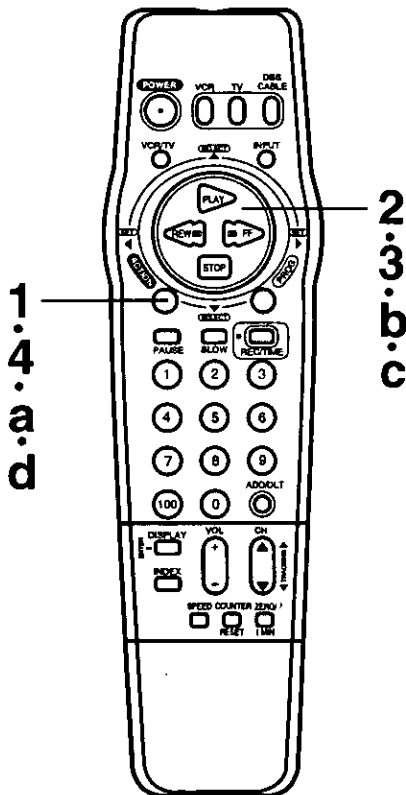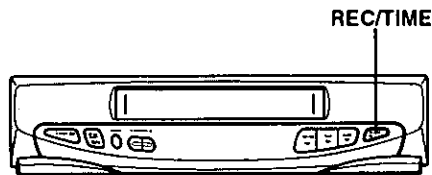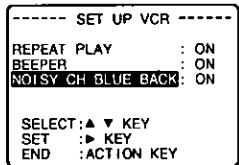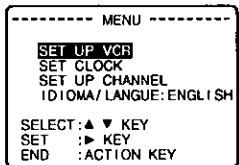

Warning Beeper Feature



When you select BEEPER ON, a short warning will sound each time an invalid entry or incomplete operation is made.

a Press ACTION to display the menu.

b Press ▲▼ to select "SET UP VCR," and then press ► to display the "SET UP VCR" screen.

c Press ▲▼ to select "BEEPER," and then press ► to select "ON" or "OFF."

d Press ACTION twice to exit this screen.

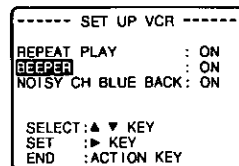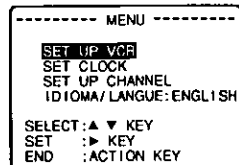



Before Requesting Service

Check the following points once again if you are having trouble with your VCR.

| Power | Correction |
|---|--|
| No power... | <ul style="list-style-type: none"> • Completely insert the Power Plug into an AC outlet. • Set the POWER button to ON. |
| Recording & Playback | Correction |
| TV program cannot be recorded... | <ul style="list-style-type: none"> • Check connections between VCR, external antenna, and your TV. • Make sure your antenna system (CABLE or TV) is correctly set. (To Replace Channels in Memory [P.13]) • Make sure that the record tab is intact on the cassette. (P.5) |
| Timer recording cannot be performed... | <ul style="list-style-type: none"> • Set the recording start/stop times correctly. (P.18) • Make sure that the POWER button is set to OFF. (P.18) • Timer recording may not be performed or continued if a power interruption of more than 1 minute occurs before, or during, a Timer Recording, even after power is restored. |
| There is no playback picture, or the playback picture is noisy or contains streaks... | <ul style="list-style-type: none"> • Select channel 3 or 4 on the TV to match the Channel 3/4 switch located on the rear panel of the VCR. (P.6) • Set the VCR/TV selector to "VCR." • Check that channel 3 or 4 of the TV is properly tuned in. • Adjust the TRACKING control in either direction. (P.15) |
| Special effects playback, picture may contain some vertical jitter when using a TV with an Automatic Vertical Hold Control... | <ul style="list-style-type: none"> • Set the TV's Vertical Hold Control to "MANUAL" and then adjust it. |
| VCR can not be controlled... | <ul style="list-style-type: none"> • Make sure that VCR LOCK is set to off. (P.26) |
| Remote Control | Correction |
| VCR cannot be remote controlled... | <ul style="list-style-type: none"> • Aim the Remote Control directly at the remote sensor on the VCR.(P.10) • Avoid all obstacles which may interfere with the signal path. • Inspect the remote batteries for possible replacement. (P.4) • Make sure that VCR LOCK is set to off. (P.26) • Exposing the VCR remote sensor to direct fluorescent or outdoor light may cause signal interference. |
| ACTION and PROG buttons cannot be used... | <ul style="list-style-type: none"> • Press the VCR button to select VCR mode. (P.25) |
| Miscellaneous | Correction |
| Programs cannot be viewed on TV... | <ul style="list-style-type: none"> • Set the VCR/TV selector to "TV." (P.17) |
| Video cassette cannot be inserted... | <ul style="list-style-type: none"> • Insert the cassette with window side up; record tab facing you. |
| Video cassette cannot be removed... | <ul style="list-style-type: none"> • Completely insert the Power Plug into an AC wall outlet. |
| Video cassette ejects when a recording is started or the power is turned off for timer recording... | <ul style="list-style-type: none"> • Make sure the record tab is intact on the cassette. (P.5) |
| In Stop mode, the motor (CYLINDER) continues to rotate... | <ul style="list-style-type: none"> • To enable the quick play mechanism, the cylinder will rotate for about 5 minutes. This reduces response time from Stop to Play mode from Play to Rewind Search mode. |
| The top of the playback picture waves back and forth excessively... | <ul style="list-style-type: none"> • Because the VCR playback signal is not as stable as an off-the-air TV signal, the top of your TV screen may be bent or unstable during playback. Slowly turn the horizontal hold control on your TV to correct the wavy picture. If your TV does not have a horizontal hold control or adjusting the control does not help, please contact your local TV service center. |

If you cannot resolve the problem, please call the Customer Satisfaction Center for product assistance at 201-348-9090.

To locate an authorized servicer, please call toll free 1-800-211-PANA (7262).

Service Center List

For Product Information, Operating Assistance, Literature Request, Dealer Locations, and all Customer Service inquiries please contact:

800-211-PANA (7262), Monday-Friday 9am-9pm Saturday-Sunday 9am-7pm, EST.

Web Site: <http://WWW.Panasonic.com>
You can purchase parts, accessories or locate your nearest servicenter by visiting our Web Site.

Factory Servicenters Locations

CALIFORNIA

6550 Katella Avenue
Cypress, CA 90630

800 Dubuque Avenue
S. San Francisco,
CA 94080

20201 Sherman Way
Suite 102
Canoga Park, CA 91306

3878 Ruffin Road
Suite A
San Diego, CA 92123

COLORADO

1640 South Abilene Street
Suite D
Aurora, CO 80012

FLORIDA

3700 North 29th Avenue
Suite 102
Hollywood, FL 33020

GEORGIA

8655 Roswell Road
Suite 100
Atlanta, GA 30350

ILLINOIS

1703 North Randall
Road
Elgin, IL 60123
(Pick-up / Drop-off only)

9060 Golf Road
Niles, IL 60714

MARYLAND

62 Mountain Road
Glen Burnie, MD 21061

MASSACHUSETTS

60 Glacier Drive
Suite G
Westwood, MA 02090

MICHIGAN

37048 Van Dyke Avenue
Sterling Heights, MI 48312

MINNESOTA

7850-12th Avenue South
Airport Business Center
Bloomington, MN 55425

OHIO

2236 Waycross Road
Civic Center Plaza
Forest Park, OH 45240

PENNSYLVANIA

2221 Cabot Blvd. West
Suite B
Langhorne, PA 19047

Chartiers Valley
Shopping Center
1025 Washington Pike
Bridgeville, PA 15017

TENNESSEE

919-8th Avenue South
Nashville, TN 37203

TEXAS

7482 Harwin Drive
Houston, TX 77036

13615 Welch Road
Suite 101
Farmers Branch,
TX 75244

WASHINGTON

20425-84th Avenue South
Kent, WA 98032

HAWAII

99-859 Iwaiwa Street
Aiea, Hawaii 96701
Phone (808)488-1996
Fax (808)486-4369

Service in Puerto Rico

Matsushita Electric of Puerto Rico, Inc. Panasonic Sales Company/ Factory Servicenter:
Ave. 65 de Infanteria, Km. 9.5, San Gabriel Industrial Park, Carolina, Puerto Rico 00985
Phone (787)750-4300 Fax (787)768-2910

Accessory Purchases:

Customer Orders Only 800-211-PANA (7262)

Warranty

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation
of America,
One Panasonic Way
Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric of Puerto Rico, Inc.
AVE. 65 de Infantería, Km. 9.5
San Gabriel Industrial Park
Carolina, Puerto Rico 00985

PANASONIC Video Products Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "the Warrantor") will repair this product with new or refurbished parts, free of charge, in the USA or Puerto Rico, in the event of a defect in materials or workmanship as follows (all time periods commence from the date of the original purchase):

| PRODUCT | PARTS | LABOR |
|-------------|--|--|
| CAMCORDER | ONE (1) YEAR, EXCEPT CCD IMAGE SENSOR CCD IMAGE SENSOR - SIX (6) MONTHS | NINETY (90) DAYS NINETY (90) DAYS |
| VCR | ONE (1) YEAR | NINETY (90) DAYS |
| A/V MIXER | ONE (1) YEAR | NINETY (90) DAYS |
| MONITOR-VCR | ONE (1) YEAR, EXCEPT CRT CRT - TWO (2) YEARS | NINETY (90) DAYS CRT - NINETY (90) DAYS CUSTOMER PAYS ALL LABOR CHARGES AFTER 90 DAYS |

Monitor-VCR In-home or carry-in Service: 22" (diagonal) CRT / LCD and Larger
Monitor-VCR Carry-in Service: 21" (diagonal) CRT / LCD and smaller

Batteries (if included) - New rechargeable batteries in exchange for defective rechargeable batteries for ten (10) days. Non-rechargeable batteries are not warranted.

Tape (if included) - New video cassette tape in exchange for a defective video cassette tape for five (5) days.

In-home, carry-in or mail-in service, as applicable, in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Service Directory. Or call toll free 1-800-211-PANA (7262), to locate an authorized PASC Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of the date of the original purchase is required before warranty service is rendered.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use and does not cover normal maintenance, including, but not limited to, video and audio head cleaning. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set-up adjustments, improper antenna, inadequate signal pickup, maladjustment of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PASC Factory Servicenter or a PASC authorized Servicenter, or damage that is attributable to acts of God.

LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES) RESULTING FROM THE USE OF THIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Servicenter. If the problem is not handled to your satisfaction, then write to the Customer Satisfaction Center at the Panasonic Consumer Electronics Company address above.

SERVICE CALLS WHICH DO NOT INVOLVE DEFECTIVE MATERIALS OR WORKMANSHIP AS DETERMINED BY THE WARRANTOR, IN ITS SOLE DISCRETION, ARE NOT COVERED. COSTS OF SUCH SERVICE CALLS ARE THE RESPONSIBILITY OF THE PURCHASER.

warvid 10/20/97

Para fijar el idioma , canal y reloj

1 Encienda el televisor y la videogradora.

2 Sintonice el televisor al canal de salida de la videogradora (el mismo canal que ha fijado en la parte trasera de la videogradora; canal 3 o 4).


- Si esta usando los terminales de audio/video para su conexión, fije el televisor al modo de entrada de video.

3 Oprimir CH ▲ para elegir el idioma de la pantalla en inglés.

O, oprimir CH ▼ para elegir el idioma de la pantalla en español.

O, oprimir VCR/TV para elegir el idioma de la pantalla en francés.

- Ud. podrá fijar también usando los mismos botones que están ubicados en la videogradora.
- La videogradora debe conectarse a una antena o caja de TV por cable.

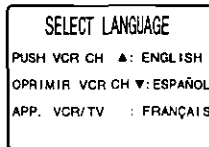


4 Oprimir CH ▲ para iniciar la fijación automática de los canales.

- "POR FAVOR FIJE RELOJ CON LA TECLA MENU" aparece.

5 Oprimir ACTION para que aparezca la pantalla de fijación del reloj.

- Introduzca los datos en 5 minutos o la videogradora saldrá de la pantalla de la fijación del reloj.

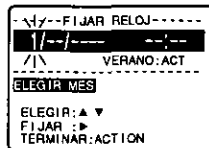


6 Oprimir ▲▼ para elegir el mes, y luego oprimir ► para fijar el mes.

7 Oprimir ▲▼ y ◀▶ para elegir y fijar las fijaciones restantes que están a la derecha.

- Fijaciones:**
- Fecha •Año
 - Hora
 - Verano (Hora veraniega)


8 Oprimir ACTION dos veces para iniciar a funcionar el reloj y salir desde este modo.

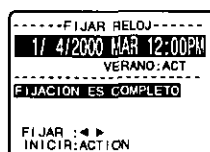


Para fijar o fijar de nuevo el reloj

En caso de que el reloj es incorrecto o ha ocurrido un corte eléctrico.

1 Oprimir ACTION para que aparezca la pantalla del menú.

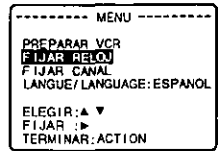


2 Oprimir ▲▼ para elegir "FIJAR RELOJ" y luego oprimir ► para que aparezca la pantalla de "FIJAR RELOJ."

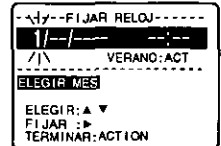

3 Oprimir ▲▼ y ◀▶ para elegir y fijar la hora y la fecha.

4 Oprimir ACTION dos veces para iniciar a funcionar el reloj y salir desde este modo.

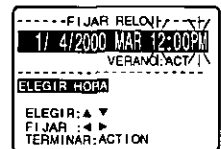

Operaciones básicas para la reproducción

1 Introducir una cinta

- Esta indicación aparece en el panel delantero.



2 Oprimir PLAY en el control remoto o en la videogradora para comenzar a reproducir.

3 Oprimir STOP en el control remoto o en la videogradora para parar la reproducción.

4 Oprimir STOP/EJECT para expulsar la cinta.

 
Para buscar una escena en particular durante la reproducción

Oprimir REW o FF durante la reproducción para buscar una escena.

- La velocidad de búsqueda es a 21 veces más rápida para el mode SLP.


Operaciones básicas para la grabación

- 1 Introducir una cinta con la lengüeta.



- 2 Oprimir CH ▲▼ o las teclas numéricas para elegir un canal.

- Para grabar desde una fuente externa, oprimir CH ▲▼ o INPUT para elegir "LINEA."

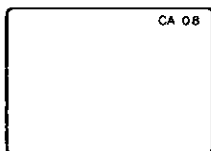

- 3 Oprimir SPEED para cambiar la velocidad de la cinta.

- SP = Reproducción estándar, LP = Larga duración, SLP = Superlarga duración.



 
- 4 Oprimir REC/TIME en el control remoto o videograbadora para empezar a grabar.

- Oprimir PAUSE para hacer una pausa en la grabación en progreso.

Grabación de un toque (OTR)

La videograbadora termina la grabación a una hora programada.

En el paso 4, oprimir repetidamente REC/TIME para fijar el tiempo de grabación. Cada presión cambiará la hora de parada como demuestra al siguiente.




- 5 Oprimir STOP para parar la grabación.

Programación fácil para la grabación con temporizador

- 1 Oprimir PROG para exhibir la pantalla de la programación.


- Si ya existe una programación memorizada, oprimir ▲▼ y ► para elegir un número sin programación.

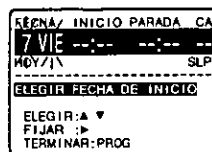

- 2 Oprimir ▲▼ y ► para elegir y fijar uno de los siguientes:

- 1-31 = Grabación de una sola vez
- DIARIO = A una misma hora LUN-VIE
- SEMANAL = Una vez a la semana a una misma hora

Ejemplo

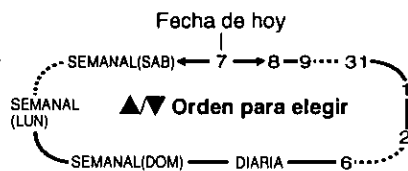

- 3 Oprimir ▲▼ y ◀▶ para elegir y fijar las siguientes fijaciones.


Fijaciones:

- Hora de inicio • Hora de parada
- Canal o LINEA para una fuente externa.
- Velocidad de la cinta (SP, LP, SLP).

Para hacer correcciones

Oprimir ► sucesivamente para avanzar u ◀ para retroceder hasta el paso que desea corregir.

- 4 Oprimir PROG para terminar la programación.

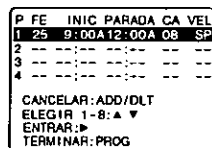

Para hacer más programaciones

Oprimir ▲▼ y ► para elegir y fijar un número de programación en blanco y luego repita los pasos 2 y 3.

- 5 Oprimir PROG para salir desde este modo y volver a la pantalla normal.

- 6 Oprimir POWER y apague el aparato para la grabación con temporizador.

- Si la fuente de la grabación es una caja de TV por cable, asegúrese de que la caja de TV por cable esté encendido y esté sintonizado al canal que desea grabar.

TIMER



Panel delantero

Quick Use Guide

This guide should only be used once you are familiar with the operations inside this manual. If you have any problems or need more information, please refer to the page listed.

Clock Reset (page 13)

Display the menu

```

  ----- MENU -----
  SET UP VCR
  SET CLOCK
  SET UP CHANNEL
  ID10MA/LANGUE: ENGLISH
  -----
  SELECT: ▲▼ KEY
  SET : ► KEY
  END : ACTION KEY
  
```

Select "SET CLOCK"

```

  ----- SET CLOCK -----
  1/ 4/2000 TUE 12:00PM
  -----
  SELECT HOUR
  -----
  SELECT: ▲▼ KEY
  SET : ◀▶ KEY
  END : ACTION KEY
  
```

Set the clock

Start the clock & exit this mode

Playback a Tape (page 15)

Turn TV on
Select VCR
Channel 3/4

Insert a tape

Start playback

Stop playback

At VCR
Eject tape

Make a Recording (page 16)

Turn TV on
Select VCR
Channel 3/4

Insert a tape
with Record Tab

Select channel

Select speed

Start recording

Stop recording

Set a Timer Recording (page 18)

Display the program screen

```

  RATE / START STOP CH
  7 FRI ---:--:--:--
  TODAY
  -----
  SELECT START DATE
  -----
  SELECT: ▲▼ KEY
  SET : ► KEY
  END : PROG KEY
  
```

Enter timer information

Once to finish the program, twice to exit this mode

```

  P DT START STOP CH SPD
  1 DAY 9:00A 12:00A 08 SP
  2
  3
  4
  -----
  CANCEL: ADD/DLT KEY
  SELECT 1-8: ▲▼ KEY
  ENTER : ► KEY
  END : PROG KEY
  
```

Turn VCR off to set the timer

Panasonic Consumer Electronics Company,
Division of Matsushita Electric Corporation of America
One Panasonic Way Secaucus,
New Jersey 07094



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>