



E

**LIGHT** - Slide the button to the left to turn the light on and right to turn off. *Remember to turn off the light after playing to save battery.*

**PROTECTIVE LID** - Press bottom button to open lid.

### PLAYING THE GAME:

Turn on the game by pressing the **On•Deal•Draw** button.

Press the **On•Deal•Draw** button again to deal your first set of cards. Five (5) points are automatically bet.

Select the cards you wish to hold by using the **Hold** buttons, which are located directly below each card to obtain the following winning card combinations:

Royal Flush _____	5000
Straight Flush _____	250
4 of a Kind _____	125
Full House _____	40
Flush _____	25
Straight _____	20
3 of a Kind _____	15
2 Pair _____	10
Jacks or Better _____	5

Press the **On•Deal•Draw** to receive your next set of cards. If you have a winning hand, your points will increase by the amount listed on the pay table on the back of your game.

**NOTE:** If your point total gets down to zero, 100 points is automatically added to your total. Maximum displayable score: 99,995.

### SLEEP MODE:

Fliptop Poker will go to sleep after one minute of non-activity. To wake the game, press the **On•Deal•Draw** button.

### BATTERY INSTALLATION:

This game is powered by two (2) AAA batteries.

- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert two (2) AAA batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

### ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

### CAUTION:

- As with all small batteries, the batteries used with this device should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the device and battery manufacturer's instructions.
- Do not dispose of batteries in fire.

MODEL 77001  
For 1 player / Ages 8 and up  
**INSTRUCTION MANUAL**  
P/N 823A5100 Rev.A

For 25 years, Radica has consistently produced the best portable electronic Poker games. Classic Vegas style Video Poker is achieved through superior programming, graphics, lighted screen and protective flip top design. Fliptop Poker will challenge your skills as lady luck provides hours of fun anytime, anywhere.

### Button Functions:

**On•Deal•Draw** - Press this button to turn the game ON and DEAL your first five (5) cards (5 points will automatically be bet). After you HOLD the cards you want to keep, press this button again to DRAW new cards.

**Hold (5)** - Press these buttons according to which card you want to keep. Press these buttons again to release the HOLD on that card.

**Sound** - Press this button to turn the sound on or off.

**High•Score** - Press this button at any time to see the highest score achieved on this unit since the last time the computer was reset or the last time the batteries were installed or re-inserted.

**Reset** - When a blunt point is inserted, this button RESETS the game to its original settings.



- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.
- Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.
- In an environment with radio frequency interference, the product may malfunction and require user to reset the product.

## MAINTENANCE:

- Handle this device carefully.
- Store this device away from dusty or dirty areas.
- Keep this device away from moisture or extreme temperature.
- Do not disassemble this device. If a problem occurs, press the Reset button, or remove and replace the batteries to reset the device, or try new batteries. If problems persist, consult the warranty information located at the end of this instruction manual.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the device.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

### Please retain this for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

## 90-DAY LIMITED WARRANTY

**(This product warranty is valid in the United States and Canada only)**

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

**IMPORTANT:** Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

Distributed by:  
**RADICA USA Ltd.**  
 13628-A Beta Road  
 Dallas, TX 75244-4510



**RADICA®**  
**FLIPTOP POKER IS A TRADEMARK OF**  
**RADICA GAMES LTD.**  
 © 2006 RADICA GAMES LTD.  
 PRODUCT SHAPE™  
 ALL RIGHTS RESERVED

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>