



SAFE BATTERY USAGE

- Use alkaline batteries for best performance and longer life.
- Use only the type battery recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.

NOTE: The voltage of a fully-charged, rechargeable battery is often lower than that of a fresh alkaline battery. Therefore, it is recommended that alkaline batteries be used instead of rechargeable batteries for best performance and for longest play time.

-  'Let's care for the environment!'
The wheellie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.
-  Do not treat old batteries as household waste. Take them to a designated recycling facility.

ONLINE GAME ACCESS

YOUR SECRET GAME CODE IS F47H31

To access the game, you must create a user account at moxiegirlz.com. Be sure to ask your parent or guardian's permission before registering online for a moxiegirlz.com account! NOTE: moxiegirlz.com requires a PC or Mac with a broadband (DSL, Cable, LAN) internet connection and screen resolution of at least 1024x768 at "millions of colors." For complete system requirements and website Terms & Conditions please visit Moxiegirlz.com.

Please keep this manual as it contains important information.



0409-0-E/INT

www.moxiegirlz.com
© MGA Entertainment, Inc.
MOXIE GIRLZ™ is a trademark of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.
16300 Roscoe Blvd.
Van Nuys, CA 91406 USA
(800) 222-4685
Printed in China

The Preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com.



Moxie girlz™ Sign in Journal

Age 6+ years

Item no. 394365

 
ADULT BATTERY INSTALLATION REQUIRED

INTRODUCTION

Keep your Moxie Girlz™ secrets safe with the secret sign-in journal that only YOU can unlock! Your journal magically remembers your personal signature or symbol so only you can read what's inside!

CONTENTS

- 1 Moxie Girlz™ Secret Sign-In Journal including:
 - a. Touch Panel
 - b. Storage Area
 - c. 1 Paper Pad (15 Sheets)
 - d. Reset Button

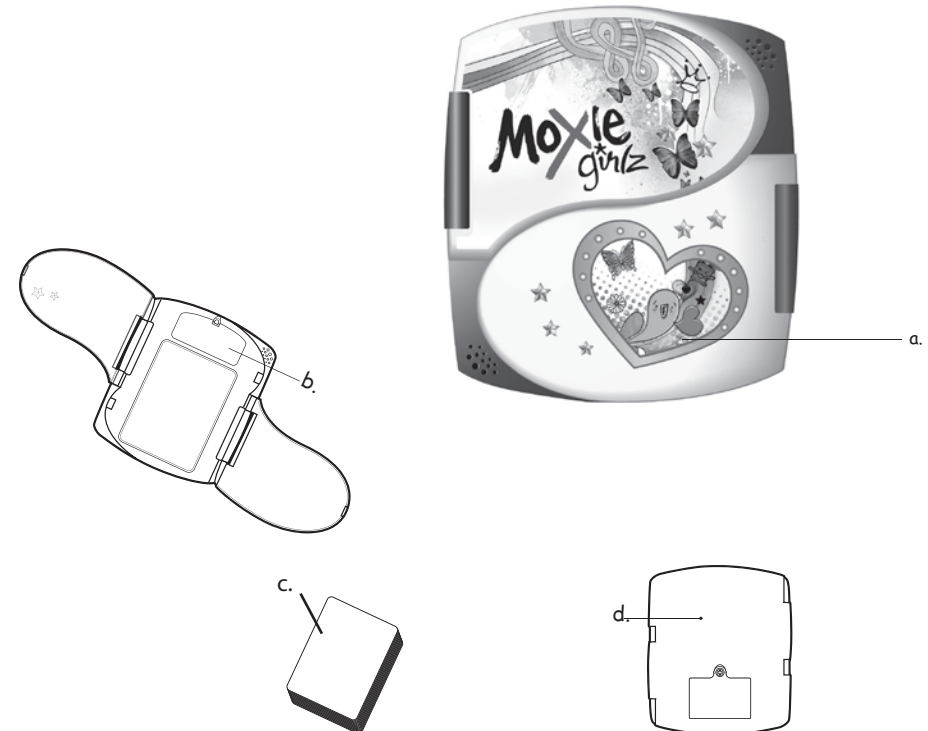


Illustrations may vary from actual contents.

BEFORE YOU BEGIN

Before writing your first journal entry, an adult must install fresh, alkaline batteries:

 1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the back of the Moxie Girlz™ Secret Sign-in Journal.
2. Install two (2) AA alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
3. Replace the compartment cover and tighten the screw.

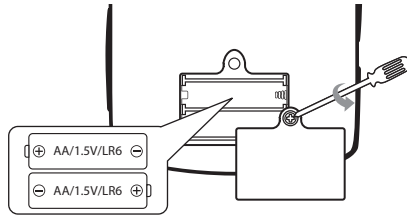

QUICK START

 
SETTING YOUR SECRET, HANDWRITTEN SYMBOL

When you remove your Journal from its packaging, it will be closed. Installing new batteries will automatically reset the Journal and you can then enter your secret password gesture and use that gesture to open the Journal.

NOTE: You can also manually reset the Journal by placing the end of a paperclip into the "reset" opening on the bottom of the unit and pressing it in.

Once the Journal is reset, by installing batteries or manually, the lights on the front of the Journal will flash on and off three times.

1. Use your index fingernail to draw a personal letter, number or other symbol on the touch pad in the active area. Make a symbol that only you will remember and can easily recreate. (Remember where on the active area and how you drew the symbol as the Journal has a high degree of accuracy in recognizing your unique symbol.)
2. Once you have drawn your Symbol, the lights on the front of the Journal will flash once, accompanied by a "brrriinnnggg" sound effect to indicate that your Symbol has been stored. Your Journal is now safely locked and it will go into sleep mode until you're ready to open it.

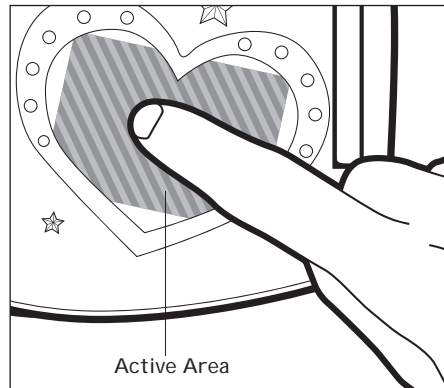

NOTE: If you do not enter a secret symbol within 30 seconds the Journal will play music and go into sleep mode. Wake it up again by either tapping once lightly on the touch pad (then entering your symbol while the lights flash) or resetting the Journal with the end of a paperclip and repeating steps 1 & 2.

OPENING YOUR JOURNAL

1. Tap the touch pad to wake your Journal up. The lights will flash on and off.
2. While the lights are flashing, enter your Secret Symbol on the Touch Pad. You have 30 seconds to do so.

QUICK START CONT'D

NOTE: You must recreate your symbol as close as possible to the symbol you originally drew and in the same area you drew it or the Journal may not recognize it. If you do not enter the correct Symbol within 30 seconds, music will sound and the Journal will go into Sleep Mode. Repeat steps #1 and #2 to open the Journal.

 
⚠ CAUTION - The secret doors open quickly. Keep your hand away from the opening doors.

3. If the Symbol is correct, the lights will "shimmer," you will hear a musical sound and the door will open. If the symbol is incorrect, the lights will flash and an alarm will sound.
4. The Journal will allow you 5 attempts to enter the correct symbol. After the fifth incorrect try, the Journal will play music and go into sleep mode. Reset the unit and enter a new symbol.

Now you're ready to place your secrets into your Secret Sign-In Journal where no one can access them without your secret symbol!

TROUBLESHOOTING

1. If the lights or sounds weaken or do not work, replace the batteries.
2. Under an environment with electrostatic discharge, (static electricity) this product may malfunction and require user to reset the unit by changing the batteries.
3. To wake the unit from sleep mode tap it once lightly on the touch pad then enter your symbol while the lights flash.
4. To reset the Journal, press the end of a paperclip into the reset opening on the back of the unit, then repeat steps 1 & 2 under "Setting Your Secret, Handwritten Symbol."

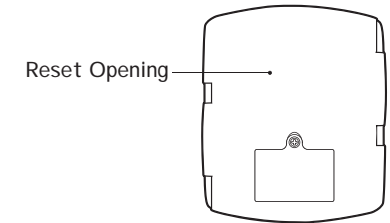

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>