

Universal GPS Car Adapter

What's Included

- Universal GPS Car Charger
- 90° Mini USB Connector (No. 1)
- 180° Mini USB Connector (No. 2)
- Mini USB Connector (No. 3)
- DC Connector (No. 4)
- DC Connector (No. 5)
- User's Guide








Plug into the lighter socket. The LED lights.

Connect the correct connector plug to the car charger then insert it into your GPS system's power jack.

Notes:

- Refer to the table and numeric marking on the connector to determine which connector to use with your GPS system.
- Be sure to use the connector that meets your GPS system's specifications. Using the wrong connector can damage the system.
- Your vehicle's engine must be running to power or charge your GPS system.
- Be sure to remove the connector plug with the car charger when disconnecting your GPS system.

No.	Connector	Compatible GPS Model No.
1	90° Mini USB Connector 	Garmin Nüvi 200, 200W, 250, 250W, 260, 270, 300, 310, 350, 360, 370, and 660; StreetPilot i2, i3, and i5
2	180° Mini USB Connector 	Garmin eTrex Legend Cx, Vista Cx, and Venture Cx; Edge 205 and 305; Forerunner 301; Mio C220, C230, C310X, C320, C520, C710, C720t, H610, Moov 200, and Moov 300; Navigon 2100, 5100, and 7100; Navman F15; Magellan Maestro 3250, and 4250; Roadmate 1200
3	Mini USB Connector 	TomTom ONE and ONE XL; Navman N40i
4	DC Connector (4.0mm O.D, 1.7mm I.D.) 	TomTom 300, 510, 710, and 910; Sony U73T, and U83T
5	DC Connector (3.2mm O.D, 0.9mm I. D.) 	Magellan Roadmate 800, 860T, 2000, 2200T, 3000T, 3050T, and 6000T; Maestro 3100, 3140, and 4040

Thank you for purchasing your Universal GPS Car Charger from **RadioShack**. You can power or charge your GPS system anytime you are on the road. Please read this user's guide before installing, setting up and using your new car charger.

Specifications

Input Voltage..... 12 to 24V DC
Rating.....5V/2A

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Limited Warranty

This product is warranted by **RadioShack** against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from **RadioShack** company-owned stores and authorized **RadioShack** franchisees and dealers. EXCEPT AS PROVIDED HEREIN, **RadioShack** MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, **RadioShack** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RadioShack** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store. **RadioShack** will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations
300 RadioShack Circle, Fort Worth, TX 76102

12/99

www.radioshack.com



Protect the environment by recycling used electronics. Go to www.ecyclingcentral.com to find a recycle location near you.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>