

RadioShack®



43-5529

## 2.4GHz Accessory handset for 43-5829



### In this Package

- Handset (1)
- Charger (1)
- Ni-MH Battery Pack (1)  
(inside handset)
- Belt Clip (1)
- AC Adapter (1)
- This Owner's Manual (1)

Please read this owner's manual before installing,  
setting up and using your new product

# **Contents**

Features .....	3
Introduction .....	4
Selecting a Location .....	4
Using AC Power.....	5
Connecting/Charging the Battery .....	5
Registering the Handset.....	8
Care .....	9
Service and Repair .....	9
The FCC Wants You to Know .....	9
Limited One-Year Warranty .....	12

## Features

**Additional Handset** — lets you place additional handsets to expand your telephone system (*RadioShack* 43-5829). You can even transfer outside calls or make an intercom conversation between the handsets.

**2.4 GHz Frequency Hopping Spread Spectrum System** — spreads the signal across several frequencies, providing additional security for your phone conversations.

**10 Tone and 10 Melody Ringer Control** — lets you control the way the ring sounds.

**Message Indicator** — lets you know a message is waiting.

**Hands Free Operation** — allows you to talk while your hands are occupied with other tasks.



The lightning symbol is intended to alert you to the presence of uninsulated dangerous voltage within this product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



The exclamation symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

**WARNING:** To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

## Introduction

Thank you for purchasing this **RadioShack** 2.4 GHz Accessory handset with charger. Your handset is designed for use with a **RadioShack** 2.4 GHz Multi-Handset Expandable Cordless Telephone. You can use this handset in any room in your home or office that has an AC outlet. No more running to the other end of the house to answer the phone! You can also transfer an outside call to another handset.

This handset is designed to work only with a **RadioShack** 2.4 GHz Multi-Handset Expandable Cordless Telephone (Cat. No. 43-5829). Do not try to use it with other cordless telephones.



As an Energy Star® Partner, **RadioShack** Corporation has determined that this product meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark.

## Selecting a Location

Select a location that is near an accessible AC standard wall outlet and away from electrical machinery, electrical appliances, metal walls or filing cabinets, wireless intercoms, alarms, room monitors, and other cordless phones.


## Using AC Power

You can power the charger using the supplied 9V, 210 mA AC adapter.



**Caution:** You must use a Class 2 power source that supplies 9V DC and delivers at least 210 mA. Its center tip must be set to positive and its plug must fit the charger's DC IN 9V jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the handset or the adapter.

least 210 mA. Its center tip must be set to positive and its plug must fit the charger's DC IN 9V jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the handset or the adapter.

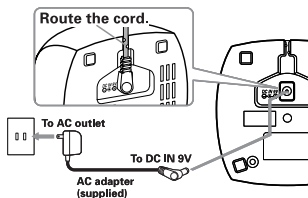


Insert the supplied AC adapter's barrel plug into the DC IN 9V jack on the bottom of the charger. Route the cord through the strain relief slot and plug the adapter into a standard AC outlet.

## Connecting/Charging the Battery

The phone comes with a rechargeable nickel metal hydride (Ni-MH) battery pack. Before using your phone, you must install the battery pack, and then charge it for about 15-20 hours.

1. Press down and slide the battery compartment cover off.

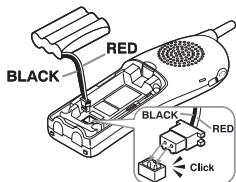

2. Plug the battery pack's connector into the socket in the compartment (the connector fits only one way), then place the battery pack in the compartment. **MODELS VARY! CHARGE HANDSET ON THE BASE FOR REGISTRATION OR REFER TO OWNER'S MANUAL** appears.
3. Replace the cover.

To charge the battery pack, place the handset on the charger. The CHARGE indicator on the charging cradle lights. Proceed to "Registering the Handset" on Page 8.

**!** **Important: Be sure the battery pack is properly connected before you try to charge it. The CHARGE indicator lights when the handset is on the charger, even if the battery pack is not connected.**

Recharge the battery pack when LOW BATTERY appears.

**NOTES**

- **Using a damp cloth, clean the charging contacts on the handset about once a month.**
- **If the battery pack becomes weak during a call, the handset beeps and LOW BATTERY appears. When this happens, you cannot make a call until you recharge the battery pack.**
- **If the display is blank and the phone does not work, recharge the battery pack. (The battery power might be too low to light the display.)**

About once a month, fully discharge the battery by keeping the handset off the base or charger until LOW BATTERY stays lit. Otherwise, the battery pack loses its ability to fully recharge.

If you are not going to use your phone for an extended period, disconnect the battery pack. This increases the battery pack's usable life.

The supplied battery pack should last for about a year. If the battery pack does not hold a charge for more than 2 hours after an overnight charge, replace it with a new 3.6-volt, 600 mAh battery pack with a connector that fits the socket in the battery compartment.

You can order a replacement battery pack through your local **RadioShack** store or online at **[www.radioshack.com](http://www.radioshack.com)**. Install the new battery pack and charge it for about 15–20 hours.

If you have trouble installing the battery pack, take the handset to your local **RadioShack** store for assistance.



**Warning:**

- **Dispose of old battery packs promptly and properly. Do not burn or bury them.**
- **There is a risk of explosion if batteries are replaced by the wrong type.**
- **Dispose of used batteries according to the instructions.**

## Registering the Handset

After fully charging the battery pack, register your handset.

1. Before registering the handset, the battery pack must be charged for 15-20 hours.
2. Place the extra handset in the main base unit to begin registration.
3. While the handset is registering, **HANDSET REGISTERING** will appear in the LCD. When **REGISTRATION COMPLETE** is displayed, the handset has been registered to the base.

If **REGISTRATION FAILED** appears, remove the handset from the base and try again.

**NOTE**

**An optional handset can be registered when the main base is in standby mode.**

The handset is ready to operate. Use it as described in the owner's manual supplied with your original phone.



## Care

Keep the handset dry; if it gets wet, wipe it dry immediately. Use and store the handset only in normal temperature environments. Handle the handset carefully; do not drop it. Keep the handset away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

## Service and Repair

If your handset is not performing as it should, take it to your local **RadioShack** store for assistance. Modifying or tampering with the handset's internal components can cause a malfunction and might invalidate its warranty.

## The FCC Wants You to Know

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local **RadioShack** store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your handset.

Changes or modifications not expressly approved by **RadioShack** may cause interference and void the user's authority to operate the equipment.

To ensure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the FCC's exposure criteria. For body worn operation, the FCC RF exposure guidelines were also met when used with the **RadioShack** accessories supplied or designed for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines and should be avoided.

# Memo

## Limited One-Year Warranty

This product is warranted by **RadioShack** against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from **RadioShack** company-owned stores and authorized **RadioShack** franchisees and dealers. EXCEPT AS PROVIDED HEREIN, **RadioShack** MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, **RadioShack** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF **RadioShack** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the **RadioShack** sales receipt as proof of purchase date to any **RadioShack** store. **RadioShack** will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of **RadioShack**. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a **RadioShack** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**RadioShack** Customer Relations, 300 RadioShack Circle, Fort Worth, TX 76102-1964

12/99

UZZ01473BZ(0)  
43-5529  
03A06  
Printed in China



©2006. **RadioShack** Corporation.  
All rights reserved. **RadioShack** and **RadioShack.com** are  
trademarks used by **RadioShack** Corporation.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>