

## Smart Travel Charger

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Smart Travel Charger gives you some of the finest features in cellular phone battery chargers. Its short circuit and overload protection ensure reliable performance, and its slim shape and lightweight body make it easy to carry wherever you go.

Its features also include:

**100–240 VAC Wide AC Input Range** — lets you charge a battery from any AC power source worldwide. Great for traveling!

**12–24 VDC Wide DC Input Range** — lets you charge the battery in either a car or large truck with a 24V DC system. Switches from 12V DC to 24V DC automatically.

**Over-charge Protection** — when the battery is fully charged, the charger automatically switches to trickle charging to avoid overcharging.

**Convertible Charging Outlet and Cables** — let you easily charge your cellular phone at home or on the road.

**Power Indicator** — lights when the power source is connected.

### CELLULAR PHONE BATTERIES

The charger is designed for use with the following cellular phone batteries.

Motorola	Nokia
StarTAC series	5100 Series
V3620	6100 Series
L7089	7100 Series
P8090	8022 Series
	8800 Series

See "Specifications" on Page 2 for a list of other phones' charging cables that can be used with this charger.

### CONNECTIONS

#### Connecting AC Power (100–240 VAC)

To charge the battery using AC power, connect the supplied AC cord's small plug to the charger's **AC INPUT** socket, then connect the AC cord's larger end to a standard AC outlet. The green power indicator lights.

**Note:** The supplied AC cord's two-bladed plug is suitable in the USA and Canada. For use in other countries, your local RadioShack store offers a variety of adapters.

#### Connecting Vehicle Power (12–24 VDC)

To charge the battery using a vehicle's DC power, connect the supplied DC cord's barrel plug to the charger's **DC INPUT** socket, then con-

nect the DC cord's cigarette-lighter plug to the vehicle's cigarette-lighter socket. The green power indicator lights.

**Note:** The adapter automatically adjusts for 12V or 24V systems.

#### Connecting a Motorola Rechargeable Battery

If your cellular phone is a Motorola StarTAC model, connect the supplied flat-plug cable labeled **FOR MOTOROLA STARTAC** to the cellular phone's battery charging socket, then connect the cable's RJ11 plug to the charger's **TO PHONE** socket.

#### Connecting a Nokia Rechargeable Battery

If your cellular phone is a Nokia model, connect the supplied barrel-plug cable labeled **FOR NOKIA 5110/6110** to the cellular phone's battery charging socket, then connect the cable's RJ11 plug to the charger's **TO PHONE** socket.

### CHARGING THE BATTERY

When the connection is completed, the charger starts charging the battery. Consult your cellular phone's owner's manual for directions regarding your specific phone and how to tell when it is charged.

### REPLACING THE DC POWER CORD'S FUSE

Your charger's DC power cord's cigarette lighter plug uses a 1.5A 250V fast-blow fuse to protect the charger from being damaged due to overload. The fuse blows when the load current exceeds 1.5 Amp. Should this happen, replace the fuse with the same type fuse (available at your local RadioShack store).

**Important:** If you are using a DC power cord other than the supplied one, be sure the cigarette-lighter plug has a protective fuse with the same specifications and polarity.

 **RadioShack**<sup>®</sup>  
www.radioshack.com<sup>™</sup>

© 2000 RadioShack Corporation.  
All Rights Reserved.  
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

## SPECIFICATIONS

Charging Current .....	0.8A Maximum
Life Test .....	5,000 Hours
Application .....	Charges selected Motorola and Nokia Rechargeable Batteries (see "Cellular Phone Batteries" on Page 1)
Included RadioShack Charging Cables:	
Cable-V3620 .....	for Motorola StarTAC/CD920/V3620/L2000/LF2000/V2088
Cable-6120 .....	for Nokia 6120/6185/5100/5190/CG-600/601
Available charging cable listed in RSU .....	Audiovox 405 Ericsson CF-688, CF-738, DH-618 Ericsson CH-388, DH-318 Motorola Elite/Flare Motorola PT950/MicroTAC Motorola Populus Motorola Nextel i600, IP-280, IP-370 Motorola Nextel I500 Motorola i1000 OKI 1325 Qualcomm 1920/2700 Qualcomm Q Phone Samsung 1000/1900/1910 Samsung 2000/3500, Samsung SGH-210/1500 and Samsung SGH811
Included Accessories .....	1 AC Cord 1 DC Cigarette-Lighter Adapter 2 Charging Cables Carrying Pouch

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99

RadioShack Corporation  
Fort Worth, Texas 76102

23-1470  
11A00  
Printed in Taiwan

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>