

LCD Jumbo Display Dual Timer/Clock

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack LCD Jumbo Display Dual Timer/Clock is a precise, dual-purpose time-piece. Both timers can count hours, minutes and seconds, up or down, from a specified time. The metal stand lets you set the timer/clock on a desk or table, and the clip and magnet let you attach it almost anywhere.

Countup Timer — counts up to 29 hours, 59 minutes and 59 seconds.

Countdown Timer — counts down from 29 hours, 59 minutes and 59 seconds.

 
Minute and Second Increments — let you count even small amounts of time.

Alarm — alerts you when the countdown time elapses.

INSTALLING THE BATTERY

You must install the supplied LR44 button-cell battery before using your timer/clock.

1. Insert a coin into the groove on the battery compartment cover, turn the coin counter-clockwise, and remove the cover.

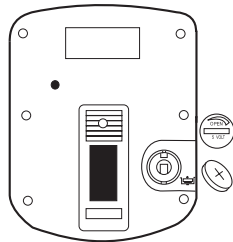

2. Insert the battery with the positive (+) side facing up. The timer/clock beeps.
3. Replace the cover.

Cautions:

 
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.
- Dispose of old batteries promptly and properly. Do not burn or bury them.

Notes:

- If the timer/clock does not work when you install the battery, remove and re-install it.
- When the display dims or the alarm weakens, replace the battery. For the best performance and longest life, we recommend using a RadioShack alkaline battery.

SETTING THE CLOCK

1. Repeatedly press **MODE** until **CLOCK** appears in the upper left corner.

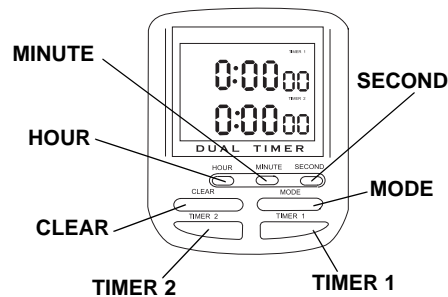

2. Hold down **CLEAR** for about 2 seconds until the display flashes.

Note: Repeatedly press **CLEAR** to change between a 12- and 24-hour for-

 **RadioShack**
www.radioshack.com™

© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

mat. **PM** appears for PM hours when the 12-hour format is selected.

3. Repeatedly press (or hold down) **HOUR** until the correct hour appears.
4. Repeatedly press (or hold down) **MINUTE** until the correct minute appears.
5. Repeatedly press (or hold down) **SECOND** until the correct second appears.

Note: When you hold down **MINUTE** or **SECOND**, the setting advances in increments of 10.

6. Press **MODE** or wait until the display stops flashing. The clock is now set.

COUNTING UP

Each timer can count up to 29 hours, 59 minutes and 59 seconds. Then they reset and begin counting from **0:00 00** again. You can use the timers separately or together.

1. While **CLOCK** appears, press **MODE**. **COUNT UP1**, **COUNT UP2**, and their timers appear.

Note: If either timer does not show **0:00 00**, press **CLEAR** to reset both timers.

2. Press **TIMER 1** (for **COUNT UP1**) or **TIMER 2** (for **COUNT UP 2**) to start counting up.

Note: You can start **COUNT UP1** and **COUNT UP2** at the same time by pressing **TIMER 1** and **TIMER 2** together.

3. Press **TIMER 1** or **TIMER 2** to stop counting up. Press again to continue counting up.
4. When both timers have stopped, press **CLEAR** to reset them to **0:00 00**.

COUNTING DOWN

You can use the two countdown timers for activities that require a predetermined amount of time, such as baking a cake or playing a game. The timers count down in 1-second increments.

Note: The maximum countdown time is 29 hours, 59 minutes and 59 seconds.

1. While **CLOCK** appears, press **MODE** twice. **TIMER 1** and **0:00 00** appear.

Notes:

- To use **TIMER 2**, press **MODE** three times. **TIMER 2** appears.
- To use both timers, press **MODE** four times. **TIMER 1** and **TIMER 2** appear. Then press **TIMER 1** or **TIMER 2** to set each timer.

2. Repeatedly press (or hold down) **HOUR** until the desired hour appears.
3. Repeatedly press (or hold down) **MINUTE** until the desired minute appears.
4. Repeatedly press (or hold down) **SECOND** until the desired second appears.

Note: When you hold down **HOUR**, **MINUTE**, or **SECOND**, the setting advances in increments of 10.

5. Press **TIMER 1** or **TIMER 2** to start counting down.

Notes:

- Both timers can be run at the same time.
- To pause the countdown before the timer reaches **0:00 00**, press **TIMER 1** or **TIMER 2**. To resume the countdown, press the same button again.

- To stop the countdown before the timer reaches 0:00 00, press **TIMER 1** or **TIMER 2**, then press **CLEAR**. The timer resets to 0:00 00.

When the timer reaches 0:00 00, the alarm sounds for 1 minute and **TIMES UP** flashes above the active timer. Then, the timer counts up in 1-second increments. Press any button to silence the alarm.

When the alarm stops, **TIMES UP** continues to flash and the timer continues to count up. To stop the count, press the active timer's button. The timer resets to 0:00 00.

USING THE CLOCK AND TIMERS

You can view the clock and use the timers at the same time.

1. After you set the count up or countdown timers, press **MODE** until **CLOCK** appears in the upper left corner. The active timer(s) flash.
2. Repeatedly press **MODE** to switch between viewing the clock and the timers.

 
MOUNTING THE TIMER/CLOCK

The magnet on the back of the timer/clock attaches to any metal surface, such as a refrigerator, oven or file cabinet.

You can also clip the timer/clock to a clipboard or your clothing. Press down the upper end of the clip, attach it to your clipboard or clothing, and release the clip.

Using the Stand

1. Press down the upper end of the clip.
2. Use a pencil tip to pull the small stand out until it fits onto the clip.
3. Set the timer on a table or desk.

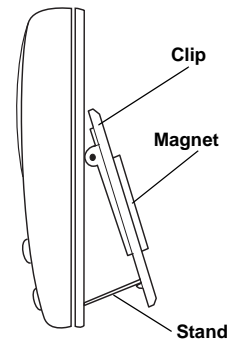

CARE

Keep the timer/clock dry; if it gets wet, wipe it dry immediately. Use and store the timer/clock only in normal temperature environments. Handle the timer/clock carefully; do not drop it. Keep the timer/clock away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the timer/clock's internal components can cause a malfunction and might invalidate its warranty. If your timer/clock is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Operating Voltage	1.25 to 1.65 V
Power Source	One LR44 button cell battery
Battery Life	About 1 year
Operating Temperature	32–122 F (0–50 C)
Time Deviation	0.67 sec/day at 1.5V
Dimensions (HWD)	1¼ × 2 ⁵ / ₈ × 3 ³ / ₈ Inches (32 × 67 × 86 mm)
Weight	2.5 oz (71 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack Corporation
Fort Worth, Texas 76102

63-898A
04A01
Printed in Hong Kong

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>