



NOTE


- The default alarm time is set to 12:01. Press **SET/ALM** to turn off the alarm before you set the time.  disappears.
- Each time you press any button, the clock beeps.
- While setting the time, if you do not press a key for about 30 seconds, the clock beeps and returns to the current time display.
- The clock uses the 12-hour format. PM appears for a PM hour.
- While setting the alarm time, if you do not press a key for about 30 seconds, the clock beeps and returns to the current time display.
- To turn on or off the alarm, press **SET/ALM**.  appears when the alarm is turned on, and disappears when the alarm is turned off.

WARNING

Dispose of old batteries promptly and properly. Do not burn or bury them.

CAUTION

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the clock for a month or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

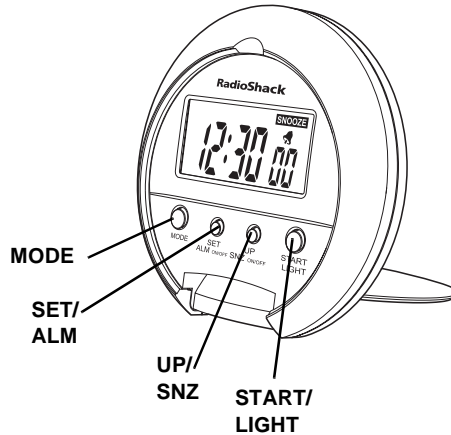

Thank you for purchasing a RadioShack Vibrating Alarm Clock. Your clock combines a simple design with advanced technology. You can set the clock to beep or vibrate (without disturbing others around you) at the preset time. Its lightweight design lets you carry it anywhere.

Clock Alarm — beeps or vibrates at a time you set.

Snooze Control — temporarily silences the alarm.

Backlight — lights the display for about 3 seconds so you can see the time in the dark.

Timer — lets you count down time from a preset time less than 24 hours.



Clock Cover — protects the display and serves as a stand.

INSTALLING BATTERIES

Your clock requires two AAA batteries (not supplied) for power. For the best performance and longest battery life, we recommend RadioShack alkaline batteries.



1. Slide the clock's battery compartment cover on the back of the clock in the direction of the arrow and remove it.
2. Place two AAA batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover.




About 5 seconds after you install the batteries, the clock vibrates and beeps three times. 12:00 00 and  appear. 

When the clock stops operating properly or the display dims, replace the batteries.


USING THE COVER



Your clock's cover protects the display and also serves as a stand so you can place the clock on a table or other flat surface. To use the cover as a stand, lift and open the cover all the way.

SETTING THE TIME

1. Press **MODE**.  appears and the hour digits flash. 
2. Repeatedly press (or hold down) **UP/SNZ** to set the hour.
3. Press **SET/ALM** to store the hour. The minute digits flash.
4. Repeatedly press (or hold down) **UP/SNZ** to set the minute. The second digits automatically return to 00 when you adjust each minute.
5. Repeatedly press **MODE** until the current time appears. 




SETTING THE ALARM TIME

You can set the clock to sound an alarm to remind you of a daily event (such as a meeting). 

1. Press **MODE** twice.  and 12:01 or the last alarm time appear. The hour digits flash.
2. Repeatedly press (or hold down) **UP/SNZ** to set the alarm hour.
3. Press **SET/ALM**. The minute digits flash.
4. Repeatedly press (or hold down) **UP/SNZ** to set the alarm minute.
5. Repeatedly press **MODE** until the current time appears.
6. To check the alarm time, repeatedly press **MODE** until  and the set alarm time appear.

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

 — Warning  — Note  — Caution

NOTE

- If you set the clock to vibrate at the alarm time, the clock keeps vibrating even when you open the cover during the alarm time.
- Snooze only functions twice in each alarm setting.
- While setting the timer, if you do not press any key within about 30 seconds, the clock beeps once and returns to the current time display.
- If the countdown timer is running, press **START/LIGHT** to stop counting then press **SET/ALM** to reset the timer to **0:00 00**.
- If the countdown timer is not running and the display is not set to **0:00 00**, press **SET/ALM** to reset the timer to **0:00 00**.
- The maximum countdown time you can set is 23 hours, 59 minutes, 59 seconds.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

 
This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.


This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

USING THE ALARM

1. Press **SET/ALM** to turn on the alarm.  appears.
2. To set the clock to vibrate, close the cover after setting the alarm time.
To set the clock to sound alarm beeps, leave the cover open after setting the alarm time.
3. When the clock reaches the preset alarm time, it vibrates or beeps intermittently for about 1 minute then automatically turns off. To silence the alarm sooner, press any key.


If you do not want the alarm to sound or vibrate again the next day, press **SET/ALM** to turn off the alarm.  disappears.

USING SNOOZE

1. To silence the alarm and snooze for 4 minutes, press **UP/SNZ** immediately after setting the alarm time. **SNOOZE** appears.
2. When the preset alarm sounds, press any key to temporarily silence the alarm. After about 4 minutes, the alarm sounds (or vibrates if you have closed the cover) for 1 minute then automatically turns off. To silence the alarm sooner, press any key.
3. To turn off snooze, press **UP/SNZ** again. **SNOOZE** disappears.

USING THE COUNTDOWN TIMER

The countdown timer lets you set a specific time to count down from up to 23 hours, 59 minutes, 59 seconds.

1. Press **SET/ALM** to turn on the alarm.  appears.
2. Repeatedly press **MODE** until **TIMER** and **0:00 00** appear. The hour digits flash.
3. Press or hold down **UP/SNZ** to set the desired countdown hours.
4. Press **SET/ALM**. The minute digits flash.
5. Press or hold down **UP/SNZ** to set the desired countdown minutes.
6. Press **SET/ALM**. The second digits flash.
7. Press or hold down **UP/SNZ** to set the desired countdown second.
8. Press **START/LIGHT** to start the countdown timer. The display lights for 3

seconds, **TIMER** flashes and the timer begins to countdown.

9. To stop the countdown, press **START/LIGHT** again. When the timer reaches **0:00 00**, it sounds an alarm or vibrates for 1 minute. To stop the alarm sooner, press any key.

USING THE CLOCK LIGHT

Press **START/LIGHT** to light the display for about 3 seconds. To light the display continuously, hold down **START/LIGHT**. When you release it, the light automatically turns off after 3 seconds.

RESETTING THE CLOCK

If the clock displays segmented digits, does not work properly, or locks up, reset it by using a pointed object, such as a straightened paper clip, to press **RESET** on the back of the clock.

CARE

Keep the clock dry; if it gets wet, wipe it dry immediately. Use and store the clock only in normal temperature environments. Handle the clock carefully; do not drop it. Keep the clock away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

If your clock is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the clock's internal components can cause a malfunction and might invalidate its warranty.

SPECIFICATIONS

Power Source Two AAA Batteries
Clock Accuracy ± 0.67 Seconds/Day
Current Drain Less Than 6 μ A
Operating Temperature..... 32°–104°F
(0°–40°C)

Battery Life About 13 Hours
(Continuously Vibrating)

Dimensions (Diameter \times Depth) $3\frac{1}{8} \times 3\frac{1}{32}$ in
(80 \times 25 mm)

Weight (without batteries)..... 1.83 oz (52 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>