

R RadioShack®

Cat. No. 63-955

Traveling Recording Picture Frame/Alarm Clock

Your RadioShack Traveling Recording Picture Frame/Alarm Clock combines a clock with a recorder that uses the latest IC (memory) recording technology to record sounds without tape or moving parts. You can easily see the time, and you can record an important message as well. At a time you set, you can have the recorder play the message automatically. The IC lets you record a new message as many times as you like.

The clock includes these features.

Large Display — lets you easily see the time and alarm settings.

Built-In Photo Frame — holds a favorite picture.

10-Second Solid-State Recorder — records and plays a single message as an alarm or memo.

Clock Alarm — alerts you with a repeating series of four beeps, or announces the prerecorded message.


Compact Size — makes it handy to pack or carry wherever you go.

PREPARATION

Removing the Battery Insulation Strips

Your picture frame/alarm clock comes equipped with four type 357A button-cell batteries already installed. However, before you can use the clock, you must remove the plastic insulation sheet from inside the battery compartment.


1. Use a Phillips screwdriver to remove the screw from the battery compartment cover.

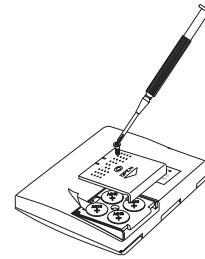

2. Slide off the battery compartment cover.
3. Grasp the white plastic sheet and gently pull it off.
4. Make sure the batteries are in position, then replace the battery cover and secure it with the screw.

Framing a Picture

Select a picture or photograph which is thin enough to fit into the frame's slot. Trim the picture to $2\frac{5}{8} \times 2\frac{3}{8}$ inches (66 × 60 mm), then insert the picture from the top of the frame and push it down until it touches the bottom of the frame.

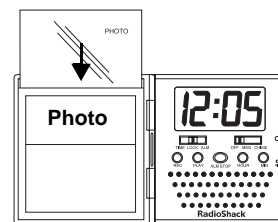

To replace the picture, slide it up until it clears the upper edge frame opening.

© 1999 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

OPERATION

Recording A Message

You can record a message up to 10 seconds long. Follow these steps to record the message.

Use a straightened paper clip to press in and hold down **REC**. The red indicator lights. Speak into **MIC** from about 10 inches away in a normal voice. (Speaking too closely to **MIC** distorts your recording.)

After 10 seconds, the recording stops automatically and the indicator turns off. To stop recording sooner, release **REC**.

To record a new message, simply repeat these steps. The new message replaces the old one.

Playing the Message

To listen to the message, press **PLAY**.

Setting the Time


The clock uses the 12-hour, time format. **PM** appears at the left of the display for PM hours.

Follow these steps to set the time.

1. Slide **TIME/LOCK/ALM** to **TIME**.
2. Repeatedly press (or hold down) **HOUR** to set the current hour.
3. Repeatedly press (or hold down) **MIN** to set the current minute.
4. Slide **TIME/LOCK/ALM** to **LOCK**.


Using the Alarm

Follow these steps to set the alarm.

1. Slide **TIME/LOCK/ALM** to **ALM**. The currently set alarm time, and **AL** appear.
2. Repeatedly press **HOUR** then **MIN** until the desired alarm time appears.
3. To have the alarm play your recorded message, slide **OFF/MSG/CHIME** to **MSG**. To have the alarm sound a series of beeps, slide **OFF/MSG/CHIME** to **CHIME**.
4. Slide **TIME/LOCK/ALM** to **LOCK** to store your selections. To show that the alarm is turned on,  appears.

To check the alarm setting at any time, press **HOUR** or **MIN** when **TIME/LOCK/ALM** is set to **LOCK**.

Depending upon the alarm you selected, at the set time, the clock repeatedly announces the message or beeps for 1 minute, then turns off. To silence the alarm sooner, press **ALM STOP**.

To turn off the alarm so it does not sound again the next day, slide **OFF/MSG/CHIME** to **OFF**.  disappears.

CARE

To enjoy your Traveling Recording Picture Frame/Alarm Clock for a long time:

- Keep the clock dry. If it gets wet, wipe it dry immediately.
- Use and store the clock only in normal temperature environments.
- Handle the clock gently and carefully. Don't drop it.
- Keep the clock away from dust and dirt.
- Wipe the clock with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the clock's internal components can cause a malfunction and invalidate its warranty. If your clock is not performing as it should, take it to your local RadioShack store for assistance.

REPLACING THE BATTERIES

Your alarm clock uses four type 357A button-cell batteries (supplied) for power. When the recorded sound weakens, replace the batteries. (For the best results, use button-cell batteries available from your local RadioShack store.) The recorder keeps the last message recorded in memory while you change batteries.

Follow these steps to replace the batteries.

1. Use a Phillips screwdriver to remove the screw from the battery compartment cover, then slide the cover off.
2. Use the tip of a pencil or other non-metallic sharp object to remove the batteries. Then insert four fresh batteries in the compartment with their positive (+) side up.

3. Replace the cover and secure it with the screw.

Warnings:

- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

Cautions:

- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries, or different types of batteries.
- Always remove old or weak batteries. Batteries can leak chemicals that can destroy electronic parts.

SPECIFICATIONS

Power Source:

Four Type 357A Button-Cell Batteries

Battery Life..... (Typical) About 1 Year

Recording Time.... 10 Seconds (Maximum)

Operating Temperature..... 32° to 104° F
(0 ° to 40° C)

Dimensions..... $3^{3/32} \times 2^{27/32} \times 2^{23/32}$ Inches
(79 × 72 × 18 mm)

Weight 2.54 oz
(72 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

04/99

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

08A99

Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>