

 
 


Cat. No. 63-963
OWNER'S MANUAL





Please read before using this equipment.

Talking Alarm Clock




RadioShack®

  




FEATURES

 Your RadioShack Talking Alarm Clock combines a simple design with advanced technology. It's features include:



 LCD (Liquid Crystal Display) — lets you easily read the current time, alarm time, and function icons.



10-Minute Snooze — so you can get an extra 10 minutes of rest.

Function Icons — appear in the display to let you know when the alarm is on, when snooze is on, and when the hourly report is on.

© 1999 Tandy Corporation.
All Rights Reserved.
RadioShack is a registered trademark
used by Tandy Corporation.

 
 




Hourly Report — announces each hour.

Three Alarm Sounds — you can select one of three sounds for the alarm: a rapid beeping, a cuckoo, or a rooster.


Backlight Display — the display can be illuminated to help you read it in the dark.





CONTENTS

Installing Batteries	5
Operation	8
Setting the Current Time	8
Setting the Alarm	10
Alarm Sound Selection	12
Using Snooze	12
Hourly Report	13
Voice and Alarm	
Volume Control	14
Backlight	14
Care	15
Specifications	17

 





INSTALLING BATTERIES



Your Talking Alarm Clock requires two AA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

  
Cautions:

- 
- Use only fresh batteries of the required size and recommended type.
 - Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- 



Follow these steps to install batteries.

 1. Slide the battery compartment cover on the back of the clock in the direction of the arrow to remove it.

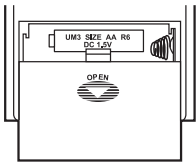

2. Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover.



Notes:

- When you install new batteries, the clock starts at 12:00 am.
- If nothing appears on the display, make sure the batteries are fresh and installed properly.

If the display begins to dim, the voice or alarm sounds warped, or the clock stops operating properly, replace the batteries.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the clock for a month, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.



OPERATION

SETTING THE CURRENT TIME

1. Press **MODE** twice until the display flashes.

 
 


2. To set the hour, repeatedly press **HOUR** to advance the hour display one hour at a time. The clock sounds a tone and announces each hour as you advance the display.



If you advance the display to a pm hour, **PM** appears.

If you do not press **HOUR** after 1 second, the clock sounds a tone and announces the time on the display. The display flashes for about 5 seconds and the time is set.



3. To set the minutes, follow the same instructions for setting the hour, but press **MINUTE** in Step 2.
4. A second after setting the hour and minute, a tone sounds and the clock announces the time you set. The display flashes for 5 seconds, then the time is set.



SETTING THE ALARM

1. Press **MODE** until the display flashes and **AL** appears.



2. Follow Steps 2 and 3 under “Setting the Current Time” on Page 8 to set alarm hour and minute.

-
3. A second after setting the hour and minute, a tone sounds and the clock announces the alarm time you set. The display flashes seven times, then the alarm time is set and the display returns to the current time.

 
 
To activate the alarm, press **AL ON/OFF** until **zz** appears at the top of the display and a small bell icon appears at the lower right corner of the display.





ALARM SOUND SELECTION

Press **HOUR** to select the sound you like. Each time you press **HOUR**, the clock demonstrates a rooster alarm, a chirping alarm, or a cuckoo alarm.



USING SNOOZE

At the alarm time you set, the alarm sounds for one minute, then automatically shuts off.

You can use the snooze to silence the alarm for 10 minutes. Press **SNOOZE**. **zz** flashes on the display, which means the snooze function is turned on. Ten minutes later, the alarm sounds again.



Note: To entirely shut off the alarm before it automatically shuts off, press **AL ON/OFF**.

HOURLY REPORT

Press **HR ANNOUNCE**, a “radiant” icon appears in the upper left corner of display. The clock announces each hour.



VOICE AND ALARM VOLUME CONTROL

Set **VOLUME** to **HI** or **LO** to set the volume for the clock's voice and the alarm.

BACKLIGHT

To illuminate the display, press and hold **LIGHT**. The clock announces the current time. Release **LIGHT** to stop the illumination of the display.

 


14



CARE



To enjoy your Talking Alarm Clock for a long time:

- Keep the clock dry. If it gets wet, wipe it dry immediately.
 - Use and store the clock only in normal temperature environments.
 - Handle the clock gently and carefully. Don't drop it.
 - Keep the clock away from dust and dirt.
 - Wipe the clock with a damp cloth occasionally to keep it looking new.
- 





  Modifying or tampering with the clock's internal components can cause a malfunction and invalidate its warranty. If your clock is not performing as it should, take it to your local RadioShack store for assistance.



SPECIFICATIONS

Power 2 AA (1.5V) Batteries

Accuracy ± 0.67 Seconds/Day

Snooze 10 Minutes

Dimensions (HWD):

$4\frac{3}{4} \times 3\frac{1}{8} \times 1\frac{15}{16}$ Inches
(120 \times 80 \times 50 mm)

Weight (without batteries) $4\frac{4}{5}$ oz
136 g

Battery Life 1 year

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.



NOTES



Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: *(continued)*



(continued) (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

04/99

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

06A99

Printed in China





IMPORTANT NOTICE

Talking Alarm Clock Cat. No. 63-963

If your Talking Alarm Clock's display remains blank after you install batteries, remove the batteries and reinstall them. The display appears.

© 2000 Tandy Corporation. All Rights Reserved.
RadioShack and RadioShack.com are
trademarks used by Tandy Corporation.

05A00
63-963

Printed in China



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>