

Analog Travel Alarm Clock

63-993

OWNER'S MANUAL — Please read before using this equipment.

! IMPORTANT !


If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — **Warning** ! — **Important**
⚡ — **Caution** 💡 — **Hint**
📄 — **Note**

Thank you for buying the RadioShack Analog Travel Alarm Clock. Your clock fits easily into a purse or briefcase and is perfect for anyone who travels. A genuine leather pouch is provided to protect the clock.

To prevent battery drain during shipping, your clock is shipped with an insulation strip that must be removed before use. Firmly grasp the strip and gently pull to remove it.

ON/OFF — Set to **ON** so the alarm sounds at a preset time. Set to **OFF** to turn off the alarm when it sounds.

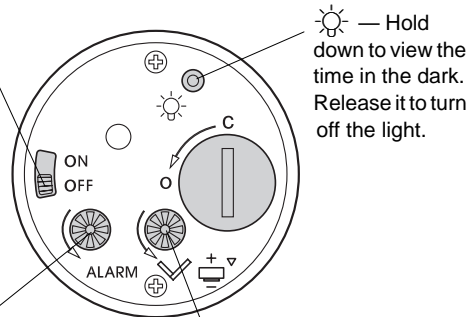

💡 — Hold down to view the time in the dark. Release it to turn off the light.

ALARM — See "Setting the Alarm".

To set the clock to the current time, rotate counterclockwise to move the hour and minute hands forward, or clockwise to move them backward.

⚡ CAUTION ⚡

Do not rotate the alarm setting knob clockwise or you could damage the clock.

SETTING THE ALARM

1. To set the clock's alarm time, rotate **ALARM** counterclockwise. The alarm hand moves backward. ⚡
2. Slide **ON/OFF** to **ON**. At the set alarm time, the alarm beeps for about four minutes.
3. To turn off the alarm before it automatically stops, slide **ON/OFF** to **OFF** so the alarm does not sound again at the set alarm time.



RadioShack®

www.radioshack.com™

© 2002 RadioShack Corporation.
All Rights Reserved.

RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

CAUTION

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.
- If you do not plan to use the clock for a month or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

WARNING

- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

REPLACING THE BATTERIES

Your clock comes with two 389A batteries for power. For the best performance and longest life, we recommend RadioShack alkaline batteries for replacement.

1. Insert a coin into the groove on the battery compartment cover, turn the coin counterclockwise, and remove the cover.
2. Insert two fresh batteries with the positive (+) side up.
3. Replace the cover. Insert the coin into the cover's groove then turn the coin clockwise to secure it.

CARE

Keep the clock dry; if it gets wet, wipe it dry immediately. Use and store the clock only in normal temperature environments. Handle the clock carefully; do not drop it. Keep the clock away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

SERVICE AND REPAIR

If your clock is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the clock's internal components can cause a malfunction and might invalidate its warranty.

SPECIFICATIONS

Power Source.....	Two 389A Batteries (Supplied)
Accuracy	± 0.67 sec/day
Battery Life	121 Days
Dimension (Without Pouch)	1 ³ / ₄ × 3/4 Inches (Diameter × Depth) (45 × 19 mm)
Weight (Without Pouch)	1.76 oz (50 g)

RadioShack Corporation
Fort Worth, Texas 76102

63-993
06A02
Printed in Taiwan

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>