

# Big Digit Travel Alarm Clock

63-995

OWNER'S MANUAL — Please read before using this equipment.

## ! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

-  — Warning
-  — Important
-  — Caution
-  — Note

### Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

## ! WARNING !


Dispose of old batteries promptly and properly. Do not burn or bury them.

## CAUTION

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the clock for a month or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

Thank you for purchasing a RadioShack Big Digit Travel Alarm Clock. Your alarm clock combines a simple design with advanced technology. Its lightweight design lets you carry it almost anywhere, so you can pack it in your suitcase or with your camping gear!

## A QUICK LOOK AT YOUR CLOCK

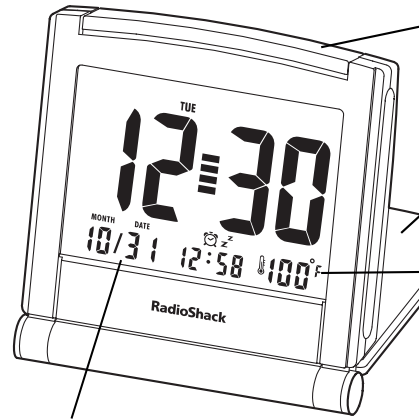 


**SNOOZE & LIGHT**—temporarily silences the alarm up to four times for 5 minutes, and lights the display for about 5 seconds, so you can see the information in the dark.

**Clock Cover** — protects the display and serves as a stand.


**Degree Format Selection** — displays the temperature in either Celsius or Fahrenheit.

**60-Year Calendar** — gives you the calendar from 1990 to 2050.

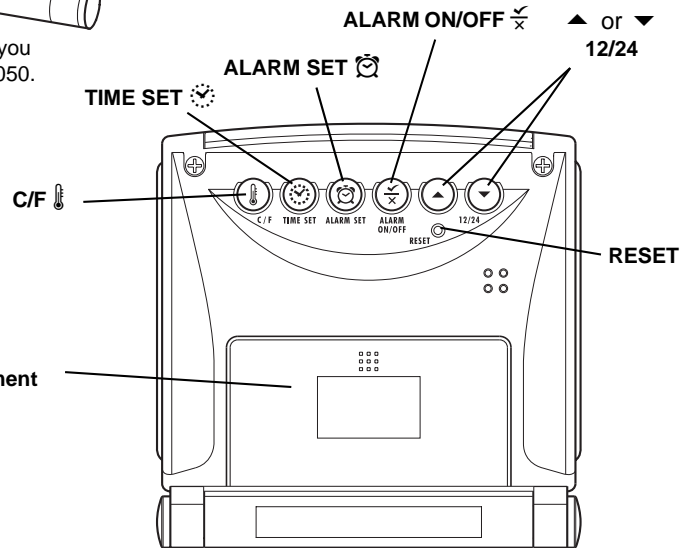


**Battery Compartment**

## INSTALLING BATTERIES

Your clock requires two AAA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries. 

1. Press on the raised dots on the battery compartment cover and slide the cover off.
2. Insert two AAA batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover.

As soon as you install the batteries, the clock beeps once, and the default month, date, and time appear. The temperature at the lower right of the display decreases rapidly until the current temperature appears.

If the clock stops operating properly or the display dims, replace the batteries. 

## USING THE COVER

Your clock's cover protects the display and also serves as a stand so you can place the clock on a table or other flat surface. To use the cover as a stand, simply open the cover as far as it goes.




 
**RadioShack**

www.radioshack.com™

 
 
© 2002 RadioShack Corporation.  
All Rights Reserved.  
RadioShack and RadioShack.com are trademarks  
used by RadioShack Corporation.

## NOTE







### Setting the Date and Time

- All the setting controls are on the back of the clock.
- While setting the time, if you do not press a key for about 30 seconds, the clock returns to the current time/temperature display.
- When you set the date, the clock automatically sets the day of the week.
- To switch between the 12- and 24- hour time formats, press **▼ /12/24**. In the 12- hour format, **P** appears for a PM hour.
- If you press **ALARM SET** , **C/F**, or **ALARM ON/OFF**  during the time setting, the clock automatically returns to the previous setting.


### Setting the Alarm





- While setting the alarm time, if you do not press a key for about 30 seconds, the clock returns to the current time display.
- Pressing **SNOOZE & LIGHT** or **▲** during the alarm time activates the snooze function.
- When you close the cover to store the clock, the setting controls are exposed. To avoid turning off the preset alarm time by inadvertently touching **ALARM ON/OFF** , press **ALARM SET**  until the alarm icon appears.


## SETTING THE DATE AND TIME



1. Open the cover. 
2. Hold down **TIME SET**  until the clock sounds a long beep and the hour digits flash.
3. Repeatedly press (or hold down) **▲** or **▼** to set the hour. 
4. Press **TIME SET**  to store the hour. The minute digits flash.
5. Repeat Steps 3 and 4 to set the minute, year, month, and date.
6. Press **TIME SET**  to finish setting the clock. The clock beeps once then the time reappears. 

## SETTING THE ALARM TIME

You can set the clock to sound an alarm to remind you of a daily event (such as a meeting). 

1. Hold down **ALARM SET**  until the clock beeps. **12:00** or the preset alarm time appears. The hour digits flash.
2. Repeatedly press (or hold down) **▲** or **▼ /12/24** to set the alarm hour.
3. Press **ALARM SET** . The minute digits flash.
4. Repeatedly press (or hold down) **▲** or **▼ /12/24** to set the alarm minute.
5. Press **ALARM SET**  to store the alarm time. The clock beeps once, the alarm turns on, and  appears.

 
At the preset alarm time, the alarm sounds for 1 minute then automatically turns off. To silence the alarm sooner, press any key (except **SNOOZE & LIGHT** and **▲**). 



If you do not want the alarm to sound again the next day, press **ALARM ON/OFF** to turn off the alarm.  disappears. 

## USING SNOOZE

To temporarily silence the alarm for 5 minutes, press **SNOOZE & LIGHT** or **▲** to turn on the snooze function. **Z** appears.

After 5 minutes, the alarm sounds for 1 minute. You can press any key to temporarily silence the alarm and have the alarm sound four times every five minutes.

To turn off the snooze cycle, press **ALARM ON/OFF**  twice.

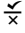To cancel the snooze function before it begins, press **ALARM ON/OFF**  once. **Z** and  disappear.

## CHANGING THE DEGREE FORMAT

Repeatedly press **C/F**  to switch the temperature from Fahrenheit (°F) to Celsius (°C) format on the display.

The thermometer automatically measures the temperature and updates its display every minute.

## RESETTING THE CLOCK

If the clock displays segmented digits, does not work properly, or locks up, you can reset it by using a pointed object, such as a straightened paper clip, to press **RESET** on the back of the clock. The clock beeps once.

Resetting the clock erases all stored information.

## CARE

Keep the clock dry; if it gets wet, wipe it dry immediately. Use and store the clock only in normal temperature environments. Handle the clock carefully; do not drop it. Keep the clock away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

## SERVICE AND REPAIR

If your clock is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the clock's internal components can cause a malfunction and might invalidate its warranty.

## SPECIFICATIONS

Power .....	Two AAA Batteries
Clock Accuracy .....	±0.67 Sec./Day
Temperature Accuracy .....	±2°F (±1°C)
Operating Temperature .....	16°F to 128°F (-9°C to 54°C)
Battery Life .....	5000 Hours
Dimensions (HWD) .....	3 <sup>1</sup> / <sub>4</sub> × 3 <sup>3</sup> / <sub>16</sub> × 1 <sup>5</sup> / <sub>16</sub> Inches (83 × 81 × 24 mm)
Weight (Without Batteries) .....	31.75 oz (900 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>