



Thank you for purchasing your Compaq 27 MHz RF Wireless Keyboard and Optical Mouse from RadioShack. This combo is specially designed for offices with up to 4096 ID codes for the keyboard and 2048 ID codes for the mouse, so you can use multiple sets in the same office at the same time. With a single USB connection you can connect both the keyboard and the mouse to your computer.

what's included

user's guide	wireless keyboard
wireless mouse	charger / receiver
AC adapter	CD (drivers)
2 AAA batteries (rechargeable NI-MH)	


Please read this user's guide before installing, setting up and using your new product
www.radioshack.com

batteries

Installing the Batteries


You can power the mouse with two AAA batteries, and the keyboard with two AA batteries.

- 1 Remove the compartment cover from both the keyboard and mouse.
- 2 Insert the AA batteries into the keyboard and the AAA batteries into the mouse. Be sure to match the polarity markings.
- 3 Replace the compartment covers.

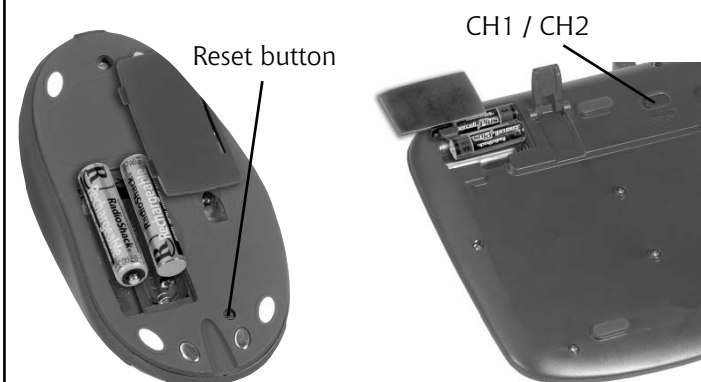

Recharging the Batteries

Connect one end of the supplied adapter to the charger/receiver's DC port and the other end to a standard AC outlet. Place the mouse in the charging stand. The red LED lights when the batteries are charging. The green LED lights when charging is complete. When the batteries in the mouse get low, the red LED on the mouse flashes if the mouse is in use. When the batteries in the keyboard get low, the battery indicator turns red.

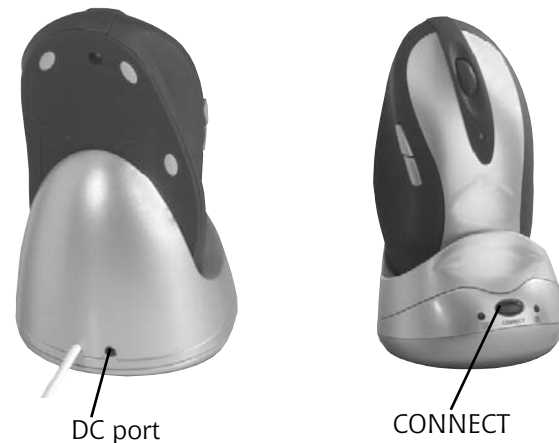


setting up your combo

Installing the Windows 98 Driver

Your mouse and keyboard work with Microsoft Windows 98/2000/Me/XP/NT. Except for Windows 98, they should work well without installing the driver. If you are using Windows 98, be sure to install the driver before connecting the keyboard and mouse.

- 1 Exit all open Windows applications.
- 2 Insert the supplied CD in your computer's CD-ROM driver. Installation instructions will be displayed on the computer automatically.
- 3 Follow the on-screen instructions.

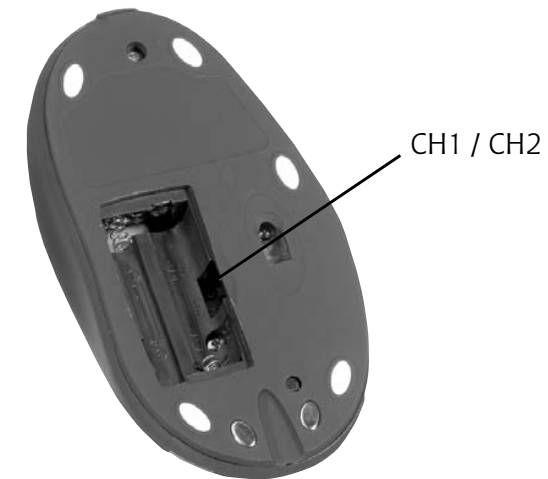

Setting the Channel

The keyboard and mouse offer 2 channels, CH1 and CH2. The receiver automatically detects the mouse's channel. If interference is caused by the other computers, reset the channel.

To reset the channel on the keyboard, slide CH1 / CH2 on the back of the keyboard. To reset the channel on the mouse, remove the battery compartment on the mouse, and use a pointed object to slide the switch inside the compartment to CH1 or CH2. Then replace the cover.

If you change the channel on the mouse, you will need to press CONNECT on the receiver and the mouse.

If you change the channel on the keyboard, the channel will be automatically detected.

connecting your combo

- 1 Connect the charger / receiver's USB cable to your computer's USB port.
- 2 Press **CONNECT** on the receiver. The receiver's indicator lights green.
- 3 Press the reset key at back of the mouse and **CONNECT** on the keyboard.
- 4 Press **CONNECT** on the keyboard again. The keyboard enters the connecting state again, and the indicator lights green.
- 5 Press the reset button on the back of the keyboard. The receiver indicator light turns off.

When you change the channel or replace the batteries, you will need to repeat steps 2 and 3.



Changing the ID Code

To avoid interference with other Windows desktop sets, you will need to change the ID code.

- 1 Use a pointed object to press the reset button on the back of the mouse and press CONNECT on the right top of keyboard to change the code.
- 2 Press CONNECT on the receiver.
- 3 Press the reset key on the back of the mouse.

troubleshooting

My computer does not detect the mouse or keyboard.

- Make sure you have installed the batteries correctly and the batteries have enough power.
- Make sure the receiver is correctly connected.
- Make sure the channel is set correctly
- Change the ID code

My mouse is not detected and not every key I hit on the keyboard registers.

- Make sure the batteries have enough power. Recharge the mouse if needed.
- For optimal performance, place the receiver at least eight inches away from other electronic devices, such as monitor or external storage drives.
- Shorten the distance between the mouse and receiver.
- Change the channel.
- Keep the mouse at least eight inches away from the keyboard to avoid interference.

My mouse and keyboard perform erratically.

- Shorten the distance between the receiver and desktop.
- Set different channels for different sets of desktops.
- The keyboard uses the latest power saving technology, so that power consumption only occurs when the key is pressed. Try pressing the keyboard key again.

care

Keep the mouse and keyboard combo dry. If they get wet, wipe them dry immediately. Use and store the combo only in room temperature environments. Handle the combo carefully. Do not drop it. Keep the combo away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

service & repair

If your combo is not performing as it should, take it to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website (www.radioshack.com), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the combo's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.

specifications

Resolution	800 dpi
USB	Version 1.1 (1.5 M bits/dps)
FSK / RF (mouse - TX)	27.095 MHz 27.145 MHz
FSK / RF (keyboard - TX)	27.045 MHz 27.195 MHz
Mouse dimensions	5.13 x 2.82 x 1.71 inches
Charger / Receiver dimensions	3.27 x 3.27 x 3.43 inches
Keyboard dimensions	19.1 x 8.02 x 1.28 inches

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice. Actual product may vary from the product images in this document.

the FCC wants you to know

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult your local RadioShack store or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires that you stop using your phone. Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Product:	27 MHz RF Wireless Keyboard and Mouse Combo
Model:	26-762
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200

limited 90-day warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations
200 Taylor Street, 6th Floor, Fort Worth, TX 76102
04/04



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>