

Optional 2.4 GHz Handset and Charger

43-3527

OWNER'S MANUAL — Please read before using this equipment.

Thank you for purchasing the Optional 2.4 GHz Handset and Charger for use with the RadioShack 2.4 GHz Multiple Handset Cordless Telephone. You can use this handset in any room in your home or office that has an AC outlet. No more running to the other end of the house to answer the phone! You can also have an intercom conversation between the handsets, transfer an outside call to another handset, or have a conference call.



Important: This handset is designed to work only with the RadioShack 2.4 GHz Multi Handset Cordless Telephone (Cat. No. 43-3526). Do not try to use it with other cordless telephones.

This manual describes only the instructions specific to the optional handset. For the details of the 2.4 GHz

Multi Handset Cordless Telephone's operation, refer to the owner's manual.

INSTALLATION

Selecting a Location

Select a location that is near an accessible AC outlet and away from electrical machinery, electrical appliances, metal walls or filing cabinets, wireless intercoms, alarms, room monitors, and other cordless phones.

Cautions:



You must use a Class 2 power source that supplies 9V DC and delivers at least 300 mA. Its center tip must be set to positive and its plug must fit the phone's **DC IN 9V** jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the phone or the adapter.

- Always connect the AC adapter to the phone before you connect it to AC power. When you finish, disconnect the adapter from AC power before you disconnect it from the phone.

 **RadioShack**
www.radioshack.com™


© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

Insert the supplied AC adapter's barrel plug into the **DC IN 9V** jack on the back of the charger. Then plug the adapter into a standard AC outlet.

Connecting and Charging the Battery Pack

The phone comes with a rechargeable nickel metal hydride (Ni-MH) battery pack. Before using your phone, you must install the battery pack, and then charge it for about 12–15 hours.

1. Press down and slide off the battery compartment cover.
2. Plug the battery pack's connector into the socket in the compartment (the connector fits only one way), then place the battery pack in the compartment.

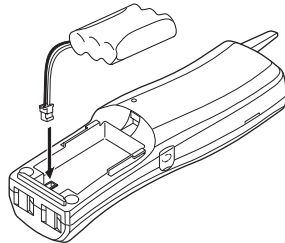

3. Replace the cover.

To charge the battery pack, place the handset on the charger. The CHARGE indicator on the charger lights and **Initializing...** appears on the handset display, then changes to **Handset is not registered**. Proceed to "Registering the Handset" on Page 3.

Recharge the battery pack when **BATT** appears.

Important: Be sure the battery pack is properly connected before you try to charge it. The CHARGE indicator lights when the handset is on the charger, even if the battery pack is not connected.

Notes:

- Using a pencil eraser, clean the charging contacts on the handset and charger about once a month.
- If the battery pack becomes weak during a call, the handset beeps and **BATT** appears. If a call is in progress when the battery pack of one handset becomes too weak, the call is placed on hold and you can retrieve the call from another handset.
- About once a month, fully discharge the battery by keeping the handset off the base or charger until **BATT** stays lit. Otherwise, the battery pack loses its ability to fully recharge.
- If the display is blank and the phone does not work, recharge the battery pack. (The battery power might be too low to light the display.)
- If you are not going to use your phone for an extended period, disconnect the battery pack. This

increases the battery pack's usable life.

The supplied battery pack should last for about a year. If the battery pack does not hold a charge for more than 2 hours after an overnight charge, replace it with a new 3.6-volt, 700 mAh battery pack with a connector that fits the socket in the battery compartment. You can order a replacement battery pack through your local RadioShack store. Install the new battery pack and charge it for about 12–15 hours.

Warning: Dispose of the old battery pack promptly and properly. Do not burn or bury it. See "Battery Safety Instructions" on Page 4 of the 43-3526 owner's manual.

If you have trouble replacing the battery pack, take the phone to your local RadioShack store for assistance.

REGISTERING THE HANDSET

After fully charging the battery pack, follow these steps to register your handset.

1. While the phone is not in use, including the intercom, remove the existing handset from the base.
2. Hold **PAGE** on the base until the CHARGE/VOICE MAIL indicator flashes.

3. While the indicator is flashing, place the new handset on the base. The handset beeps to indicating registration is complete.

If registration is not done properly, **Fail! Try again!** appears. Repeat Steps 2 and 3.

The current ringer volume setting and the handset ID number appear on the handset's display. Note the ID number, since it is required to communicate between the handsets.

Note: The system can accept up to four handsets. If you try to register a fifth handset, **Fail! Try again!** appears. This can also happen when you try to re-register an existing handset without clearing the base's memory since the base recognizes it as fifth handset. If any of the handsets seem to have a registration problem, change the base's security code and reregister all of the handsets. See "Additional Information" on Page 27 of the 43-3526 owner's manual.

The handset is ready to operate. Use it as described in the owner's manual supplied with Cat. No. 43-3526.

CARE

Keep the handset dry; if it gets wet, wipe it dry immediately. Use and store the handset only in normal

temperature environments. Handle the handset carefully; do not drop it. Keep the handset away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the handset's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your handset is not performing as it should, take it to your local RadioShack store for assistance. If the trouble is affecting the telephone lines, the phone company can ask you to disconnect your telephone until you have resolved the problem.

THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off

11A01
43-3527

and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

381-351066
Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>