

 



RadioShack®




www.radioshack.comSM

ET-1126 Dual Keypad 900 MHz Digital Spread Spectrum Cordless Telephone

with Caller ID and Call Waiting ID

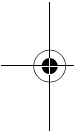

  Owner's Manual
Please read before using this equipment.

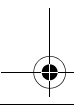

Contents



Features	4
Installation	8
Mounting the Phone	8
On a Desk Top, Shelf, or Table	8
On a Wall Plate or Wall	9
Connecting and Charging the Battery Pack	10
A Quick Look at the Handset	11
Setting the Dialing Mode	12
Setting the Ringer TONE/VOLUME	12
Turning Auto Talk On/Off	12
Turning Caller ID/ Call Waiting On/Off	13
Storing Your Area Code	13
Operation	13
Making and Receiving Calls	13
Selecting the Channel	14
Adjusting the Handset Volume	14
Using the Speakerphone	14
Switching Between the Handset and Speakerphone	14
Using Both the Handset and Speakerphone	14
Using Hold	14
Using Mute	15
Using Redial	15
Using Flash	15
Using Tone Services On a Pulse Line	15
Using Page/Intercom	16
Transferring a Call Between the Handset and Base	16
Memory Dialing	16
Storing a Number in the Handset's Memory	16
Editing or Deleting a Number in the Handset's Memory	17
Storing a Number in the Base's Memory	18
Entering a Pause	18
Reviewing the Handset's Memory Numbers	18
Dialing a Memory Number	18
Chain-Dialing Service Numbers	19
Testing Stored Emergency Numbers	19
Using a Headset	19

© 2000 Tandy Corporation.
All Rights Reserved.

RadioShack and RadioShack.com are trademarks used by Tandy Corporation.

Caller ID Operation	19
Reviewing Caller ID Records	19
Caller ID Messages	20
Adding/Deleting the Area Code	20
Dialing Numbers from a Caller ID Record	20
Storing a Caller ID Record to Memory	21
Deleting Caller ID Records	21
Troubleshooting	22
Care and Maintenance	24
Replacing the Battery Pack	25
The FCC Wants You To Know	26
Lightning	26

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

□ Features

Your RadioShack Dual Keypad 900 MHz Digital Spread Spectrum Cordless Telephone uses the most advanced cordless telephone technology to give you superior audio quality and extended range.

The phone's Caller ID records each caller's telephone number (and name, if available in your area) and the date and time of the call, as provided by your local phone company to Caller ID service subscribers.

And, if you subscribe to Call Waiting with Caller ID, the phone shows you the incoming caller information, even when you are already on the phone.

Your phone has these features:

900 MHz Operation — provides longer range and less interference than many other cordless phones.

Spread Spectrum Technology — spreads the signal across several frequencies, providing additional security for your phone conversations.

Caller ID Memory — stores up to 50 Caller ID records.

Dual Keypad — a full set of keys on both the handset and base let you use either keypad to operate the phone.

Speakerphone — lets you make or answer calls without using the handset.

3-Line Liquid Crystal Display — lets you view an entire Caller ID record on one screen.

30-Number Memory Dialing — lets you store up to 30 numbers (20 in the handset and 10 in the base) in memory for easy dialing.

Two-Way Intercom/Paging System — lets you send a signal from the base to the handset, or from the handset to the base, to page someone or locate the handset when it is away from the base. If someone answers, you can use the phone as an intercom.

Auto Talk — lets you set the handset so you can answer a call by simply lifting the handset from the base or by pressing any key when the handset is away from the base.

Headset Jack — lets you connect an optional headset (available from your local RadioShack store) for hands-free convenience.

Volume Control — lets you adjust the volume you hear through the handset.

Adjustable Ringers — you can set different volumes for the handset and base ringers.

Ample Talk and Standby Time — the supplied battery (when fully charged) provides about 6 hours of talk time or 7 days of standby time.

20 Channels — automatically selects a clear channel when you make or answer a call.

Security Access-Protection Code — automatically prevents other cordless phone users from using your phone line while the handset is off the base.

Redial — lets you quickly redial any of the three last numbers dialed on the handset and the last number dialed on the base.

Tone/Pulse Dialing — lets you use either type of service.

Hearing-Aid Compatibility — lets you use your phone with hearing aids that have a T (telephone) switch.

This telephone is UL listed and has been tested and found to comply with all applicable FCC standards.

IMPORTANT CALLER ID INFORMATION

To use the phone's Caller ID and Caller ID with Call Waiting features, you must be in an area where those services are available and you must subscribe to those services through your local phone company.

Where Caller ID is offered, one or more options are generally available:

- caller's number only
- caller's name only
- caller's name and number

Important:

Cordless phones such as this one require AC power to operate. When the AC power is off, you cannot dial out or receive incoming calls using your phone. To be safe, you should also have a phone that does not need AC power to operate (not a cordless phone) so you can still make and receive calls if there is an AC power failure.

When AC power is lost, the phone loses the security access-protection code connection between the base and the handset. When power is restored, put the handset on the base briefly to restore this connection so you can use the handset.

READ THIS BEFORE INSTALLATION

Each device that you connect to the phone line draws power from the phone line. We refer to this power draw as the device's ringer equivalence number, or REN. The REN is on the bottom of the base. If you are using more

than one phone or other device on the line, add up all the RENs. If the total is more than five, your phones might not ring. In rural areas, a total REN of three might impair ringer operation. If ringer operation is impaired, remove a device from the line.

FCC STATEMENT

This telephone complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC registration number and the REN to your phone company. These numbers are on the bottom of the phone's base.

Note: You must not connect your phone to any of the following:

- coin-operated systems
- party-line systems
- most electronic key phone systems

This telephone complies with the limits for a Class B digital device as specified in Part 15 of *FCC Rules*. These limits provide reasonable protection against radio and TV interference in a residential area. However, your equipment might cause TV or radio interference even when it is operating properly. To eliminate interference, you can try one or more of the following corrective measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the radio or TV.
- Use outlets on different electrical circuits for the equipment and the radio or TV.

Consult your local RadioShack store if the problem still exists.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Never install telephone wiring during a lightning storm.
4. Never install telephone jacks in wet locations unless the jacks are specifically designed for wet locations.
5. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
6. Use caution when installing or modifying telephone lines.
7. Do not affix the AC power supply cord to building surfaces with metal fittings (if the product has an AC power cord).
8. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
9. Do not use this product near water. For example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
10. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
11. Slots and openings in the cabinet and the back or bottom are provided for ventilation. To protect the phone from overheating, the openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
12. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your local power company.
13. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be stepped on.
14. Do not overload wall outlets and extension cords. Doing so can result in a risk of fire or electric shock.
15. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
16. To reduce the risk of electric shock, do not disassemble this product. Take it to a qualified serviceman when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.
17. Unplug this product from the wall outlet and refer servicing to qualified service technicians under these conditions:
 - When the power cord plug is damaged or frayed.



- If liquid has been spilled into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally when you follow the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustments of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- If the product has been dropped or the cabinet has been damaged.
- If the product exhibits a distinct change in performance.

18. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
19. Do not use the telephone to report a gas leak while in the vicinity of the leak.

BATTERY SAFETY INSTRUCTIONS

 
 
 
Caution: To reduce the risk of fire or injury, read and follow these instructions.

1. Use only the appropriate type and size battery pack specified in the instruction manual provided for this product.
2. Do not dispose of the battery pack in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the battery pack. Released electrolyte is corrosive

and may cause damage to the eyes or skin. It may be toxic if swallowed.

4. Exercise care in handling the battery pack in order not to short it with conducting materials such as rings, bracelets and keys. The battery or conductor may overheat and cause burns.
5. Charge the battery pack provided with or identified for use with this product only in accordance with the instructions and limitations specified in the instruction manual provided for this product.
6. Observe proper polarity orientation between the battery pack and battery charger.

SAVE THESE INSTRUCTIONS



□ Installation

MOUNTING THE PHONE

You can place the phone's base on a desk or table, mount it on a standard wall plate, or mount it directly on a wall. Choose a location that is:

- near an AC outlet
- near a modular telephone line jack
- out of the way of normal activities
- away from electrical machinery, electrical appliances, metal walls or filing cabinets, wireless intercoms, alarms, and room monitors
- away from other cordless phones

The base's location affects the phone's range. If you have a choice of several locations, try each to see which provides the best performance.

Cautions:



You must use a Class 2 power source that supplies 9V AC and delivers at least 350 mA. Its center tip must be set to positive and its plug must fit the phone's **DC IN 9V** jack. The supplied adapter meets these specifications. Using an adapter that does not meet these specifications could damage the phone or the adapter.


- Always connect the AC adapter to the phone before you connect it to AC power. When you finish, disconnect the adapter from AC power before you disconnect it from the phone.

Note: Your telephone connects directly to a modular telephone line jack. If your phone line jack is not a modular jack, you can update the wiring yourself, using jacks and adapters available at your local RadioShack store. Or, you can let the phone company update the wiring for you.


The USOC number of the jack to be installed is RJ11C (RJ11W for a wall plate).

On a Desk Top, Shelf, or Table


1. Plug one end of the supplied long modular cord into the **TEL LINE** jack on the back of the base.

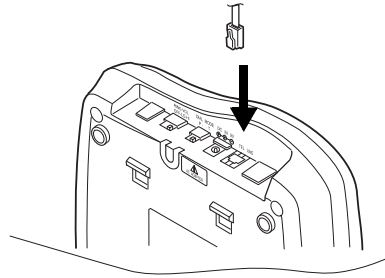

2. Plug the modular cord's other end into a modular telephone line jack.
3. Insert the supplied AC adapter's barrel plug into the **DC IN 9V** jack on the back of the base.

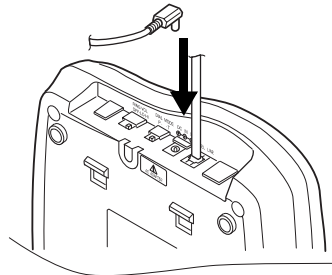


4. Route the adapter's cord through the strain relief slot on the bottom of the base.

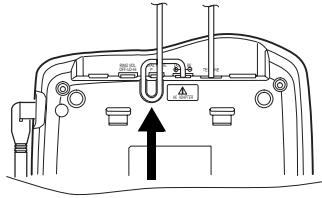

5. Plug the adapter into a standard AC outlet.
6. Lift the base's antenna to a vertical position.


On a Wall Plate or Wall

1. Insert the two tabs at the top of the narrow end of the supplied bracket into the base's upper tab slots, then press down on the bracket's latches and insert them into the lower slots.

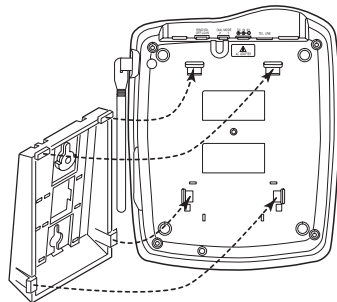

2. Plug one end of the supplied short modular cord into the **TEL LINE** jack on the back of the base as in "On a Desk Top, Shelf, or Table," Step 1.
3. Insert the supplied AC adapter's barrel plug into the **DC IN 9V** jack as in "On a Desk Top, Shelf, or Table," Step 3.
4. Route the adapter and modular cords through the grooves on the bracket.

5. Plug the modular cord's other end into the wall plate jack, then align the bracket's keyhole slots with the wall plate studs and slide the phone downward to secure it.

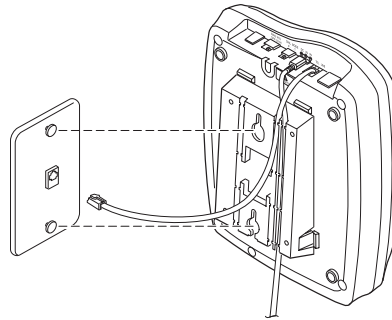


6. Plug the adapter into a standard AC outlet.
7. Press and lift out the handset holder. Rotate it 180°, then snap it back into place so it holds the handset.
8. Lift the base's antenna to a vertical position.


Note: To mount the phone directly on a wall, you need two screws (not supplied) with heads that fit into the keyhole slots on the bottom of the base.

Follow the steps under "On a Wall Plate or Wall," then apply these additional instructions.

1. Drill two holes $3\frac{15}{16}$ inches (100 mm) apart. Then thread a screw into each hole, letting the heads extend about $\frac{3}{16}$ inch (5 mm) from the wall.

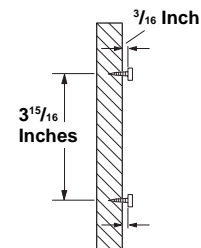


2. Plug one end of the supplied long modular cord into the **TEL LINE** jack on the back of the base and route the adapter cable and modular cords through the grooves on the bracket.
3. Align the bracket's keyhole slots with the mounting screws and slide the phone downward to secure it.

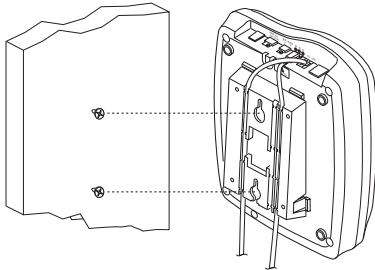


CONNECTING AND CHARGING THE BATTERY PACK

The phone comes with a rechargeable nickel-cadmium battery pack in the handset but not connected. Before using your phone, you must connect the battery pack and then charge it for about 24 hours.

1. Press down and slide off the battery pack compartment cover.

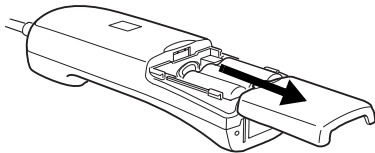

2. Lift the battery pack out of the compartment.

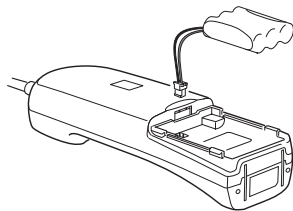

3. Plug the battery pack's connector into the socket in the compartment (the connector fits only one way), then replace the battery pack.
4. Replace the cover.

To charge the battery pack, place the handset on the base either faceup or facedown. The CHARGE indicator on the base lights and **Total:00** appears on the handset display.

Recharge the battery pack when **Low Battery** flashes on the display.


Important: Be sure the battery pack is properly connected before you try to charge it. The CHARGE indicator lights when the handset is on the base, even if the battery pack is not connected.

Notes:

- When you first use the phone after charging or recharging the battery pack, the phone might not work and you might hear an error tone when you press **TALK**. If this happens, return the handset to the base for about 5 seconds. This resets the security access-protection code.
- If the base loses power for 60 minutes while the handset is away from it or the handset's battery pack is completely discharged, the security access-protection code might be lost. To reset the code, return the handset to the base for about 5 seconds.
- Using a pencil eraser, clean the charging contacts on the handset and the base about once a month.

- If the battery pack becomes weak during a call, the handset beeps every 3 seconds and **Low Battery** flashes. If this happens, you cannot make another call on the phone until you recharge the battery pack.
- About once a month, fully discharge the battery pack by keeping the handset off the base until **Low Battery** flashes. Otherwise, the battery pack loses its ability to fully recharge.
- If the display is blank and the phone does not work, recharge the battery pack. (The battery power might be too low to light the display.)
- If you are not going to use your phone for an extended period of time, disconnect the battery pack. This increases the battery pack's usable life.
- The supplied battery pack should last for about a year. When it loses its ability to fully recharge, order a replacement battery pack from your local RadioShack store (see "Replacing the Battery Pack" on Page 25).


A QUICK LOOK AT THE HANDSET

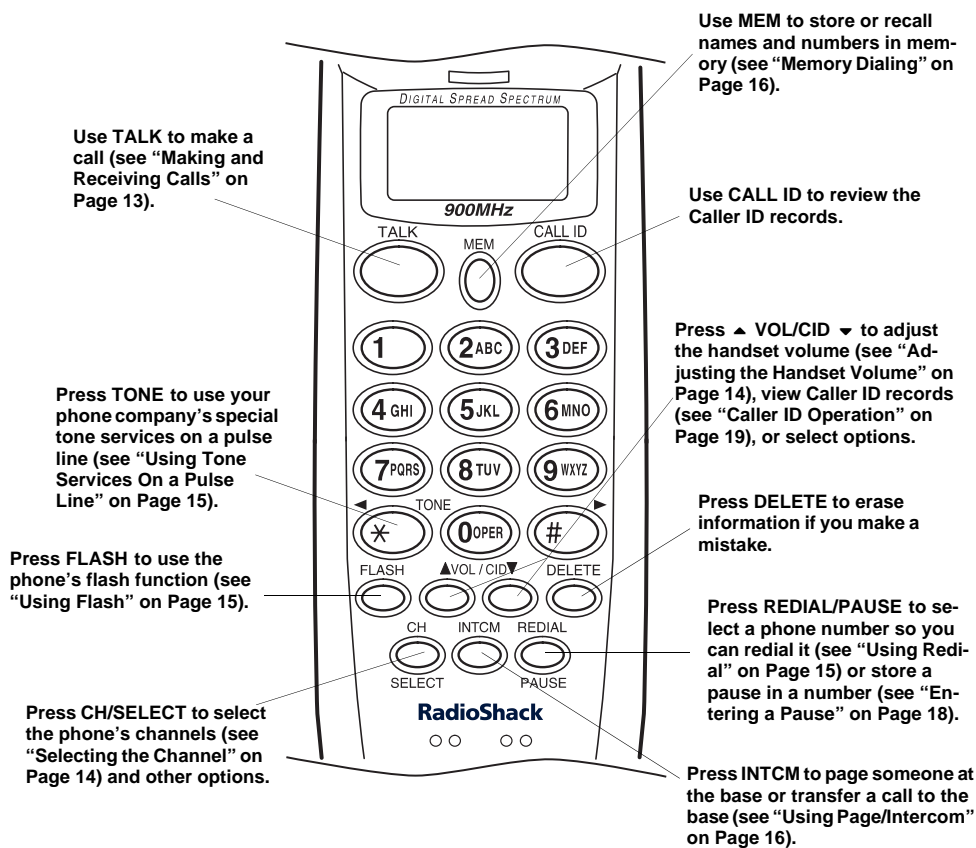

SETTING THE DIALING MODE

Set **DIAL MODE** on the back of the base for the type of service you have. If you are not sure which type you have, once the battery pack is fully charged, do this test.

1. Be sure **DIAL MODE** is set to **T** (tone).

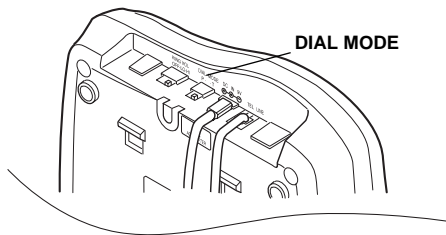

2. Lift the handset, press **TALK**, and listen for a dial tone.
3. Press any number except **0**.

Note: If your phone system requires that you dial an access code (9, for example) before you dial an outside number, do not press the access code number either.

If the dial tone stops, you have touch-tone service. Leave **DIAL MODE** set to **T**.

If the dial tone continues, you have pulse service. Set **DIAL MODE** to **P** (pulse).

SETTING THE RINGER TONE/VOLUME

You can select one of four different ringer tone/volume settings on the handset. At any time, except during a call, repeatedly press **VOL/CID** ▲ or ▼ to select the desired ringer setting. Each time you press a button, the phone rings at the selected setting and the display shows **Ringer A High**, **Ringer A Low**, **Ringer B High**, or **Ringer B Low**.

Note: Pressing **VOL/CID** ▲ when the phone is set to **Ringer A High** or **VOL/CID** ▼ when the phone is set to **Ringer B Low** does not change the setting. Press the opposite arrow key to change the setting.

To set the base's ringer volume, set **RING VOL** on the back of the base to **OFF**, **LO**, or **HI**.

Notes:

- When you set **RING VOL** to **OFF**, the base (and the handset if it is on the base) does not ring but another phone connected to the same line rings. If the handset is away from the base, the handset also rings.
- When you set the auto talk function to off, the handset rings when you lift the handset from the base. See "Turning Auto Talk On/Off."

TURNING AUTO TALK ON/OFF

Your phone is preset so you must press **TALK** when you lift the handset from the base to answer a call. With auto talk turned on, you can answer a call by just lifting the handset from the base. If the handset is away from the base, you can answer by pressing any key.

Follow these steps to turn auto talk on or off.

1. Lift the handset and hold down **CALL ID**. A menu appears with **Auto Talk** selected.
2. Press **CH/SELECT** to change the auto talk setting. **On** or **Off** appears indicating the selected setting.

Return the handset to the base or press **CALL ID** to store the new setting.

TURNING CALLER ID/ CALL WAITING ON/OFF

If you subscribe to Call Waiting with Caller ID service, you can set the phone to show Caller ID information for an incoming call even while you are using the phone.

Follow these steps to turn the Caller ID/ Call Waiting feature on or off.

1. Lift the handset and hold down **CALL ID**.
2. Press **2** or **VOL/CID** ▼ to select **CIDCW** (Caller ID/Call Waiting).
3. Press **CH/SELECT** to change the Caller ID/Call Waiting setting. **On** or **Off** appears indicating the selected setting.

Return the handset to the base or press **CALL ID** to store the new setting.

STORING YOUR AREA CODE

You can store your local area code in the phone's Caller ID record so it does not store the area code if the received call is from your local area. If for some reason you need to

dial the area code (or store in the memory), you can add it afterwards. "Adding/Deleting the Area Code" on Page 20.

Note: If your calling area requires 10-digit dialing including area code, do not enter the area code but leave this option blank.

Follow these steps to store your area code.

1. Lift the handset and hold down **CALL ID**.
2. Press **3** or **VOL/CID** ▼ twice to select Area Code.
3. Press **CH/SELECT**, then enter your three-digit area code. If you make a mistake, repeatedly press ◀ or ▶ to move the cursor over the incorrect digit, then enter the correct number.

Note: If an area code is already stored, it appears on the display. To delete the area code, press **DELETE** three times. Then enter your area code. Or you can use ◀ or ▶ to move the cursor and edit the area code.

Press **CH/SELECT** to store the area code, then press **CALL ID** or return the handset to the base to clear the display.

□ Operation

MAKING AND RECEIVING CALLS

To make a call, lift the handset and press **TALK**. **Talk** and the current volume setting (see "Adjusting the Handset Volume" on Page 14) appear on the handset's display, and the **CHARGE/IN USE** indicator on the base lights. Then dial the number. The number displays on the handset as you dial, then the call's elapsed time displays.

You can also dial the number before you press **TALK**.

If you make a mistake, press **DELETE** until the incorrect entry is erased, then enter the correct number. To delete the entire number, hold down **DELETE** for at least 2 seconds.



When you receive a call, **Incoming Call** appears on the display. To answer it, lift the handset from the base and press **TALK**. If auto talk is on, just lift the handset from the base or press any key. **Talk** and the current volume setting appear on the display.

To end a call, place the handset on the base or press **TALK**.

Selecting the Channel

The phone has 20 channels. If the call seems to disconnect for no reason during a call, press **CH/SELECT** on the handset to select a different channel. **Scanning** appears while your phone searches for a clear channel.

Adjusting the Handset Volume

To adjust the volume of the sound you hear through the handset during a call, press **VOL/CID** ▲ or ▼ until you obtain the desired volume level. **Volume Maximum**, **Volume High**, **Volume Medium**, or **Volume Low** appears on the display.

Once you set the volume level, the setting is maintained even after you hang up the phone.

Note: When you press **VOL/CID**▲ while the volume is maximum or **VOL/CID**▼ while the volume is low, the setting does not change and an error tone sounds.

USING THE SPEAKERPHONE

To make or answer a call using the speakerphone, press **SPEAKER**. The **SPEAKER** indicator lights. When you hear a dial tone, dial the number.

To set the speakerphone's volume, slide **VOLUME** on the right side of the base.

To end a speakerphone call, press **SPEAKER** again.

Switching Between the Handset and Speakerphone

To switch to the speakerphone while you are using the handset, press **SPEAKER** on the base. When you hear the conversation or dial tone on the speakerphone, press **TALK** on the handset.

To switch to the handset while you are using the speakerphone, simply lift the handset off the base. If the handset is away from the base, press **TALK**, then press **SPEAKER**.

Using Both the Handset and Speakerphone

If someone else is using the speakerphone, press **TALK** on the handset to join the conversation.

If someone else is using the handset, press **SPEAKER** on the base to join the conversation.

During the call, one person can hang up and another person can continue the call at the other keypad. Or, both people can hang up at the same time to end the call.

Note: If you hear a high-pitched noise from the base's speaker, the handset and the base are too close together.

USING HOLD

Press **HOLD** to put a speakerphone call on hold. The **HOLD** indicator lights. While a call is on hold, you can make an intercom call (see "Using Page/Intercom" on Page 16) between the handset and the base without disconnecting the call.

To release a call from hold, lift the handset and press **TALK**, press **SPEAKER** or **HOLD** on the base, or pick up any extension phone on the same line.

USING MUTE

While talking on the speakerphone, you can temporarily turn off the phone's microphone by pressing **MUTE** so the other party cannot hear you. The **SPEAKER** indicator flashes.

Press **MUTE** or **SPEAKER** to resume your conversation.

Hint: If the phone is close to loud noises while you are using the speakerphone, the phone might not switch to let you hear the person on the other end of the line. If this happens, press **MUTE** to turn off the microphone so you can hear the caller. Press **MUTE** again to speak.

USING REDIAL

You can quickly dial any of the last three numbers you dialed recently on the handset. Lift the handset and repeatedly press **REDIAL/PAUSE** until the number you wish to dial displays. Then press **TALK** and the phone dials the number.

To dial the last number dialed using the base, press **SPEAKER** then **REDIAL**.

Notes:

- The redial memory for each keypad is separate. You cannot redial a number you dialed on the handset's keypad using **REDIAL** on the base's keypad, and vice versa.
- On the handset, you can also press **REDIAL/PAUSE** after pressing **TALK** to dial the last number dialed.

- The redial memory holds up to 32 digits, so you can redial long-distance as well as local numbers.
- The redial memory also holds pause entries. See "Entering a Pause" on Page 18.

USING FLASH

FLASH performs the electronic equivalent of a switchhook operation for special services, such as Call Waiting.

For example, if you have Call Waiting, press **FLASH** to answer an incoming call without disconnecting the current call. Press **FLASH** again to return to the first call.

Note: If you do not have any special phone services, pressing **FLASH** might disconnect the current call.

USING TONE SERVICES ON A PULSE LINE

Some special services, such as bank-by-phone, require tone signals. If you have pulse service, you can still use these special tone services by following these steps.

1. Be sure **DIAL MODE** is set to **P**.
2. Dial the service's main number.
3. When the service answers, press **TONE/✳** on the handset (**TONE** on the base). Any additional numbers you dial are sent as tone signals.

When you hang up, the phone automatically resets to pulse dialing.

USING PAGE/INTERCOM

You can use the phone as a two-way pager and intercom between the base and the handset. This is useful if the handset is away from the base and you want to locate it, or if you want to converse with someone through the intercom.

To page the base from the handset, press **INTCM**. **Paging Base** appears, and the base and handset ring. Press **SPEAKER** or **INTERCOM** on the base to answer the page. **Intercom** appears on the handset's display.

To page the handset from the base, press **INTERCOM**. The handset and base ring, and **Paging** appears on the handset's display. Press **TALK** or **INTCM** on the handset to answer the page. **Intercom** appears.

To end an intercom call, press **TALK** on the handset, press **SPEAKER** on the base, or hang up the handset.

If a call comes in during an intercom conversation, either the person at the base or the person at the handset can answer the call. Press **TALK** on the handset or **SPEAKER** on the base once to end the intercom call, then press **TALK** or **SPEAKER** again to answer the incoming call.

Note: You can use the intercom while a call is on hold, but not during a conversation.

Transferring a Call Between the Handset and Base

You can use the phone's intercom feature to transfer a call between the handset and the base.

To transfer a call from the handset to the base, press **INTCM**. The call is put on hold, and **Paging Base** and **Hold** appear.

When the person at the base answers, press **TALK**. The call is released from hold and transferred to the base.

To return to handset use, press **TALK** again.

To transfer a call from the base to the handset, press **INTERCOM**. The call is placed on hold, and **Paging** and **Hold** appear on the handset's display. When the person with the handset answers, press **SPEAKER**. The call is released from hold and transferred to the handset. To return to base use, press **SPEAKER** again.

MEMORY DIALING

You can store up to 30 numbers in memory (20 in the handset's and 10 in the base's memory), then dial a stored number by pressing a memory location number.

You can also store a name with each number in the handset's memory.

Use the supplied memory directory sticker to record your stored numbers. Peel the backing from the sticker and attach it to the base's handset cradle.

Storing a Number in the Handset's Memory

Notes:

- An error tone sounds and the phone exits the storing process if you wait more than 20 seconds between each keypress.
- If you receive a call during memory entry, the phone exits the storing process.

Follow these steps to store a number in the handset's memory.

1. Lift the handset.

2. Hold down **MEM** until **Memory Store** and a list of memory location numbers appears.

3. Press a number (01–20) or repeatedly press **▲** or **▼** to choose a two-digit memory location. Precede a single digit location number with 0 – 01, 02, 03, and so on.

4. Press **CH/SELECT**. **Store Name** appears.

If you do not want to enter a name, skip to Step 6. **<Memory nn>** appears to identify the number (**nn** is the memory location number you selected).

5. To enter a name, press **VOL/CID ▲** or **▼** to select the characters. Press **◀** or **▶** to move the cursor left or right.

Repeatedly press **VOL/CID ▼** to view the characters in alphabetical order. (The display shows uppercase letters first, then lowercase letters, numbers, and special characters.)

Notes:

- Press **VOL/CID ▲** to see the characters in reverse alphabetical order.
- You can hold down **VOL/CID ▲** or **▼** to scroll rapidly through the characters.
- If you make a mistake, move the cursor over the error, then enter the correct character, or press **DELETE** to delete a character. To delete all the characters, hold down **DELETE** for at least 1 second.

6. Press **CH/SELECT**. **Store Number** appears.

7. Enter the phone number and any tone or pause entries (see “Using Tone Services

On a Pulse Line” on Page 15 and “Entering a Pause” on Page 18).

8. Press **CH/SELECT**. The phone beeps and **Memory nn Stored** appears. After 2 seconds, **Memory Store** appears. Repeat Steps 3–8 to store more numbers.

9. When you finish, press **MEM**.

To replace a stored number, store a new one in its place.

Editing or Deleting a Number in the Handset’s Memory

Follow these steps to edit or delete a memory number.

1. Lift the handset.

2. Hold down **MEM** until **Memory Store** and a list of memory location numbers appear on the display.

3. Choose a memory location (01–20) by pressing a number or by repeatedly pressing **VOL/CID ▲** or **▼**.

4. Press **CH/SELECT**. A menu appears with three options.

Edit Memory nn — edit the record as described in Steps 5 through 7 of “Storing a Number in the Handset’s Memory” on Page 16.

Delete Memory nn — The display prompts you to confirm the deletion. Press **VOL/CID ▲** to move the cursor to **Yes**, then press **CH/SELECT** or **DELETE**. The phone beeps, and **Memory nn Deleted** appears.

Go Back — Returns you to the list of memory numbers.

5. Press **VOL/CID** ▲ or ▼ to highlight the desired option then press **CH/SELECT** to choose it.

Storing a Number in the Base's Memory

Note: An error tone sounds and the phone exits the storing process if you wait more than 20 seconds between each keypress.

1. Press **MEM**. The CHARGE/IN USE indicator blinks.
2. Enter the number (up to 16 digits) and any tone or pause entries (see "Using Tone Services On a Pulse Line" on Page 15 and "Entering a Pause" on Page 18).

Notes:

- An error tone sounds and the phone exits the storing process if you enter more than 16 digits.
 - Each tone or pause entry uses one digit of memory.
3. Press **MEM** again, then enter the memory location number (0–9) where you want to store the phone number. A tone sounds indicating that the number is stored.

To replace a number in the base's memory, simply store a new number in its place. To erase a memory number, press **MEM** twice, then press the memory location number (0–9) you want to erase. A tone sounds indicating that the memory location has been erased.

Entering a Pause

In some telephone systems, you must dial an access code (9, for example) and wait for a second dial tone before you can dial an outside number. You can store the access code

with the phone number. However, you should also store a pause after the access code to allow the outside line time to connect.

To enter a 2-second pause, press **PAUSE** (**REDIAL/PAUSE** on the handset). **P** appears on the display if you are storing a number into the handset's memory. You can add more pause entries for a longer pause.

Reviewing the Handset's Memory Numbers

To review your handset's memory numbers, press **MEM**. The list of memory location numbers (01–20) appears with the name stored with each number (or <Memory nn> if you did not store a name).

To see the stored phone numbers, press ▶. An arrow to the right of the number means it is longer than 13 digits. Press ▶ again to see the rest of the number. Repeatedly press ◀ to return to the name display.

To exit the memory number list, press **MEM**.

To see a stored name and phone number at the same time, press **CH/SELECT** when the cursor is by a memory location number. To exit this display, hold down **DELETE** until the display clears.

Dialing a Memory Number

To dial a number stored in the handset's memory, lift the handset and press **MEM**. The list of memory location numbers appears. Choose a memory location (01–20) by pressing a number or by repeatedly pressing ▲ or ▼, then press **TALK**.

To dial a number stored in the base's memory, press **SPEAKER**. When you hear a dial tone, press **MEM**, then press the memory location number for the number you want to dial.

Note: If you select an empty memory location, the base beeps.

Chain-Dialing Service Numbers


For quick recall of numbers for special services (such as bank by phone), store each group of numbers in its own memory location. Dial the service's main number first. Then, at the appropriate place in the call, press **MEM** and the number for the location where the additional information is stored.

Testing Stored Emergency Numbers

If you store an emergency service's number (police department, fire department, ambulance) and you choose to test the stored number, make the test call during the late evening or early morning hours to avoid peak demand periods. Also, remain on the line to explain the reason for your call.

USING A HEADSET

You can talk with hands-free convenience using an optional headset that has a $\frac{3}{32}$ - inch (2.5-mm) plug. Contact your local RadioShack store for a suitable headset.

To connect the headset, open the rubber cover marked  on the side of the handset, then insert the headset's plug into the jack.

Notes:

- Connecting a headset disconnects the handset's earpiece and microphone.
- **VOL/CID** ▲ or ▼ on the handset also controls the connected headset's volume.
- If you place the handset on the base to recharge it while the headset is connected, be sure the handset seats properly.

With a headset connected, you can make or answer calls as usual using the speakerphone or the keys on the handset.

You can use a headset holder (available from your local RadioShack store) to hang the handset on your belt for greater convenience.

When you finish using the headset, disconnect it from the handset and close the rubber cover to protect the jack.

CALLER ID OPERATION

If you subscribe to Caller ID service from your phone company, the phone company sends information about the call, as well as the time and date, between the first and second rings of every call you receive.

The phone displays this information after the second ring, and it stores up to 50 Caller ID records for later review. It also shows if caller information is unavailable or if the name and number were blocked by the caller ("Caller ID Messages" on Page 20).

If you subscribe to Call Waiting with Caller ID, you will hear a tone through the handset when a call comes in, then the Caller ID record appears. If you want to answer the incoming call, press **FLASH**. To resume the previous phone conversation, press **FLASH** again.

If the phone's Caller ID memory becomes full, any new call replaces the oldest call's record.

Reviewing Caller ID Records

If the handset is faceup on the base, it shows the number of new Caller ID records, if any, and the total number of records.

To review the contents of each Caller ID record, lift the handset and press **CALL ID** to recall the number of records on the display.

Then, repeatedly press **VOL/CID** \blacktriangledown to scroll through the Caller ID records from the newest to the oldest, or **VOL/CID** \blacktriangle to scroll back through the records. To scroll quickly through the records, hold down **VOL/CID** \blacktriangle or \blacktriangledown .

When you scroll past the last record, total record number appears, then the first record. When you scroll past the first record, the total record number appears, then the last record.

The top line of each record shows the date, time and the number of calls from that number. The second line shows the caller's name, and the third line shows the caller's phone number.

To exit the Caller ID record display, press **CALL ID**.

Caller ID Messages

Display	Description
New:XX Total:XX	Shows the number of new Caller ID records (records you have not reviewed) and the total number of records.
Private Name or Private Number	The caller has blocked the Caller ID information.
Unknown Name or Unknown Number	The caller is not within a Caller ID service area.
Incomplete Data	Appears if there was an error during the transmission of Caller ID information. Occasional errors are normal. If the phone frequently displays Incomplete Data, contact your local telephone company or RadioShack store.

Adding/Deleting the Area Code

When the area code of the received call is the same as the one you stored (see "Storing Your Area Code" on Page 13), the caller ID record does not show the area code. If it is different, the record shows the area code.

However, you can add or delete the area code on the display. When the record is on the display, press **3** to add or delete the area code. Pressing **3** again deletes or adds the area code.

When you dial the number or store it into memory, the phone dials or stores the number as it appears on the display.

Dialing Numbers from a Caller ID Record

To dial a local number stored in a Caller ID record, recall the record, then press **TALK**. If it is a long distance call, press **1** (**1** appears before the displayed number) before you press **TALK**. If you want to add or delete the area code, press **3** before you press **TALK**.

Note: If a Caller ID record does not contain a phone number (if it was blocked by the caller, for example) you cannot dial from that record.

Storing a Caller ID Record to Memory

Follow these steps to store the name and number from a Caller ID record into a memory location.

1. Press **CALL ID** then **VOL/CID** ▲ or ▼ to recall the record you want to store.
2. If you want to add or delete the area code, press **3**.
3. Press **MEM. Select Location** appears.
4. Choose a memory location (01–20) by pressing a number or by repeatedly pressing **VOL/CID** ▲ or ▼, then press **CH/SELECT**.

If the selected location is empty, the phone beeps to confirm that it stored the number, then the Caller ID record appears.

If a record exists in the selected location, **Replace Memory?** appears, prompting you to confirm the replacement. Move the cursor to **Yes** or **No**, then press **CH/SELECT**.

Deleting Caller ID Records

You can delete Caller ID records individually or all at once.

Follow these steps to delete a single Caller ID record.

1. Press **CALL ID** then **VOL/CID** ▲ or ▼ to recall the record you want to delete.
2. Press **DELETE. Delete Message?** appears, prompting you to confirm the deletion.
3. Press **VOL/CID** ▲ to move the cursor to **Yes**, then press **CH/SELECT** or **DELETE**.

The phone beeps once indicating that the record was deleted.

Follow these steps to delete all Caller ID records.

1. Press **CALL ID** so the record totals appear.
2. Press **DELETE. Delete All?** appears, prompting you to confirm the deletion.
3. Press **VOL/CID** ▲ to move the cursor to **Yes**, then press **CH/SELECT** or **DELETE**. The phone beeps once and **Total:00** appears indicating that all Caller ID records were deleted.

Troubleshooting

We do not expect you to have any problems with your phone, but if you do, these suggestions might help.

Problem	Suggestion
The phone does not work or works poorly.	Be sure the base's phone line cord and AC adapter are correctly and securely connected.
	Be sure the battery pack in the handset is connected and charged.
	Return the handset to the base for about 5 seconds to reset the security access-protection code.
The display flashes slowly when the handset is faceup on the base.	Make sure the battery pack in the handset is properly connected.
The handset stops working or works poorly during a call.	Move the handset closer to the base.
	Lift the base's antenna to a fully vertical position.
	Be sure the handset's battery pack is charged. (If the battery pack power is too low, the handset cannot display Low Battery.)
Low volume or unusual sounds.	Someone has picked up another phone on the same line. Hang up the other phone.
Dropout or mute.	Keep the handset away from computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances.
	Move to another location or turn off the source of interference.
	Press CH/SELECT to change the channel.
	Hang up and redial the number.
The phone cannot be operated at a useful distance from the base because the signal becomes weak or noisy (handset's range has decreased).	Be sure neither the handset's nor base's antenna is touching a metal surface.
	Return the handset to the base and recharge the battery pack.
	Lift the base's antenna to a vertical position.
The handset battery pack does not charge.	Check the charging contacts on the handset and base. If they are dirty, clean them with a pencil eraser.
	Be sure the battery pack is connected correctly.
	Be sure the handset is properly seated on the base.
	Replace the battery pack (see "Replacing the Battery Pack" on Page 25).

Problem	Suggestion
The handset does not ring or receive a page.	Move the handset closer to the base.
	Lift the base's antenna to a vertical position.
	Be sure the battery pack in the handset is connected and charged.
	Move the base away from other electrical devices.
You have an incoming call, but do not receive any Caller ID information.	Let the phone ring twice before you answer so the phone has time to record the Caller ID information.
	Check that the phone is correctly and securely connected.
	Check with your phone company to verify that your Caller ID service is active.

If you still have problems, disconnect the phone. If other phones on the same line work properly, the fault is in this phone or its installation. If you cannot find the problem, take the phone to your local RadioShack store for assistance.

Care and Maintenance

Your Radioshack Dual Keypad 900 MHz Digital Spread Spectrum Cordless Telephone is an example of superior design and craftsmanship. The following suggestions will help you care for your phone so you can enjoy it for years.



Keep the phone dry. If it gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.



Use and store the phone only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.



Keep the phone away from dust and dirt, which can cause premature wear of parts.



Handle the phone gently and carefully. Dropping it can damage circuit boards and cases and can cause the phone to work improperly.



Use only fresh batteries of the required size and recommended type. Batteries can leak chemicals that damage your phone's electronic parts.



Wipe the phone with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.

Modifying or tampering with the phone's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your phone is not performing as it should, take it to your local RadioShack store for assistance. If the trouble is affecting the telephone lines, the phone company can ask you to disconnect your phone until you have resolved the problem.

REPLACING THE BATTERY PACK

If you follow the instructions in "Connecting and Charging the Battery Pack" on Page 10, the battery pack should last about one year. If the battery pack does not hold a charge for more than 2 hours after an overnight charge, replace it with a new 3.6-volt, 600 mAh battery pack with a connector that fits the socket in the battery compartment. You can order a replacement battery pack through your local RadioShack store.

Install the new battery pack, then charge it for about 24 hours.

1. Press down and slide off the battery pack compartment cover.
2. Lift the battery pack out of the compartment, then gently pull on the battery connector to disconnect it.
3. Insert the new battery pack's connector into the socket in the compartment, place the battery pack into the compartment, and replace the cover.

Warning: Dispose of the old battery pack promptly and properly. Do not burn or bury it.

Cautions:

- You must use a replacement battery pack of the same size and type.
- Do not dispose of the battery pack in a fire because it might explode.
- Do not open or mutilate the battery pack.
- Be careful not to short the battery pack by touching it with conducting materials, such as rings, bracelets, and keys. The battery pack or conductor might overheat and burn.

If you have trouble replacing the battery pack, take the phone to your local RadioShack store for assistance.

Important: This phone can use nickel-cadmium rechargeable batteries. At the end of a nickel-cadmium battery's useful life, it must be recycled or disposed of properly. Contact your local, county, or state hazardous waste management authorities for information on recycling or disposal programs in your area or call 1-800-822-8837. Some options that might be available are: municipal curbside collection, drop-off boxes at retailers such as your local RadioShack store, recycling collection centers, and mail-back programs.





THE FCC WANTS YOU TO KNOW

 
 
 
In the unlikely event that your phone causes problems on the phone line, the phone company can temporarily discontinue your service. If this happens, the phone company attempts to notify you in advance. If advance notice is not practical, the phone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

 
Also, the phone company can make changes to its lines, equipment, operations, or procedures that could affect the operation of this telephone. The telephone company notifies you of these changes in advance, so you can take the necessary steps to prevent interruption of your telephone service.

LIGHTNING







Your telephone has built-in protection circuits to reduce the risk of damage from surges in telephone line and power line current. These protection circuits meet or exceed the FCC requirements. However, lightning striking the telephone or power lines can damage your telephone.

Lightning damage is not common. Nevertheless, if you live in an area that has severe electrical storms, we suggest that you unplug your phone when storms approach to reduce the possibility of damage.





Notes

      



Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

 
 
This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102


We Service What We Sell

12/99



RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

 43-1126
UCZZ0688ZZ
04A00
Printed in China



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>