



Cat. No. 43-1021
OWNER'S MANUAL

Please read before using this equipment.

ET-521

25-Channel Cordless Telephone with Caller ID/Call Waiting ID



RadioShack®



FEATURES

Your RadioShack ET-521 25-Channel Cordless Telephone offers the latest advances in cordless phone technology. Its cordless operation lets you handle calls just about anywhere in your home or office.

The phone can display a caller's phone number, name (if available), and the date and time the call was received. It can store up to 99 records as provided by your local phone company to Caller ID service subscribers.

If you have Call Waiting with Caller ID, the phone displays incoming caller information for a new call when you are already on the phone.

The ET-521 has these features:

Caller ID Memory Dialing — lets you select a phone number stored in Caller ID memory, then dial it with the touch of a button.

25 Channels — automatically selects a clear channel when you make or answer a call. You can also manually change channels during a call.

Headset Jack — lets you can connect an optional headset (such as RadioShack Cat. No. 43-194) for hands-free convenience while you use the phone.

VIP Memory — alerts you with a distinctive ring when someone you have added to the VIP list calls.

20-Number Memory Dialing — lets you store 20 numbers in memory for easy dialing.

Review Scrolling — lets you easily scroll through all information stored in the ET-521's Caller ID memory.

Phone Information Display — lets you see incoming Caller ID information and phone numbers as you dial them or recall them from the ET-521's memory and Caller ID records.

Trilingual Messages — lets you set the phone to display messages in English, French, or Spanish.

COM-LOK[®] — ensures that other cordless phone users cannot use your phone line while the handset is on the base.

Advanced Super CCT Circuitry — provides clarity comparable to that of a corded phone, reduces background noise, and increases effective operating distance.

Security Access-Protection Code — helps prevent other cordless phone users from using your phone line while the handset is off the base.

Two-Way Intercom/Paging System — lets you send a signal from the base to the handset, or from the handset to the base, to page someone or locate the handset when it is away from the base. If someone answers, you can use the ET-521 as an intercom.

© 1998 Tandy Corporation.
All Rights Reserved.

COM-LOK and RadioShack are registered trademarks used by Tandy Corporation.

Flash — sends an electronic switchhook signal for use with special phone services such as Call Waiting.

Volume Control — lets you adjust the volume you hear through the handset.

Hold — lets you put a call on hold, so you can answer another call or page someone.

Redial — lets you quickly redial the last number dialed.

Touch/Pulse Dialing — lets you use your phone with tone or pulse service.

This telephone has been tested and found to comply with all applicable UL and FCC standards.

We recommend you record your phone's serial number here. The number is on the bottom of the base.

Serial Number: _____

Important Caller ID Information



To use the phone's Caller ID and Call Waiting features, you must be in an area where Caller ID and Call Waiting services are available and you must subscribe to the services.

Where Caller ID is offered, one or more of the following options are generally available:

- Caller's number only
- Caller's name only
- Caller's name and number

For the ET-521's Caller ID memory dial feature to operate, you must receive the caller's number.

Warning: To prevent fire or shock hazard, do not expose this product to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

Important: Cordless phones such as this one require AC power to operate. When the AC power is off, you cannot dial out or receive incoming calls using your ET-521. For this reason, the ET-521 cordless phone should not be your only telephone. To be safe, you should also have a phone that does not require AC power to operate (not a cordless phone) so you can still make and receive calls if there is an AC power failure.

Your telephone operates on standard radio frequencies as allocated by the FCC. Even though the access protection code prevents unauthorized use of your phone line, it is possible for other radio units operating on similar frequencies within a certain area to unintentionally intercept your conversations and/or cause interference. This lack of privacy can occur with any cordless phone.

READ THIS BEFORE INSTALLATION

Each device that you connect to the phone line draws power from the phone line. We refer to this power draw as the device's *ringer equivalence number*, or REN. The REN is on the bottom of the base.

If you are using more than one phone or other device on the line, add up all the RENs. If the total is more than five, your phone might not ring. In rural areas, a total REN of three might impair ringer operation. If ringer operation is impaired, remove a device from the line.

FCC STATEMENT


This telephone complies with Part 68 of *FCC Rules*. You must, upon request, provide the FCC registration number and the REN to your phone company. These numbers are on the bottom of the base.

Note: You must not connect your ET-521 to any of the following:



- coin-operated systems
- party-line systems
- most electronic key phone systems

CONTENTS

Preparation	7
Selecting a Location	7
Attaching the Handset's Antenna	7
Placing the Base on a Desk Top	7
Mounting the Base on a Wall Plate	9
Mounting the Base Directly on the Wall	11
Connecting and Charging the Battery Pack	13
Setting the Dialing Mode	15
Selecting the Language	15
Setting the Area Code	16
Setting the Ringers	16
Checking/Setting the Handset Ringer	16
Turning the Base Ringer On or Off	17
Telephone Operation	18
Making and Receiving a Call	18
Setting the Handset's Volume	18
Changing the Channel	19
Using Redial	19
Using Flash	19
Using Hold	20
Using Tone Services on a Pulse Line	20
Using Page/Intercom	20
Memory Dialing	21
Storing a Number and Name in Memory	21
Entering a Pause	23
Recalling Numbers Stored in Memory	23
Dialing a Memory Number	23
Chain-Dialing Service Numbers	24
Testing Stored Emergency Numbers	24
Deleting Information in a Single Memory Location	24
Deleting Information in All Memory Locations	24
Using the VIP Call List	25
Caller ID Operation	26
Caller ID Displays	27
Reviewing Caller ID Records	27
Storing Caller ID Records in a Memory Location	28
Dialing Numbers from a Caller ID Record	28
Deleting Caller ID Records	28
Using a Headset	29
Troubleshooting	30
	5

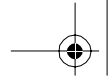

Care and Maintenance	32
Replacing the Battery Pack	33
The FCC Wants You to Know	34
Lightning	34

  

PREPARATION

SELECTING A LOCATION

You can place the phone on a desk top or table, mount it on a standard wall plate, or mount it directly on the wall. Select a location that is:

- near an AC outlet
- near a telephone line jack
- out of the way of normal activities
- away from electrical machinery, electrical appliances, metal walls or filing cabinets, wireless intercoms, alarms, and room monitors

The base's location affects the phone's range. If you have a choice of several locations, try each to see which provides the best performance.

 
Caution: The supplied AC adapter was designed specifically for your ET-521. Use only the supplied adapter.

Note:

- Your telephone connects directly to a modular telephone line jack. If your phone line jack is not a modular jack, you can update the wiring yourself, using jacks and adapters available at your local RadioShack store. Or, you can let the phone company update the wiring for you. The USOC number of the jack to be installed is RJ11C (RJ11W if you want to mount it on a wall plate).

ATTACHING THE HANDSET'S ANTENNA


Screw the antenna into the hole at the top of the handset.




PLACING THE BASE ON A DESK TOP

Follow these steps when you place the base on a desk, shelf, or table.


1. Remove the bracket by holding in both tabs and gently pulling out the wide end of the bracket.

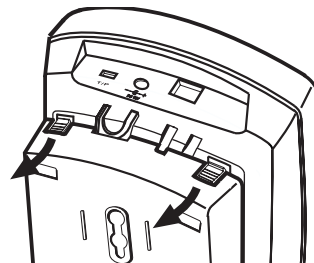


2. Plug one end of the supplied long modular cord into the phone jack on the back of the base.

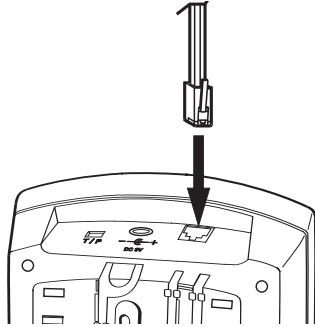


3. Insert the supplied AC adapter's barrel plug into the **DC 12V** jack on the back of the base.

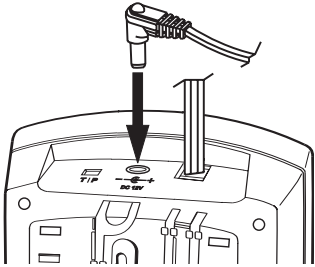


4. Route the adapter's cord through the strain relief slot on the bottom of the base.

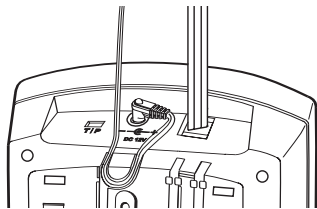


5. Insert the tabs on the narrow end of the bracket into both slots on the bottom of the base as shown and push the tabs on the wide end of the bracket into the upper slots on the bottom of the base.

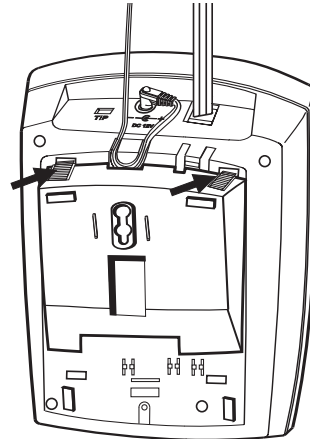


6. Plug the modular cord's other end into a modular phone line jack.

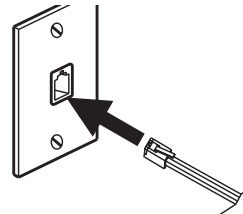


7. Plug the adapter into a standard AC outlet.

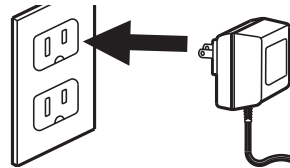

8. Fully extend the base's antenna and raise it to a vertical position.

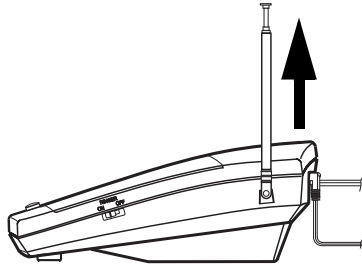


3. Insert the supplied AC adapter's barrel plug into the **DC 12V** jack on the back of the base.

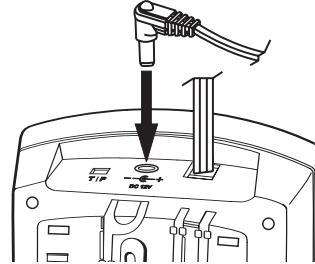


MOUNTING THE BASE ON A WALL PLATE


1. Remove the bracket by holding in both tabs and gently pulling out the wide end of the bracket.

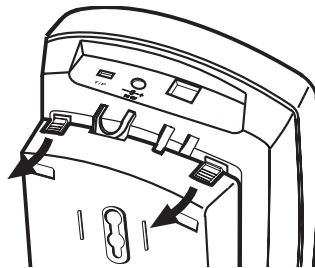


2. Plug one end of the supplied short modular cord into the phone jack on the back of the base.

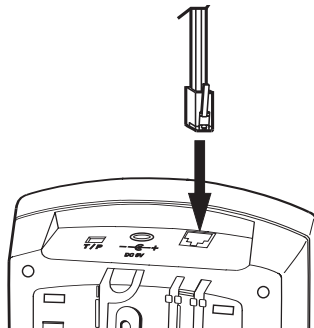


4. Route the modular cord through either groove on the bottom of the base and the adapter cord through the groove below the strain relief slot.

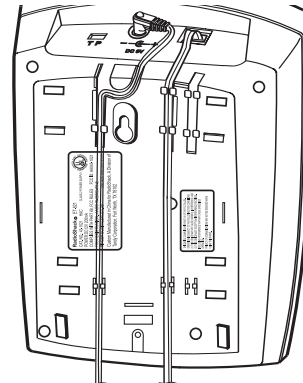


5. Insert the tabs on the narrow end of the bracket into the slots on the bottom of the base as shown and route the other end of the short modular cord through the center of the bracket.

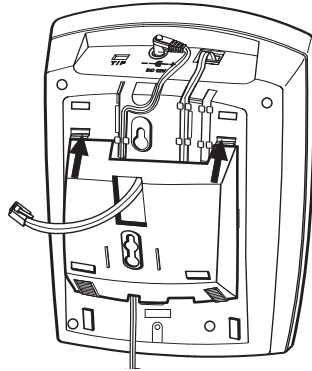


7. Plug the short modular cord's other end into the wall plate jack, align the base's keyhole slots with the wall plate studs, and slide the base downward to secure it.

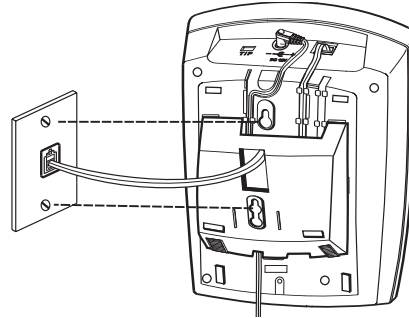


6. Push the tabs on the wide end of the bracket into the lower slots on the bottom of the base.

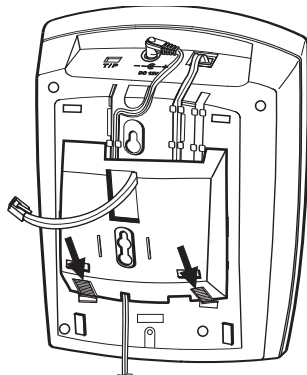

8. Plug the adapter into a standard AC outlet.

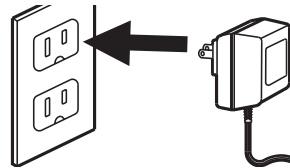


9. Fully extend the base's antenna and raise it to a vertical position.

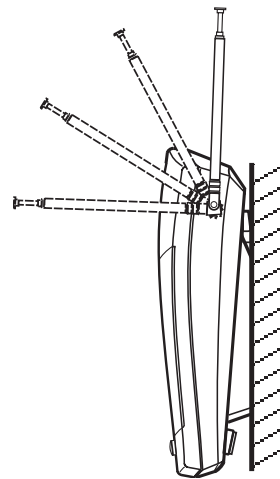


MOUNTING THE BASE DIRECTLY ON THE WALL

For this mounting method, you need two flat-head screws (not supplied) with heads that fit into the keyhole slots on the bottom of the base.


1. Drill two holes $3^{15}/16$ inches (100 mm) apart. Then thread a screw into each hole, letting the heads extend about $5/16$ inch (7 mm) from the wall.

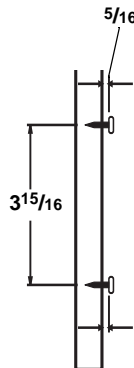


2. Remove the bracket by holding in both tabs and gently pulling out the wide end of the bracket.

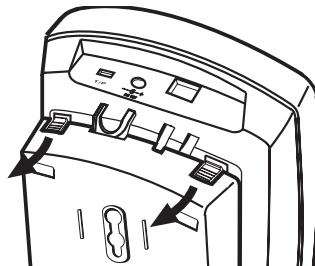


3. Plug one end of the supplied long modular cord into the phone jack on the back of the base.

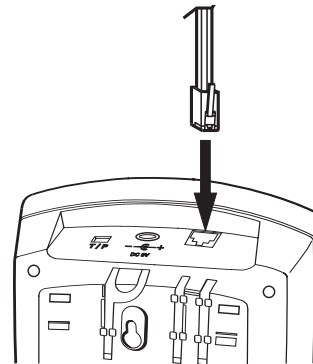


4. Insert the supplied power adapter's barrel plug into the **DC 12V** jack on the back of the base.

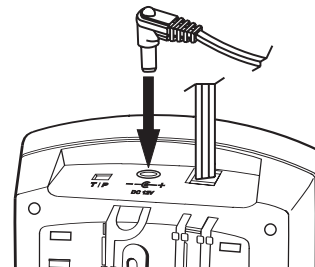


5. Route the modular cord through either groove on the bottom of the base and the adapter cord through the groove below the strain relief slot.

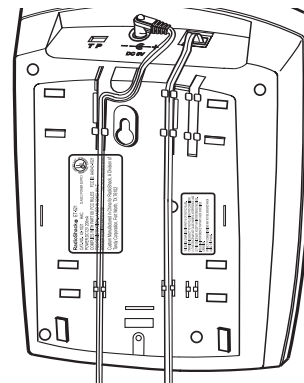


6. Insert the tabs on the narrow end of the bracket into the slots on the bottom of the base as shown, guide the modular and adapter cords through the slots on the wide end of the bracket, then push the tabs on the wide end of the bracket into the lower slots on the bottom of the base.

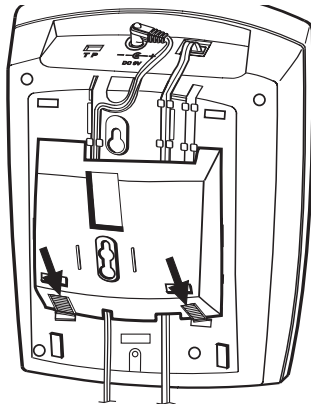


8. Plug the adapter into a standard AC outlet.

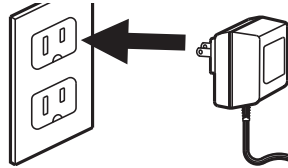


9. Plug the modular cord into a modular phone line jack.

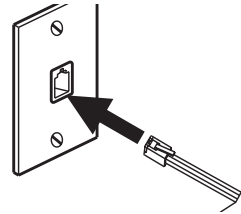

10. Fully extend the base's antenna and raise it to a vertical position.

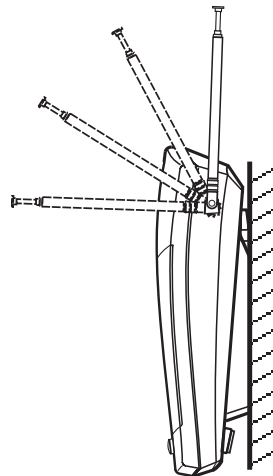


7. Align the base's keyhole slots with the mounting screws, and slide the base downward to secure it.

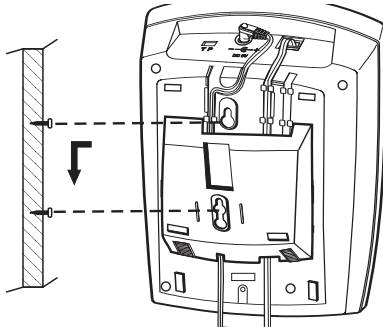


CONNECTING AND CHARGING THE BATTERY PACK

The ET-521 comes with a rechargeable nickel-cadmium battery pack in the handset but not connected. Before using your phone, you must connect the battery pack and then charge it for about 15 hours.

1. Press down and slide off the compartment cover as shown.

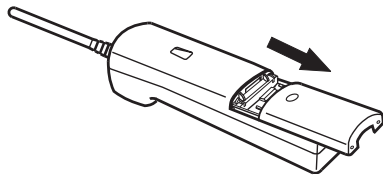


2. Plug the battery pack's connector into the socket in the compartment. The connector fits only one way.

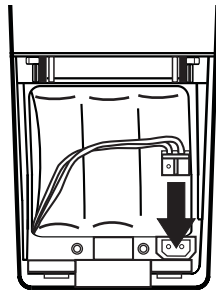


Note: For easier battery pack connection, lift it out of the compartment, insert its connector into the socket, then replace the battery pack inside the compartment.


3. Replace the cover.

To charge the battery pack, simply place the handset on the base. The CHARGE indicator on the base lights.

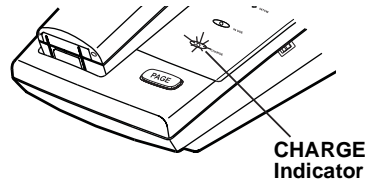

Note: You can place the handset on the base face up or face down.


Recharge the battery pack when  appears on the handset's display.

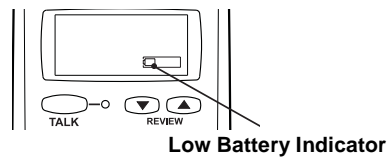



Notes:

- When you first use the phone after charging or recharging the battery pack, the phone might not work and you might hear an error tone when you press **TALK**. If this happens, return the handset to the base for about 6 seconds. This resets the security access protection code.
- If the CHARGE indicator does not light when you place the handset on the base, be sure the battery pack and AC adapter are correctly and securely connected.

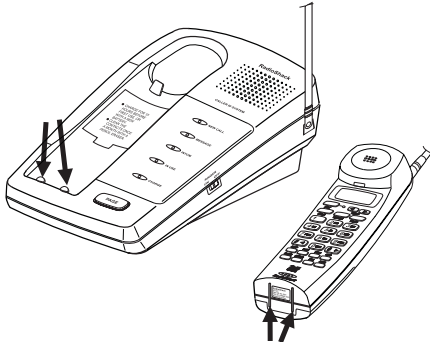Also, check the charging contacts on the handset and the base. If the contacts are dirty or tarnished, clean them with a pencil eraser.




- If you are not going to use your phone for an extended period of time, disconnect the battery pack. This increases the battery pack's usable life.
- The supplied battery pack should last for about a year. When it loses its ability to fully recharge, order a replacement battery pack from your local RadioShack store (see "Replacing the Battery Pack" on Page 33).

- If the battery pack gets completely discharged or the base loses power while the handset is away from it, the security access-protection code needs to be reset. To reset the security code, place the handset on the base. If it was the handset that lost power, leave the handset on the base to charge the battery pack.
- If the battery pack gets weak during a call, the handset sounds 4 beeps every 30 seconds. If this happens, you cannot make another call on the phone until you recharge the battery pack.
- About once a month, fully discharge the battery pack by keeping the handset off the base until  appears. Otherwise, the battery pack loses its ability to fully recharge.
- To avoid damage to the battery pack, always recharge the handset before battery power grows too weak to light .


SETTING THE DIALING MODE

Set **T/P** (Tone/Pulse) on the back of the base for the type of service you have. If you are not sure which type you have, once the battery is fully charged, do this test.

1. Set **T/P** to **T**.

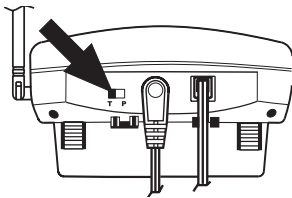

2. Lift the handset, then press **TALK** and listen for the dial tone.

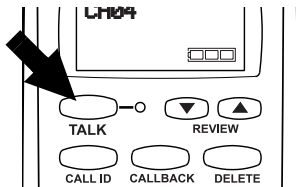

3. Press any number other than 0.

Note: If your phone system requires that you dial an access code (9, for example) before you dial an outside number, do not press the access code either.


If the dial tone stops, you have touch-tone service. Leave **T/P** set to **T**.

If the dial tone continues, you have pulse service. Set **T/P** to **P**.

SELECTING THE LANGUAGE


The ET-521 comes set to display all Caller ID messages in English, but if you want it to display messages in French or Spanish, follow these steps.

1. Press **SETUP** on the handset. **Language** and the currently selected language appear.

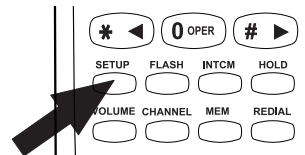

Note: If you do not press any key within 15 seconds after the language selection display appears, the ET-521 exits the language selection display without changing the current selection.

2. To select another language, repeatedly press *** / <** or **# / >** until you see the desired language.

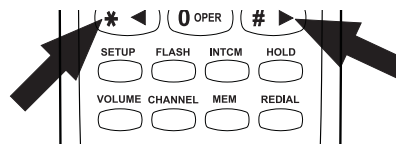

3. Press **SETUP** to store the selected language.


SETTING THE AREA CODE

When you return a call from a Caller ID record (see "Dialing Numbers from a Caller ID Record" on Page 28), your phone automatically dials 1, the area code, and the number. However, if you store your area code into memory and the number you call has the same area code, the ET-521 only dials the 7-digit local number.

Follow these steps to set the local area code.

Note: If you do not press a key within 15 seconds during these steps, the display clears and you must start again at Step 1.

1. Press **SETUP**. The language selection display appears.
2. Press **REVIEW** t or s twice. The currently entered area code (or -- -) appears.

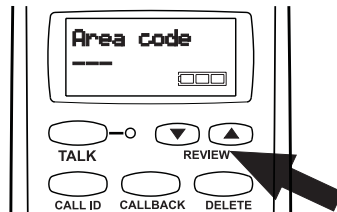

3. Enter your 3-digit area code, then press **SETUP** to store it.

Note: If you make a mistake while setting the area code, press **DELETE** and re-enter the area code.

SETTING THE RINGERS

You can easily set the handset and base ringers to fit your personal needs.


Notes:

- Even with the base and handset ringers off, you can make or receive calls using this phone, and telephones on the same line still ring when there is an incoming call. The IN USE indicator on the base and the TALK indicator on the handset flash until you answer the call.
- If the base's ringer is off and the handset is on the base, the handset does not ring.


Checking/Setting the Handset Ringer

You can set the ET-521's handset to sound any of three ring types or you can turn off its ringer. Follow these steps to check the current ringer type, and change it if desired.

1. Press **SETUP**.
2. Repeatedly press **REVIEW** s or t until the handset rings and **Ringer PAT** (ringer pattern) and the current setting appear.

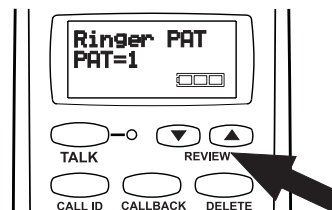


3. Press ***/◀** or **#/▶** to select the desired ringer type or turn off the ringer. The handset sounds the new selection as you change the ringer type.

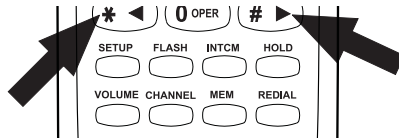

4. Press **SETUP** to complete the setting. If you turned off the ringer, **Ringer OFF** appears for about 12 seconds.

Turning the Base Ringer On or Off


To have the base ring when a call comes in, set **RINGER** to **ON**. To turn the ringer off, set **RINGER** to **OFF**.

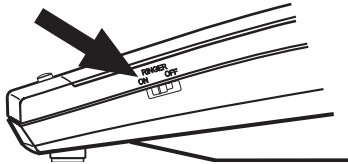


TELEPHONE OPERATION

MAKING AND RECEIVING A CALL

To make a call, simply lift the handset and press **TALK**. When the TALK indicator lights steadily and you hear the dial tone, dial the desired phone number or memory number (see "Memory Dialing" on Page 21).

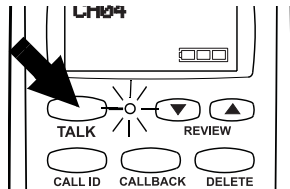

The ET-521 displays the current channel number until you dial the phone number. Then the phone number appears, followed by the duration of your call (after 15 seconds) in minutes and seconds.

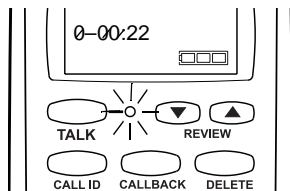

To answer a call if the handset is on the base, simply lift the handset and begin your conversation. Or, if the handset is away from the base, press **TALK** first. The TALK indicator on the handset and the IN USE indicator on the base light.


To end a call, place the handset on the base or press **TALK**. The TALK and IN USE indicators turn off.

Notes:

- If you press **TALK** to hang up and the phone does not disconnect, move closer to the base then press **TALK** again, or place the handset on the base.
- If you want to make a call but the AC adapter is not properly connected or the handset is out of the base's range, **Try again** appears and the handset beeps twice. Be sure the AC adapter is correctly and securely connected, move the handset closer to the base, then try again.
- If you hear loud static during a conversation, move the handset closer to the base.
- If you turn off the ringer, **Ringer OFF** appears for about 12 seconds when you end a call.

SETTING THE HANDSET'S VOLUME

You can select any of three different volume settings (soft, normal, loud) by repeatedly pressing **VOLUME** during a call.

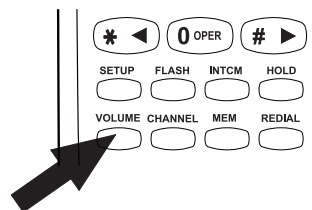


CHANGING THE CHANNEL

The ET-521 scans 25 channels (frequency pairs used between the base and the handset) and automatically selects a clear channel each time you make or receive a call.

CH and the current channel number appear on the display for about 15 seconds when you make or receive a call.


If you hear other conversations or excessive noise during a call, press **CHANNEL** to select a different channel. The selected channel appears on the display.

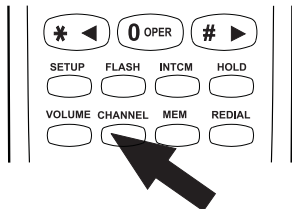

Note: If the handset is too far from the base, the channel might not change. Move closer to the base and try again.

USING REDIAL

You can quickly redial the last number dialed. Simply lift the handset and press **TALK**. When you hear the dial tone, press **REDIAL**. The number appears on the display as the phone dials it.

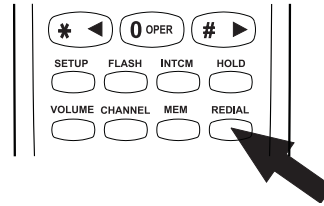


Notes:

- The redial memory holds up to 24 digits, so you can redial long-distance as well as local numbers.
- We recommend you not use **REDIAL** to dial numbers that include a tone entry. This could result in a wrong number being dialed. (See "Using Tone Services on a Pulse Line" on Page 20.)
- The redial memory does not store a flash entry or any digits entered after you press **FLASH** (see "Using Flash").

USING FLASH

FLASH performs the electronic equivalent of a switchhook operation for special services, such as Call Waiting.


For example, if you have Call Waiting, press **FLASH** to answer an incoming call without disconnecting the current call. Press **FLASH** again to return to the first call.

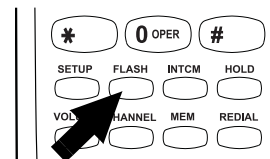

Note: If you do not have any special phone services, pressing **FLASH** might disconnect the current call.

USING HOLD

To talk to someone else in the room without the person on the other end of the phone line hearing your conversation, press **HOLD** during the call. The TALK indicator on the handset and IN USE indicator on the base flash and **Phone hold** appears.

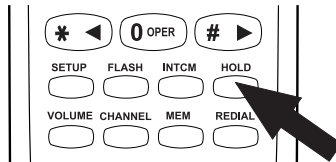

Note: We do not recommend using hold for very long if you subscribe to Caller ID, because the Caller ID information sent by the phone company might disconnect a caller on hold if a new call comes in.

Press **HOLD** again to resume your phone conversation.

USING TONE SERVICES ON A PULSE LINE

Some special services, such as bank-by-phone, require tone signals. If you have pulse service, you can still use these special tone services by following these steps.


1. Be sure **T/P** is set to **P**.

2. Dial the service's main number.
3. When the service answers, press *****. Q appears. Any additional numbers you dial are sent as tone signals.
4. After you complete the call, return the handset to the base or press **TALK**. The phone automatically resets to pulse dialing.

USING PAGE/INTERCOM

You can use the ET-521 as a two-way pager and intercom between the base and the handset. This is useful if the handset is away from the base and you want to locate it, or if you want to have a conversation between the handset and the base.

To page the person who has the handset or to locate the handset when the phone is not in use, press **PAGE** on the base. The handset beeps three times and **Paging you** appears. If you want the handset to beep for a longer time, hold down **PAGE** for about 3 seconds. The handset beeps for 3 minutes.

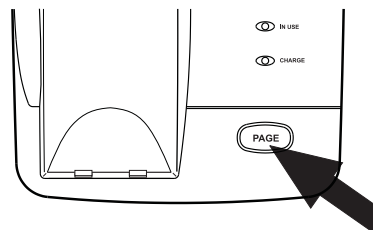

To stop the handset from beeping before it automatically stops, press **TALK** on the handset twice or **PAGE** on the base.

To answer a page from the base or to page the base, press **INTCM** on the handset. The base sounds three beeps and **Intercom** appears on the handset. Begin your conversation.

Notes:

- You cannot speak and hear the other party at the same time during an intercom conversation.
- You cannot page the handset during a call.
- If you want to make an intercom call during a phone conversation, press **INTCM** on the handset to page the base. **Phone hold Intercom** appears and the call is placed on hold. When you finish the intercom call, press **INTCM** to resume the phone conversation.
- If a phone call comes in during an intercom conversation, press **TALK** on the handset to answer the call. When you finish the call, you can press **INTCM** to resume the intercom conversation.

To end the intercom conversation, press **INTCM**.

MEMORY DIALING

You can store up to 20 phone numbers and names in memory, then dial a stored number by pressing a two-digit memory location number.


Each stored number can be up to 24 digits long, and each name can contain up to 16 characters.

Storing a Number and Name in Memory

Notes:

- If **T/P** is set to **P** and you want to use tone dialing for a memory number, you must store a * as the first entry of the number you want to tone dial.
- Do not store a number with both pulse and tone entries in the same memory location. This could result in a wrong number being dialed.
- Each pause (see "Entering a Pause" on Page 23) and tone entry (*) uses one digit of memory.
- To keep your accounts secure, we recommend you do not store your personal access code for services such as bank-by-phone in a memory location.
- An error tone sounds and the phone exits the programming mode if you wait more than 15 seconds between each keypress or enter more than 24 digits. You must start over at Step 1.


1. Press **MEM. PROG** (programming) appears.

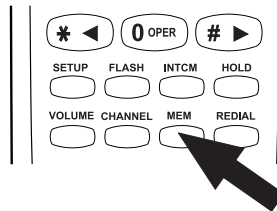


2. Enter the number you want to store. The number appears on the display.

To store the last number you dialed, simply press **REDIAL**.

If you enter an incorrect digit, press **DELETE** to delete the last entered digit. Then enter the correct digit.

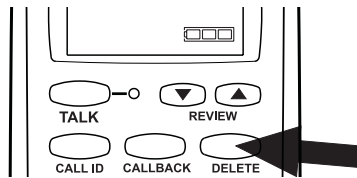

3. To enter a name, press **SETUP**. A flashing cursor appears.

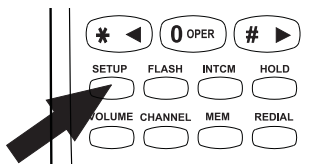

Refer to the letters on the number keys to select the desired letter. For example, to enter JOHN: press 5 once; **J** appears. Then press 6 three times; **o** appears. Press 4 twice; **h** appears. Finally, press 6 twice; **n** appears.

To enter the same letter twice in a row or enter a blank space, press **#/▶** to move the cursor to the next character position, then enter the desired letter.

Notes:


- If you enter a wrong letter, press **#/▶** or *** /◀** to move the cursor to the position of the incorrect letter, then enter the correct letter.
 - You can enter up to 16 letters, including spaces.
4. Press **MEM. Enter 00-19** appears.
 5. Enter a two-digit memory location number (00-19). The ET-521 beeps several times. The stored memory location number and **Save OK** appear.

Note: If you receive a call while you are storing information in memory, press **TALK** to answer the call. After the call, begin again at Step 1.

To replace a stored number, simply store a new one in its place.


Entering a Pause

In some telephone systems, you must dial an access code (9, for example) and wait for a second dial tone before you can dial an outside number. You can store the access code with the phone number. However, you should also store a pause after the access code to allow the outside line time to connect. To do so, press **REDIAL** to enter a 3-second pause after entering the access code. **P** appears. For a longer pause, press **REDIAL** again.

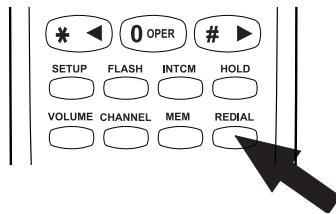

Recalling Numbers Stored in Memory

1. Press **MEM**, then **SETUP**. The phone displays **M - -**.

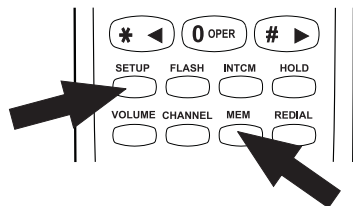

2. Enter the 2-digit memory location number. The stored phone number appears.

Or, to scroll through all of the memory locations, repeatedly press **RE-**


VIEW s or t until the desired number appears.

Note: **TOP OF LIST** or **END OF LIST** appears when you reach the beginning or end of the memory locations.

3. To review the stored name, press **#/** or ***/<**. If no name is stored, **No name** appears.

Dialing a Memory Number

1. Press **TALK**. The TALK indicator lights.
2. When you hear the dial tone, press **MEM** then enter the 2-digit memory location number, or press **REVIEW** s or t to select the desired memory location number. The memory location number and the stored phone number appear on the display.
3. Press **CALLBACK**. The phone dials the displayed phone number.

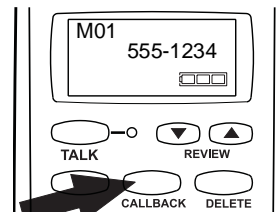

Chain-Dialing Service Numbers

For quick recall of numbers for special services (such as alternate long distance or bank by phone), store each group of numbers in its own memory location.

When calling special services, dial the service's main number first. Then, at the appropriate place in the call, press **MEM** and **SETUP**, enter the number for the location where the additional information is stored, and press **CALLBACK**.

Testing Stored Emergency Numbers

If you store an emergency service's number (police department, fire department, ambulance) and you choose to test the stored number, make the test call during the late evening or early morning hours to avoid peak demand periods. Remain on the line to explain the reason for your call.

Deleting Information in a Single Memory Location

 
1. Recall the memory location containing the information you want to delete.
2. Press **DELETE**. **Clear ?** and **↳DEL** appear.
3. Press **DELETE** again to confirm deletion. The next higher memory location number and the number stored there appear. If no number is stored in that location, **No number** appears.

To exit without deleting the information, wait 30 seconds without pressing any button.

Deleting Information in All Memory Locations


1. Press **MEM**, then **SETUP**.
2. Repeatedly press **REVIEW** s or t until **TOP OF LIST** or **END OF LIST** appears.
3. Press **DELETE**. **Clear ? ALL?** and **↳DEL** appear.
4. Press **DELETE** again to confirm deletion. **Clear OK** appears briefly.


To exit without deleting all of the memory location information, wait 30 seconds without pressing any button.





Using the VIP Call List

 Your phone lets you save up to 20 phone numbers in its VIP Call List. Whenever someone calls from one of those 20 numbers, if you subscribe to Caller ID, the system sounds distinctive rings after the first ring to alert you.

To place a phone number on the VIP Call list, first recall the phone number from a memory location, then press **SETUP**.  appears, marking the phone number as a VIP phone number.

  To remove a phone number from the VIP Call List, recall the phone number and press **SETUP**.  disappears.





CALLER ID OPERATION


If you subscribe to Caller ID service from your phone company, the ET-521 automatically displays the information the phone company sends between the first and second rings of every call you receive. It stores up to 99 number only or name and number call records in its Caller ID memory.

It also shows the date and time the call was received. The display also shows if caller information is not available or if the number is blocked by the sender (see "Caller ID Displays" on Page 27).

The **NEW CALL** and **MESSAGE** indicators light on the base during an incoming call, and the call record and **NEW** appear for 15 seconds, then the display blanks out.



If you subscribe to your phone company's message waiting service, your system informs you when you have a message waiting. If the **MESSAGE** indicator on the base flashes and  appears, you have a voice message in your mailbox.  disappears from the display after 15 seconds, but the **MESSAGE** indicator flashes until you retrieve the message or delete the Caller ID record.

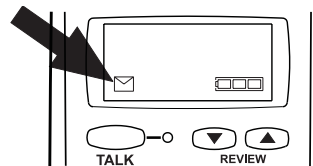

If you subscribe to Call Waiting, the **NEW CALL** and **MESSAGE** indicators light on the base during a call and **Call waiting** appears briefly. The Caller ID record appears. If you want to answer the incoming call, press **FLASH**. To resume the previous phone conversation, press **FLASH** again.




CALLER ID DISPLAYS

English Display — French Spanish	Description
xx New CID Total = xx xx CID Nvx xx CID Nuevo	The first line indicates the number of new calls. The second line shows the total number of Caller ID records in memory.
No data sent Aucune donne No hay datos	Appears when the Caller ID information was garbled, or if there was an error during the transmission.
Private Confidentiel Privado	Appears if the caller chose to block sending Caller ID information. No caller information appears.
Call waiting Appel en attente Llamada en espera	Appears briefly to indicate incoming call information while you are on the phone. The Caller ID information appears.
Out of area Hors de zone No area	Appears if the caller is not within a Caller ID service area, or during operator-assisted calls or calls made with a credit card.
R#xx	Appears when you review a Caller ID record from someone who has called more than one time from the same number.

REVIEWING CALLER ID RECORDS

1. Press **CALL ID**. **xx New CID Total = xx** appears.

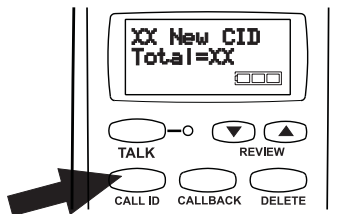

2. Repeatedly press **REVIEW** s to see older calls or **REVIEW** t to see more recent calls.
3. To see the Caller ID record number and date/time, press **#/▶** or ***/◀**.

Note: If you do not press a button for 15 seconds while you are reviewing Caller ID records, the ET-521's display automatically blanks out.

STORING CALLER ID RECORDS IN A MEMORY LOCATION

1. Press **CALL ID. xx New CID Total = xx** appears.
2. Repeatedly press **REVIEW** s or t until you see the desired Caller ID record.
3. Press **MEM. PROG** appears.
4. If you want to enter a name for the displayed number, press **SETUP** then enter the name.
5. Press **MEM**, then enter the memory location number. The ET-521 beeps several times. The stored memory location number and **save OK** appear.

DIALING NUMBERS FROM A CALLER ID RECORD

1. Press **CALL ID**, then press **REVIEW** s or t until you see the phone number you want to dial.
2. Press **CALLBACK**. The ET-521 dials the displayed phone number.

If the phone number's area code does not match the area code you stored, the system automatically dials a 1 before dialing the displayed area code and 7-digit phone number. (See "Setting the Area Code" on Page 16.)

DELETING CALLER ID RECORDS

The ET-521 lets you delete *individual* Caller ID records or *all* Caller ID records at one time.

Follow these steps to delete a single Caller ID record.


1. Press **CALL ID** then repeatedly press **REVIEW** s or t until the Caller ID record you want to delete appears.
2. Press **DELETE. Clear ?** and **↵DEL** appear.
3. Press **DELETE** again.


Follow these steps to delete all Caller ID records.

1. Press **CALL ID** then press **DELETE. Clear ? ALL?** and **↵DEL** appear.
2. Press **DELETE. Clear OK** appears.

USING A HEADSET

You can make or answer calls with hands-free convenience using an optional headset that has a $\frac{3}{32}$ -inch (2.5 mm) plug. We recommend RadioShack Cat. No. 43-194, which is specially designed for use with the ET-521.

To connect the headset, insert the headset's plug into the  jack on the top of the handset.

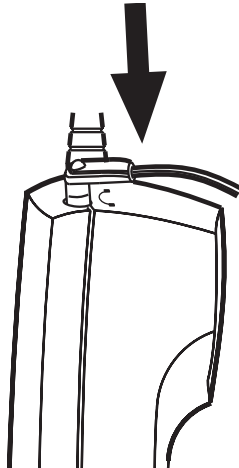

Notes:

- Connecting a headset disconnects the handset's earpiece and microphone.
- If you place the handset on the base to recharge it while the headset is connected, be sure the handset seats properly.

With a headset connected, you make or answer calls as usual using the keys on the handset.

RadioShack also sells a headset holder (Cat. No. 43-197) which lets you hang the handset on your belt for hands-free conversation.

TROUBLESHOOTING

We do not expect you to have any problems with your telephone, but if you do, the following suggestions might help.

Problem	Suggestion
The handset does not work.	Move the handset closer to the base.
	Be sure the phone line cord and AC adapter are correctly and securely connected.
	Be sure the battery pack is connected and charged.
	Fully extend and raise the base's antenna to a vertical position.
	Return the handset to the base for 6 seconds, then try again.
Volume drops or you hear unusual sounds.	Someone has picked up another phone on the same line. Hang up the other phone.
Call is noisy.	Do not place the base near appliances or large metal objects.
	Keep the handset away from interference sources such as computers, remote control toys, wireless alarm systems, wireless intercoms and room monitors, fluorescent lights, and electrical appliances. If the interference is severe, turn off the interfering device.
	Press CHANNEL to switch to another channel.
	Hang up and redial the number.
Phone dials more than 7 digits when dialing a local phone number from a Caller ID record.	Store the local area code (see "Setting the Area Code" on Page 16).
The handset's range decreases.	Fully extend and raise the base's antenna to a vertical position.
	Return the handset to the base to recharge the battery pack.
	Be sure the base's antenna is not touching a metal surface.

Problem	Suggestion
Receiver sound flutters or fades.	Be sure the battery pack is charged.
	Fully extend and raise the base's antenna to a vertical position.
	Move the handset closer to the base.
Can receive calls, but cannot make calls.	Set T/P correctly for the type of service you have (see "Setting the Dialing Mode" on Page 15).

If you still have problems, disconnect the phone. If other phones on the same line work properly, the fault is in this phone or its installation. If you cannot find the problem, take your ET-521 to your local RadioShack store for assistance.

CARE AND MAINTENANCE

Your ET-521 25-Channel Cordless Telephone is an example of superior design and craftsmanship. The following suggestions will help you care for your phone so you can enjoy it for years.



Keep the phone dry. If it gets wet, wipe it dry immediately. Liquids can contain minerals that corrode the electronic circuits.



Handle the phone gently and carefully. Dropping it can damage circuit boards and cases and cause the phone to work improperly.



Use and store the phone only in normal temperature environments. Temperature extremes can shorten the life of electronic devices and distort or melt plastic parts.



Keep the phone away from dust and dirt which can cause premature wear of parts.



Wipe the phone with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean your phone.

Modifying or tampering with the phone's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your phone is not performing as it should, take it to your local RadioShack store for assistance. If the trouble is affecting the phone lines, the phone company might ask you to disconnect your phone until you have resolved the problem.


REPLACING THE BATTERY PACK

If you follow the instructions in "Connecting and Charging the Battery Pack" on Page 13, the battery pack should last about one year. If the battery does not hold a charge for more than 2 hours after an overnight charge, replace the battery with a new 3.6 volt, 300 milliamp battery with a connector that fits the socket in the battery compartment. You can order a replacement battery pack through your local RadioShack store.

Install the new battery pack as described below, then charge the battery pack for about 15 hours (see "Connecting and Charging the Battery Pack" on Page 13).

Note: To avoid losing information stored in memory, try to install and begin charging the new battery pack within 2–3 minutes.

1. Press down and slide off the cover.

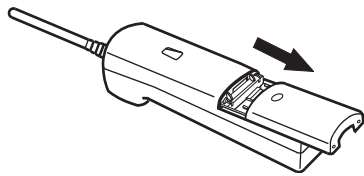

2. Gently pull on the battery pack connector to disconnect it, then remove the battery pack.
3. Plug the new battery pack's connector into the socket and place the battery pack into the compartment.
4. Replace the cover.

Cautions:

- You must use a replacement battery pack of the same size and type, with the proper connector.
- Do not dispose of the battery pack in a fire because it might explode.
- Do not open or mutilate the battery pack.
- Be careful not to short the battery pack by touching it with conducting materials, such as rings, bracelets, and keys. The battery pack or conductor might overheat and burn.

If you have trouble replacing the battery pack, take the phone to your local RadioShack store for assistance.

Important: This product contains a rechargeable nickel cadmium battery pack. At the end of the battery pack's useful life, it must be recycled or disposed of properly. Contact your local, county, or state hazardous waste management authorities for information on recycling or disposal programs in your area. Some options that might be available are: municipal curb-side collection, drop-off boxes at retailers such as your local RadioShack store, recycling collection centers, and mail-back programs.

THE FCC WANTS YOU TO KNOW

In the unlikely event that your phone causes problems on the phone line, the phone company can temporarily discontinue your service. If this happens, the phone company attempts to notify you in advance. If advance notice is not practical, the phone company notifies you as soon as possible and advises you of your right to file a complaint with the FCC.

Also, the phone company can make changes to its lines, equipment, operations, or procedures that could affect the operation of this telephone. The telephone company notifies you of these changes in advance, so you can take the necessary steps to prevent interruption of your telephone service.

Your phone might cause TV or radio interference even when it is operating properly. To determine whether your phone is causing the interference, turn off your phone. If the interference goes away, your phone is causing the interference. Try to eliminate the interference by:

- Moving your phone away from the receiver
- Connecting your phone to an AC outlet that is on a different electrical circuit from the receiver
- Contacting your local RadioShack store for help


If you cannot eliminate the interference, the FCC requires that you stop using your phone.

Some cordless telephones operate on frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR.




LIGHTNING

Your telephone has built-in lightning protection to reduce the risk of damage from surges in telephone line and power line current. This lightning protection meets or exceeds FCC requirements. However, lightning striking the telephone or power lines can damage your telephone.

Lightning damage is not common. Nevertheless, if you live in an area that has severe electrical storms, we suggest that you unplug your phone during storms to reduce the possibility of damage.

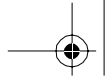

NOTES

 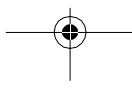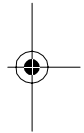

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

7A8

Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>