

SEARS

**OWNER'S
MANUAL**

 
 
MODEL NO.
274.4345869A
SERIES

Record the Model No. and the
Serial No. of your television in
the space provided.

Model No. _____

Serial No. _____

Keep this information for
future use.

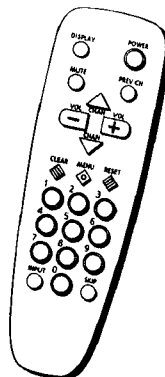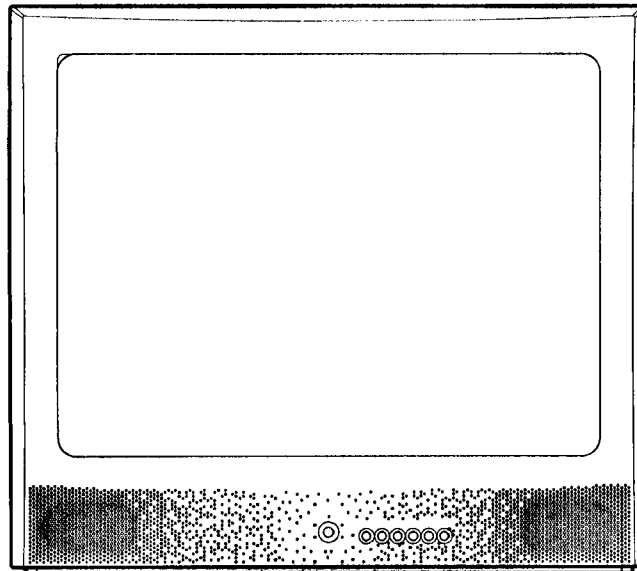

**SEARS
27" TABLETOP
COLOR TELEVISION
WITH REMOTE CONTROL**

**Safety Information
Use
Warranty and Service**

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.

SAFETY INFORMATION

WARNING

RISK OF ELECTRIC SHOCK
DO NOT OPEN

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



 
This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

WARNING

To reduce the risk of fire or shock hazard, do not expose this TV to rain or moisture.

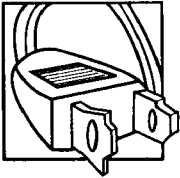

Caution: To reduce the risk of electric shock, match wide blade of plug to wide slot, fully insert.

Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

- Refer to the identification/rating label on the back of this product for the proper operating voltage.
- FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

CAUTION: If fixed (non-moving) images are left on the screen for long periods, they may be permanently imprinted on the screen. Such images include network logos, phone numbers, and video games. Extended viewing of channels displaying these images should be avoided.

This reminder is provided to call your attention to Article 820-40 of the National Electrical Code (Section 54 of the Canadian Electrical Code, Part 1) which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

NOTE TO CABLE TV
INSTALLER

TABLE OF CONTENTS

Safety Information	i
First Things First	2
Unpacking the TV and accessories	
Connecting your TV	
Plugging in your TV	
Putting batteries in the remote	
Turning on the TV	
Using the Menu System	3
The menu rule: point and select	
What is point and select?	
Interactive Setup	3
Begin setup	
Tour of the Menu System	4-6
TV main menu	
The audio menu	
The picture quality menu	
The screen menu	
The channel menu	
The time menu	
The Channel Marker	7
Tour of the TV	8
Front Panel	
Tour of the Remote	9
Remote buttons	
Advanced Features	10
On-screen program details	
Closed Captioning	
Troubleshooting	11-12
TV will not turn on or controls don't work	
Problems with remote	
Turns on or off while playing	
Schedule does not turn off the TV at the set time	
Blank screen or black box appears on the screen	
No sound, picture okay	
No picture, no sound, but power light is on	
Sound okay, picture poor	
Care and Cleaning	12
Repair Services	13

FIRST THINGS FIRST

STEP 1

Unpack the TV and remote control.

IMPORTANT INFORMATION: OPTIONAL STAND

 
A matching stand has been designed to be used with this television. This stand is provided with hardware to secure the TV to the stand so that it cannot be easily pushed off, pulled off, or tipped over. This stand is available from your dealer, and is not available by mail order.

Caution: If you choose not to use the stand recommended for your TV, take precautions that the stand or other furniture the TV is placed on is properly located and of adequate size and strength to prevent the TV from accidentally being pushed off, pulled off, or tipped over. This could cause damage to the TV and/or personal injury.

STEP 2:


Connect your TV. This is a basic connection from an antenna, cable box, or VCR to your TV. Connect the cable from your cable system or off-air antenna to the cable-in jack on the back of the TV, as shown.

ANTENNA, CABLE, CABLE BOX OR VCR



STEP 3:

 
Plug in the TV. Plug the end of the power cord into the wall outlet, matching the wide blade of the plug with the wide slot in the outlet. Be sure to insert the plug completely.

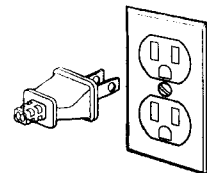

STEP 4

Put batteries in the remote.

 - Remove the battery compartment cover from the back of the remote.
- Insert two AAA batteries as shown, matching the + and - ends of each battery in the compartment.
- Replace the cover.

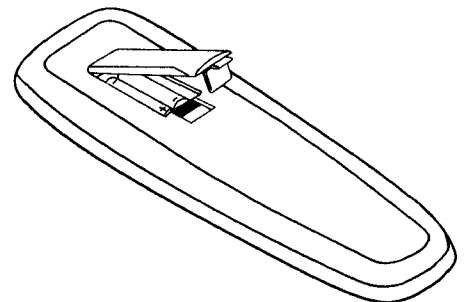

STEP 5

Turn on the TV.

- Press TV on the remote.

Read the next section, *Using the Menu System*, which is a brief overview of the basic rules for getting around in the menus using the remote or TV's front control panel.

USING THE MENU SYSTEM

THE MENU RULE: POINT AND SELECT

 
You only need to know one rule to use the on-screen menus and control panels: point and select.

WHAT IS POINT AND SELECT?

The point and select method has two steps.

- 1. Point** to a menu item using the MOVE arrows on the remote. (The CHAN/VOL buttons on the remote.)
- 2. Select** a menu item by pressing MENU. Selecting an item tells the TV's menu system to go ahead and make the change or go to a place you have indicated. (You can also select an item by pressing the corresponding number button on the remote.)

Once you know how to point and select your way through the menus, you can apply this rule in the menu control panels, which do the real work in the menu system.


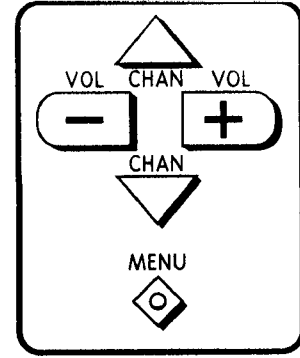


INTERACTIVE SETUP

The setup routine walks you through the steps needed to configure the TV. These steps allow you to select a menu language, complete the auto channel search, which puts available cable TV or antenna signals into the TV's memory, label the channels and set the parental controls. After you select a menu language, you can skip any of the remaining steps and return to them later.

BEGIN SETUP

  1. Press MENU to bring up the Main menu.
2. Point to *Setup* and press MENU. The first Setup screen comes up, asking you to select a language.
3. Point to your preferred language by pressing the up and down arrows until the language is highlighted in green.
4. Press MENU to select the language.
5. A screen appears asking if you would like the TV to search for all channels.
6. Complete the Setup routine or skip any of the steps and return to them later.

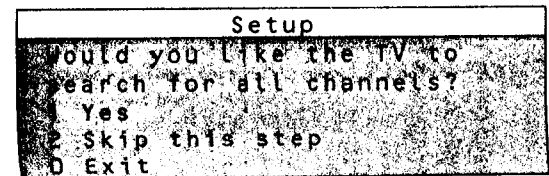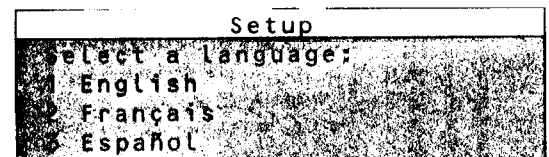

TOUR OF THE MENU SYSTEM

 
TV MAIN MENU

The Main menu is your gateway to controlling the TV. It lets you adjust the TV's audio, picture quality, screen, time functions and channel settings.

To select any other menu item:

1. Press MENU to bring up the TV's Main menu.
2. Point to any menu item by pressing the up and down arrows until the item is highlighted in green.
3. Press MENU to select the item and a new menu comes up.

To exit any menu screen, point to *Exit* and press MENU, or press CLEAR.

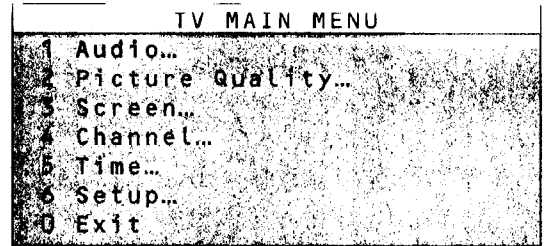

THE AUDIO MENU

The Audio menu lets you adjust the way the TV sounds.

Mute Turns off the TV's sound. Press MENU to toggle the Mute feature between ON and OFF.



XS Stereo - An innovative method for providing stereo sound effect

The sound delivered by your television is XS Stereo. This patented process suppresses noise, restores the dynamic range and electronically expands the stereo signal to create a more spacious sound effect.

Stereo Press MENU to toggle the Stereo feature between ON and OFF.

On Sound is reproduced in stereo or mono, whichever is being broadcast.

Off Sound is reproduced in mono.

THE PICTURE QUALITY MENU

The Picture Quality menu contains the controls that adjust the TV's picture.

There are five slider controls for adjusting the way the picture looks. Use the left and right arrow buttons to adjust the controls.

Contrast Adjusts the difference between light and dark areas of the picture.

Color Adjusts the richness of the color.

Tint Adjusts the balance between the red and green levels.

Black Level Adjusts the brightness of the picture.

Sharpness Adjusts the crispness of edges in the picture.



TOUR OF THE MENU SYSTEM (CONTINUED)

Auto Color Displays the current setting (ON or OFF). This feature automatically corrects the color of the picture. Select *Off* if you prefer to adjust the picture with the Picture Controls. Use the MENU button to toggle between the choices.

Reset Picture Controls Resets the picture controls to their original settings and automatically corrects the color of the picture. Select *Off* if you prefer to adjust the picture with the Picture Controls. Use the MENU button to toggle between the choices.

Reset Picture Controls Resets the picture controls to their original settings.

THE SCREEN MENU

The Screen menu contains the controls that let you adjust the Closed-Caption mode, Closed-Caption display and menu language.

Closed-Caption Display Displays a choice list that lets you choose the way closed captioning information is shown on the screen. Use the MENU button to toggle between the choices.

Off No captioning information displayed.

On Captioning information shown always, when available.

On When Sound is Muted Displays captioning information, when available, whenever you press the MUTE button. The captioning information is not displayed when the sound is not muted.

Closed-Caption Mode Displays a choice list that lets you choose which captioning mode is used for displaying captioning information. Use the MENU button to toggle between the choices: CC1 and CC2.

Menu Language Lets you select the language of your choice: English, French or Spanish. Use the MENU button to toggle between the choices.

Screen		
1	CC Display:	OFF
2	CC Mode:	CC1
3	Menu Language:	ENGLISH
0	Exit	

THE CHANNEL MENU

The Channel menu contains all the commands used to control your channels, including custom-building your channel list and setting parental controls.

Signal Type Displays a choice list that lets you select the current antenna type.

Antenna Choose this if you are currently using an off-air antenna for UHF/VHF TV signals.

Cable TV Choose this if you are currently using cable or a cable box for TV signals.

Auto Channel Search Displays a control panel that lets you tell the TV to search automatically for all the channels available through the antenna input. When the TV finds an active channel, it places it in the channel list; inactive channels (weak stations or channels with no signal at all) will be removed from the channel list.

Channel		
1	Signal Type:	ANTENNA
2	Auto Channel Search	
3	Lists and Labels..	
4	Parental Control:	OFF
0	Exit	

TOUR OF THE MENU SYSTEM (CONTINUED)

Lists and Labels Displays a control panel that lets you custom-build your channel scan list, choose a four-character label for each channel, and decide whether each channel is "parent-approved." Use the up, down, left and right arrows to enter settings and create labels. Press MENU to exit.

Chan #	Chan Label	Scan List	Parent Approved
013	NBC	YES	YES

Press MENU to exit

Chan # Use the up and down arrows to scroll up and down through the channel scan list. You can enter the channel number directly using the number buttons.

Chan Labels Use the up and down arrows to enter a four-character label for each channel.

Scan List Only the channels included in the Scan list are available when you scan up and down using the CHAN buttons. Use the up and down arrows to indicate whether the channel number indicated is included (YES) or is not included (NO) in the channel scan list.

Parent Approved Use the up and down arrows to choose whether the channel indicated should be shown when the Parental Control feature is turned on. Select YES to indicate that the channel can be shown at any time, regardless of whether Parental Control is turned on. Select NO to indicate that the front panel cannot tune to that channel when Parental Control is turned on. **Important:** You must turn the Parental Control feature ON in the Parental Control control panel.

Parental Control Displays a choice list that lets you adjust the Parental Control feature.

On The front panel CHAN buttons will tune only to channels that you have marked as "Parent Approved" in the Lists and Labels control panel. **Important:** When Parental Control is on, the TV's front panel no longer provides access to the menus. Parents may prefer to hide the remote and let children use the front panel to change channels.

Off The TV shows all channels, whether they are marked as "Parent Approved" or not.

THE TIME MENU

The Time menu contains the controls that let you set the time and schedule the TV to turn off and on at specific times.

Sleep Timer Displays a control panel that lets you select the amount of time you want to give the TV before it shuts itself off. Use the up and down arrows to increase or decrease the sleep timer by 15 minute increments. Press MENU to exit.

Time	
1	Sleep Timer..
2	Schedule..
3	Set Time..
0	Exit

Schedule Displays a control panel that lets you set up a schedule for turning the TV on and off automatically. **Make sure to turn the schedule On in the control panel.** Use the up and down arrows and number buttons to change the settings. Use the left and right arrows to move across the control panel. You must first set the clock to use the scheduling feature.

Sleep Timer	
TV off in	--:--
Press 0 to adjust timer	
Press MENU to exit	

Schedule			
Chan	Start	Stop	On/Off
013	04:20PM	06:15PM	ON
Press MENU to exit			

Set Time Displays a control panel that lets you enter the current time. Use the up and down arrows and number buttons to set the time. Press MENU to exit

Set Time	
--:--	AM
Press MENU to exit	

THE CHANNEL MARKER

There are several indicators that come up when you change channels or press the DISPLAY button. This display is called the Channel Marker. The Channel Marker shown below is just an example of what your screen may look like.

08:59 Displays the current time.

WRTV Displays the label assigned to the current channel.

06 Displays the current channel.

 
Sleep Displayed when the Sleep Timer has been set.

CC Displayed when Closed Captioning is available on the current channel.

Mute Displayed when you mute the audio.

Schedule Displayed when the TV is scheduled to turn on.

01:30 Displayed to count down time left on the commercial skip (SKIP) timer.

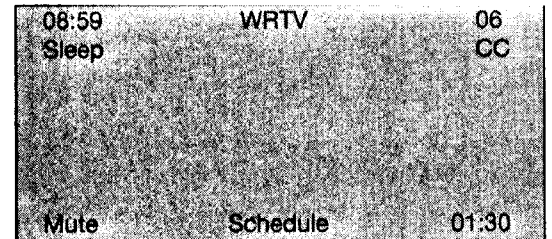

TOUR OF THE TV

FRONT PANEL

VOL < Decreases the volume. When in the menu system, VOL < is used to point left to items and adjust menu controls.

VOL > Increases the volume. When in the menu system, VOL > is used to point right to items and adjust menu controls.

CHAN ^ Scans up through the channel list. In the menu system, it points up to items and adjusts menu controls.

 
CHAN v Scans down through the current channel list. In the menu system, it points down to items and adjusts menu controls.

MENU Brings up the Main menu. When in the menu system, it selects highlighted items. Also returns you to the previous menu.

If you turn Parental Control on, the front panel no longer provides access to the menus. For more information, see *Parental Control* in the Channel menu on the back side of these instructions.

POWER Turns the TV on and off.

The front panel shown is a typical button layout. The exact look of the buttons may be different from those on the front of your TV.

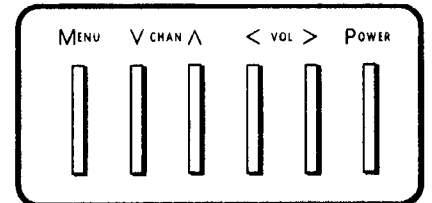

TOUR OF THE REMOTE

REMOTE BUTTONS

POWER Turns the TV on and off.

DISPLAY Brings up channel information. Press repeatedly to see detailed program information, if available.

MUTE Turns off the TV's sound. Press again to restore the sound.

PREV CH Returns you to the previous channel.

VOL - or VOL + Decreases or increases the TV's volume. Also used as left and right arrows.

CHAN ^ or CHAN v Scans up or down through the current channel list. Press once to change the channel up or down; press and hold to continue changing channels. Also used as up and down arrows.

CLEAR Removes any menu or display from the screen and returns you to TV viewing. Also cancels SKIP timer.

 
MENU Brings up the Main menu. When in the menu system, selects highlighted items or returns you to the previous menu.

RESET Returns all picture quality controls to their original settings.

(0-9) Number Buttons Enters channel numbers and time settings directly through the remote control. To enter a two-digit channel, press the two digits. To enter a three-digit channel, press and hold the first digit, then add the second two. Example: to tune to channel 123, press and hold 1, press 2, then press 3.

INPUT (on some models) Press to toggle through the available input sources (CH3, CH4, etc.).

SKIP Press once before changing channels and the TV will wait 30 seconds before returning you to the original channel. Press repeatedly to add more time. Press CLEAR to cancel the SKIP timer and remain on the current channel.

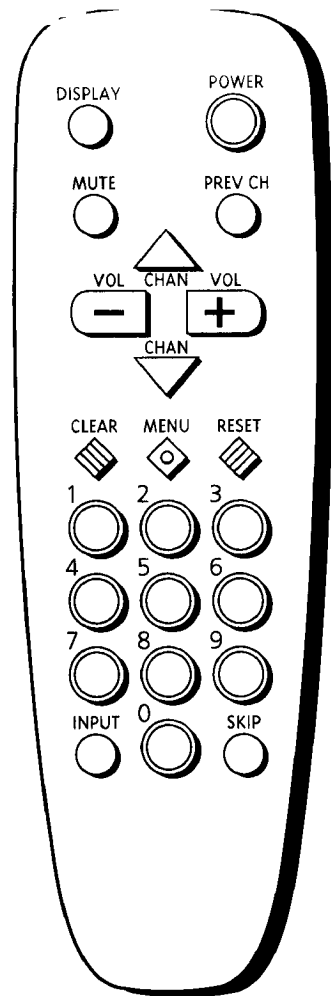

ADVANCED FEATURES

ON-SCREEN PROGRAM DETAILS

Program providers have the option of sending information through the airwaves along their programs. If this information is available, the TV can display it up when you press DISPLAY on the remote. To display the on-screen program details:

1. Press DISPLAY once to bring up the channel marker.
2. Press DISPLAY again to bring up the program title, the program's length, elapsed time and other program details such as the story line and whether Closed-Captioning is available.
3. Press DISPLAY again to clear the screen.

Whether all (or any) of the program details are displayed depends on whether the program provider has sent the information along with the program.

CLOSED CAPTIONING

Many programs are encoded with closed-captioning information, which lets you display the audio portion of a program as text on the TV screen. You can tell the TV to display closed captioning: a) never, b) whenever it is available, or c) whenever the MUTE button is pressed.

The TV offers two closed-captioned modes. Select CC1 for full translation of the primary language in your area. Select CC2 for secondary language translation, simplified English, or whatever is being broadcast in your area.

Closed captioning is not available on all channels at all times. Only specific programs encoded with closed-captioning information are applicable. When a program is closed captioned, the letters CC are displayed in the channel marker.

TROUBLESHOOTING

Troubles sometimes are caused by simple "faults" that you can correct without the help of a service technician. If you experience any difficulty with your TV, check a few basic remedies before calling your service technician.

TV WILL NOT TURN ON OR CONTROLS DON'T WORK

- Check to make sure it is plugged in.
- Check the wall receptacle (or extension cord) to make sure it is "live" by plugging in something else.
- Try unplugging set for two minutes, plugging it back in, and then turning it on again.

PROBLEMS WITH REMOTE

- Maybe something is between the remote and the remote sensor.
- Maybe the remote is not aimed directly at the TV's remote sensor.
- Maybe remote batteries are weak, dead or installed incorrectly. Try replacing batteries correctly.
- Remove batteries and hold down one or more buttons for several seconds. Install the batteries and try remote.

TURNS ON OR OFF WHILE PLAYING

- Schedule function may have been activated.
- Electronic protection circuit may have been activated because of a power surge. Wait 30 seconds and then turn on again. If this happens frequently, the voltage in your house may be abnormally high.

SCHEDULE DOES NOT TURN OFF THE TV AT THE SET TIME

- Check schedule on/off function (it must be set to On).
- Check to make sure clock is set to the correct time.

BLANK SCREEN OR BLACK BOX APPEARS ON THE SCREEN

- Try another channel.
- Press RESET, in case the picture controls are set too low.
- Captioning may be turned on. Check the Closed-Caption Display control panel in the Channel menu.

NO SOUND, PICTURE OKAY

- Maybe sound is muted. Try pressing volume up button to restore sound.

NO PICTURE, NO SOUND BUT POWER LIGHT IS ON

- Maybe cable/air function is in wrong position.
- Maybe a vacant channel is tuned.
- If watching VCR, make sure TV is tuned to channel 3 or 4 – same as CH3/4 switch on VCR. Also check to make sure TV/VCR switch on VCR is in correct position.

SOUND OKAY, PICTURE POOR

- Check antenna connections.
- Try adjusting sharpness function to improve weak signals.

CARE AND CLEANING

You can clean the TV as required, using a soft cloth or the dusting attachment for your vacuum cleaner. Be sure to occasionally vacuum the ventilation slots in the cabinet to help assure adequate ventilation.

To clean the TV screen, use a diluted soap and water mixture and a soft cloth. Do not use furniture polish on the TV cabinet or screen.

While cleaning do not spray liquid directly on the screen, or allow liquid to run down the screen and inside the TV. Also, avoid placing drinks or vases with water on top of the TV. This could increase the risk of fire, shock hazard, or damage to the TV.

Caution: If fixed (non-moving) images are left on the screen for long periods, they may be permanently imprinted on the screen. Such images include network logos, phone numbers, and video games. Extended viewing of channels displaying these images should be avoided.

 
REPAIR SERVICES

For the repair or replacement parts you need

Call 7 am - 7 pm, 7 days a week

1-800-366-PART

(1-800-366-7278)

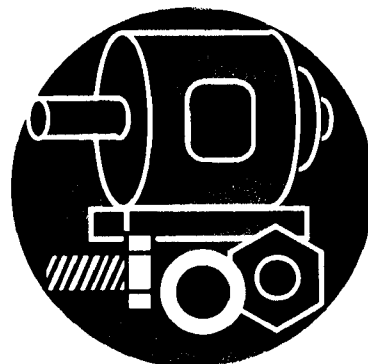

For in-home major brand repair service

Call 24 hours a day, 7 days a week

1-800-4-REPAIR

(1-800-473-7247)



**For the location of a
Sears Repair Service Center in your area**

Call 24 hours a day, 7 days a week

1-800-488-1222



**For information on purchasing a Sears
Maintenance Agreement or to inquire
about an existing Agreement**

call 9 am - 5 pm, Monday-Saturday

1-800-827-6655



SEARS
REPAIR SERVICES

America's Repair Specialists

SEARS

OWNER'S MANUAL

MODEL NO.
274.4345869A
SERIES

WHEN ORDERING REPAIR
PARTS, ALWAYS GIVE THE
FOLLOWING INFORMATION:

1. NAME OF ITEM
Sears Color Television
Receiver
2. MODEL NUMBER
3. PART DESCRIPTION

SEARS 27" TABLETOP COLOR TELEVISION WITH REMOTE CONTROL

Your Sears Television has added value when you consider that Sears has service units nationwide staffed with Sears trained technicians—professional technicians specifically trained on Sears home entertainment products, having the parts, tools and equipment to ensure that we meet our pledge to you —“We Service What We Sell.”

For repair service, call:
1-800-4-REPAIR
(1-800-473-7247)

For replacement parts information and ordering, call:
1-800-FON-PART
(1-800-366-7278)

WARRANTY

FULL 90-DAY WARRANTY ON COLOR TELEVISION

For the first 90 days from the date of purchase, Sears will repair this television, free of charge, if defective in material or workmanship.

LIMITED WARRANTY ON ALL PARTS EXCEPT PICTURE TUBE

After 90 days from the date of purchase and up to one year, Sears will furnish, free of charge, a replacement for any defective part in this television. You pay for labor.

LIMITED WARRANTY ON PICTURE TUBE

After 90 days from date of purchase and up to two years, Sears will furnish, free of charge, a replacement for the picture tube, if defective. You pay for labor.

WARRANTY SERVICE IS AVAILABLE BY CONTACTING THE NEAREST SEARS SERVICE CENTER/DEPARTMENT IN THE UNITED STATES.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., Dept. 817WA, Hoffman Estates, IL 60179

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>