

Model 139.53779 3-Function Remote Control

To comply with FCC rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. **THERE ARE NO OTHER USER SERVICEABLE PARTS.**

The 53000 Series remote control (with green battery test light) works only with door openers and light controls having a green "SRT" button and green indicator light.

Instructions are given below for programming your opener to match the remote control's code. The additional remote control buttons can also activate other garage door openers and/or light controls. (Instructions for programming light products are included with those accessories.)

53000 Series Garage Door Openers (With Green "SRT" Button and Green Indicator Light)

PROGRAM THE OPENER TO ACCEPT THE REMOTE CONTROL CODE

Select a remote control push button to operate the receiver. The *large* button is recommended for use with the garage door opener.

1. Press and HOLD the selected remote control push button, Figure 1.
2. Then press and release the green "SRT" button on the right side panel of the opener in Figure 2. The opener light *will flash* once.

Now the opener will operate when the remote control push button is pressed.

If you release the remote control push button before the opener light flashes, the opener has not accepted the code.

To Change the Selected Push Button On the Same Remote Control

If you decide to use a different remote control button than originally programmed into the opener, you need to erase *all* the learned codes and reprogram each remote control used to operate the garage door opener.

To Erase All Remote Control Codes

- Press and hold the green "SRT" button on the opener panel until the indicator light turns off (about 6 seconds). **All the codes the opener has learned will be erased.**
- To reprogram, repeat Steps 1, 2 and 3 for each remote control in use.

Replacement Parts:

12 Volt battery - 10A14; Compact remote control case, cover and Velcro strip (circuit board not included) - 41A3592; 3-Function remote control case, cover, screw (circuit board not included) - 41A3888; Visor Clip - 29C128

Model 139.53759 3-Function Compact Remote Control

 


WARNING

Children operating or playing with a garage door opener can injure themselves or others. *The garage door could close and cause serious injury or death.* Do not allow children to operate the wall push button(s) or remote control(s).

A moving garage door could injure or kill someone under it. Activate the opener only when you can see the door clearly, it is free of obstructions, and is properly adjusted.

Figure 1

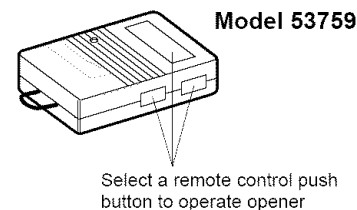

Model 53779

 
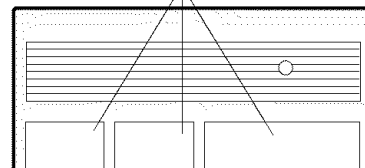 


Figure 2

Garage Door Opener (With Green "SRT" Button)

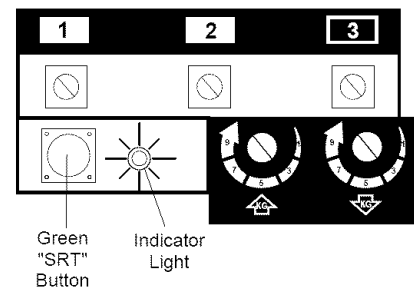

Code programming instructions are also located on the opener panel.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>