




DRYER OPERATING INSTRUCTIONS

SEARS Kenmore Advantage

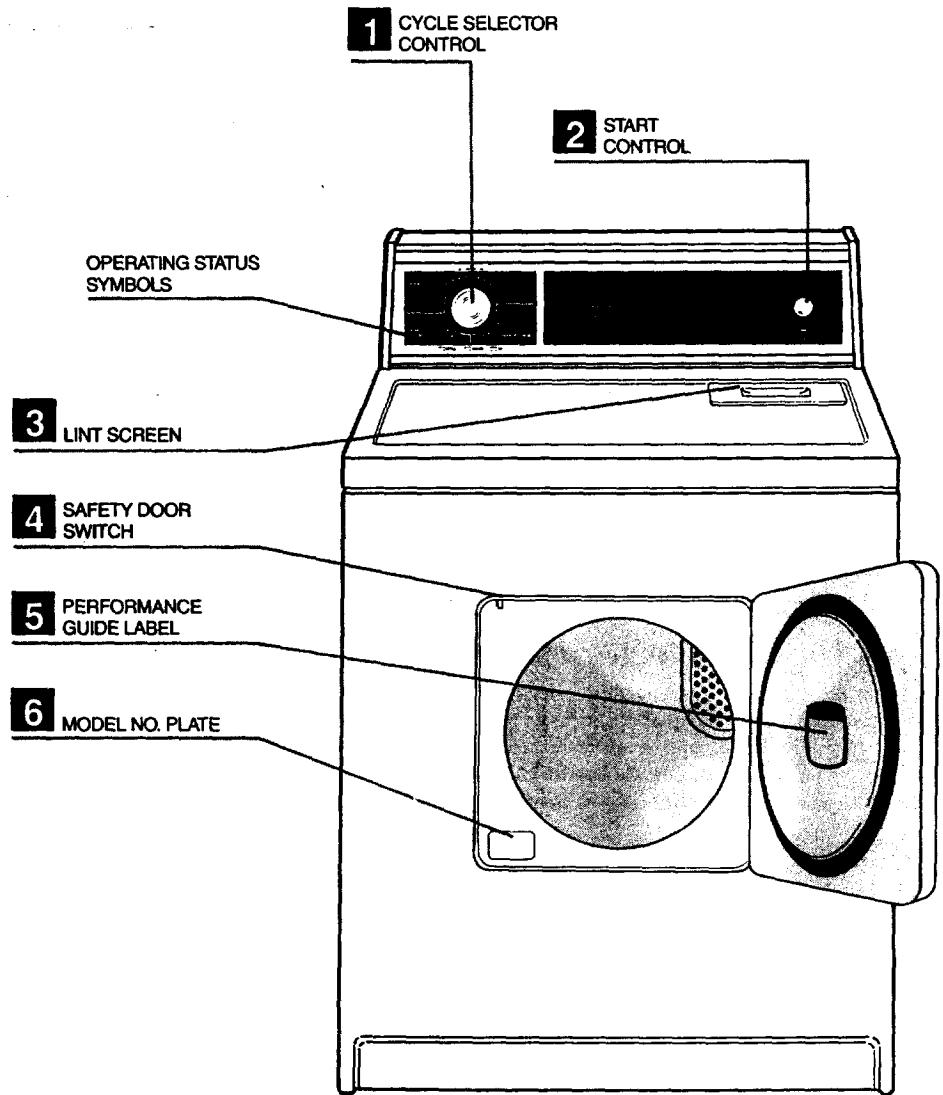


⚠ WARNING

Electric Shock Hazard.

To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** in the Laundry Guide and Installation Instructions before operating this appliance.

If you need **SERVICE** or **PARTS** for your Kenmore dryer:

Be ready to give your Sears Service Department the model number, serial number and date of purchase. Write in below. The plate  with model and serial numbers is located behind the dryer door.

**ELECTRIC
MODEL 64291**

**GAS
MODEL 74291**

110. _____

MODEL NO.

M _____

SERIAL NO.

DATE OF PURCHASE

How to dry a load of laundry


A Clean lint screen before each load.

C Set Cycle Selector Control **1**.

E Remove load when dry.

B Put laundry into dryer and shut the door.

D Push the Start Control **2** to start your dryer.

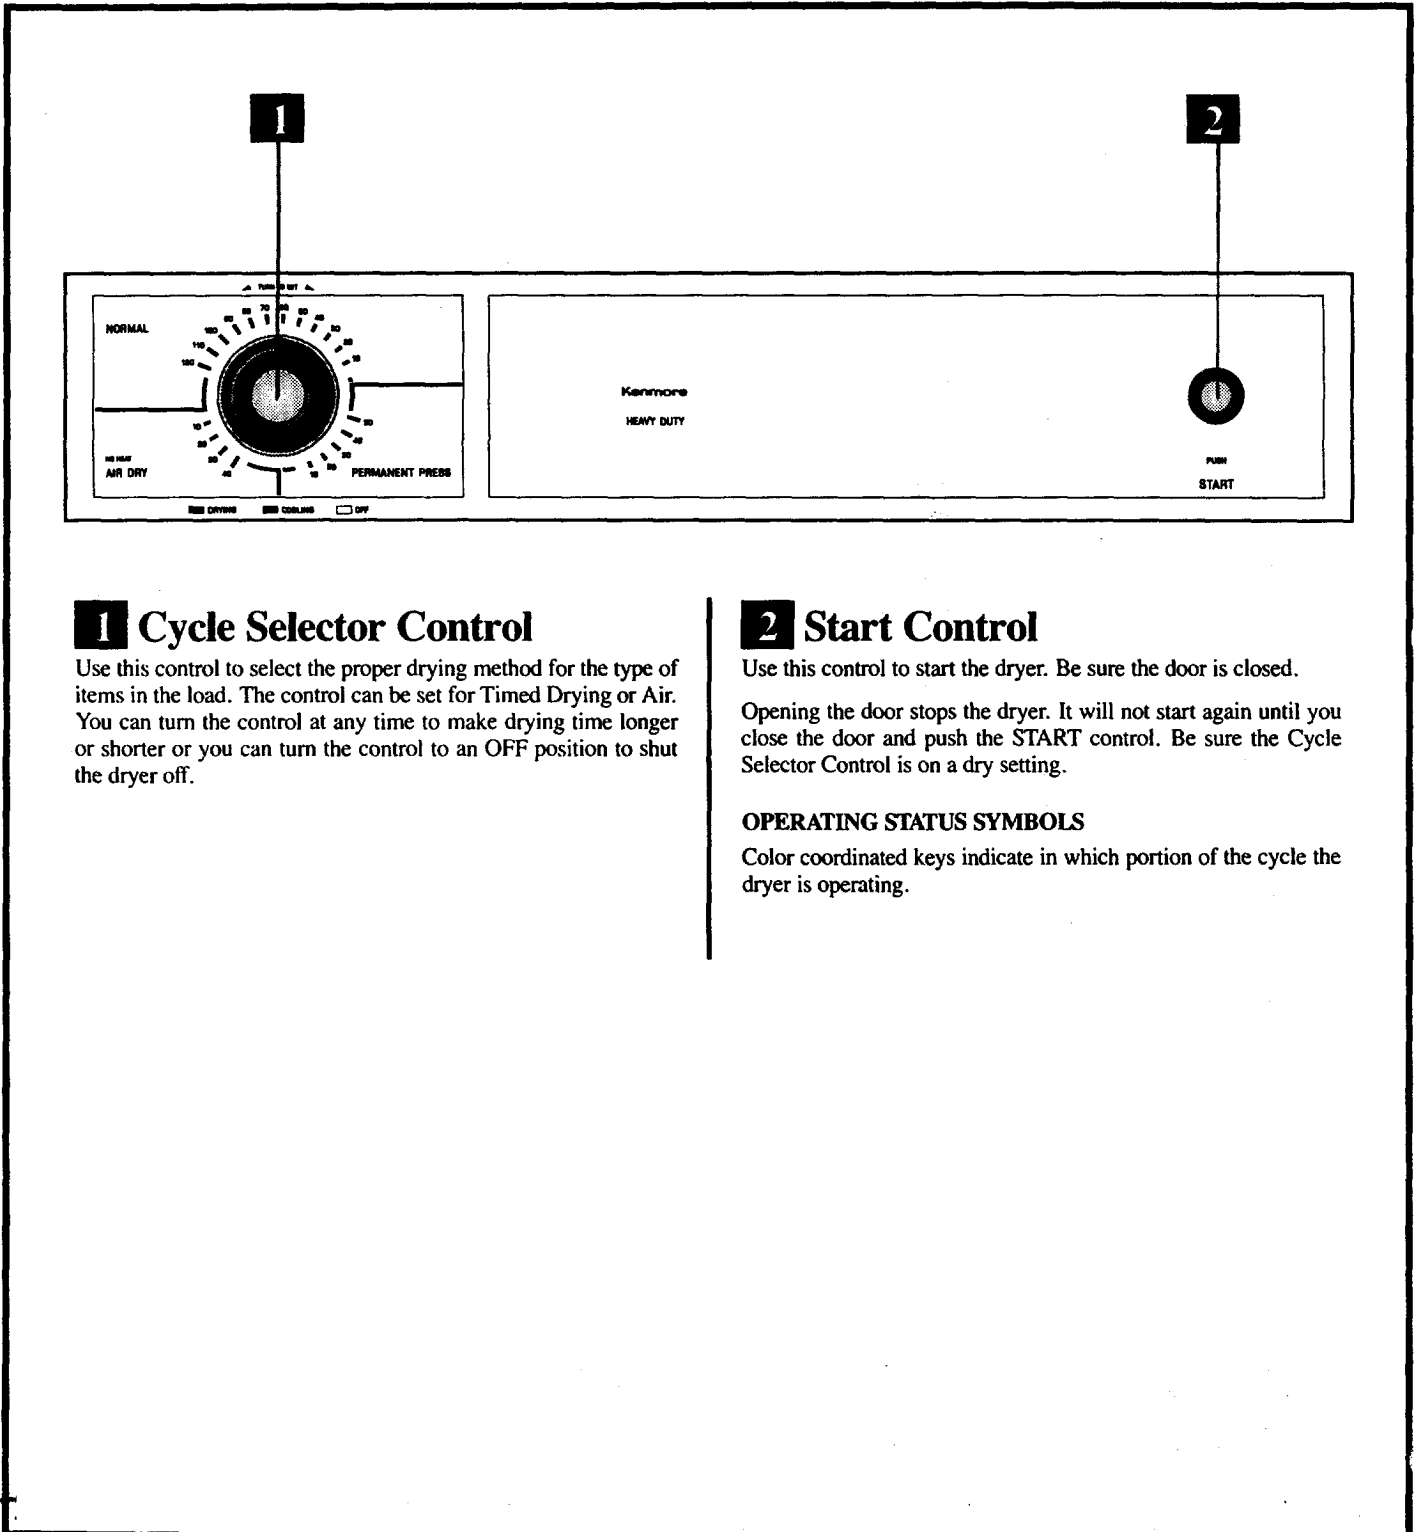

1 Cycle Selector Control

Use this control to select the proper drying method for the type of items in the load. The control can be set for Timed Drying or Air. You can turn the control at any time to make drying time longer or shorter or you can turn the control to an OFF position to shut the dryer off.

2 Start Control

Use this control to start the dryer. Be sure the door is closed.

Opening the door stops the dryer. It will not start again until you close the door and push the START control. Be sure the Cycle Selector Control is on a dry setting.

OPERATING STATUS SYMBOLS

Color coordinated keys indicate in which portion of the cycle the dryer is operating.

1 CYCLE SELECTOR CONTROL

NORMAL Cycle

Use this cycle to get up to 120 minutes of drying time at high heat followed by a 5 minute (approx.) cooldown.

- Set the Cycle Selector Control to the amount of time you want in the Normal Cycle.
- Push the Start Control.

PERMANENT PRESS Cycle

Use this cycle to get up to 50 minutes of drying time at high heat followed by a 10 minute (approx.) cooldown.

- Set the Cycle Selector Control to the amount of time you want in the Permanent Press Cycle.
- Push the Start Control.

AIR DRY Cycle

Use this cycle to get up to 30 minutes of drying time in room temperature air. Use this setting for items that will not tolerate heat, such as plastics, foam rubber, etc. and for airing and fluffing items such as pillows.

- Do not dry these items with heat.
- Set the Cycle Selector Control for the number of minutes you want in the Air Dry Cycle.
- Push the Start Control.

Cooldown

Approximately five or ten minutes before the end of the drying cycle, clothes are tumbled without heat to help reduce wrinkles and make clothes more comfortable to handle.

FEATURES

3 Lint Screen

Keep the lint screen clean. A lint-clogged screen will slow down the flow of air. This makes drying time longer and wastes energy. Clean the lint screen before each load as follows:

1. With dryer off, remove the screen by pulling straight up.
2. Roll the dry lint off the screen. Do not wet the screen or lint; wet lint is hard to remove.
3. Replace the cleaned lint screen.

⚠ WARNING

Fire Hazard.

Do not use your dryer while the lint screen is removed. It could cause overheating and possible damage to fabrics and dryer parts or create a fire hazard. Lint screen must be pushed firmly into place.

NOTE: If lint screen gets clogged by detergent or fabric softener build-up, remove and clean it with a nylon brush, hot water and liquid detergent. Dry and replace screen.

4 Safety Door Switch

For safety, the switch shuts off dryer when door is opened. Dryer will not start until door is closed and START is pushed. Be sure the Cycle Selector Control is on a dry setting.

5 Performance Guide Label

Located inside the dryer door. Gives information on what to do if dryer does not perform normally.

NOTE: If dryer drum is stained, clean it with a damp cloth and mild detergent.

6 Model No. Plate

Shows model and serial numbers. Have these ready if you ever call for service.

For more detailed drying times, rules for safe operation, fabric care, maintenance and installation information, refer to the LAUNDRY GUIDE and INSTALLATION INSTRUCTIONS you received with your dryer.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>